




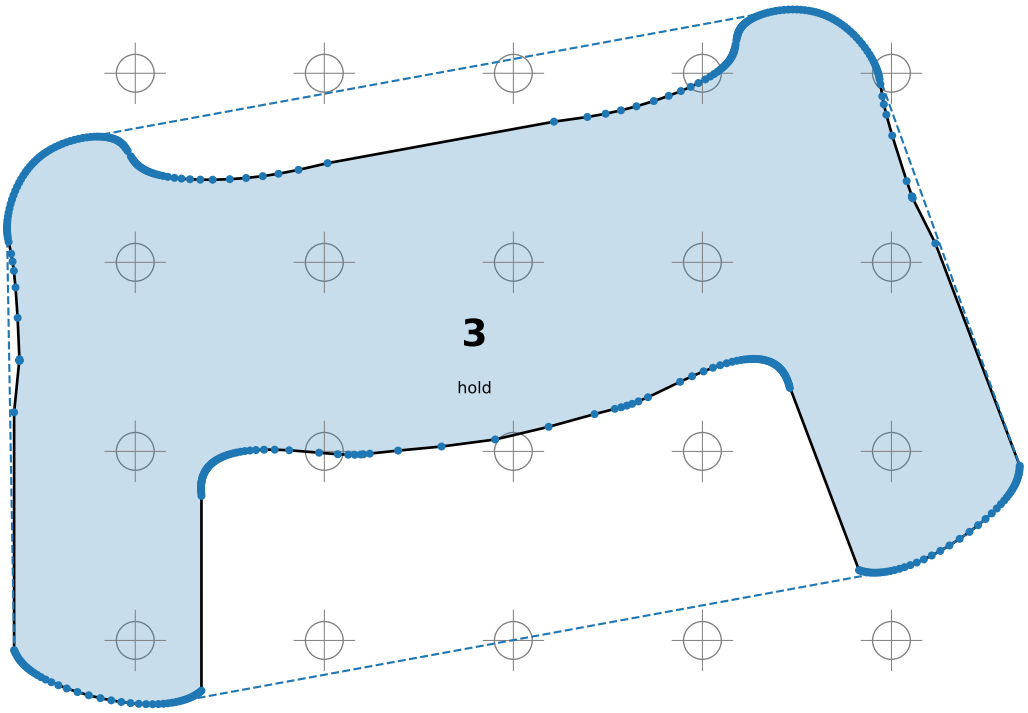



tips at 18 deg: place carefully

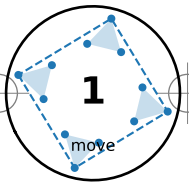

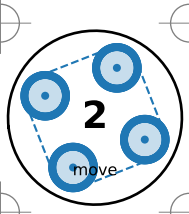

tips at 18 deg: place carefully



move robot: +x -> assembly spot: -y
board x [-21.12, -1.12] cm, y [-10.15, 18.55] cm
blue: on the board (dashed: support area, dots: contact corners)

10 cm (print at 100%, no "fit to page")