



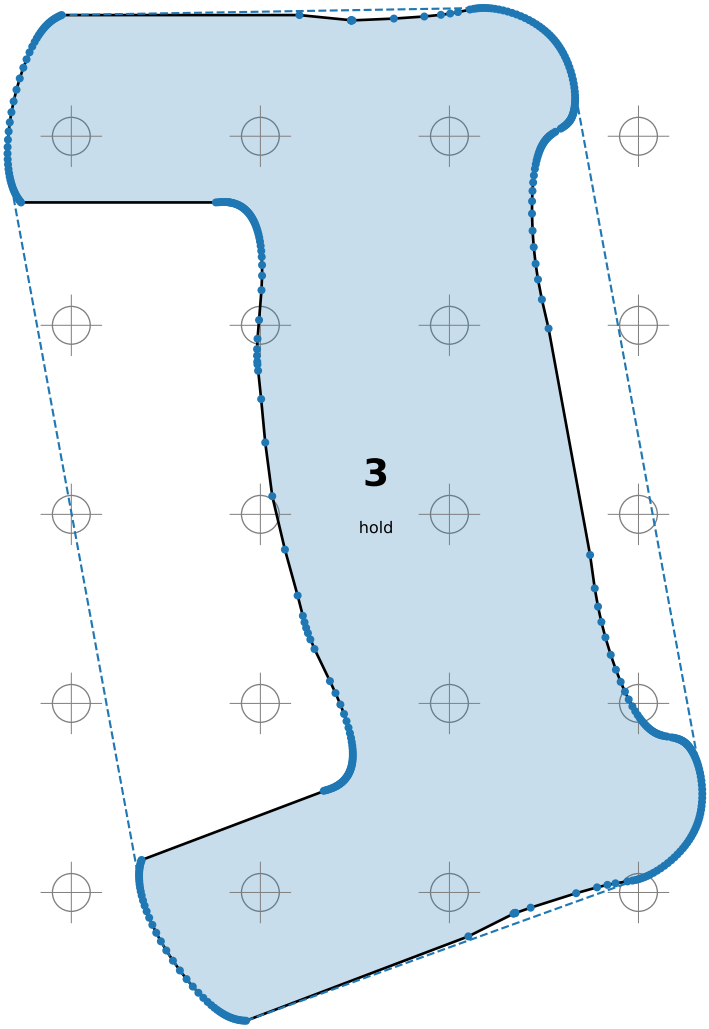



tips at 18 deg: place carefully

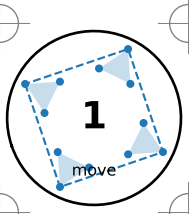



tips at 18 deg: place carefully

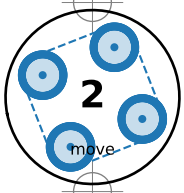

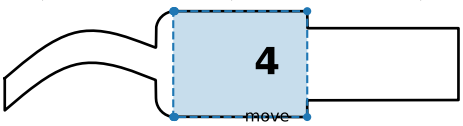

move robot: +x -> assembly spot: -y
board x [-15.17, 4.83] cm, y [-8.23, 20.47] cm
blue: on the board (dashed: support area, dots: contact corners)

10 cm (print at 100%, no "fit to page")