





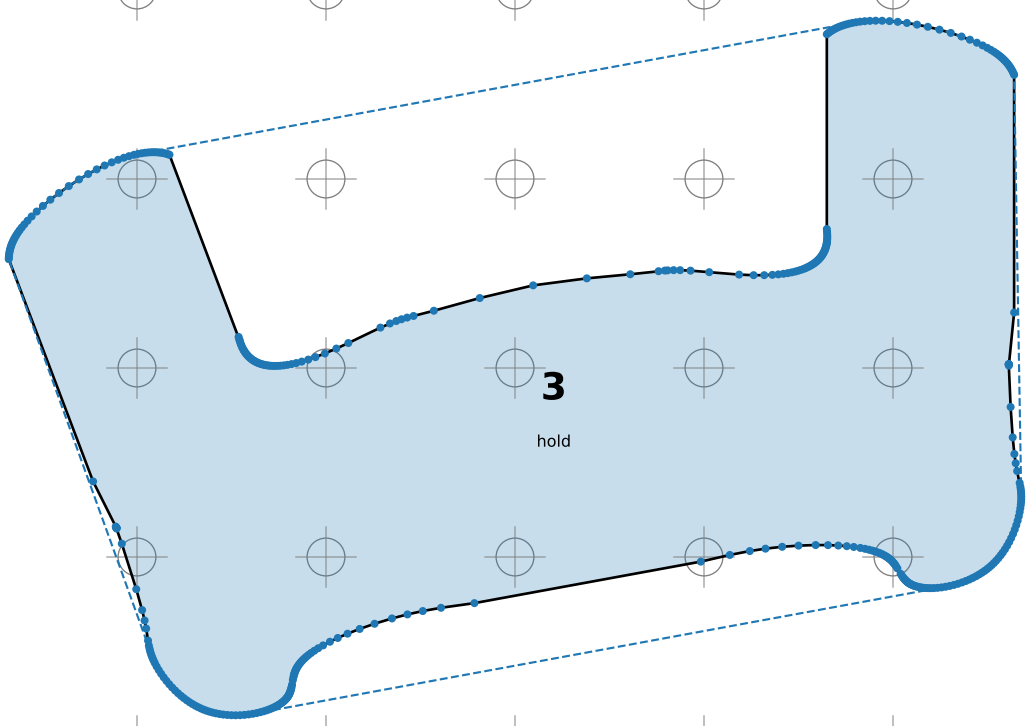

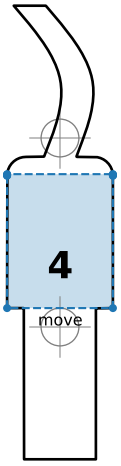

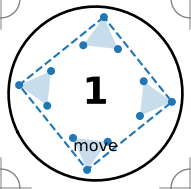

tips at 18 deg: place carefully

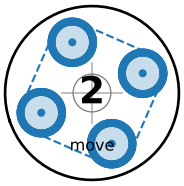



tips at 18 deg: place carefully

move robot: +x -> assembly spot: -y
board x [-1.25, 21.25] cm, y [-16.25, 11.25] cm
blue: on the board (dashed: support area, dots: contact corners)

10 cm (print at 100%, no "fit to page")