





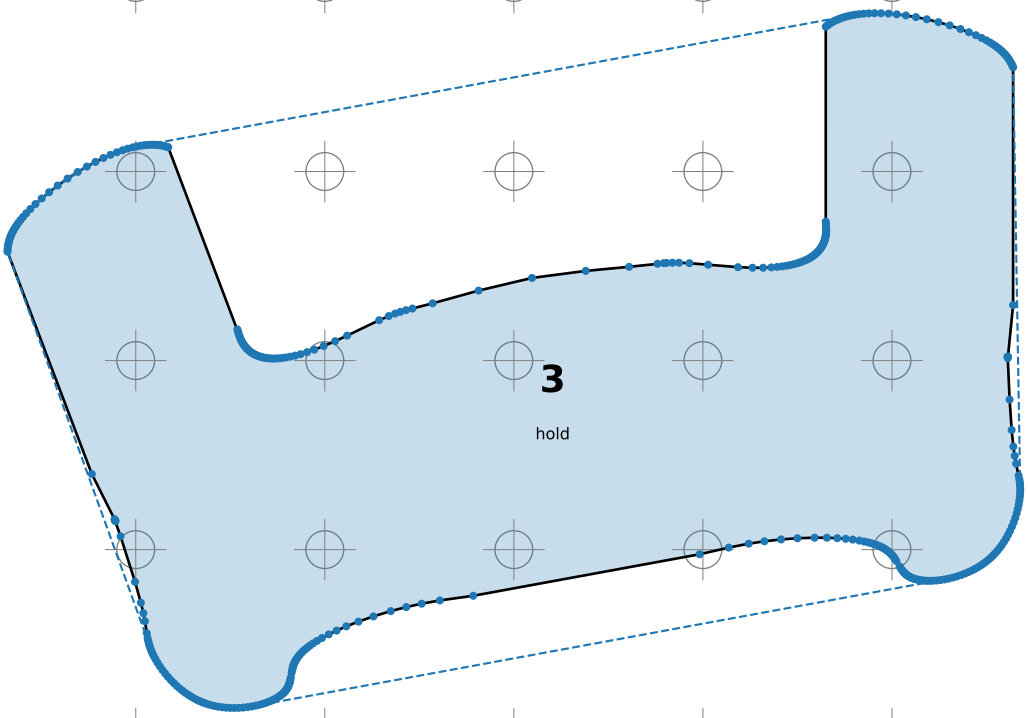

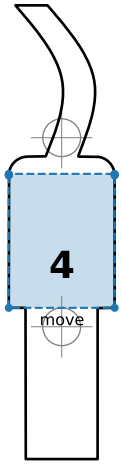

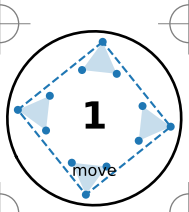

tips at 18 deg: place carefully

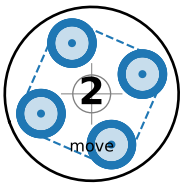



tips at 18 deg: place carefully

move robot: +x -> assembly spot: -y
board x [0.27, 20.27] cm, y [-17.63, 11.07] cm
blue: on the board (dashed: support area, dots: contact corners)

10 cm (print at 100%, no "fit to page")