ASSEMBLY SPOT: hold part(s) 0 exactly on the orange area (dashed: finished assembly from above)
move robot: +x -> pickup area: +y
board x [-10.00, 10.00] cm, y [-29.35, -0.65] cm

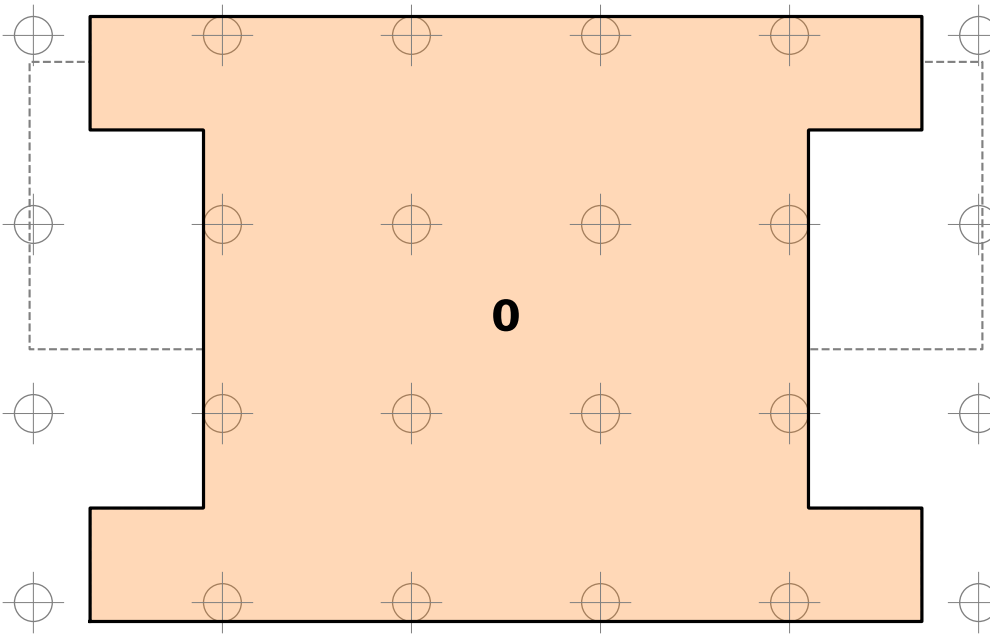

10 cm (print at 100%, no "fit to page")