
APPLICATION · TEXTILES AND TECHNICAL FABRICS

CENTRE AND EDGE REFERENCE IN TECHNICAL FABRIC LINES

In technical fabrics, symmetry matters as much as edge position. If the centre axis is lost, the product ends up off-centre even when both edges are correct. ServoMotion positions the two edge lines according to the recipe while keeping the centre reference fixed and visible throughout production.

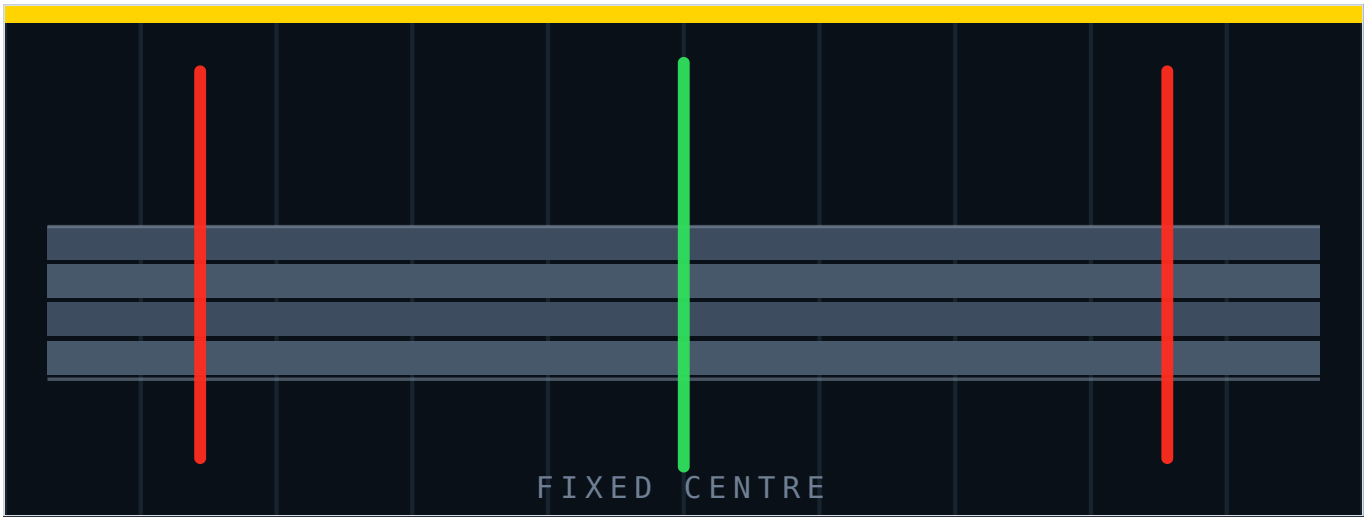

Core	K4 dual channel	2,400 mm
SYSTEM USED IN THE EXAMPLE INSTALLATION	2 MOVING + 1 FIXED CENTRE	TRAVEL

ON THE LINE — DO YOU RECOGNISE THESE SYMPTOMS?

The product is not centred

Even when the edges are measured correctly, the centre drifts, and the symmetry error appears at the next process stage.

The line disappears on textured surfaces

On napped or dark fabric, a weak line cannot be read and the operator has to walk up close.

Transferring measurements is hard on wide lines

At widths approaching two and a half metres, tape measurement is slow and difficult to repeat.

Rebuilt on every recipe

When the product group changes, both edge and centre have to be set again, stacking two operations on top of each other.

WHAT WE MEASURE DURING THE SITE SURVEY

Fabric width range	The difference between the narrowest and widest recipe determines travel range and housing length.
Centre reference	Whether the symmetry axis must remain visible continuously determines the channel configuration.
Surface texture and colour	Napped, textured or dark surfaces affect laser colour and optical power.
Working distance	Mounting height increases on wide lines, and angular tolerance is calculated accordingly.
Ambient lighting	Overhead lighting directly affects line legibility.
Support structure	Over a long travel range, traverse rigidity translates directly into accuracy.

WHICH ARCHITECTURE FITS THIS SEGMENT?

MOST APPLICATIONS

CORE PRECISOR

In technical fabric applications, the number of simultaneous reference lines is limited. A dual-channel configuration positions the two edges independently, while a fixed centre reference on a separate bracket keeps the symmetry axis visible throughout production.

IF THE NUMBER OF PROJECTED LASER LINES GROWS

SHUTTLE PRECISOR

If many cutting or stitching references have to be visible on the fabric at the same time, the shuttle architecture takes over.

EXAMPLE INSTALLATION

CORE PRECISOR · K4 DUAL CHANNEL · 2,400 MM TRAVEL

Two independent motion channels plus a fixed centre reference on a separate bracket. On a wide line, both edges are positioned simultaneously while the centre line stays visible throughout production. These figures come from one example installation; the dimensions for your line are determined during the site survey.

This note summarises the typical requirements of the segment and one example installation. The final system architecture, housing size and scope of connection are established during the site survey. The lasers provide an alignment reference; material and machine elements are set by the operator. Values may change without notice as the products are developed.

LET US REVIEW YOUR LINE TOGETHER servomotion.com.tr/en/contact.html