

Help, forgot how to modify JTAG chain to program

Scott Cowling <scotty@tonks.com>

Mon, Oct 10, 2022 at 11:47 AM


To: Tom McDermott tom.n5eg@gmail.com
Cc: "Cuong D. Nguyen" <cuong.nguyen@scranton.edu>, Dave Larsen <kv0s.dave@gmail.com>

Hi Tom,

Make sure the SW2 switch is set with 1 & 2 off and 3 & 4 on. Not sure if it is important, but all SW1 switches are off.

Make sure that your USB blaster has pin 1 next to the HDMI connector.

You should only have to add one device, the MAX10. Make sure it is "10M50DAF484ES".

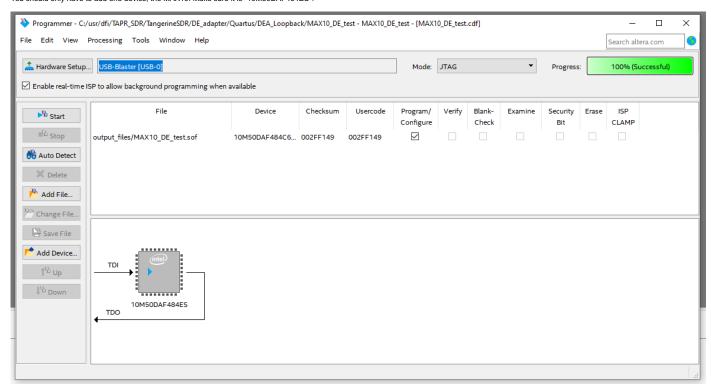

Hope that this helps.

I can send you a QSF file with all of the pins defined the way they are listed in my .v file. You can use that as a starter if you like.

Scotty WA2DFI [Quoted text hidden]