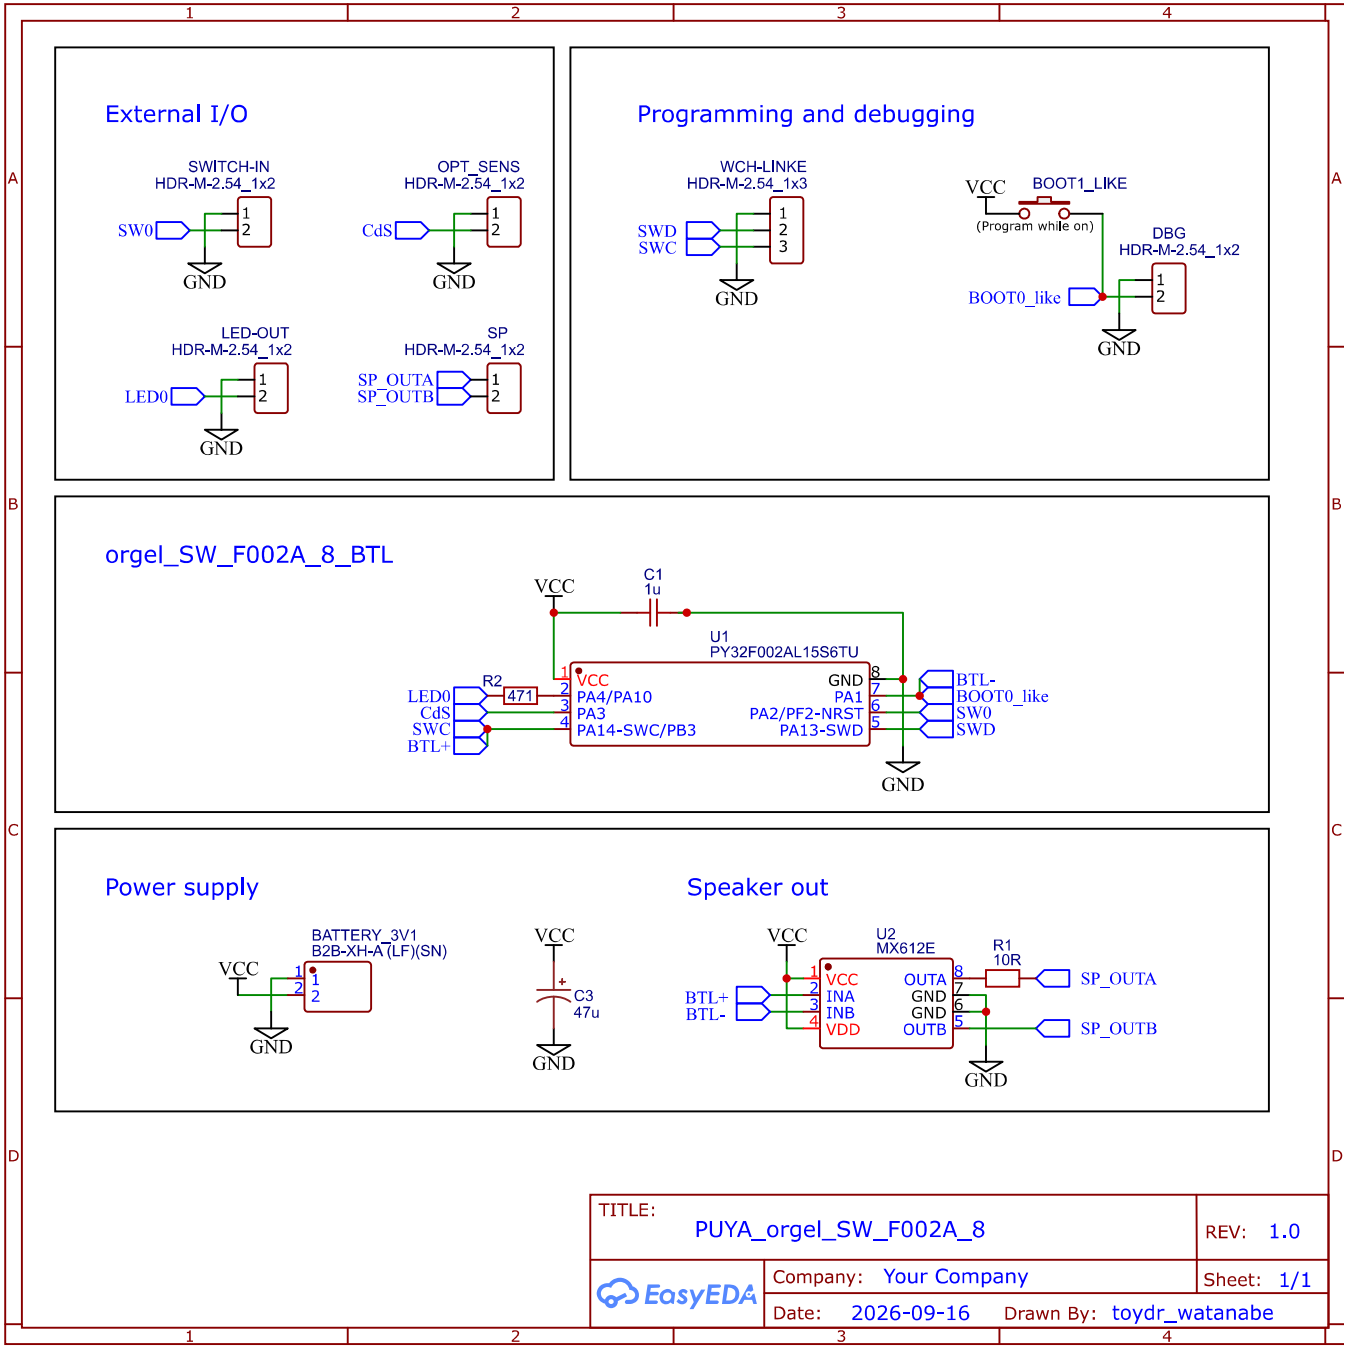

External I/O
SWITCH-IN
HDR-M-2.54_1x2
SW0
GND
OPT_SENS
HDR-M-2.54_1x2
CdS
GND
LED-OUT
HDR-M-2.54_1x2
LED0
GND
SP
HDR-M-2.54_1x2
SP_OUTA
SP_OUTB
Programming and debugging
WCH-LINKE
HDR-M-2.54_1x3
SWD
SWC
GND
VCC
BOOT1_LIKE
(Program while on)
DBG
HDR-M-2.54_1x2
BOOT0_like
GND
orgel_SW_F002A_8_BTL
VCC
C1
1u
U1
PY32F002AL15S6TU
R2
471
LED0
CdS
SWC
BTL+
VCC
PA4/PA10
PA3
PA14-SWC/PB3
GND
PA1
PA2/PF2-NRST
PA13-SWD
BTL-
BOOT0_like
SW0
SWD
GND
Power supply
BATTERY_3V1
B2B-XH-A(LF)(SN)
VCC
GND
VCC
C3
47u
GND
Speaker out
VCC
U2
MX612E
BTL+
BTL-
VCC
INA
INB
VDD
OUTA
GND
GND
OUTB
R1
10R
SP_OUTA
SP_OUTB
GND
TITLE:
PUYA_orgel_SW_F002A_8
REV: 1.0
EasyEDA
Company: Your Company
Sheet: 1/1
Date: 2026-09-16
Drawn By: toydr_watanabe