


YUBI Glove Assy Assembly Procedure


[Assembly Procedure]

- (1) Install components onto UPPER PLATE
 - Install INSERTs
- (2) Install components onto UNDER PLATE
 - Install INSERTs
- (3) Install components onto FINGER ATTACHMENT_R_Glove
 - Install FINGER PAD
 - Install RUBBER SHEET
- (4) Install components onto FINGER ATTACHMENT_L_Glove
 - Install FINGER PAD
 - Install RUBBER SHEET
- (5) Install SHAFT and GEAR
 - Install SHAFT and GEAR
- (6) Install FINGER ASSY
 - Install FINGER ASSY_R (Right Finger, Step (3))
 - Install FINGER ASSY_L (Left Finger, Step (4))
- (7) Install UPPER PLATE
- (8) Install FLAPs
 - Install FLAP_R_AIRoA
 - Install FLAP_L_AIRoA
- (9) Install HOLDER_Quest_R/L
 - Install INSERTs
 - Install HOLDER_Quest_R/L
- (10) Install ENCODER MAGNET
 - Install MAGNET STAY
 - Install ENCODER MAGNET
- (11) Install PCB
 - Install PCB (AS5601) onto UPPER PLATE
 - Install PCB (ESP32C6) onto HOLDER_Quest_R/L
 - Install USB Type-C cable
- (12) Install BRACKET_CAMERA and CAMERA
 - Install BRACKET_CAMERA
 - Install CAMERA
 - Connect CAMERA WIRING
- (13) Install GRIP
 - Install T-slot nut
 - Install GRIP
 - Adjust GRIP position
- (14) Install ELASTIC BAND for finger opening and closing
- (15) Install Meta Quest Touch Plus Controller

【YUBI Glove Assy_Right-handed】

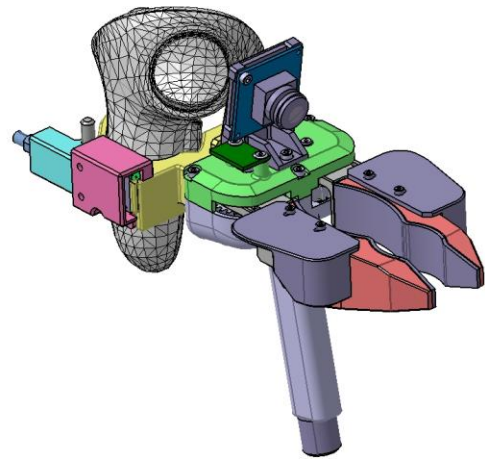

【YUBI Glove Assy_Left-handed】

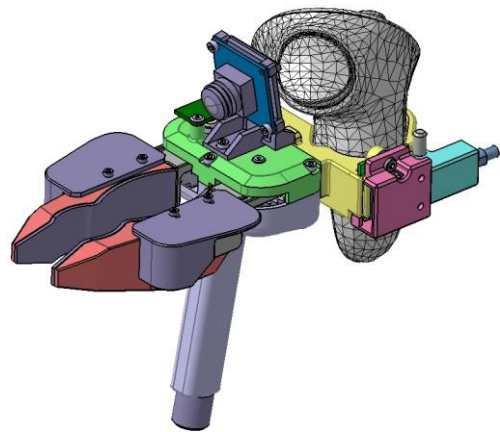

(1) Install components onto UPPER PLATE

- Install INSERTs


Install following INSERTs into UPPER PLATE.

1) SB-264040: 2 pcs


2) SB-264040: 2 pcs

(installation position differs between right-hand and left-hand configurations)

[For right-hand configuration]

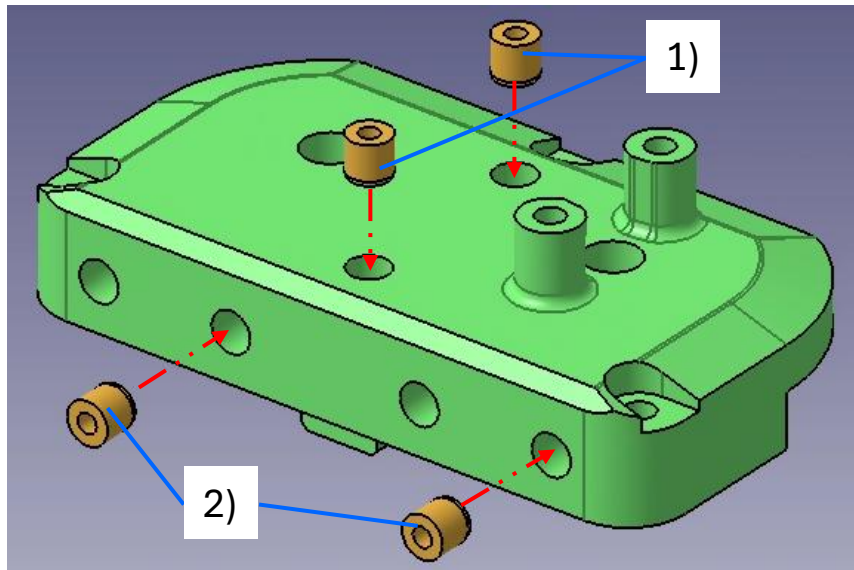

[For left-hand configuration]

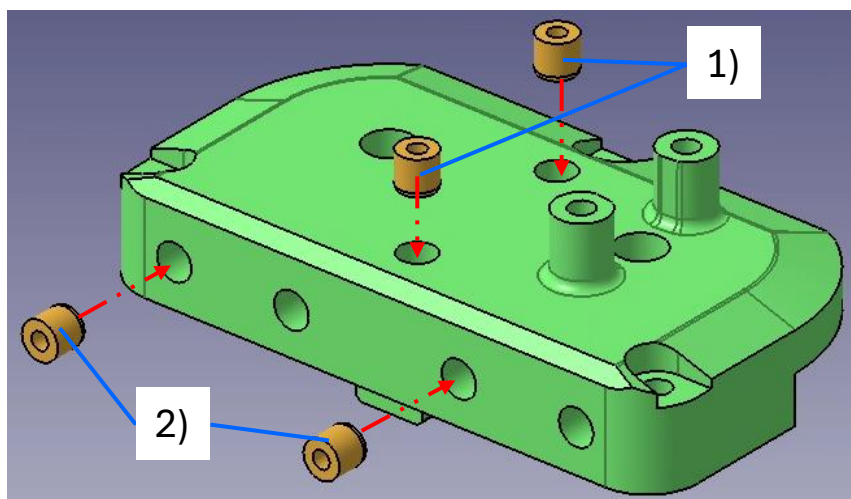


(2) Install components onto UNDER PLATE

- Install INSERTs

Install following INSERTs into UNDER PLATE.

1) SB-264040: 3 pcs

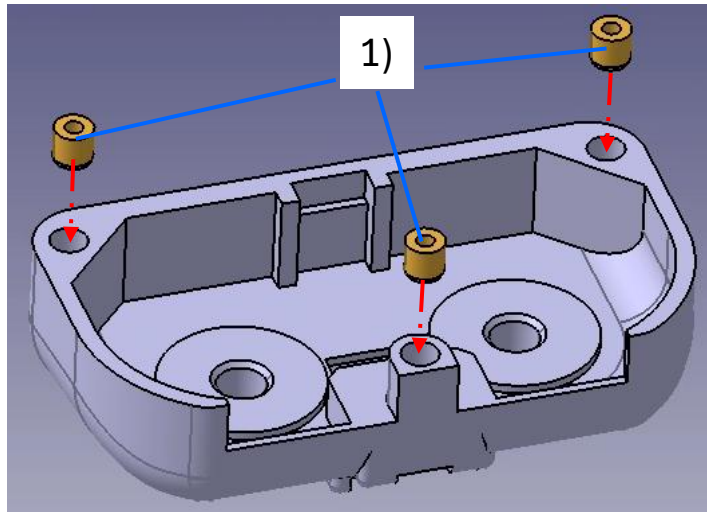


(3) Install components onto FINGER ATTACHMENT_R_Glove

- Install FINGER PAD

1) Install FINGER PAD_t30_R or FINGER PAD_t20

onto FINGER ATTACHMENT_R_Glove.


2) Secure FINGER PAD with CB2.5-10 (2 pcs). (Torque: $0.36 \text{ N} \cdot \text{m}$)

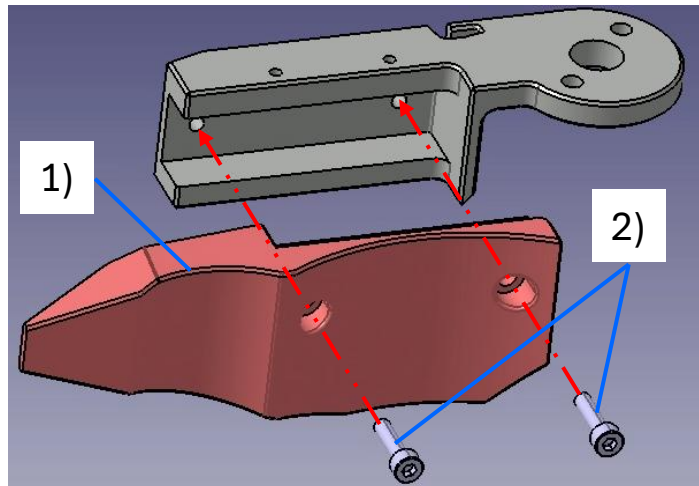

- Install RUBBER SHEET

3) Attach RUBBER SHEET onto finger pad using instant adhesive.

Select RUBBER SHEET size based on gripping location and required area.

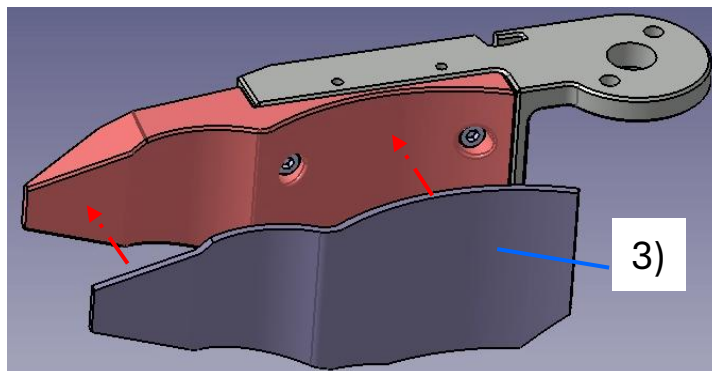


(4) Install components onto FINGER ATTACHMENT_L_Glove

- Install FINGER PAD

1) Install FINGER PAD_t30_L or FINGER PAD_t20 onto FINGER ATTACHMENT_L_Glove.


2) Secure FINGER PAD with CB2.5-10 (2 pcs). (Torque: $0.36 \text{ N} \cdot \text{m}$)

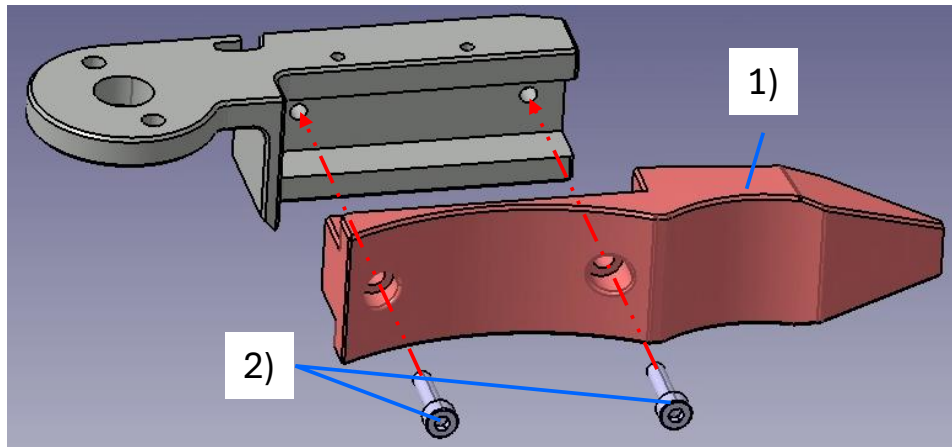

- Install RUBBER SHEET

3) Attach RUBBER SHEET onto finger pad using instant adhesive.

Select RUBBER SHEET size based on gripping location and required area.

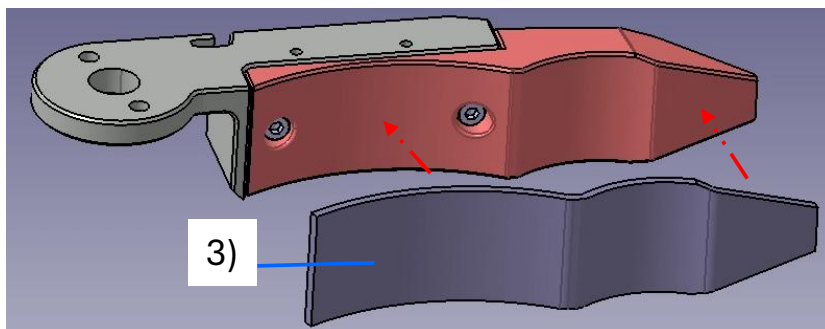


(5) Install SHAFT and GEAR

- Install SHAFT and GEAR


Install following components onto shaft sections of UNDER PLATE.

Place keyways of SHAFT and GEAR at positions shown in Keyway alignment figure.

- 1) SPACER (2 pcs)
- 2) SHAFT_D8 (2 pcs)
- 3) SPUR GEAR_z30 (2 pcs)
- 4) PARALLEL KEY (2 pcs)

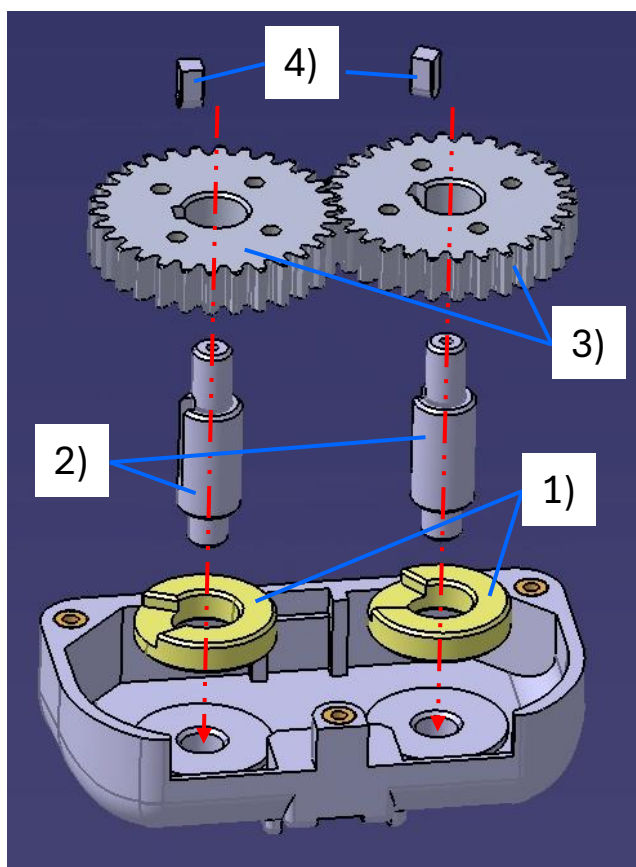


[Keyway alignment]

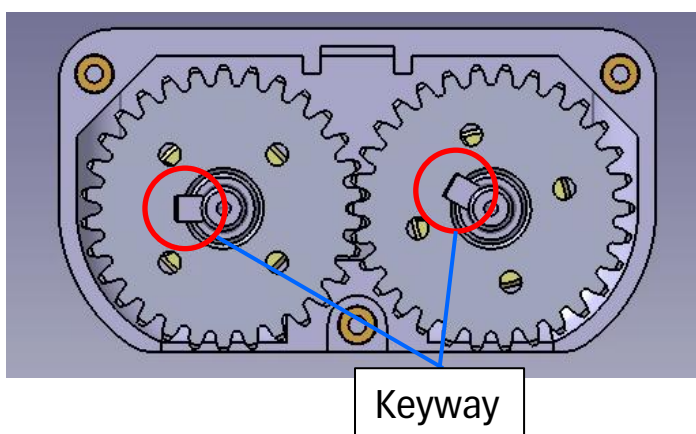

(6) Install FINGER ASSY


- Install FINGER ASSY_R

- 1) Install FINGER ASSY_R (3) onto SHAFT_D8 of right finger.
- 2) Secure FINGER ASSY_R (3) with CBSTNR3-8 (2 pcs). (Apply threadlocker, Torque: $1.14 \text{ N} \cdot \text{m}$)

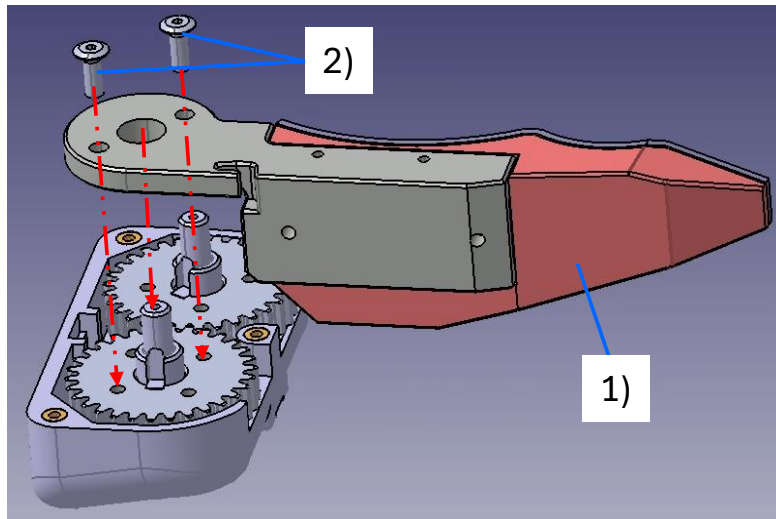

- Install FINGER ASSY_L

- 3) Install FINGER ASSY_L (4) onto SHAFT_D8 of left finger.
- 4) Secure FINGER ASSY_L (4) with CBSTNR3-8 (2 pcs). (Apply threadlocker, Torque: $1.14 \text{ N} \cdot \text{m}$)

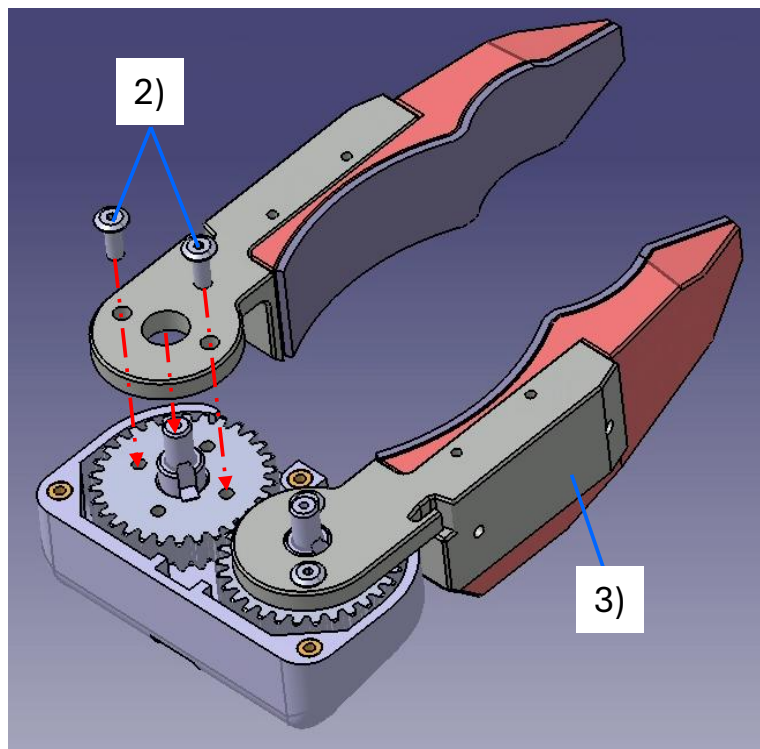


(7) Install UPPER PLATE

- Install UPPER PLATE

1) Install WASHERs.

2) Install UPPER PLATE.

3) Secure UPPER PLATE with CB2.5-15 (3 pcs). (Torque: $0.36 \text{ N} \cdot \text{m}$)

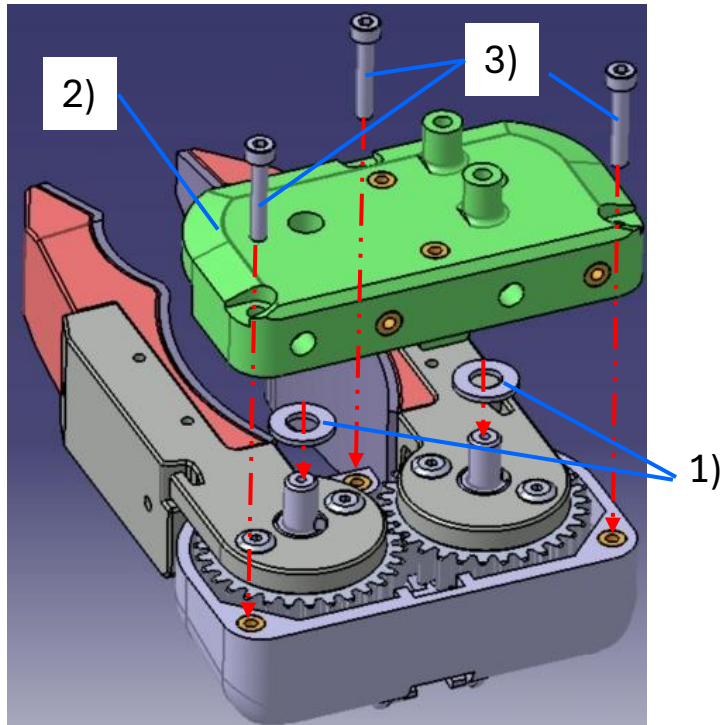


(8) Install FLAPs

- Install FLAP_R_AIRoA

1) Install FLAP_R_AIRoA onto FINGER ATTACHMENT_R.


2) Secure FLAP_R_AIRoA with CB2-6 (2 pcs). (Torque: 0.315 N · m)

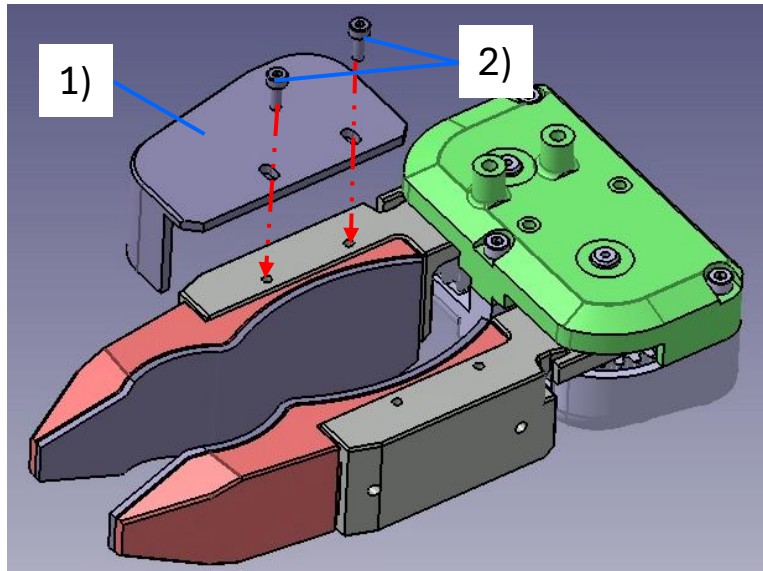

- Install FLAP_L_AIRoA

3) Install FLAP_L_AIRoA onto FINGER ATTACHMENT_L.

4) Secure FLAP_L_AIRoA with CB2-6 (2 pcs). (Torque: 0.315 N · m)

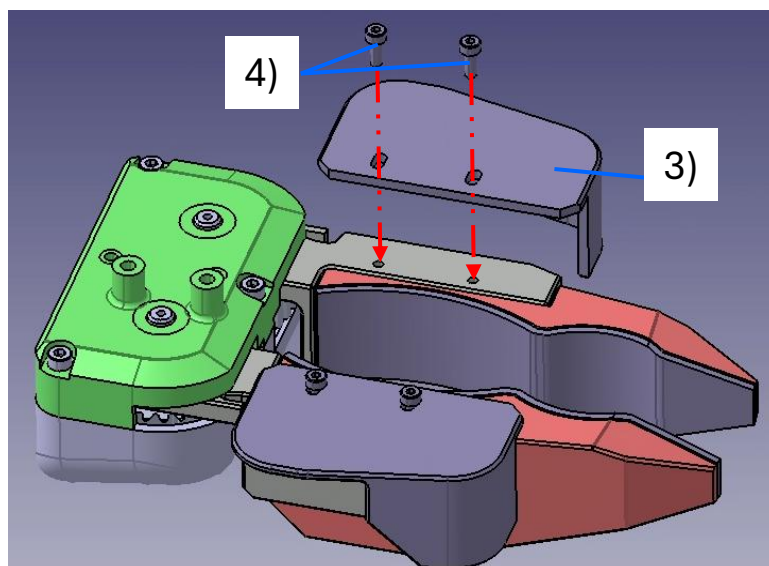


(9) Install HOLDER_Quest_R/L

- Install INSERTs

Install following INSERTs into HOLDER_Quest_R/L.

1) SB-304550: 2 pcs

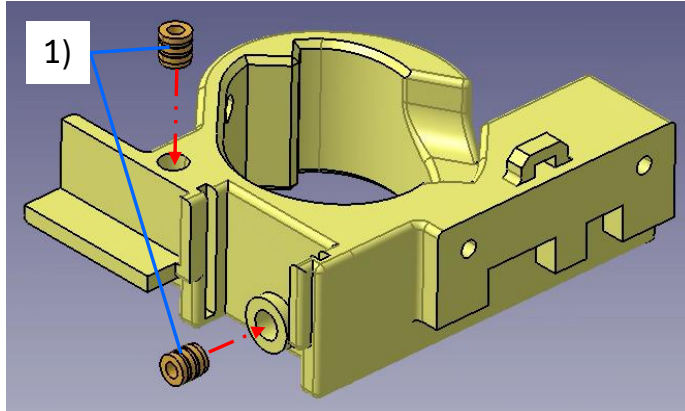


[For right-hand configuration]

- Install HOLDER_Quest_R

2) Install HOLDER_Quest_R onto rear side of UPPER PLATE.

3) Secure HOLDER_Quest_R with CB2.5-6 (2 pcs). (Torque: 0.36 N · m)

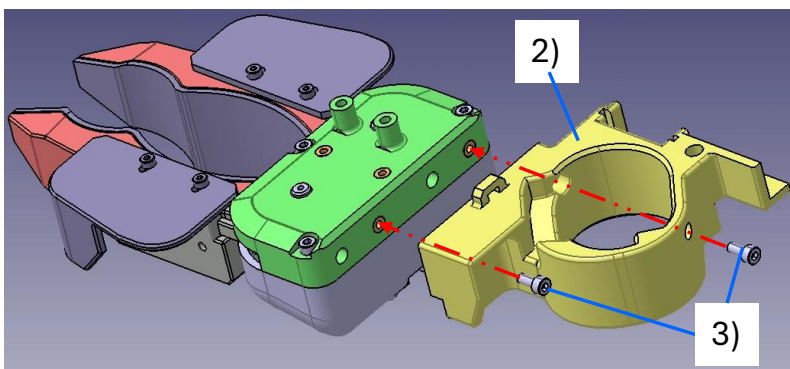


[For left-hand configuration]

- Install HOLDER_Quest_L

4) Install HOLDER_Quest_L onto rear side of UPPER PLATE.


5) Secure HOLDER_Quest_L with CB2.5-6 (2 pcs). (Torque: 0.36 N · m)

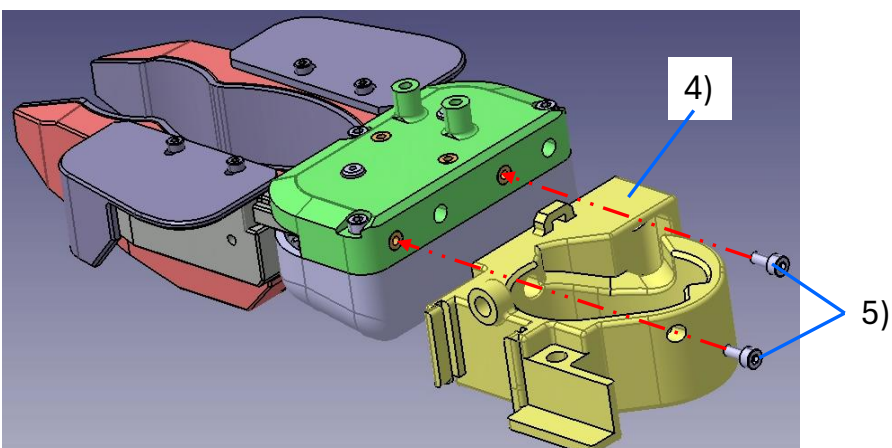

(10) Install ENCODER MAGNET


- Install MAGNET STAY

- 1) Install MAGNET STAY onto shaft section of right finger.
 - 2) Secure MAGNET STAY with BFBJ2-4 (cross-recessed flat head machine screw).
- (Torque: 0.176 N · m)

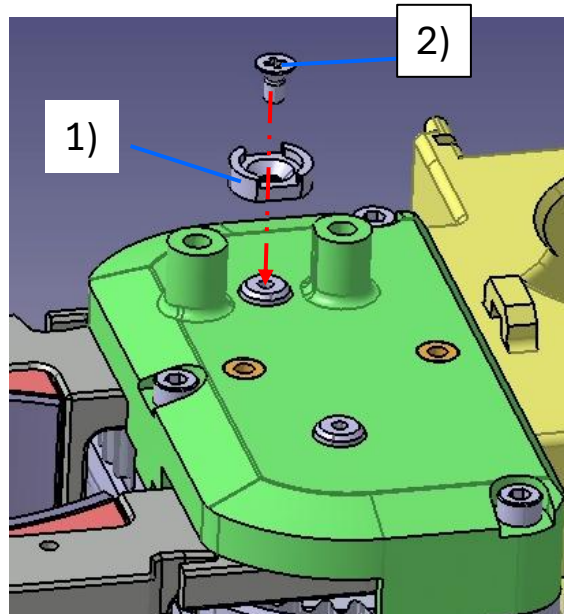


- Install ENCODER MAGNET

- 3) Attach NEODYMIUM MAGNET_AS5601 onto MAGNET STAY using instant adhesive.

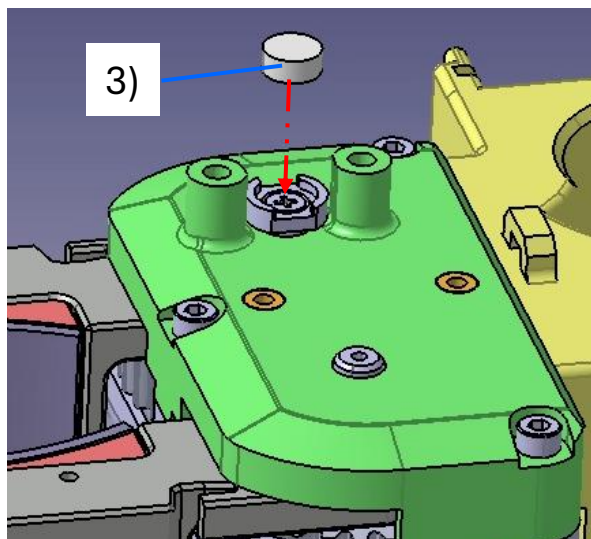

(11) Install wiring onto PCB


- Install wiring onto PCB following procedure below

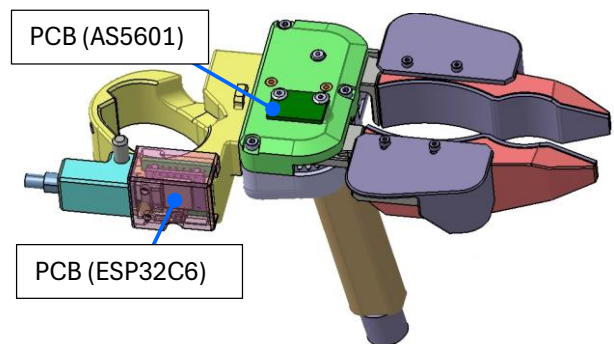

1) Solder wires onto PCB (ESP32C6) and PCB (AS5601).
Refer to connection table for wiring positions (see figure).

PCB(ESP32C6)



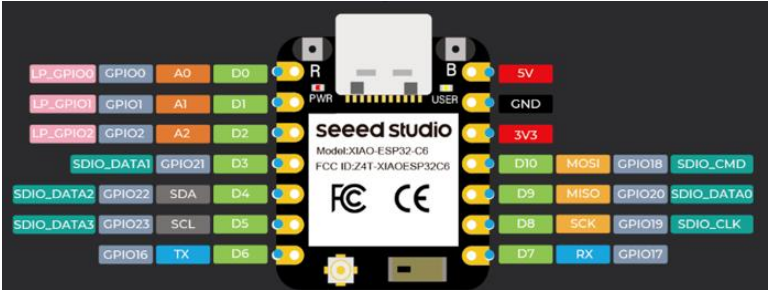

PCB(AS5601)




Connection Table

ESP32C6	Wire type / color	AS5601
3V3	AWG28/black	3V3
GND	AWG28/black	GND
D4	AWG28/black	SDA
D5	AWG28/black	SCL

Wire length
Right-hand configuration: 80 mm
Left-hand configuration: 180 mm

2) Secure PCB (ESP32C6) onto UNIVERSAL PCB (25.4 x 25.4 x t1.6) using PIN HEADERS.
(4 locations shown below).


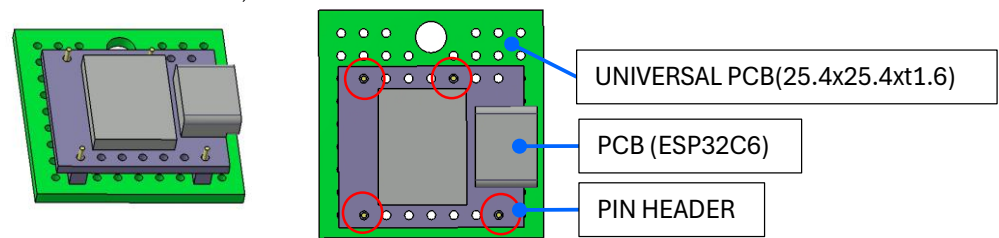


Fix at same position for right-hand and left-hand configurations

3) Assemble COVER_PCB_R/L onto PCB (ESP32C6) + UNIVERSAL PCB.

- Hook COVER_PCB_R/L from side of PCB and place it.


Route wires from front side.

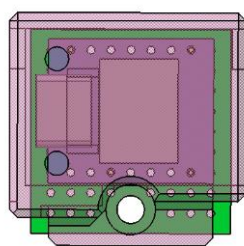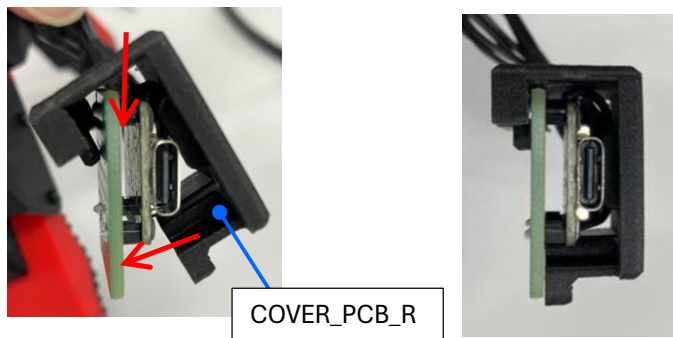

→
Front Side


Installed state
(Right-hand configuration)

←
Front Side

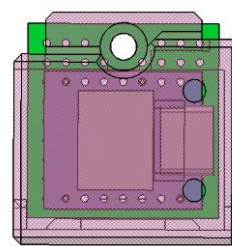


Installed state
(Left-hand configuration)


4) Assemble COVER_PCB_R/L with PCB into groove of Quest HOLDER_R/L by hooking UNIVERSAL PCB and sliding from top.

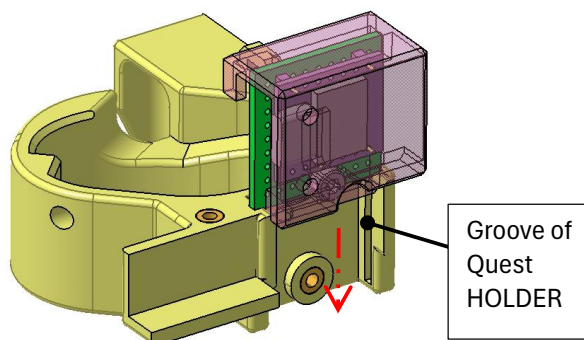


5) Secure COVER_PCB_R/L with CB3-6 (1 pc). (Torque: $0.63 \text{ N} \cdot \text{m}$)

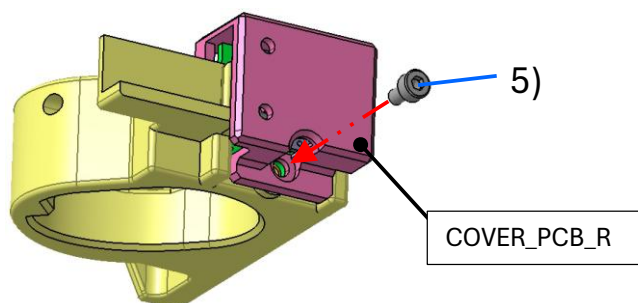

6) Connect USB cable to PCB (ESP32C6).

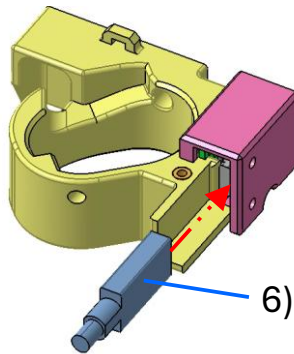


7) Install COVER_CABLE_R/L onto Quest HOLDER_R/L and secure with LRLM3-6 bolts.

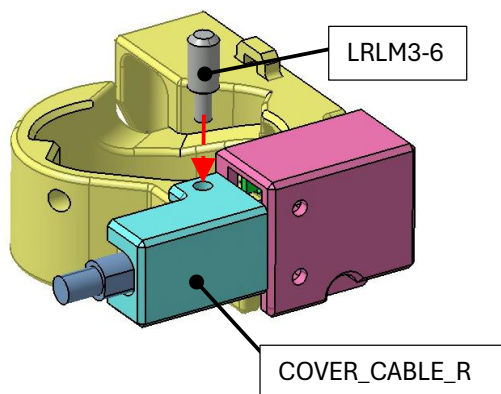


8) Install PCB (AS5601) onto UPPER PLATE with CBSTNR3-5 (2 pcs).


(Torque: 0.63 N · m)

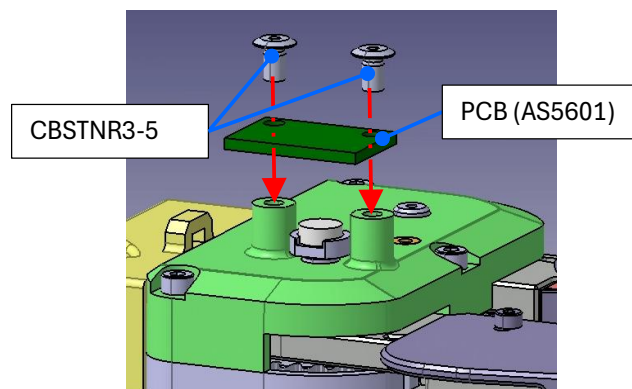

9) If excess wiring remains, secure wires to hook section of Quest HOLDER_R/L using cable ties.

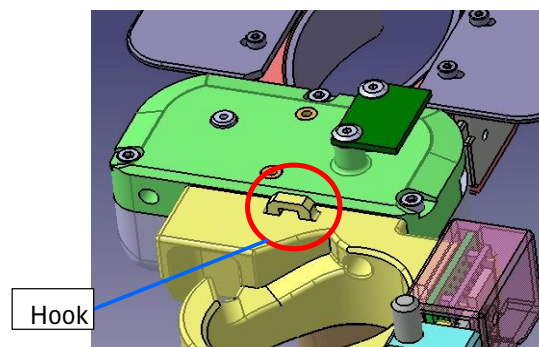


[PCB + Cover assembly state]

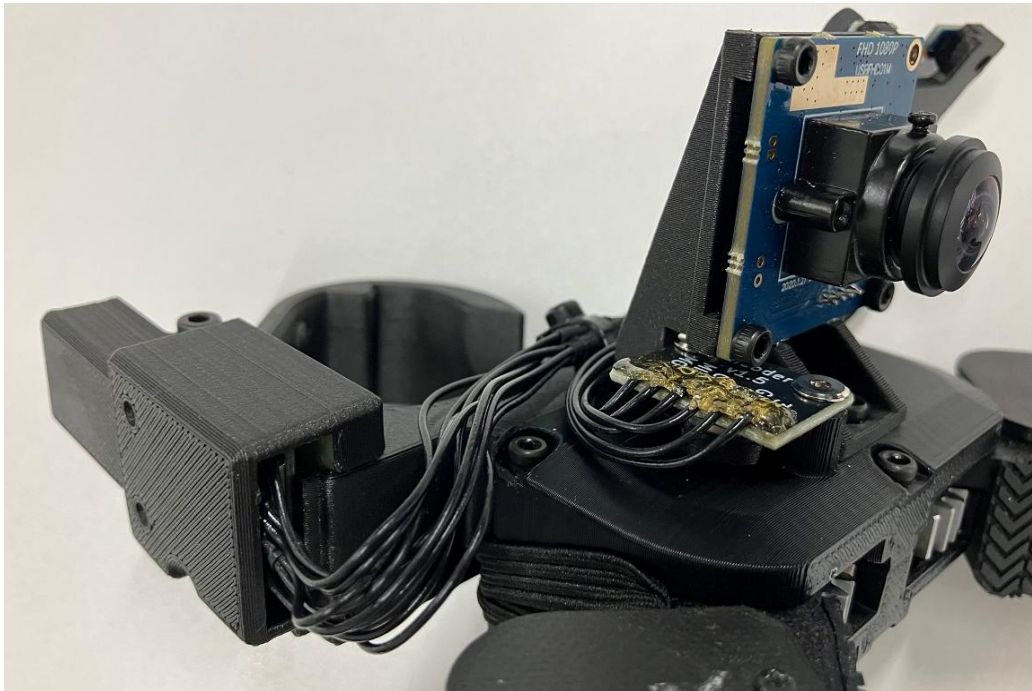

(12) Install BRACKET_CAMERA and CAMERA


- Install BRACKET_CAMERA

- 1) Place BRACKET_CAMERA onto UPPER PLATE.
- 2) Secure BRACKET_CAMERA with CB2.5-4 (2 pcs). (Torque: 0.36 N · m)

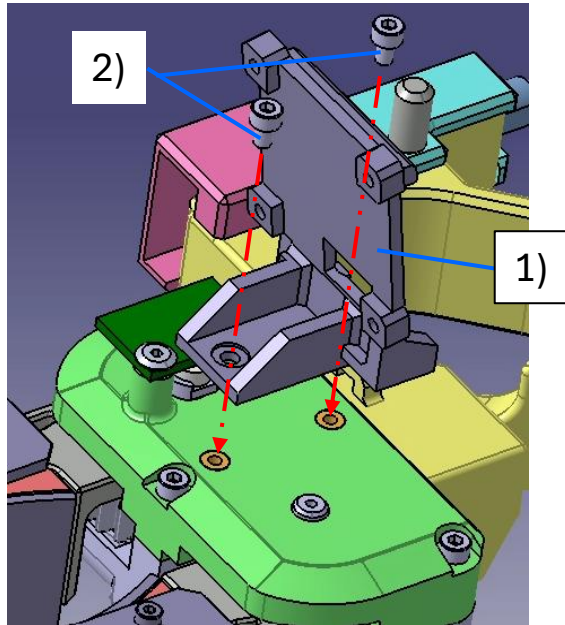

- Install CAMERA

- 3) Place CAMERA onto BRACKET_CAMERA.
- 4) Secure CAMERA with CB2.5-4 (2 pcs). (Torque: 0.36 N · m)

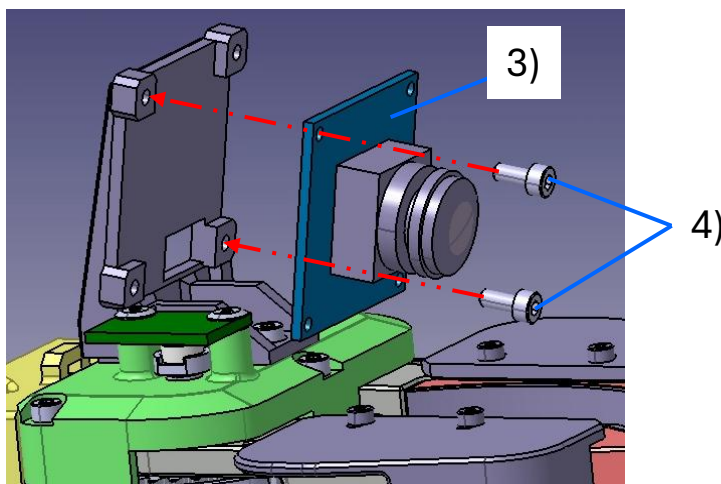


- Connect CAMERA WIRING

- 5) Connect CAMERA WIRING to connector from rear side of BRACKET_CAMERA.

(13) Install GRIP


- Install T-slot nut

1) Install T-slot nut into groove of UNDER PLATE.

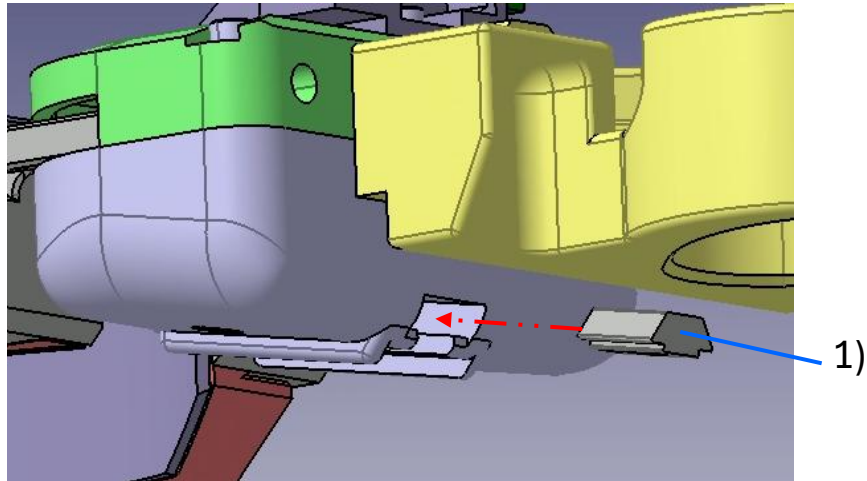

- Install GRIP


2) Install GRIP by passing ADJUST BOLT through GRIP.

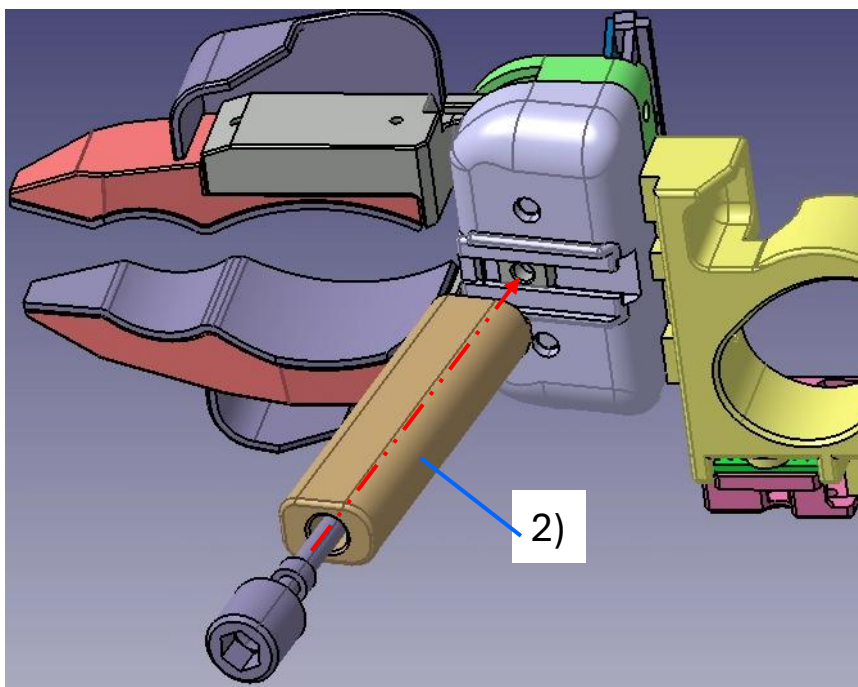

- Adjust GRIP position

3) Adjust GRIP position by sliding back and forth to comfortable position.



4) Tighten ADJUST BOLT by hand to secure.

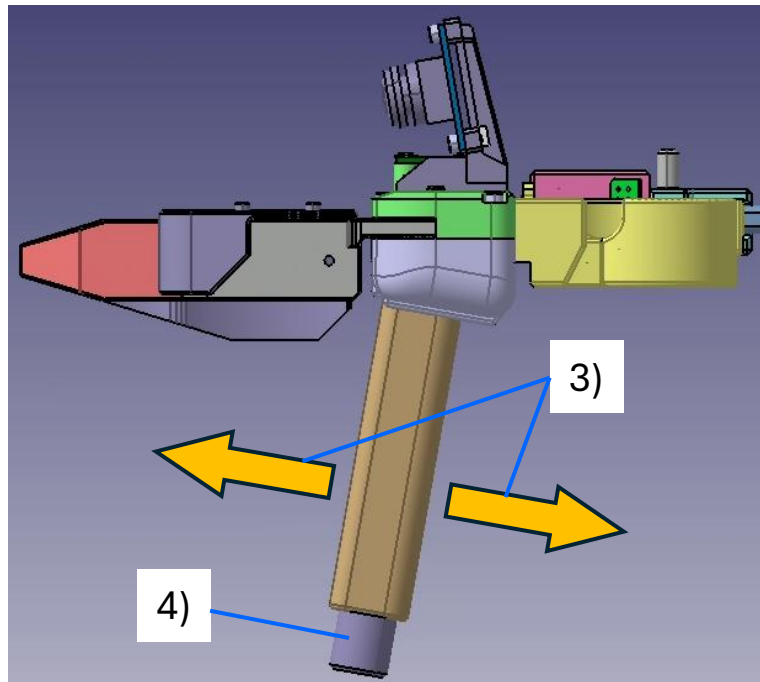

(14) Install ELASTIC BAND for finger opening and closing

- Install ELASTIC BAND for finger opening and closing following procedure below


- 1) Cut ELASTIC BAND (8-cord elastic) to 190 mm.
- 2) Tie ELASTIC BAND into loop shape.
- 3) Hook loop onto hook sections at base of left and right fingers.
- 4) Confirm fingers open and close smoothly.

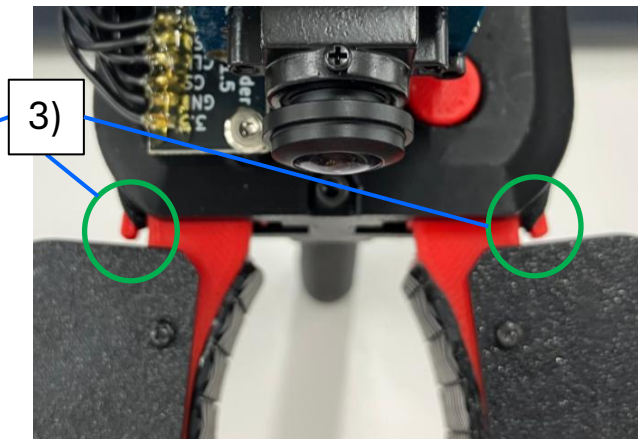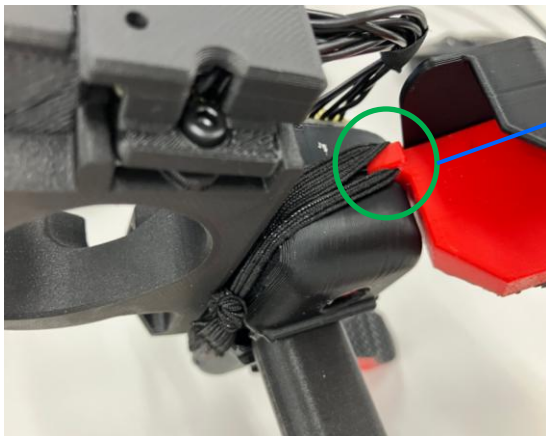

(15) Install Meta Quest Touch Plus Controller

1) Install Meta Quest Touch Plus Controller_R/L onto HOLDER_Quest_R/L.

[For right-hand configuration]

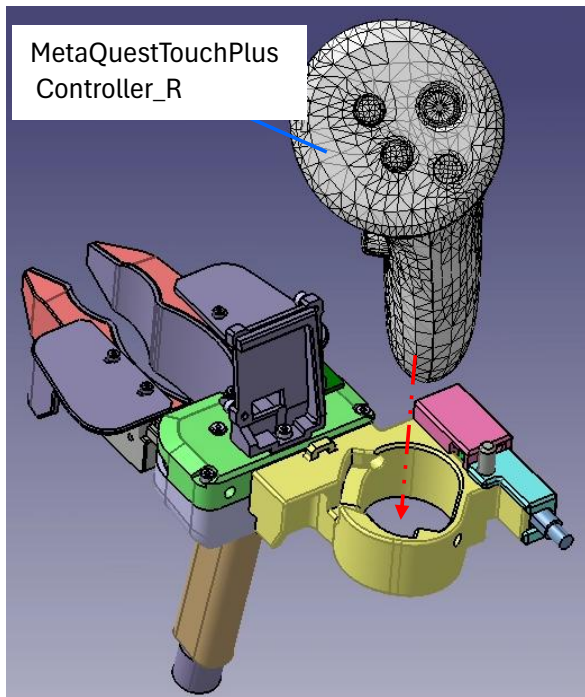

[For left-hand configuration]

