

YUBI Glove Assy_ver.2 Assembly Procedure


【Assembly Procedure】

- (1) Install components onto UPPER PLATE
 - Install INSERTs
 - Install BUSHINGS
- (2) Install components onto UNDER PLATE
 - Install INSERTs
 - Install BUSHINGS
- (3) Install components onto FINGER with Gear_t30_R or t20_R
 - Install RUBBER SHEET
 - Install ENCODER MAGNET
- (4) Install components onto FINGER with Gear_t30_L or t20_L
 - Install RUBBER SHEET
- (5) Install FINGER with Gear and UPPER PLATE
- (6) Install FLAPs
 - Install FLAP_R
 - Install FLAP_L
- (7) Install HOLDER_Quest_R/L
 - Install INSERTs
 - Install HOLDER_Quest_R/L
- (8) Install PCB and Wiring
 - Install PCB (AS5601) onto UPPER PLATE
 - Install PCB (ESP32C6) on HOLDER_Quest_R/L
 - Install USB TYPE-C CABLE
- (9) Install CAMERA
 - Install CAMERA
 - Connect CAMERA WIRING
- (10) Install GRIP
 - Install T-SLOT NUT
 - Install GRIP
 - Adjust GRIP position
- (11) Install Rubber Band for Finger opening and closing
- (12) Install Meta Quest Touch Plus Controller


【Optional Parts Assembly Procedure】

- (1) Install FINGER ATTACHMENT_Glove and FINGER PAD

【YUBI Glove Assy_ver.2_for Right-hand】

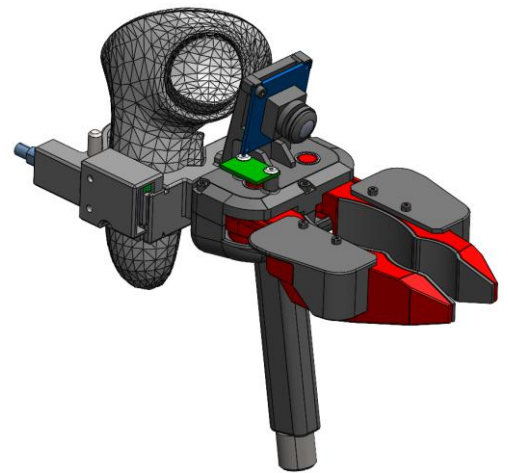

【YUBI Glove Assy_ver.2_for Left-Hand】

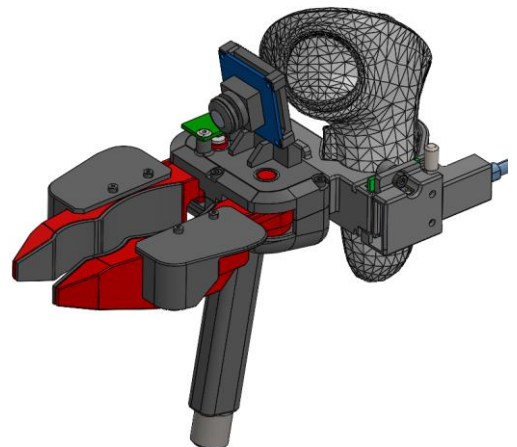


(1) Install components onto UPPER PLATE

- Install INSERTs


Install following INSERTs into UPPER PLATE

① SB-264040: 2 pcs. (Installation positions differ between for right-hand and left-hand versions.)

【for Right-hand Version】

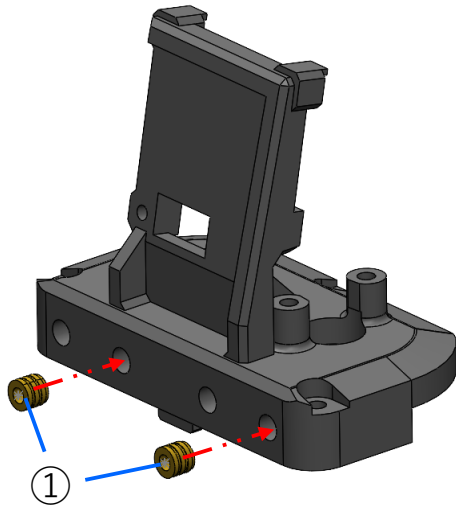


【for Left-hand Version】

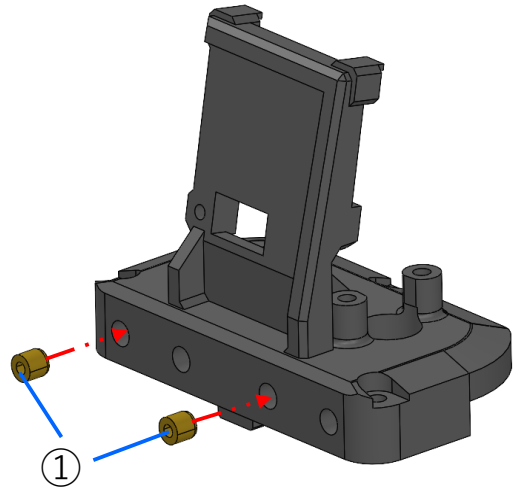

- Install BUSHINGS

Install following BUSHINGS into UPPER PLATE

② JZF8-5: 2 pcs.

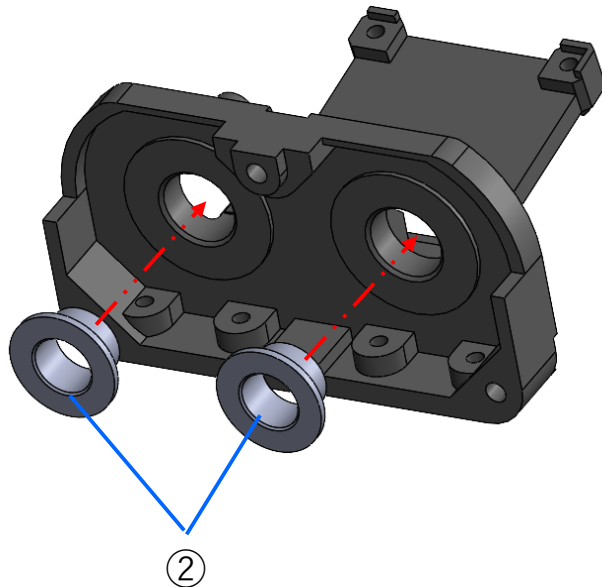


(2) Install components onto UNDER PLATE

- Install INSERTs

Install following INSERTs into UNDER PLATE


① SB-264040: 3 pcs.

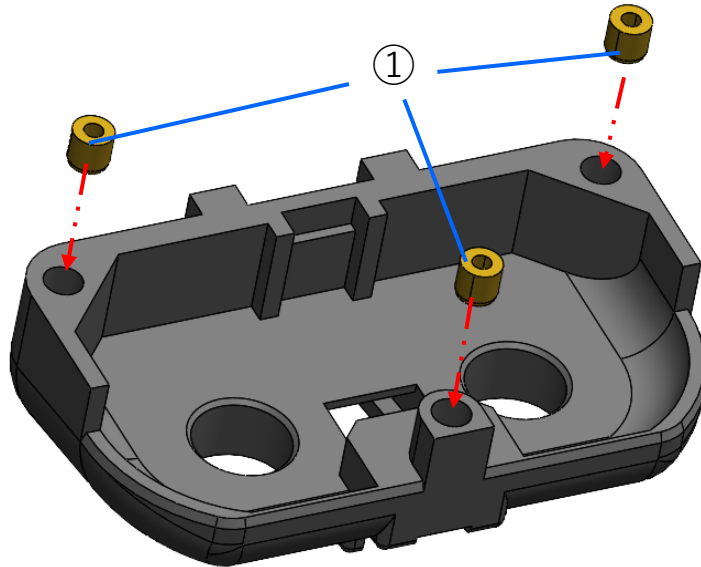

- Install BUSHINGS

Install following BUSHINGS into UNDER PLATE

② JZF8-5: 2 pcs.

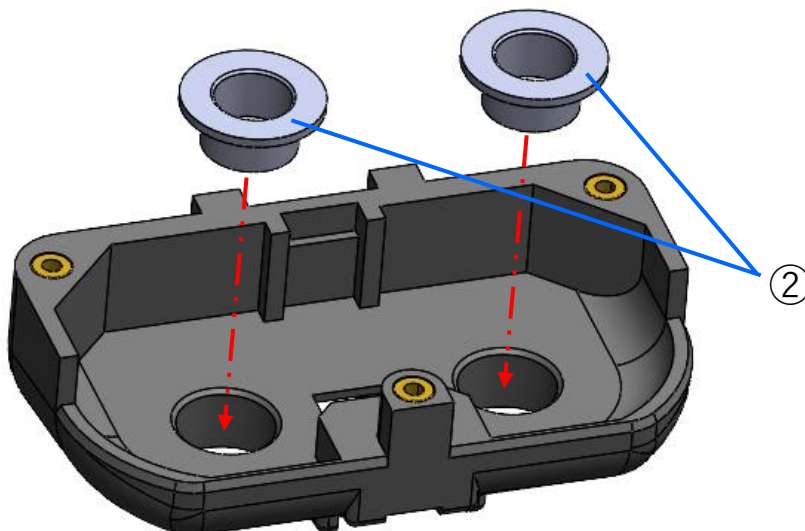


(3) Install components onto FINGER with Gear_t30_R or t20_R

- Install RUBBER SHEET


① Attach RUBBER SHEET onto FINGER with Gear_t30_R or t20_R using adhesive (e.g., Super X).

Select RUBBER SHEET size based on gripping location and required area.

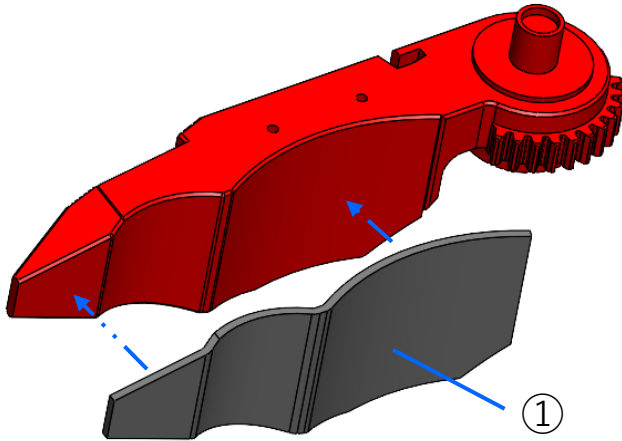

- Install ENCODER MAGNET

② Attach NEODYMIUM MAGNET_AS5601 to FINGER with Gear_t30_R or t20_R using instant adhesive.

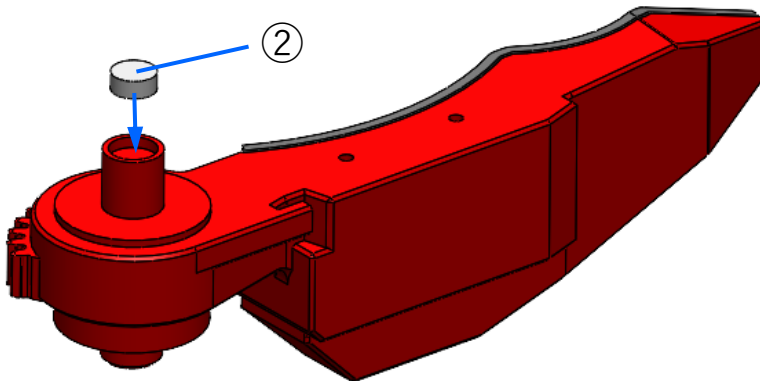


(4) Install components onto FINGER with Gear_t30_L or t20_L

- Install RUBBER SHEET

① Attach RUBBER SHEET to FINGER with Gear_t30_L or t20_L using adhesive (e.g., Super X).


Select RUBBER SHEET size based on gripping location and required area.

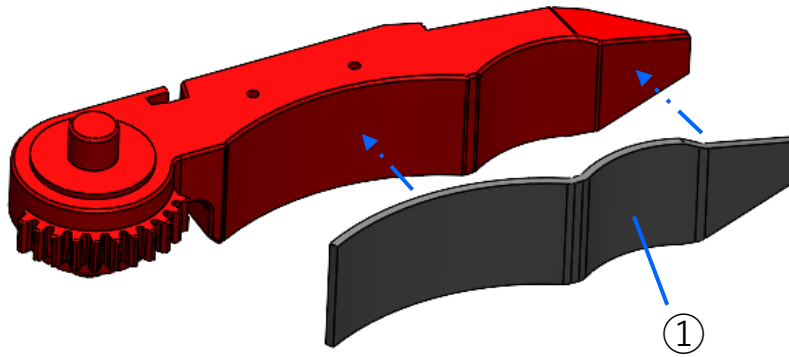


(5) Install FINGER with Gear_Glove and UPPER PLATE

Install following components onto UNDER PLATE.

- ① Install FINGER with Gear_R/L from steps (3)/(4).
- ② Install UPPER PLATE from step (1).

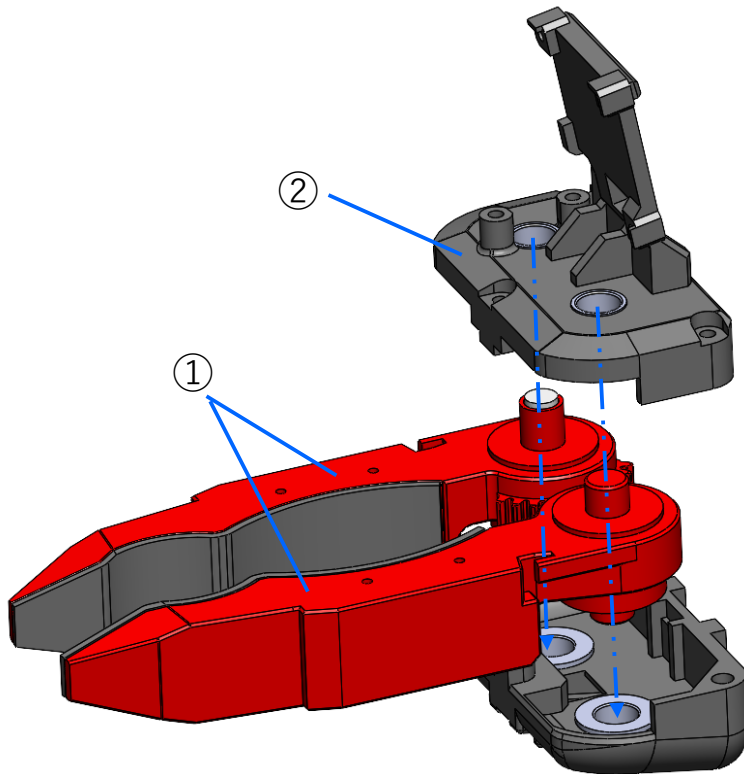


- ③ Secure UPPER PLATE with CB2.5-15 (3 pcs). (Torque: 0.36 N·m)

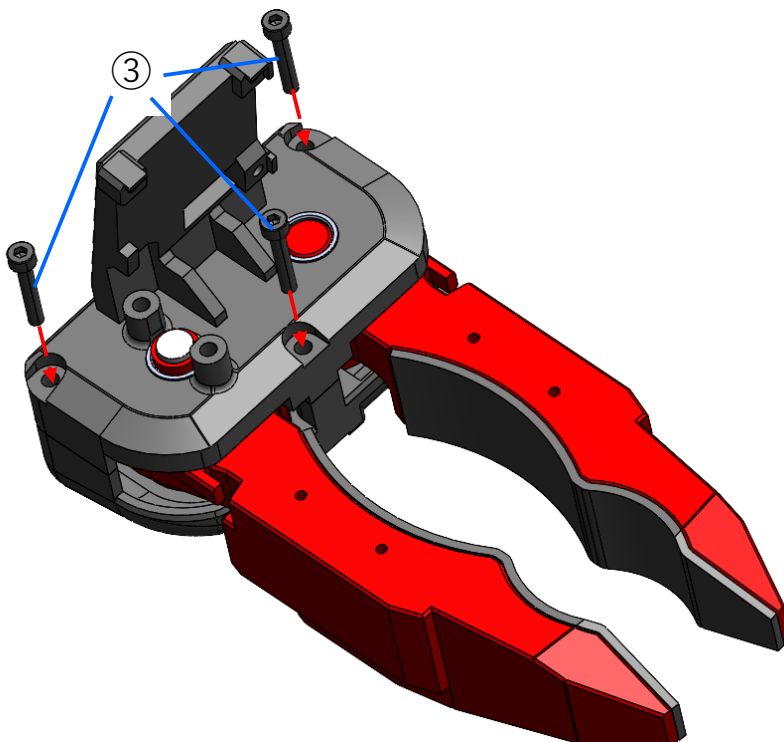

(6) Install FLAPs


- Install FLAP_R

- ① Install FLAP_R on FINGER with Gear_t30_R or t20_R.
- ② Secure FLAP_R with CB2-6 (2 pcs). (Torque: 0.315 N·m)

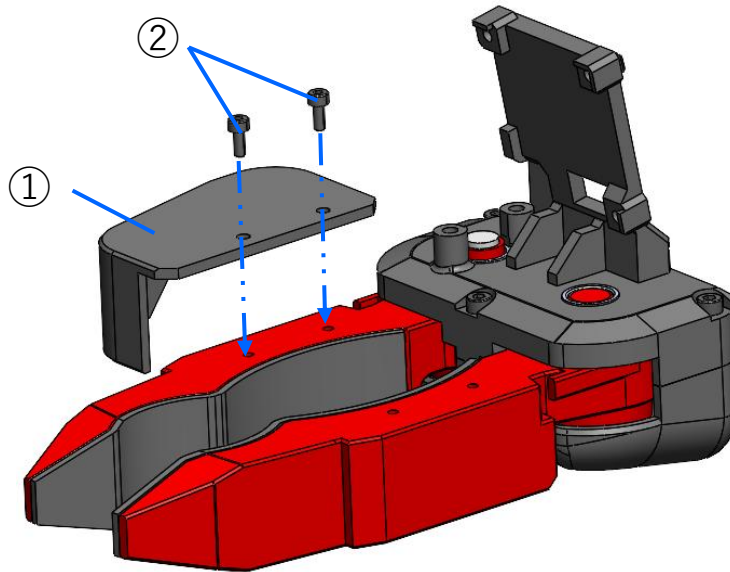

- Install FLAP_L

- ③ Install FLAP_L onto FINGER with Gear_t30_L or t20_L.
- ④ Secure FLAP_L with CB2-6 (2 pcs). (Torque: 0.315 N·m)

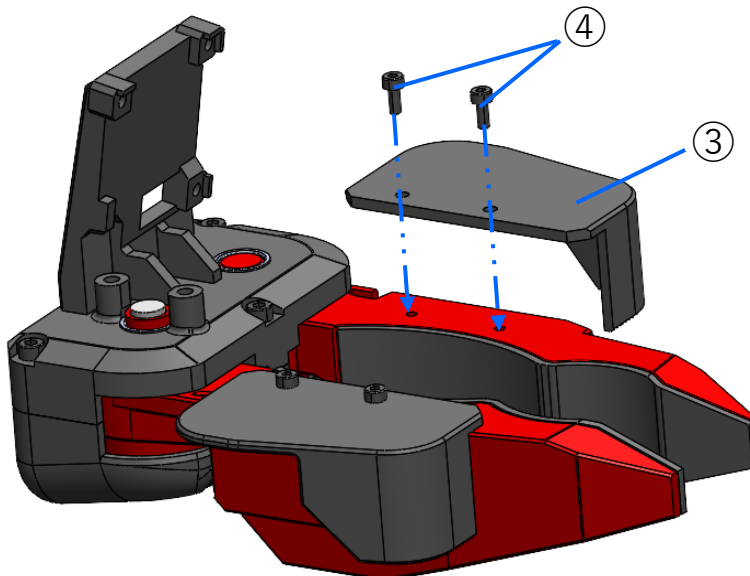


(7) Install HOLDER_Quest_R/L

- Install INSERTs

Install following INSERTs in HOLDER_Quest_R/L.

- ① SB-304540: 2 pcs.

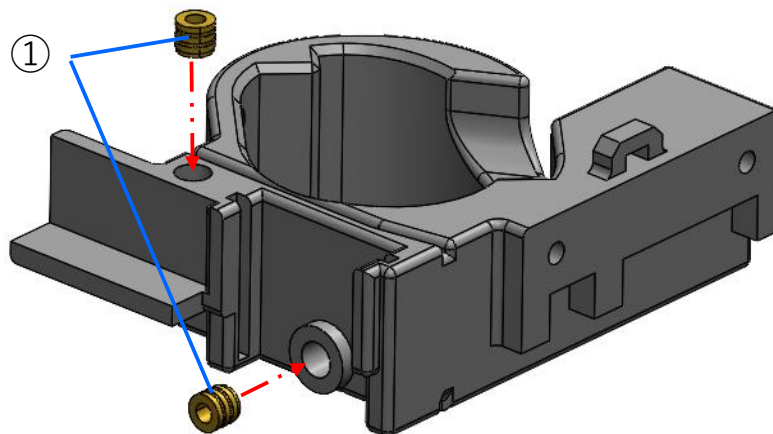


【for Right-hand Version】

- Install HOLDER_Quest_R

② Install HOLDER_Quest_R onto rear side of UPPER PLATE. (Press it against locating features.)

③ Secure HOLDER_Quest_R with CB2.5-8 (2 pcs). (Torque: 0.36 N·m)

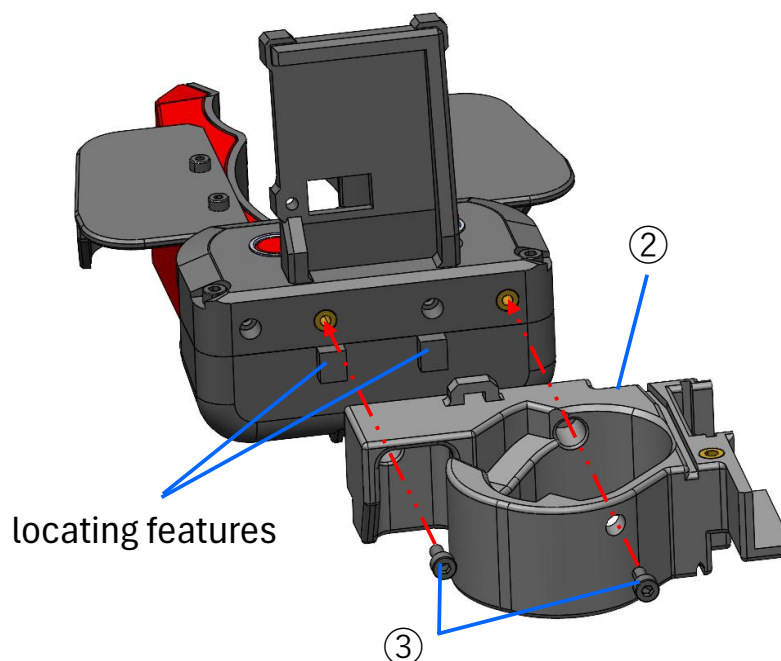


【for Left-hand Version】

- Install HOLDER_Quest_L


④ Install HOLDER_Quest_L onto rear side of UPPER PLATE. (Press it against locating features.)

⑤ Secure HOLDER_Quest_L with CB2.5-8 (2 pcs). (Torque: 0.36 N·m)

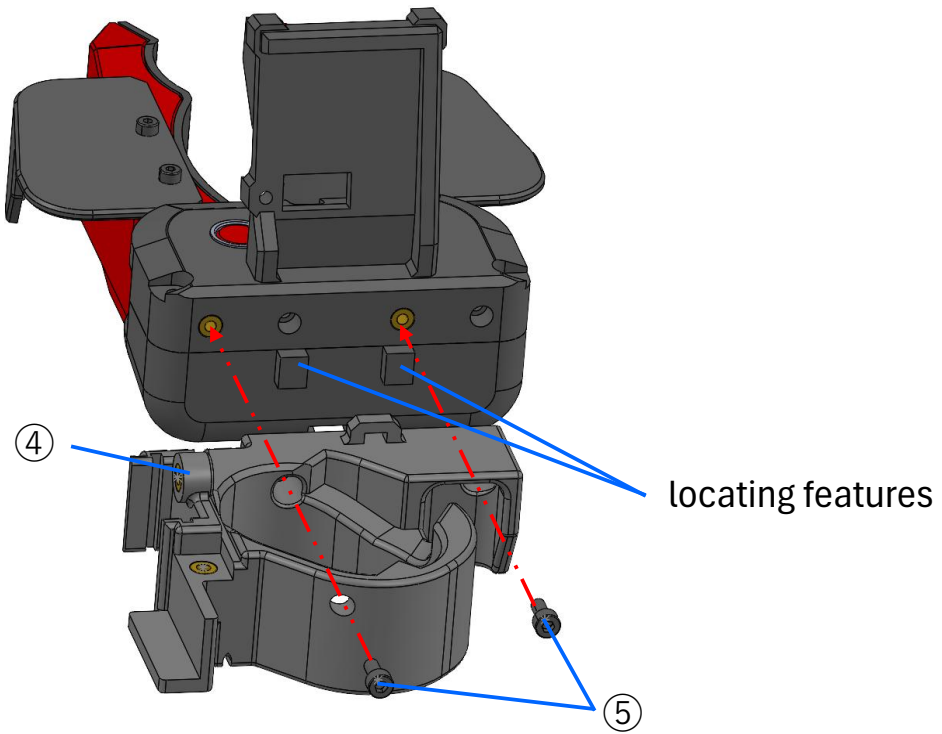

(8) Install wiring onto PCB


- Install wiring onto PCB following procedure below

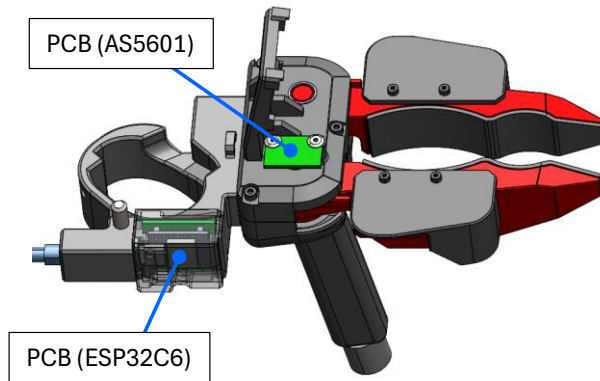

① Solder wires onto PCB (ESP32C6) and PCB (AS5601).

Refer to connection table for wiring positions (see figure).

PCB(ESP32C6)

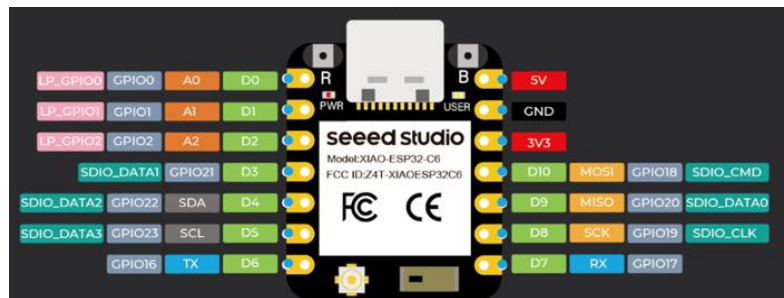

PCB(AS5601)




Connection Table

ESP32C6	Wire Type / Color	AS5601
3V3	AWG28 / Black	3V3
GND	AWG28 / Black	GND
D4	AWG28 / Black	SDA
D5	AWG28 / Black	SCL

Wire Length for Right-hand Version: 80 mm

for Left-hand Version: 180 mm

- ② Secure PCB (ESP32C6) onto UNIVERSAL PCB (25.4 × 25.4 × t1.6) using PIN HEADERS.
(4 locations shown below).


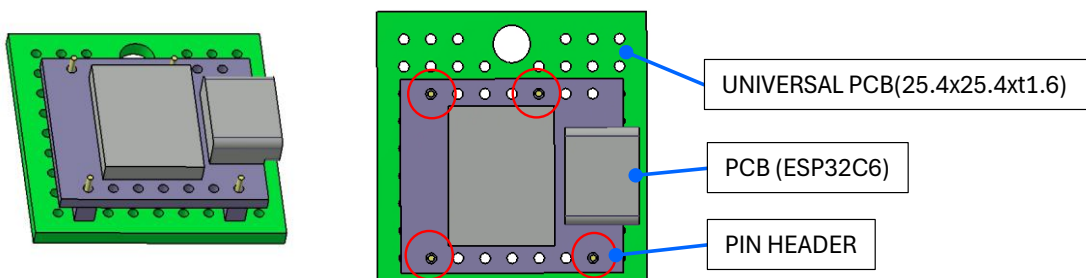


Fix at same position for right-hand and left-hand versions

③ Assemble COVER_PCB_R/L onto PCB (ESP32C6) + UNIVERSAL PCB assembly from step ②.


- Hook COVER_PCB_R/L from side of PCB and place it.

Route wires from front side.

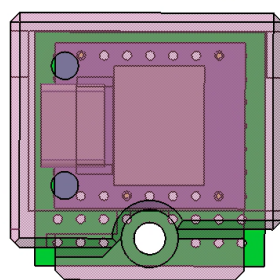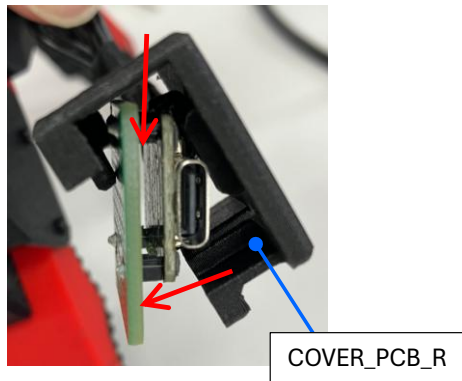

→
Front side


←
Front side

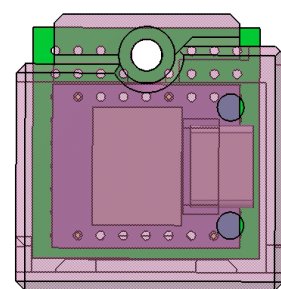


Installed State
(for Right-hand Version)

Installed State
(for Left-hand Version)


④ Assemble COVER_PCB_R/L with PCB into groove of Quest HOLDER_R/L by hooking UNIVERSAL PCB and sliding from top.

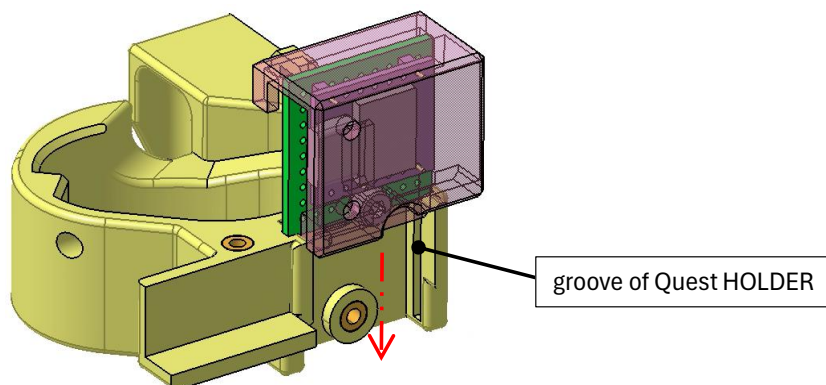


⑤ Secure COVER_PCB_R/L with CB3-6 (1 pc). (Torque: 0.63 N · m)

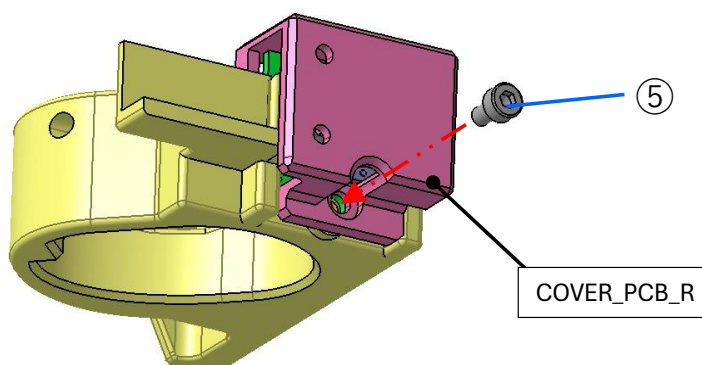


⑥ Connect USB cable to PCB (ESP32C6).

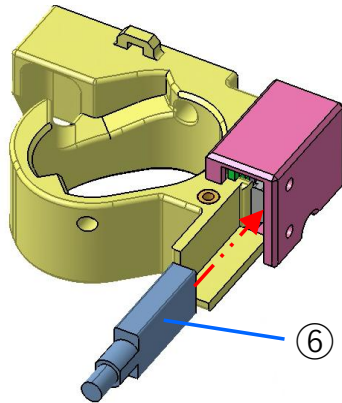


⑦ Install COVER_CABLE_R/L on Quest HOLDER_R/L and secure it with LRLM3-6 bolt.

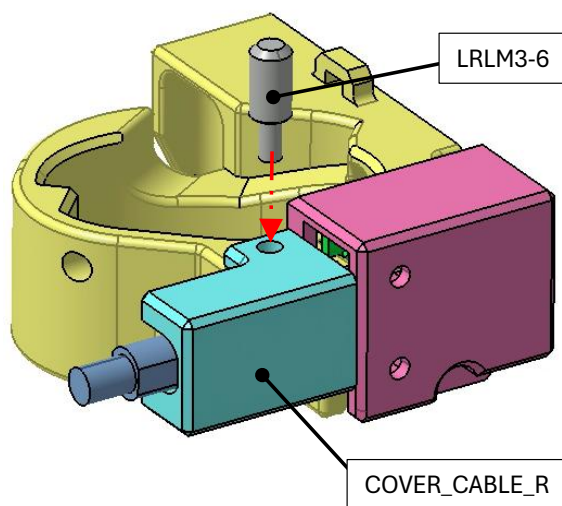


⑧ Install PCB (AS5601) onto UPPER PLATE with CBSTNR3-5 (2 pcs). (Torque: 0.63 N·m)

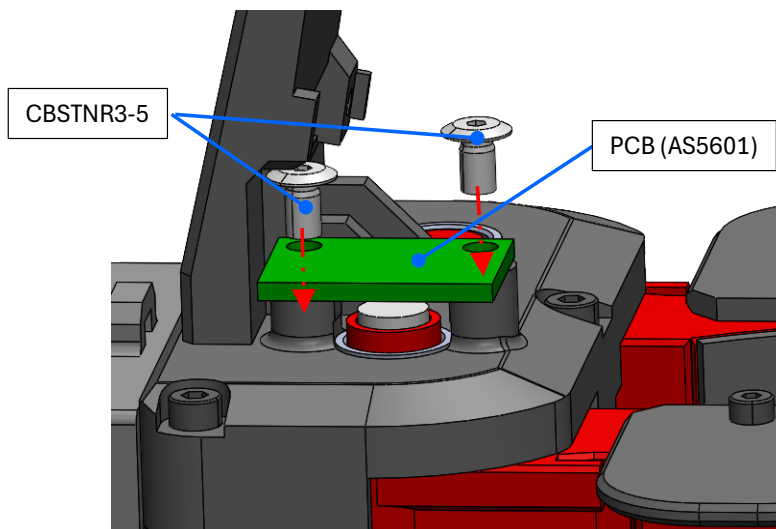

- ⑨ If excess wiring remains, secure wires to hook section of Quest HOLDER_R/L using cable ties.

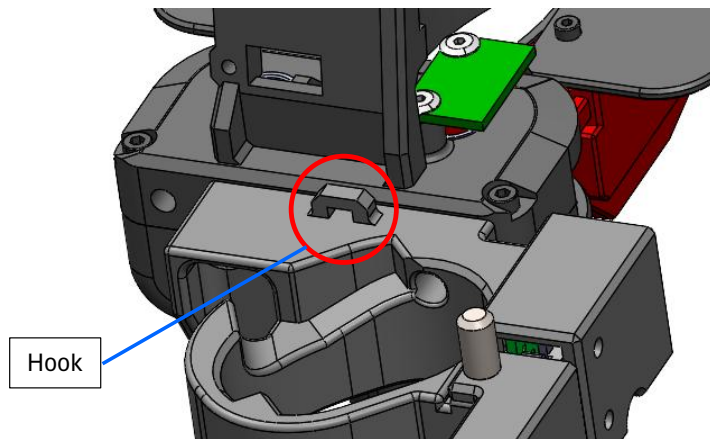


【PCB + Cover Assembly State】

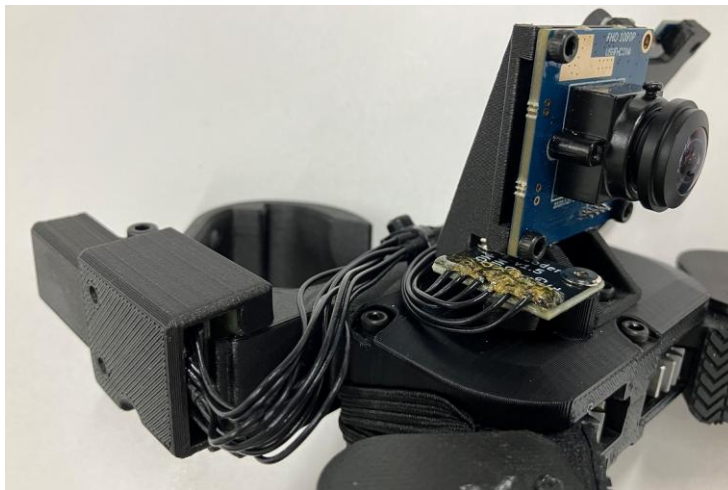

(9) Install CAMERA

- Install CAMERA

- ① Place CAMERA on CAMERA_BRACKET of UPPER PLATE.
- ② Secure CAMERA with CB2.5-6 (2 pcs). (Torque: 0.36 N·m)

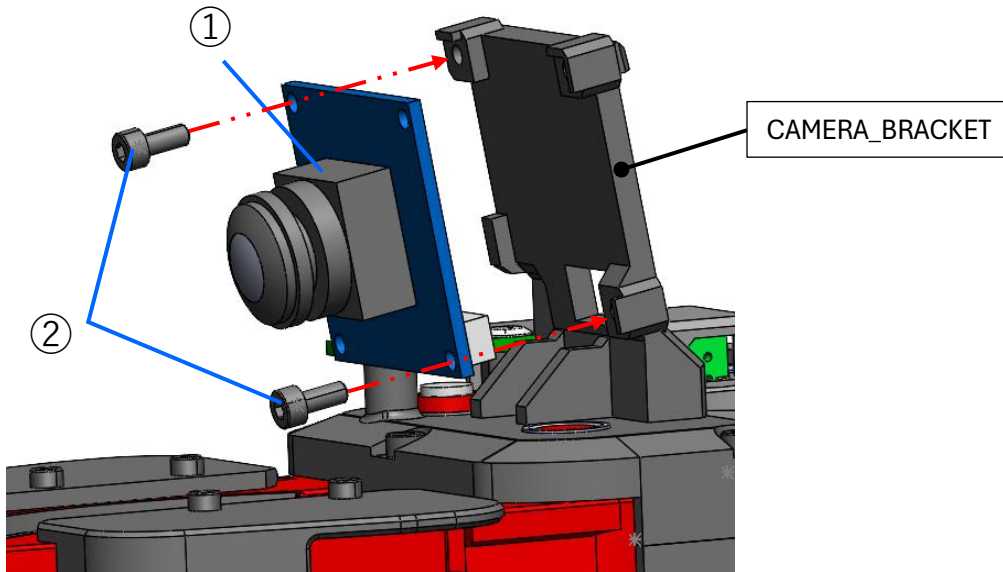


- Connect CAMERA WIRING

- ③ Connect CAMERA WIRING to connector from rear side of CAMERA_BRACKET.

(10) Install GRIP


- Install T-SLOT NUT

- ① Install T-SLOT NUT in the groove of UNDER PLATE.

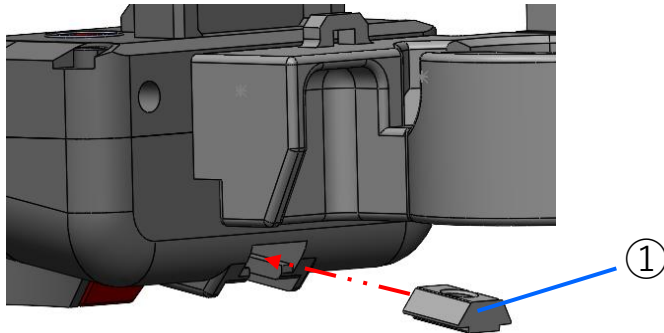


- Install GRIP

- ② Install GRIP by passing ADJUST BOLT through GRIP.

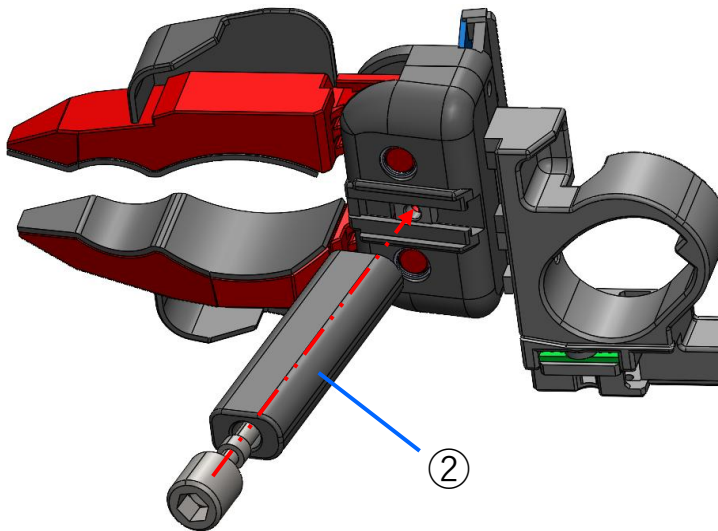

- Adjust GRIP position

- ③ Slide the GRIP forward or backward to a comfortable position.
- ④ Hand-tighten the ADJUST BOLT to secure the GRIP.

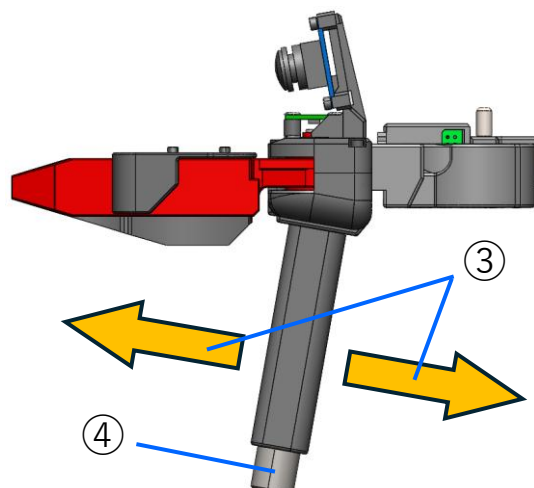

(11) Install Rubber Band for Finger Opening and Closing


- Install rubber band No.16 for finger opening and closing as follows.

① Hook rubber band No.16 onto the hook at base of the finger.

Use right-finger side for right-hand version and left-finger side for left-hand Version.


② Hook rubber band onto the hook and groove of HOLDER_Quest_R/L.

③ Confirm that the fingers open and close smoothly.

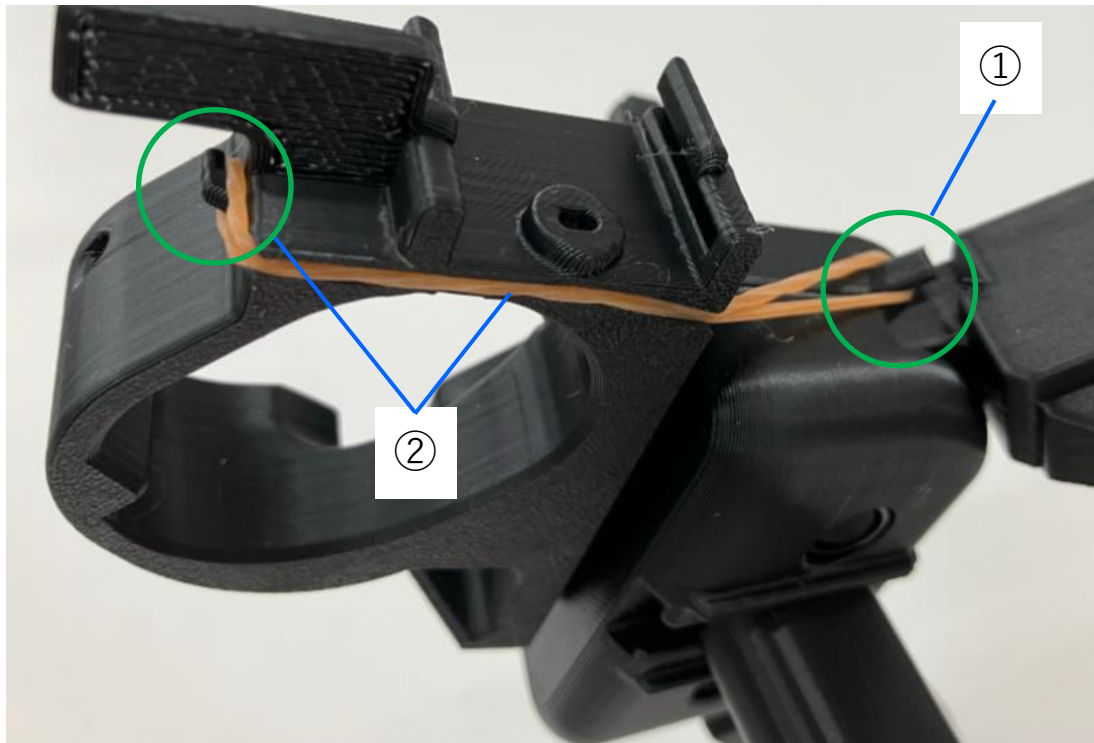

(12) Install Meta Quest Touch Plus Controller

- ① Remove battery cover from Meta Quest Touch Plus Controller_R/L.
- ② Install Meta Quest Touch Plus Controller_R/L in HOLDER_Quest_R/L.
Install it so that the switch on the side of Meta Quest Touch Plus Controller_R/L rests on the notch of HOLDER_Quest_R/L.

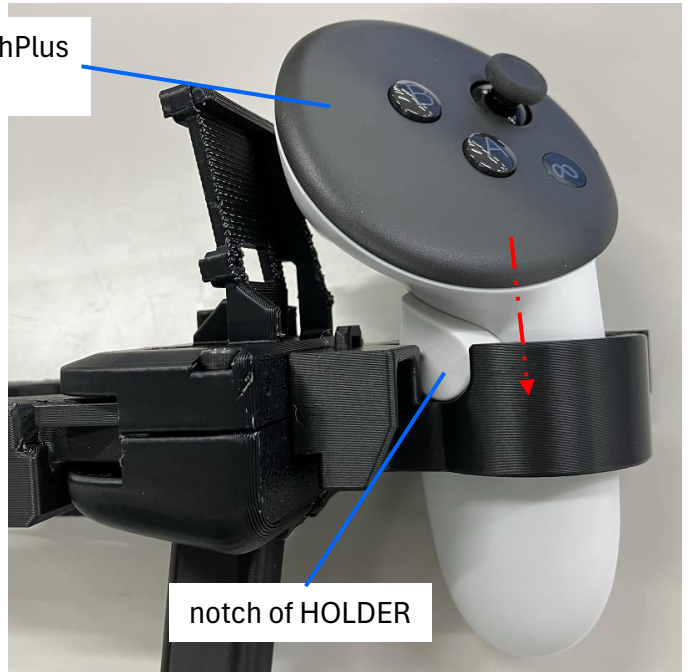

【Optional Parts Assembly Procedure】



(1) Install FINGER ATTACHMENT_Glove and FINGER PAD

• Install FINGER PAD

① Install FINGER PAD_t30_R/L or FINGER PAD_t20 on FINGER ATTACHMENT_Glove_R/L.

When using FINGER PAD_R/L_v2, install Fin at the fingertip.

② Secure FINGER PAD with CB2.5-10 (2 pcs). (Torque: 0.36 N·m)

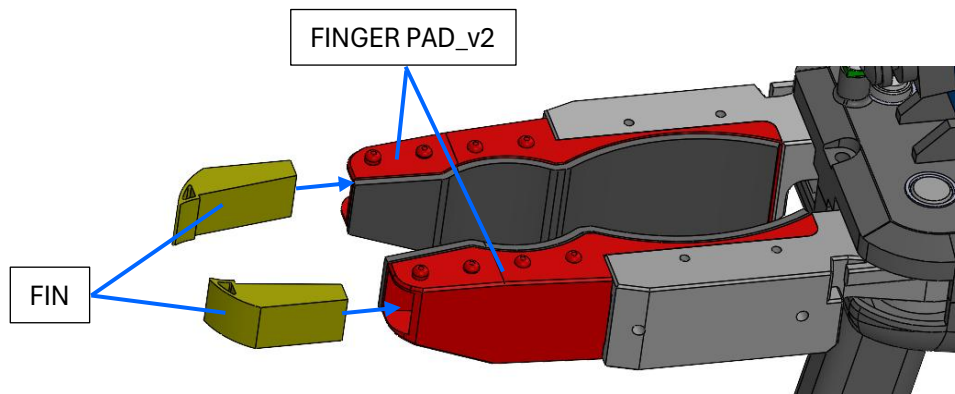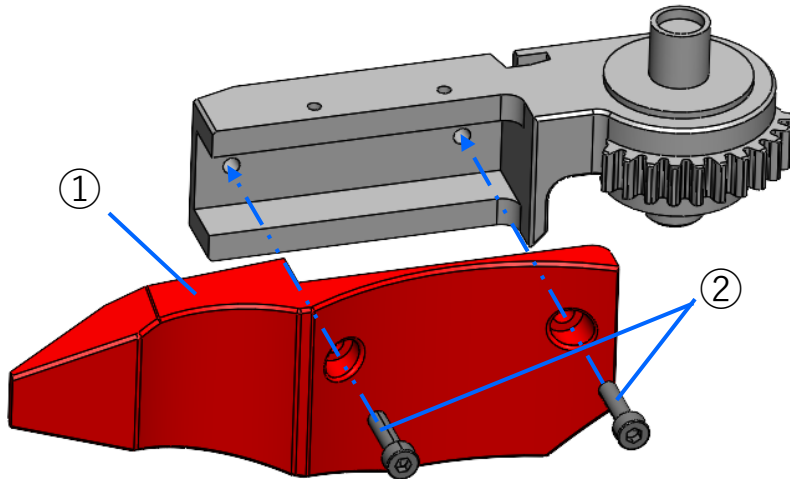

• Install RUBBER SHEET

③ Attach RUBBER SHEET onto FINGER PAD using adhesive (e.g., Super X).

Select RUBBER SHEET size based on gripping location and required area.

