
## IN-LINE FILTER KIT FOR SINGLE VACUUM PUMPS - PN 55078

QTY	P/N	DESCRIPTION
1	55069	1" FILTER ASSEMBLY
1	55621	3/4" BARBED GARDEN HOSE FILTER
2	30936	ANCHORS
2	30935	MOUNTING SCREWS
3	41211	3/4" HOSE CLAMPS
2	55926	ADAPTER, 3/4" MNPT X 3/4" BARB
2	55068	BUSHING, 3/4" FNPT X 1" MNPT
1	55791	3/4" I.D. REINFORCED HOSE
1	55074	INSTRUCTIONS

DIRECTIONS (REFER TO ILLUSTRATIONS):

- 1. DISCONNECT EXISTING 3/4" VACUUM INTAKE HOSE TO THE INTAKE.
- 2. ASSEMBLE KIT PARTS. USE THREAD SEALANT ON THE PIPE THREADS. NOTE THE FLOW DIRECTION ARROW ON THE FILTER AND MOUNT ACCORDINGLY. FLOW DIRECTION MUST BE TOWARDS PUMP.
- 3. ATTACH ASSEMBLED KIT PARTS TO VACUUM INTAKE AT POINT "A".
- 4. MOUNT FILTER ASSEMBLY TO WALL USING HARDWARE PROVIDED.

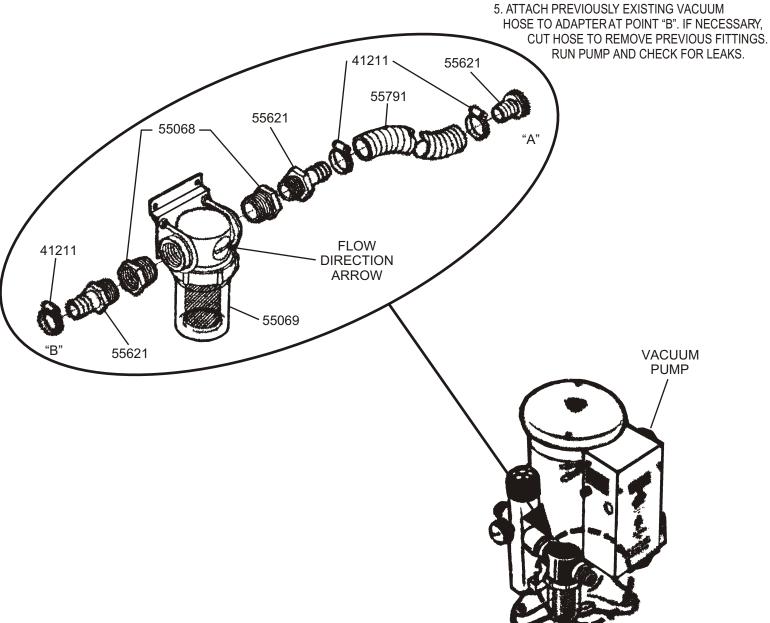



## IN-LINE FILTER KIT FOR TWIN VACUUM PUMPS - PN 55079

## PARTS INCLUDED IN THIS KIT:

QTY	P/N	DESCRIPTION
1	55069	1" FILTER ASSEMBLY
2	30936	ANCHORS
2	30935	MOUNTING SCREWS
3	55717	1" HOSE CLAMPS
3	55927	ADAPTER, 1" MNPT X 1" BARB
1	55564	1" I.D. REINFORCED HOSE
1	55074	INSTRUCTIONS

DIRECTIONS (REFER TO ILLUSTRATIONS):

- 1. DISCONNECT EXISTING 1" VACUUM INTAKE HOSE TO THE INTAKE (LOWER) MANIFOLD.
- 2. ASSEMBLE KIT PARTS. USE THREAD SEALANT ON THE PIPE THREADS. NOTE THIS FILTER MAY BE ATTACHED TO EITHER SIDE OF THE TWIN VACSTAR 5 OR 8 INTAKE MANIFOLD (LEFT SIDE INSTALLATION SHOWN). NOTE THE FLOW DIRECTION ARROW ON THE FILTER AND MOUNT ACCORDINGLY. FLOW DIRECTION MUST BE TOWARDS PUMP.
- 3. ATTACH ASSEMBLED KIT PARTS TO VACUUM INTAKE (LOWER) MANIFOLD AT POINT "A".
- 4. MOUNT FILTER ASSEMBLY TO WALL USING HARDWARE PROVIDED.

