
AMALGAM SEPARATOR

QUICK INSTALL




2. Attach Mounting Brackets

a. Using included hardware, attach the mounting brackets to the ECOVac frame as shown (A). Note: Attach washer and nut to each bolt used on underside of the ECO frame (B).

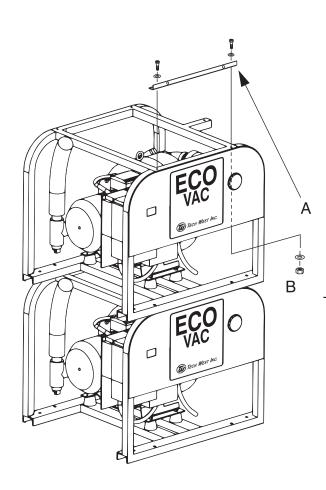

4 Attach Hose Connections

a. Attach hose connections as indicated as follows.
Make sure connections are tight.

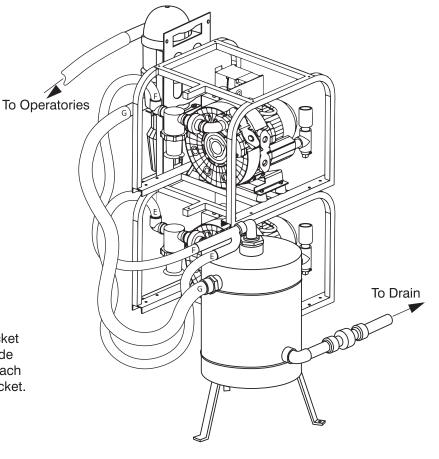

3. Attach Amalgam Separator Bracket

Using included hardware, attach Amalgam bracket as shown (C). Attach nut and washer to back side of bracket (D). Using the included hardware, attach the Amalgam Separator (E) to the Amalgam bracket.