


Aaron Manderewicz

Joseph Costello

TFTP Server

1. Start by getting a router, a ethernet cable, and a usb-rj45 cable. Plug the router in by plugging the usb-rj45 into the console port, and the ethernet cable into your pc's ethernet port and the router's fastethernet 0/0 port
2. We used Tftpd64 for our server software and configured it by creating a new folder on our C: drive called TFTP_Root. The pictures below show the settings that were put into the TFTP windows, the second picture being the settings window opened with the button at the bottom. We had to statically set our IP address including setting the default gateway to the IP address set on the router which can be seen in the third picture. The last step to configuration was turning off our firewall. We also used putty for changing the router's configuration as needed throughout the lab.

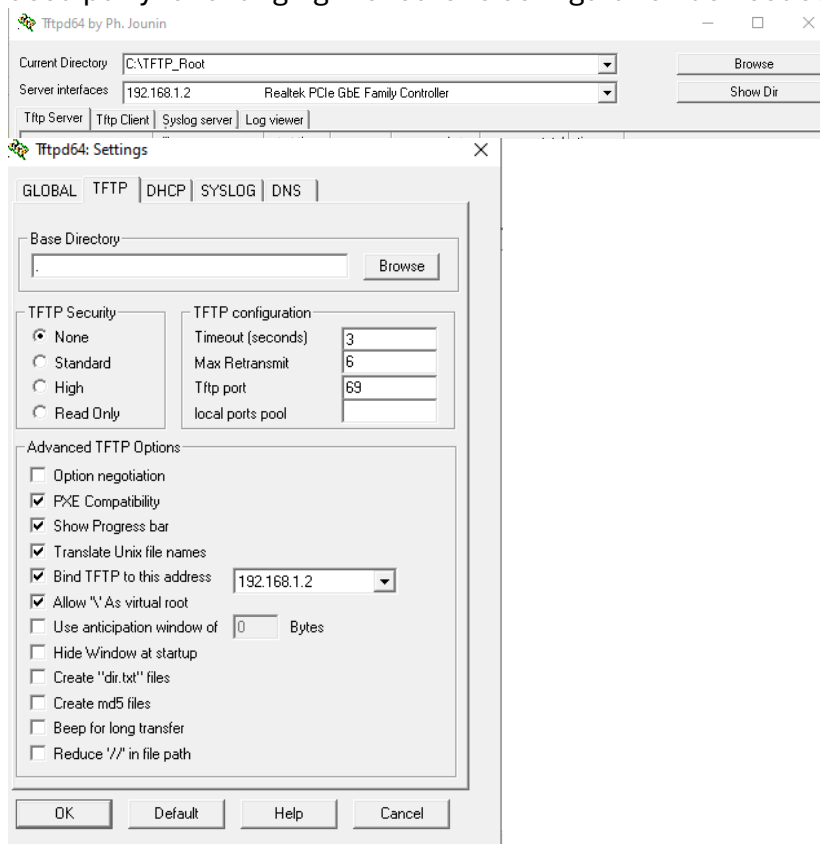

```
AlphaR(config)#
AlphaR(config)#interface FastEthernet 0/0
AlphaR(config-if)#ip address 192.168.1.1
% Incomplete command.

AlphaR(config-if)#ip address 192.168.1.1 255.255.255.0
AlphaR(config-if)#no shutdown
AlphaR(config-if)#exit
```

3. Backing up our saved configuration, took these commands. We ran into some issues while working on this step, so some of the trouble shooting steps we tried

were to run the command **show ip interface brief**, make sure the firewall is turned off, make sure the file names are exactly right.

```
AlphaR#copy running-config tftp
Address or name of remote host []? 192.168.1.2
Destination filename [alphar-config]? TFTP_Root
!!
1089 bytes copied in 0.324 secs (3361 bytes/sec)
```

4. To copy the ios to a folder we ran these commands, which transferred the ios into the same folder as the saved-config which can be seen in the screenshots below.

```
AlphaR#copy flash: tftp:  
Source filename []? c2800nm-spsservicesk9-mz.124-24.Tl.bin  
Address or name of remote host []? 192.168.1.2  
Destination filename [c2800nm-spsservicesk9-mz.124-24.Tl.bin]?  
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!  
50827820 bytes copied in 159.232 secs (319206 bytes/sec)  
AlphaR#
```

The screenshot displays the Tftpd64 application window. At the top, the title bar reads "Tftpd64 by Ph. Jounin". Below the title bar, the "Current Directory" is set to "C:\TFTP_Root". The "Server interfaces" section shows "192.168.1.2" and "Realtek PCIe GbE Family Controller". The "Tftp Server" tab is active, showing a list of files. A file named "c2800nm-sp-servicesk9-mz.124-24.T1.bin" is highlighted, and a tooltip displays its details: "File size : Unknown", "3740672 Bytes rcvd", and "340061 Bytes/sec". The file transfer progress bar shows 1:44 time, N/A progress, 3740672 bytes, unknown total, and 0 timeo... The bottom pane shows the file system structure, including "This PC", "Local Disk (C:)", and "TFTP_Root". The file list shows two items: "c2800nm-sp-servicesk9-mz.124-24.T1.bin" (49,637 KB) and "TFTP_Root" (2 KB).

Name	Date modified	Type	Size
c2800nm-sp-servicesk9-mz.124-24.T1.bin	2/17/2026 3:14 PM	BIN File	49,637 KB
TFTP_Root	2/17/2026 3:06 PM	File	2 KB

5. To restore the saved config, we first changed the router name so that we'd be able to see if the saved-config actually worked to change the router back to how it was before. We put `hostname routertest` which changed the name, then we ran these commands which brought the saved config back setting the router back to how it was before.

```

routertest#copy tftp: running-config
Address or name of remote host [192.168.1.2]?
Source filename [c2800nm-spsservicesk9-mz.124-24.T1.bin]? TFTP_Root
Destination filename [running-config]?
Accessing tftp://192.168.1.2/TFTP_Root...
Loading TFTP_Root from 192.168.1.2 (via FastEthernet0/0): !
[OK - 1089 bytes]

```

6. To restore the IOS from ROM monitor mode, you would start by booting into the router which will put you into ROM mode. Then you have to put the commands

`IP_ADDRESS=192.168.1.1`

`IP_SUBNET_MASK=255.255.255.0`

`DEFAULT_GATEWAY=192.168.1.2`

`TFTP_SERVER=192.168.1.2`

`TFTP_FILE=c2800nm-sp-servicesk9-mz.124-24.T1.bin`

`Tftpdnld`

The IOS will then restore, and you type `reset` to reboot into the IOS.