
Toyota Paseo 1995 – 1999 Second Generation mk2– fuse box diagrams


Year of production: 1995, 1996, 1997, 1998, 1999Engine compartment (U.S.A.)

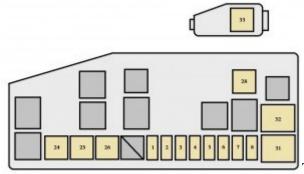

Toyota Paseo mk2 – fuse box – engine

compartment (USA)


Engine compartment (Canada)

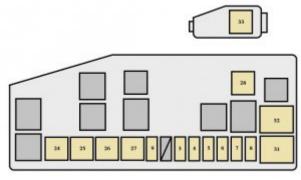

Toyota Paseo mk2 – fuse box – engine


compartment (Canada)

Engine compartment (Canada only)

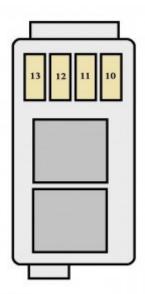


Toyota Paseo mk2 -fuse box – engine compartment (Canada only)

Instrument panel

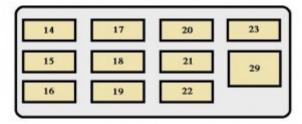

 $Toyota\ Paseo\ mk2-fuse\ box-instrument\ panel$

Instrument panel

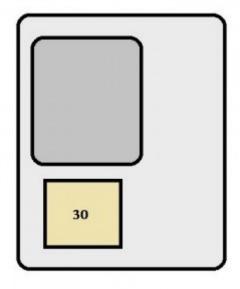

 $Toyota\ Paseo\ mk2-fuse\ box-instrument\ panel$

Fuses (type A)

Fuse		Ampere rating [A]	Circuit
1	HEAD (LH)	10	Left-hand headlight
2	HEAD (RH)	10	Right-hand headlight
3	AM2	15	Ignition system, charging system, multiport fuel injection system/sequential multiport fuel injection system, SRS airbag system, starter system
4	HAZ-HORN	15	Horns, turn signal lights, emergency flashers, theft deterrent system
5	EFI	15	Multiport fuel injection system/sequential multiport fuel injection system, air conditioning system
6	DOME	10	Personal lights, open door warning light, clock, car audio system, anti-lock brake system, theft deterrent system
7	OBD-II	7,5	On-board diagnosis system
8	ALT-S	5	Charging system
9	DRL	5	Daytime running light system
10	HEAD (RH- LWR)	10	Right-hand headlight (low beam)

	HEAD (LH- LWR)	10	Left-hand headlight (low beam)
	HEAD (RH- UPR)	10	Right-hand headlight (high beam)
	HEAD (LH- UPR)	10	Left-hand headlight (high beam)
145	STOP	10	Stop lights, high mounted stoplight, anti-lock brake system, shift lock control system
15	A/C	10	Air conditioning system
16	TAIL	15	Tail lights, parking lights, license plate lights, instrument panel lights, emergency flashers, air conditioning system, rear window defogger, car audio system, cigarette lighter, clock
17	GAUGE	10	Gauge and meters, service reminder indicators and warning buzzers (except discharge and open door warning lights), back-up lights, rear window defogger
18	TURN	7,5	Turn signal lights, emergency flashers
19	WIPER	20	Windshield wipers and washer
20	ECU-IG	5	Anti-lock brake system, air conditioning system
21	CIG&RADIO	15	Cigarette lighter, car audio system, clock, anti-lock brake system, theft deterrent system, shift lock control system
221	IGN	5	Charging system, discharge warning light, multiport fuel injection system/sequential multiport fuel injection system, SRS airbag system
23	SRS	5	SRS airbag warning light

Fuses (type B)

Fuse	Ampere rating [A]	Circuit
24 CDS FAN	30	Electric cooling fan
25 RAD FAN	30	Electric cooling fan
26 HEATER	40	Air conditioning system, "A/C" fuse
27 DIMMER	30	"HEAD RH (Lo)", "HEAD LH (Lo)", "HEAD RH (Hi)" and "HEAD LH (Hi)" fuses
28 MAIN	30	Starter system
29 DEF	40	Rear window defogger
30 PWR	30	Power windows, power door lock system

Fuses (type C)

Fuse		Ampere rating [A]	Circuit
31	ABS	60	Anti-lock brake system
32	AM1	40	"DEF", "WIPER", "GAUGE", "ECU-IG", "TURN", "IGN" and "PWR" fuses
33	ALT	100	"ABS", "STOP", "TAIL", "SRS", "DEF", "AM1", "WIPER", "GAUGE", "ECU-IG", "TURN", "IGN" and "PWR" fuses