# ME143 - Unmanned Aircraft Systems

Dr. Brandon Stark

2022-08-29

# Contents

1	Course Information					
2	Introduction 2.1 Language and Terminology	7 7 9 13				
3	Regulations3.1 US Regulations3.2 Airspace Charts3.3 Issues and Controversies	15 15 15 15				
Ι	UAS Modeling and Control	17				
4	Vectors Notation4.1 Rectangular Vectors4.2 Directional Vectors4.3 Norms	19 19 19 20				
5	UAS Dynamics 5.1 Fixed-Wing Models					
6	Rotation Matrice Example 6.1 Getting Started	23 23 24				
$\mathbf{A}$	Digital Systems 25					
В	Vector Notation 27					

4 CONTENTS

## **Course Information**

This is the course lecture material for UC Merced ME143. All course assignments, exams, quizzes and the syllabus can be found in Catcourses.

For information on how to compile or edit the course material, please visit the github repository.



This page was published using **bookdown**(Xie, 2022) using RStudio in R Markdown and **knitr** (Xie, 2015). The raw files can be found in the corresponding github page here: https://github.com/UCM-ME143/UCM-ME143.github.io

## Introduction

Introduction to UAS

Daily Show with Jon Stewart (January 2013) - Interview with Missy Cummings - Rise of the Drones

- http://www.cc.com/video-clips/87aevs/the-daily-show-with-jon-stewart-exclusive---missy-cummings-extended-interview-pt--1?xrs=share\_copy\_email
- http://www.cc.com/video-clips/rwkvkp/the-daily-show-with-jon-stewart-exclusive---missy-cummings-extended-interview-pt--2
- http://www.cc.com/video-clips/91upnm/the-daily-show-with-jon-stewart-exclusive---missy-cummings-extended-interview-pt--3

## 2.1 Language and Terminology

**Definition 2.1** (Unmanned Aircraft). A drone, remote-controlled pilotless aircraft, or a human-designed device that is used to intended to be used for flight in the air that is operated without the possibility of direct human intervention from within or on the aircraft.

**Definition 2.2** (Unmanned Aircraft System). An unmanned aircraft and all of its associated elements (including communication links and the components that control the small unmanned aircraft) that are required for the safe and efficient operation of the unmanned aircraft.

**Definition 2.3** (Small Unmanned Aircraft). An unmanned aircraft that weighs less than 55 lbs on takeoff, including everything that is on board or otherwise attached to the aircraft.

**Definition 2.4** (Small Unmanned Aircraft System). A small unmanned aircraft and its associated elements (including communication links and the components

that control the small unmanned aircraft) that are required for the safe and efficient operation of the small unmanned aircraft.

Corollary 2.1 (Model Aircraft). In the current regulatory framework, there is no definition of a model aircraft or legal distinction between the flying toy you buy at Walmart, the RC plane from the hobby store or a 30 lb industrial drone. All are considered Unmanned Aircraft.

Unmanned Aircraft refers to just to the object that flies, but is usually only used when there is a need to make a distinction. The same with small UAS (sUAS) and UAS - it's usually only used when there needs to be an explicit distinction between drones under 55 lbs and those that are heavier than 55 lbs.

### 2.1.1 Some examples of Unmanned Aircraft Systems



Figure 2.1: A regular quadrotor design



Figure 2.2: A remote control plane (rc plane)

2.2. HISTORY 9



Figure 2.3: A military drone

#### 2.1.2 Some other names of drones

UAV - unmanned aircraft vehicle

UAS - unmanned aerial system

RPAS - remotely piloted aircraft system

• Commonly used internationally

Multi-rotor and similar terms

- quadrotor, quadcopter
- hexirotor, hexicopter

Helicopter is derived from 'helico' (spiral/whirl) and 'ptero' (wing as in pterodactyl) from Greek. Despite it's common use, 'copter' isn't actually a valid suffix. Even worse, 'quad' is a Latin prefix. So when you say 'quadcopter' you're mixing a Latin prefix with a mangled Greek suffix. Truly an American English word.

#### 2.1.3 Common Drone Manufacturers

- DJI (Da-Jiang Innovations) https://www.dji.com/
  - Probably the most well-known and ubiquous non-military drone company
- Sensefly Parrot Group https://www.sensefly.com/
  - Most known for their eBee foam fixed-wing drone for mapping operations

## 2.2 History

A short timeline of notable UAS history

- The first "claimed" heavier-than-air, powered flight was of a UAS over the Potomac River, by Dr. Sam Langley (1896)
- The first radio-controlled UAS flights were converted Navy trainers, flown over Long Island using the recently invented automatic gyroscopic stabilizer (1917)
- The first mass production UAS was the Kettering Bug, costing \$400 and capable of carrying a 300 lb (1918) History Channel clip https://youtu.be/gNO84yh2ZxY
- The British Queen Bee UAS was landed by dragging a weighted antenna line on the ground, which then pulled back the stick and the throttle to become the first re-usable UAS (1935)
- Reginald Denny (actor and model aircraft enthusiast) signed a contract with the Navy to deliver TDD-1 (Target Drone Denny 1) in 1939
  - The first recorded instance of 'drone' being associated with a UAS

#### 2.2.1 Drones as Guided Missles

The Kettering Bug is regarded as one of the very first mass produced drones - but it's also known as one of the first 'guided torpedoes.' It was practically a bomb with an engine and wings to give it flight. But nonetheless, it was equipped with a rudimentary inertial control system that kept it stabilized in flight. After a preset number of engine revolutions, the engine would shut down and let the bomb fall.



Figure 2.4: Kettering Bug

With no way to control the Kettering Bug after launch, they had limited value and were deployed too late in WWI to be of value.

#### 2.2.2 Drones as Target Practice

However, after the Kettering Bug, new advances in radio control allowed for remotely controlling an aircraft in flight. It was finally with these advances that 2.2. HISTORY 11

drones became instrumental in the changing shape of warfare.

The British Royal Air Force was in a debate with the Royal Navy over the ability of an airplane to sink a ship. In the early 1920s, General Billy Mitchell of the Army Air Corps sunk a war prize German battleship and subsequent older target warships to the dismay of the U.S. Navy. The counterargument to these demonstrations was that a fully manned ship armed with antiaircraft guns would easily shoot down attacking aircraft. The British used unmanned target drones flown over such armed warships to test the validity of the argument. In 1933, to the surprise of all, a target drone flew over 40 missions above Royal Navy warships armed with the latest antiaircraft guns without being shot down.

Demonstrations like the above quickly demonstrated two issues: 1) the value of air superiority and 2) the need for anti-aircraft weaponry training. Drones as one-time targets, such as the TDD-1 and OQ-2 Radioplane were instrumental in preparing for WW2.



Figure 2.5: Kawasaki KAQ-1 - A rare 1950s era target drone on display at the Castle Air Museum

Where does the term 'Drone' come from? The origins of the term 'Drone' is lost to history, but the first recorded use is from 1939 - Target Drone Denny-1. However, there is precident for naming aircraft after insects (1929 Gipsy Moth) and the 1935 Queen Bee was the first returnable and resusable drone used for target practice. This relationship lends credance to the term 'drone' being so named as a reference to worker bees.

#### 2.2.3 Modern Drones

Currently, we now think of drones as what you saw in Figures 2.1 and 2.3. Either as these small quadrotor toys or large military weapons. But there's surprisingly not that large of a difference between the two.



Figure 2.6: The DeHavilland DH-82B Queen Bee

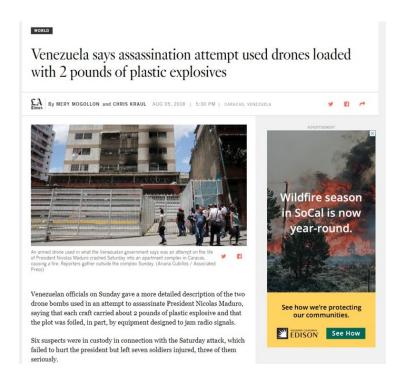


Figure 2.7: Assassination Attempt

This was a relatively high-profile assassination attempt of the Venezuela President in August 2018. While there remains questions about the legitimacy of the attack, the drone and the explosion were real. This wasn't a military drone - this was a DJI Matrice 200 that was loaded with 2 lbs of explosives.

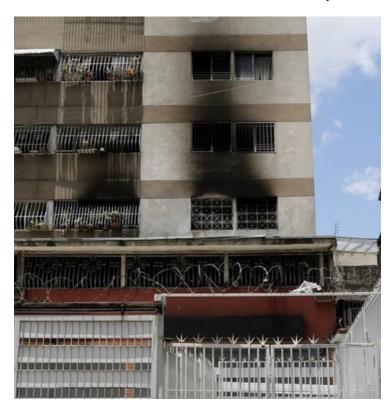


Figure 2.8: Scorched Building from Drone Assassination Attempt

## 2.3 Pop-Culture

# Regulations

- 3.1 US Regulations
- 3.2 Airspace Charts
- 3.3 Issues and Controversies

# $\begin{array}{c} {\rm Part} \ {\rm I} \\ \\ {\rm UAS} \ {\rm Modeling} \ {\rm and} \ {\rm Control} \end{array}$

## **Vectors Notation**

## 4.1 Rectangular Vectors

A vector v is composed of n-components of n-dimensionality. For example, a 3-dimensional vector will have 3 components, commonly represented as x, y, and z, or i, j, and k.

$$v \triangleq [v_1, v_2, v_3, ... v_n]$$

A rectangular vector can be specified as the sum of the scalar multiples of the components of the vector with the members of the standard basis or reference axes.

The basis is represented with unit vectors

$$\hat{i} = (1, 0, 0)$$
  
 $\hat{j} = (0, 1, 0)$   
 $\hat{k} = (0, 0, 1)$  (4.1)

In rectangular vector notation, we could write this as

$$v = v_x \hat{i} + v_y \hat{j} + v_z \hat{k} \tag{4.2}$$

#### 4.2 Directional Vectors

An alternative representation of vectors is to represent a vector as a direction and magnitude

$$v = r \measuredangle \psi$$

where r is the magnitude and  $\psi$  represents the direction of the vector.

This representation will not be used in this class, but is good to remember.

## 4.3 Norms

#### 4.3.1 Absolute Value Norm - L1

#### 4.3.2 Euclidean Distance Norm - L2

testing

This code

how about this

- test

$$\Theta = \begin{pmatrix} \alpha & \beta \\ \gamma & \delta \end{pmatrix}$$

\$\$\Theta = \begin{pmatrix}\alpha & \beta\\
\gamma & \delta
\end{pmatrix}\$\$

$$\frac{d}{dx}\left(\int_a^x f(u)\,du\right) = f(x)$$

# **UAS Dynamics**

- 5.1 Fixed-Wing Models
- 5.2 Rotary-Wing Models

We describe our methods in this chapter.

## Rotation Matrice Example

## 6.1 Getting Started

Lets start by creating an empty script Start with the basic cleaning commands clear;

clear deletes all of the variables in your workspace - this makes sure that every time we run our code, we're always using the data from this run of the script, and not a previous run.

clc;

clc deletes all of the old messages in the console or command window. This makes sure that the only messages we see on our command window come from this run of the script, and not from a previous run.

close all;

close all closes all of the previous plots and graph windows. This way you know that the plots you see generated are new, and not old data.

Let's load up our aircraft into Matlab

load Lab\_Airplane.mat

Take a look at the new variables in your workspace

who -file Lab\_Airplane.mat

The who command prints a list of variables - in this case, we've asked it about the airplane\_model file

Your variables are:

airplane f

## 6.2 Making an Airplane

Lets take a closer look at the airplane variable

```
size(airplane)
```

```
ans = 1x2 36 3
```

Airplane is a 36 row by 3 column matrix. This variable represents the x, y, and z coordinates of every corner in our airplane model. There are 36 points within our airplane model.

```
airplane(1,:)
ans = 1x3
- 6.8000  0.5000  0.8000
```

The first point in our model occurs at the 3D point: -6.8 on the x-axis, 0.5 on the y-axis and 0.8 on the z-axis.

Let's plot this

# Appendix A

# Digital Systems

# Appendix B

# **Vector Notation**

# **Bibliography**

Xie, Y. (2015). Dynamic Documents with R and knitr. Chapman and Hall/CRC, Boca Raton, Florida, 2nd edition. ISBN 978-1498716963.

Xie, Y. (2022). bookdown: Authoring Books and Technical Documents with R Markdown. R package version 0.28.