



PicoMagnetometer RPI Python code install manual

Pico^{nT}

<https://ukraa.com/>

The UK Radio Astronomy Association

A charitable incorporated organisation

Registered charity in England and Wales No. 1123866



Python code for the UKRAA PicoMagnetometer

Set of Python, gnuplot and shell scripts to run on an RPi4/5 to record, process and present data from the UKRAA PicoMagnetometer.

This software was written to suit a specific set-up; feel free to use as you see fit.

Instructions for initial setting up of a Raspberry Pi4/5 are included in the **docs** folder

Table of Contents

Python code for the UKRAA PicoMagnetometer	2
Using the code	4
Where is my PicoMagnetometer?	5
Getting the software onto your RPi	6
Installing the software onto your RPi.....	7
What does the code do?	9
Operational checks	11
Check PicoMagnetometerACM0 service is running	12
License	13
Contact us	13

Using the code

The code assumes that your UKRAA PicoMagnetometer is the only device using USB that is connected to the RPi4/5 via supplied USB cable and that it is **/dev/ttyACM0** - you can check this by using **ls /dev/tty*** in a terminal window on the RPi4/5 and reviewing the response.

The code assumes username is **pi**.

If **pi** is not the username, then you will need to change all occurrences of **'/home/pi'** to **'/home/username'** in the python, gnuplot and shell scripts, where **username** is the username you have selected for your RPi4/5.

The code assumes one magnetometer connected to the RPi4/5 USB and that it will be connected via **/dev/ttyACM0**.

If there are other devices connected to the RPi and your magnetometer is not **/dev/ttyACM0**, then you will need to change **/dev/ttyACM0** to **/dev/ttyACMx** in the **GetDataRawACM0.py** python script, where **ttyACMx** is the tty address of you connected magnetometer.

GetDataRawACM0.py is run as a service.

Other scripts (Python and gnuplot) are run from **cron** using shell scripts.

Where is my PicoMagnetometer?

Plug your PicoMagnetometer into any of the RPi USB ports - I normally use one of the blue ports (USB3).

1. Open a terminal window and type the following command and press enter

ls /dev/tty*



```
pi@TEST-MAG: ~  
File Edit Tabs Help  
pi@TEST-MAG:~$ ls /dev/tty*  
/dev/tty /dev/tty19 /dev/tty3 /dev/tty40 /dev/tty51 /dev/tty62  
/dev/tty0 /dev/tty2 /dev/tty30 /dev/tty41 /dev/tty52 /dev/tty63  
/dev/tty1 /dev/tty20 /dev/tty31 /dev/tty42 /dev/tty53 /dev/tty7  
/dev/tty10 /dev/tty21 /dev/tty32 /dev/tty43 /dev/tty54 /dev/tty8  
/dev/tty11 /dev/tty22 /dev/tty33 /dev/tty44 /dev/tty55 /dev/tty9  
/dev/tty12 /dev/tty23 /dev/tty34 /dev/tty45 /dev/tty56 /dev/ttyACM0  
/dev/tty13 /dev/tty24 /dev/tty35 /dev/tty46 /dev/tty57 /dev/ttyprintk  
/dev/tty14 /dev/tty25 /dev/tty36 /dev/tty47 /dev/tty58  
/dev/tty15 /dev/tty26 /dev/tty37 /dev/tty48 /dev/tty59  
/dev/tty16 /dev/tty27 /dev/tty38 /dev/tty49 /dev/tty6  
/dev/tty17 /dev/tty28 /dev/tty39 /dev/tty5 /dev/tty60  
/dev/tty18 /dev/tty29 /dev/tty4 /dev/tty50 /dev/tty61  
pi@TEST-MAG:~$
```

2. You are looking for **/dev/ttyACM0** - this is on the right hand side of the screen shot above.
3. This is the USB address for your attached PicoMagnetometer - if you have more than one magnetometer attached you may see **/dev/ttyACM1** etc.
4. If you do not see **/dev/ttyACM0**, then unplug and plug the PicoMagnetometer back in and try again.
5. As long as you see **/dev/ttyACM0** then you do not have to make any changes to the python scripts, because they are looking for **ACM0**.

Getting the software onto your RPi

1. Log into your Raspberry Pi4/5 using VNC.
2. Open a terminal window, type the following command and press enter

git clone https://github.com/UKradioastro/UKRAA_Magnetometer.git



```
pi@TEST-MAG: ~
File Edit Tabs Help
pi@TEST-MAG:~ $ git clone https://github.com/UKradioastro/UKRAA_Magnetometer.git
```

This will download all of the code to the directory **UKRAA_Magnetometer** inside **/home/pi**

Installing the software onto your RPi

1. Open a terminal window and type the following command and press **enter**

cd ~/UKRAA_Magnetometer/install


A terminal window titled 'pi@TEST-MAG: ~' with a menu bar (File, Edit, Tabs, Help). The terminal shows the output of 'git clone https://github.com/UKradioastro/UKRAA_Magnetometer.git', including progress bars for enumerating, counting, and compressing objects, and a final 'cd ~/UKRAA_Magnetometer/install' command which is highlighted in a light blue box.

```
pi@TEST-MAG: ~ $ git clone https://github.com/UKradioastro/UKRAA_Magnetometer.git
Cloning into 'UKRAA_Magnetometer'...
remote: Enumerating objects: 578, done.
remote: Counting objects: 100% (137/137), done.
remote: Compressing objects: 100% (94/94), done.
remote: Total 578 (delta 64), reused 94 (delta 43), pack-reused 441 (from 2)
Receiving objects: 100% (578/578), 29.08 MiB | 21.88 MiB/s, done.
Resolving deltas: 100% (290/290), done.
pi@TEST-MAG: ~ $ cd ~/UKRAA_Magnetometer/install
```

This will take you to the **install** directory inside **/home/pi/UKRAA_Magnetometer**

2. Type the following command and press **enter**

chmod +x *.sh

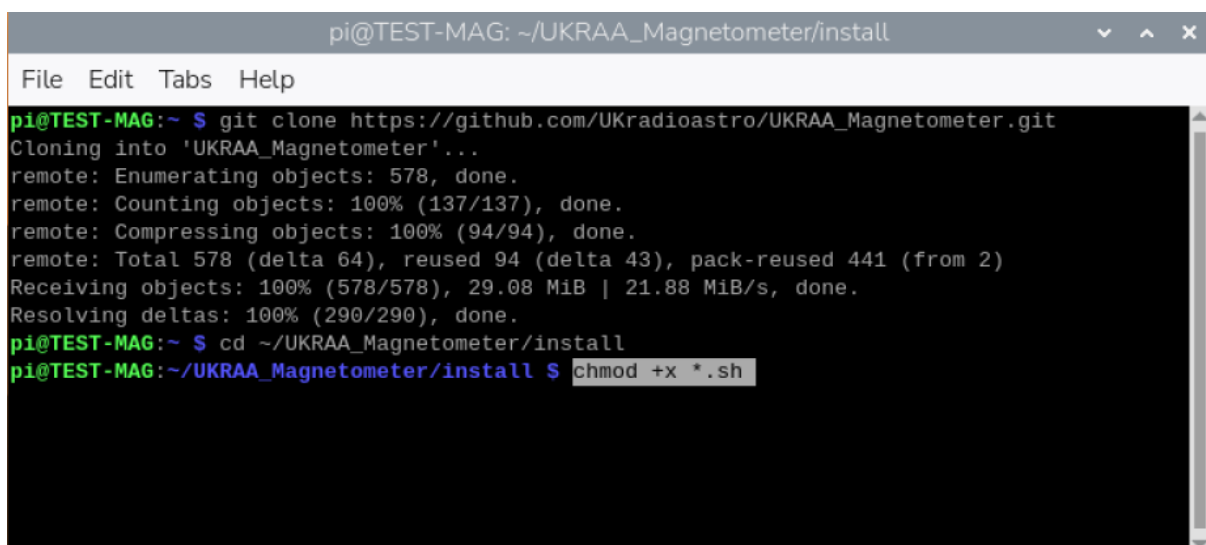
A terminal window titled 'pi@TEST-MAG: ~/UKRAA_Magnetometer/install' with a menu bar (File, Edit, Tabs, Help). The terminal shows the same git clone output as the previous screenshot, followed by the 'cd ~/UKRAA_Magnetometer/install' command, and then the 'chmod +x *.sh' command which is highlighted in a light blue box.

```
pi@TEST-MAG: ~ $ git clone https://github.com/UKradioastro/UKRAA_Magnetometer.git
Cloning into 'UKRAA_Magnetometer'...
remote: Enumerating objects: 578, done.
remote: Counting objects: 100% (137/137), done.
remote: Compressing objects: 100% (94/94), done.
remote: Total 578 (delta 64), reused 94 (delta 43), pack-reused 441 (from 2)
Receiving objects: 100% (578/578), 29.08 MiB | 21.88 MiB/s, done.
Resolving deltas: 100% (290/290), done.
pi@TEST-MAG: ~ $ cd ~/UKRAA_Magnetometer/install
pi@TEST-MAG: ~/UKRAA_Magnetometer/install $ chmod +x *.sh
```

This will make the **install.sh** script executable.

3. Type the following command and press **enter**

sudo bash install.sh

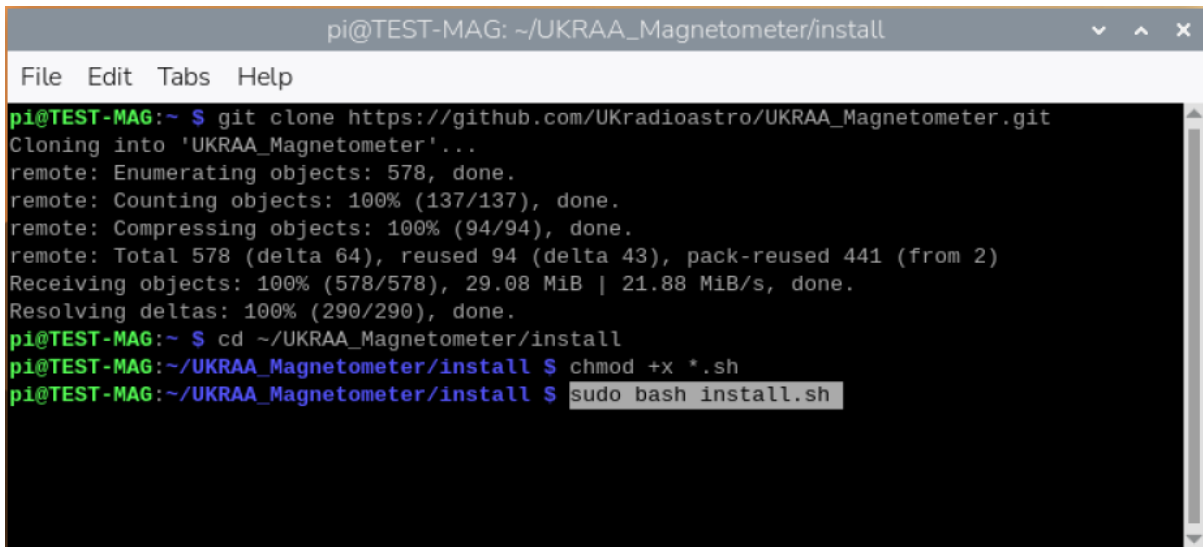

```
pi@TEST-MAG: ~/UKRAA_Magnetometer/install
File Edit Tabs Help
pi@TEST-MAG:~ $ git clone https://github.com/UKradioastro/UKRAA_Magnetometer.git
Cloning into 'UKRAA_Magnetometer'...
remote: Enumerating objects: 578, done.
remote: Counting objects: 100% (137/137), done.
remote: Compressing objects: 100% (94/94), done.
remote: Total 578 (delta 64), reused 94 (delta 43), pack-reused 441 (from 2)
Receiving objects: 100% (578/578), 29.08 MiB | 21.88 MiB/s, done.
Resolving deltas: 100% (290/290), done.
pi@TEST-MAG:~ $ cd ~/UKRAA_Magnetometer/install
pi@TEST-MAG:~/UKRAA_Magnetometer/install $ chmod +x *.sh
pi@TEST-MAG:~/UKRAA_Magnetometer/install $ sudo bash install.sh
```

This will run the install script.

There may be occasions during the running of the install script that require you to make a keyboard entry.

When asked **Do you want to continue? [Y/n]** - type **Y** or **y** and press **enter**

That's it!

The code is now set up to run automatically; it will record the data from the PicoMagnetometer, process the data, plot the data and post the plots to your intranet web page.

There are other functions that are customisable by the user, such as **email alerts** and **FTP** to users' external website, that are covered in the **User Manual**.

Optional: run an install-time heartbeat smoke check (disabled by default):

sudo MAGNETOMETER_INSTALL_SMOKE_HEARTBEAT=1 bash install.sh

This runs **--test-heartbeat** once during install and prints a clear **HEARTBEAT_SMOKE_CHECK: PASS** or **HEARTBEAT_SMOKE_CHECK: FAIL** summary.

What does the code do?

The code records data from the UKRAA PicoMagnetometer via serial over the supplied USB cable and stores the data to the raw data folder.

The raw data will be processed daily, via CRON, to get magnetic field values per minute in the X (N->S), Y (E->W) and Z (U->D) directions from your previous day's data. The maximum hourly variation of the magnetic field values in the X (N->S) and Y (E->W) directions will also be produced.

A number of plots will be created:

- X, Y and Z (North/South, East/West and up/down)
- Maximum hourly variation in X and Y directions
- H, D and Z (Local horizontal plane, declination angle and up/down)
- B and I (Total strength of Earth's magnetic field and angle of Earth's magnetic field)

Note: H, D & Z plots together with B & I plots are disabled by default, these plots can be generated by changing the configuration files - see **User Manual: Additional graphs** for more details.


The raw data will also be processed on a continuous 5 minute basis, again via CRON, to generate a rolling 24 hour plot of X, Y and Z magnetic fields and % change of magnetic field for combined X and Y directions. The latter used to predict the potential of visible Aurora activity. Should a threshold level be reached for % change of magnetic field, then the user will receive an email alert of such - see **User Manual: Rolling alert emails** for more details.

A simple web server and web page is set up on your RPi so that you can view your PicoMagnetometer results on your desktop PC and/or smart phone when connected to your home network.

To access the PicoMagnetometer webpage from your desktop PC or your smart phone...

1. Open your preferred web application (Safari, Chrome, Firefox, etc.).
2. In the search bar type the following and press enter

http://test-mag.local

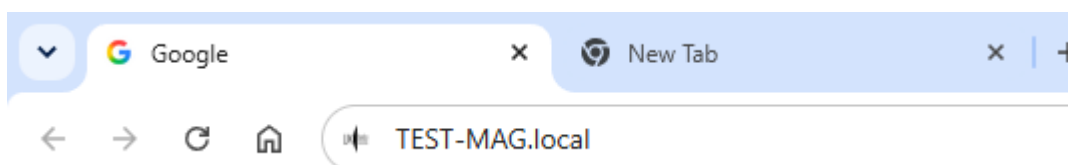

This will take you to the web page for your PicoMagnetometer on your local intranet, displaying both the rolling 24 hour plots and yesterday's plots.

NOTE: if you have a different **hostname** for your RPi, change the search bar entry to...

<http://hostname.local>

Where **hostname** is the hostname for your RPi setup.

Code is also supplied that will enable the user to upload, via FTP, to their host website, should they have one - see **User Manual: FTP service** for more details.

Operational checks

After installing/updating scripts on your RPi, run:

```
sudo bash /home/pi/UKRAA_Magnetometer/scripts/runPostUpdateChecksACM0.sh
```

This executes:

- optional daily publish logic checks
- optional HDZ/BI web visibility checks

For daily runtime monitoring, a health marker is written by:

```
sudo bash /home/pi/UKRAA_Magnetometer/scripts/checkDailyPublishHealthACM0.sh
```

Marker output file:

```
/home/pi/UKRAA_Magnetometer/data/status/daily-health.txt
```

One-line dashboard summary on demand:

```
sudo bash /home/pi/UKRAA_Magnetometer/scripts/showDashboardSummaryACM0.sh
```

If scheduled in cron, summary snapshots can be collected in:

```
/home/pi/UKRAA_Magnetometer/logfiles/dashboard-summary.log
```

Check PicoMagnetometerACM0 service is running

1. To check the **status** of your service, type the following command and press enter.

sudo systemctl status PicoMagnetometerACM0.service

2. To **start** your service, type the following command and press enter.

sudo systemctl start PicoMagnetometerACM0.service

3. To **stop** your service, type the following command and press enter.

sudo systemctl stop PicoMagnetometerACM0.service

4. To **enable** your service, type the following command and press enter.

sudo systemctl enable PicoMagnetometerACM0.service

5. To **disable** your service, type the following command and press enter.

sudo systemctl disable PicoMagnetometerACM0.service

License

MIT License

Copyright (c) 2024 UKRAA

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the **Software**), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED **AS IS**, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Contact us

Please send an e-mail to PicoMagnetometer@ukraa.com

