

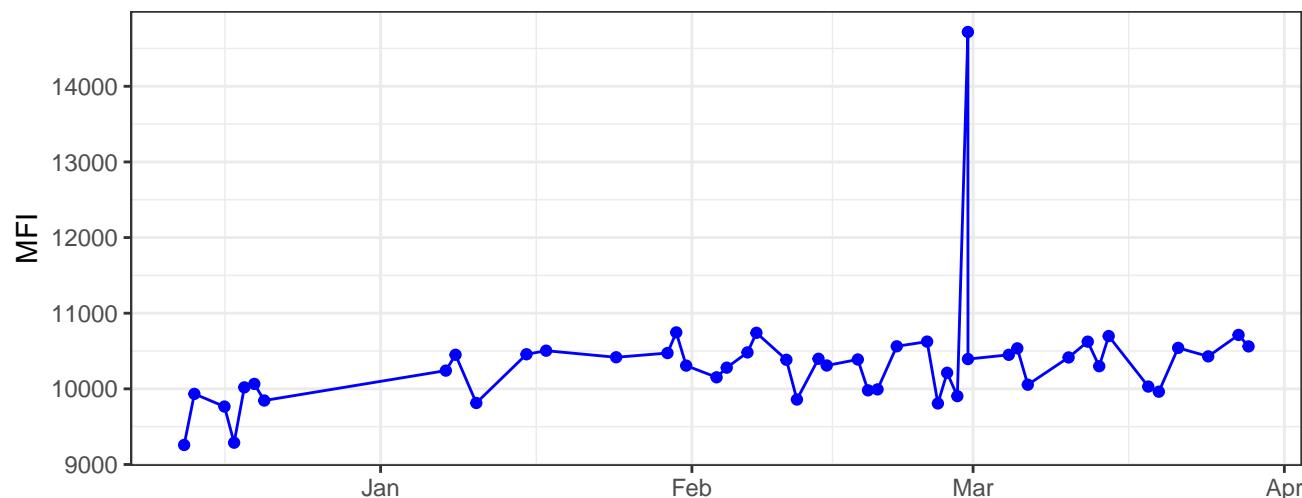


**B530-A**


B780-A

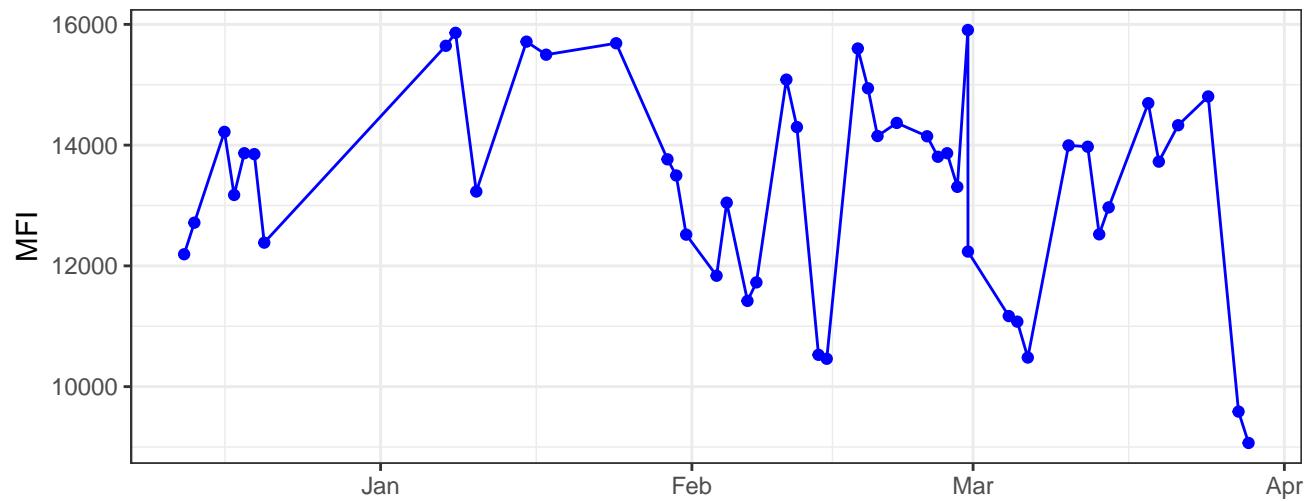


R670-A

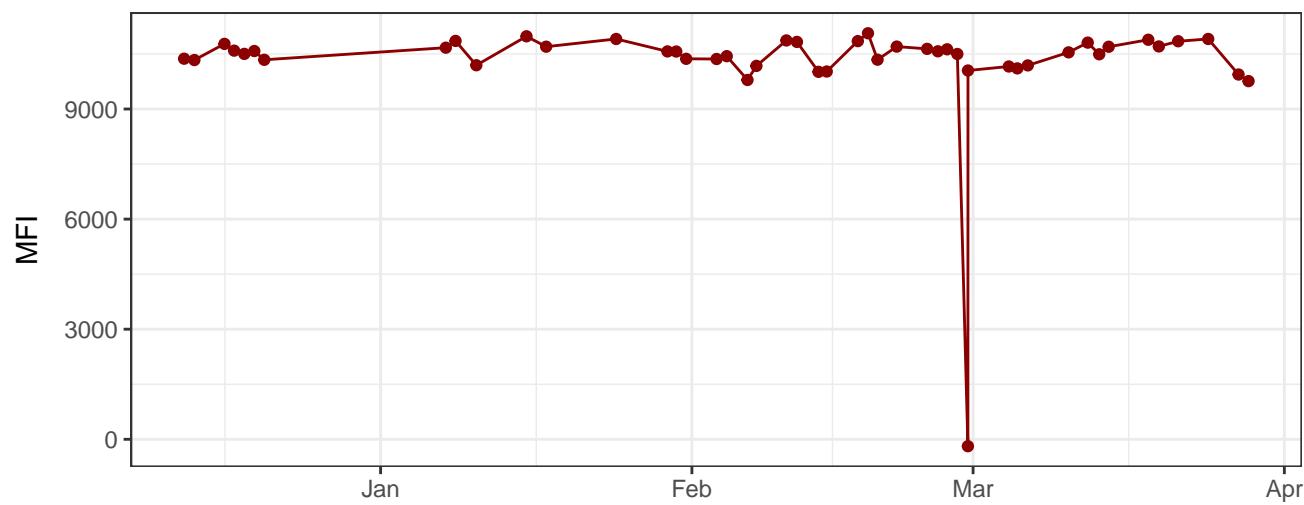


R780-A

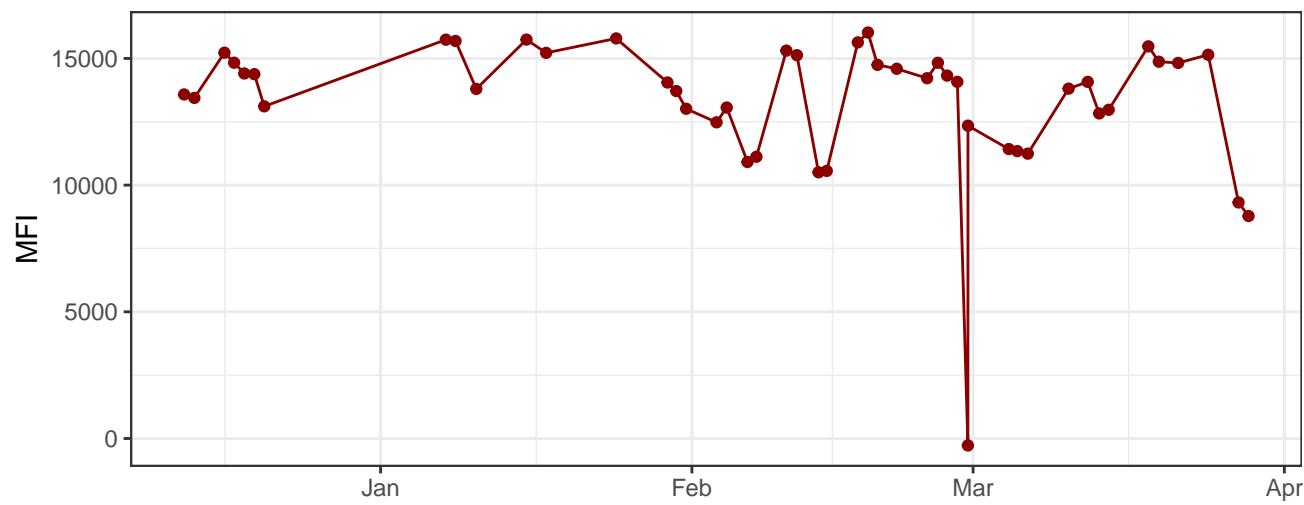


### Blue\_LaserDelay

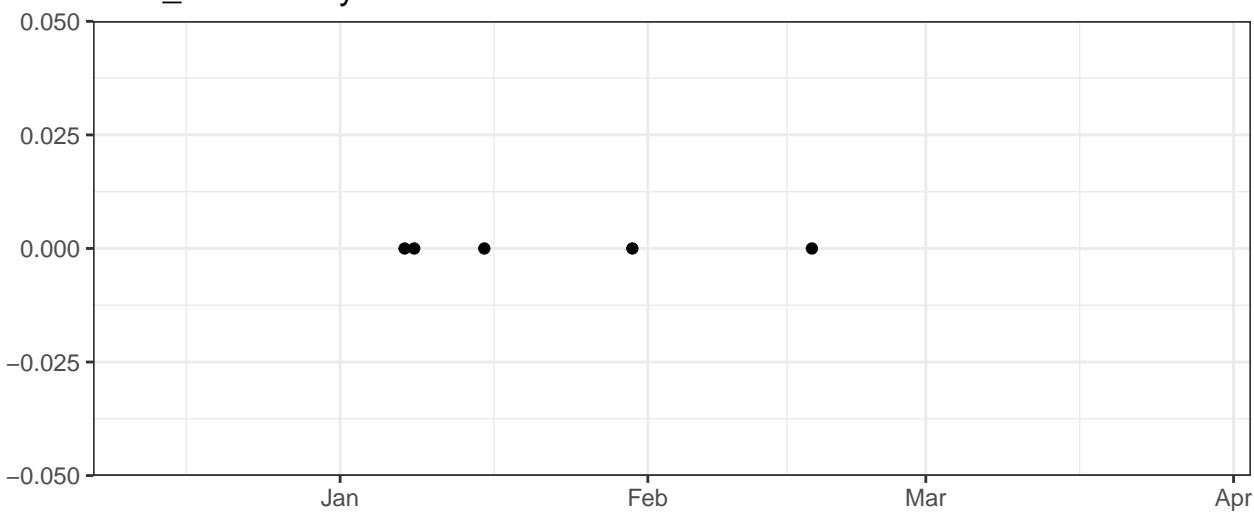


### Red\_LaserDelay

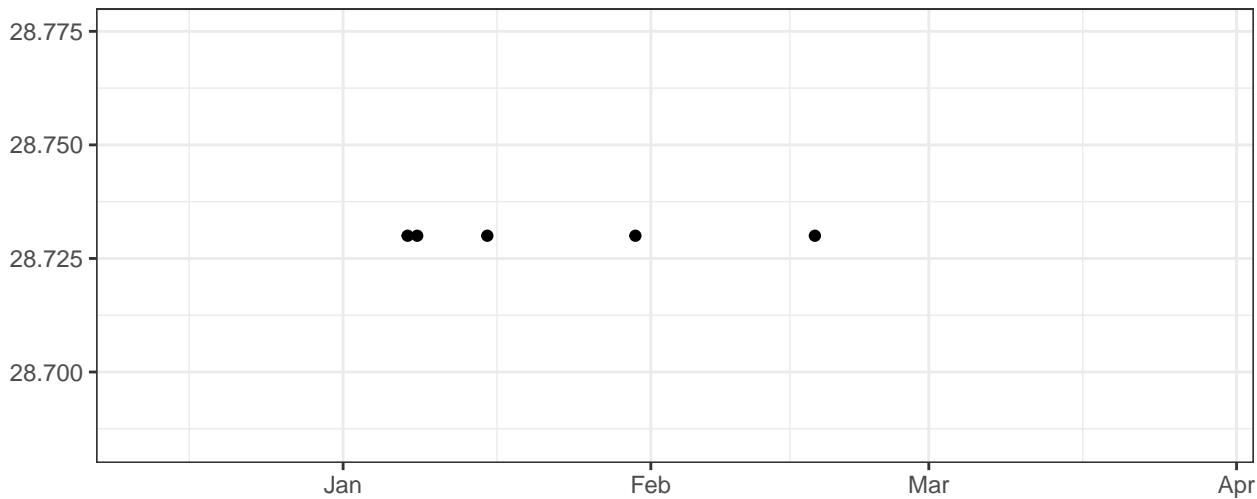


### FSC-A

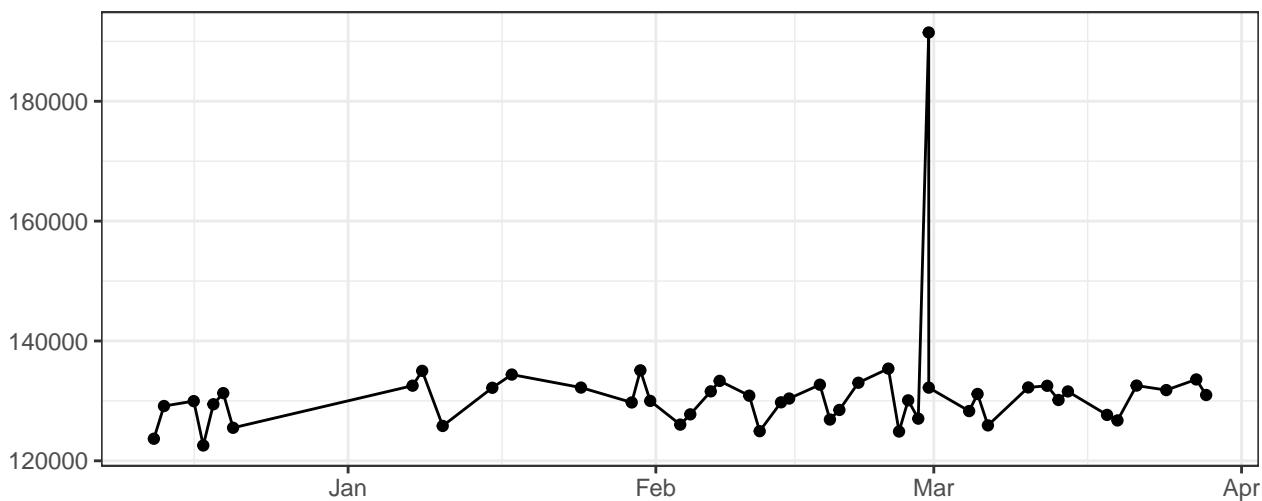


FSC-H

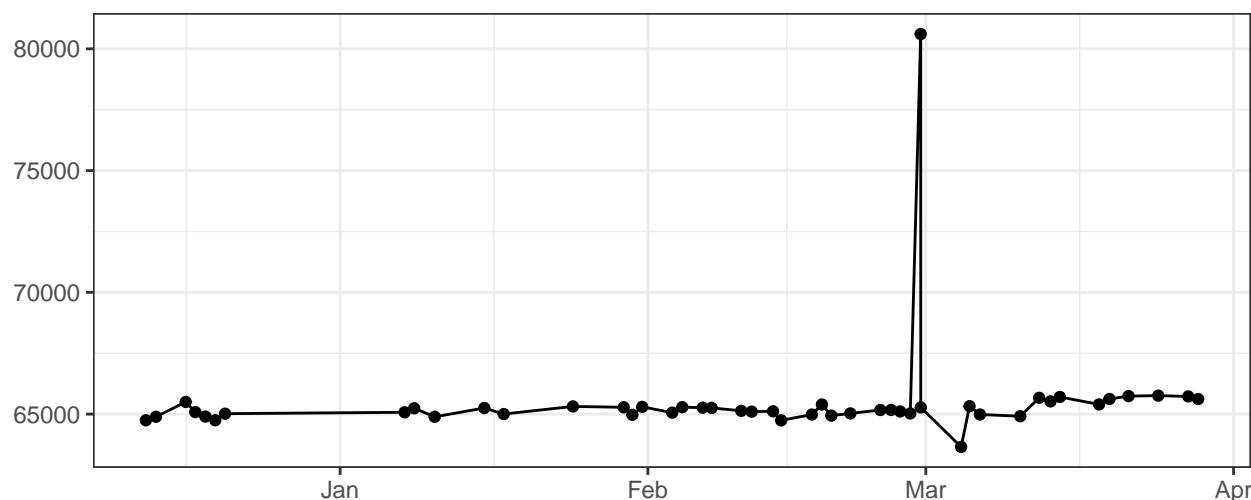


FSC-W

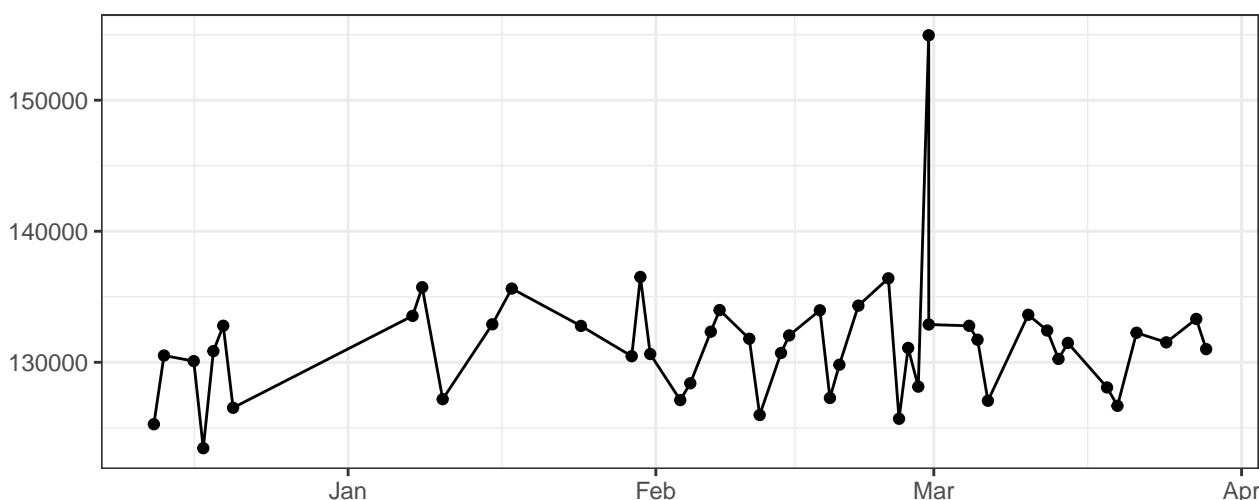


SSC-A

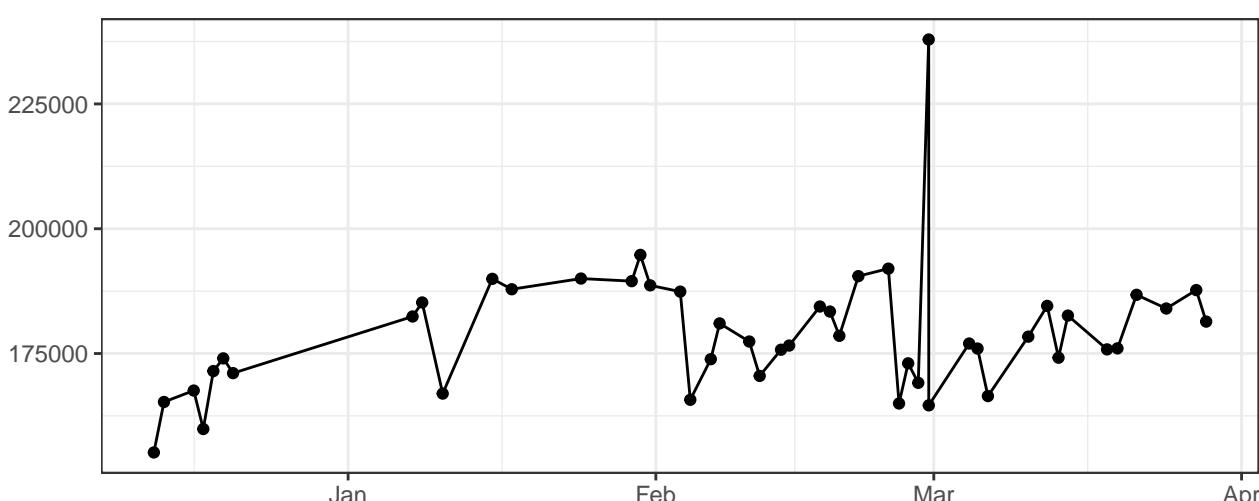


## SSC-H

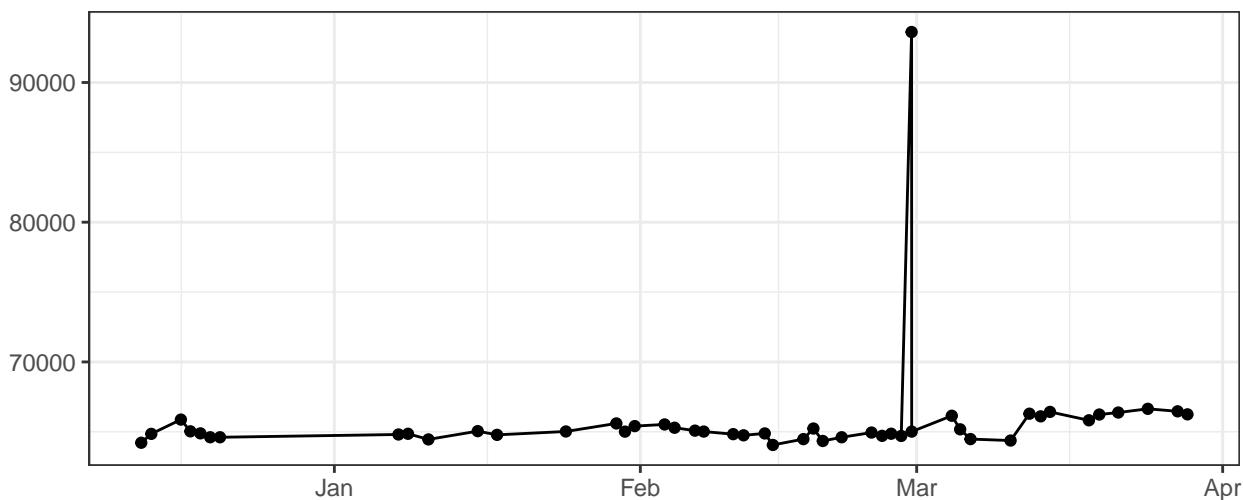


## SSC-W

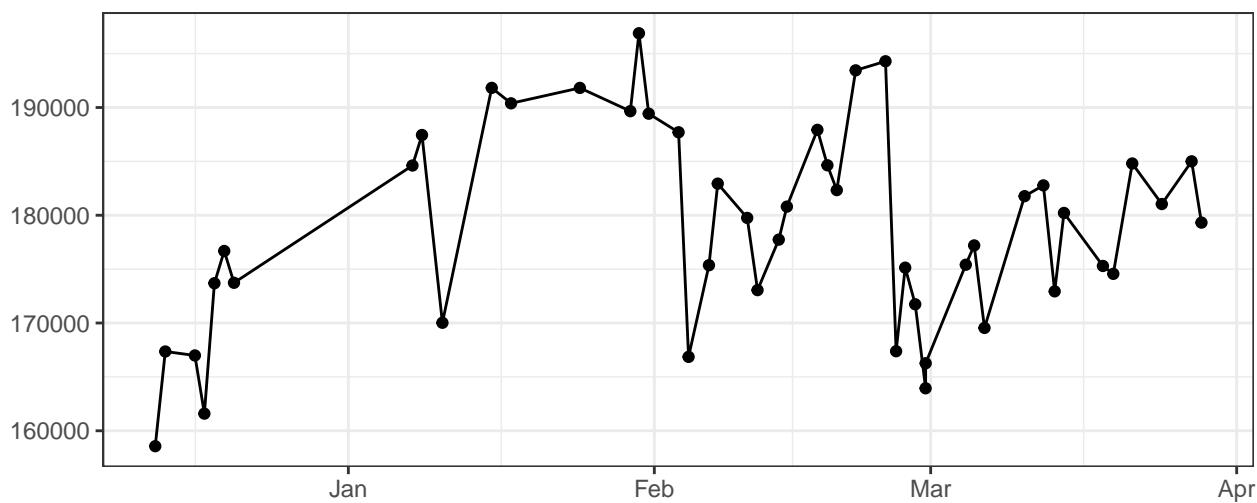


## B530-A\_Gain

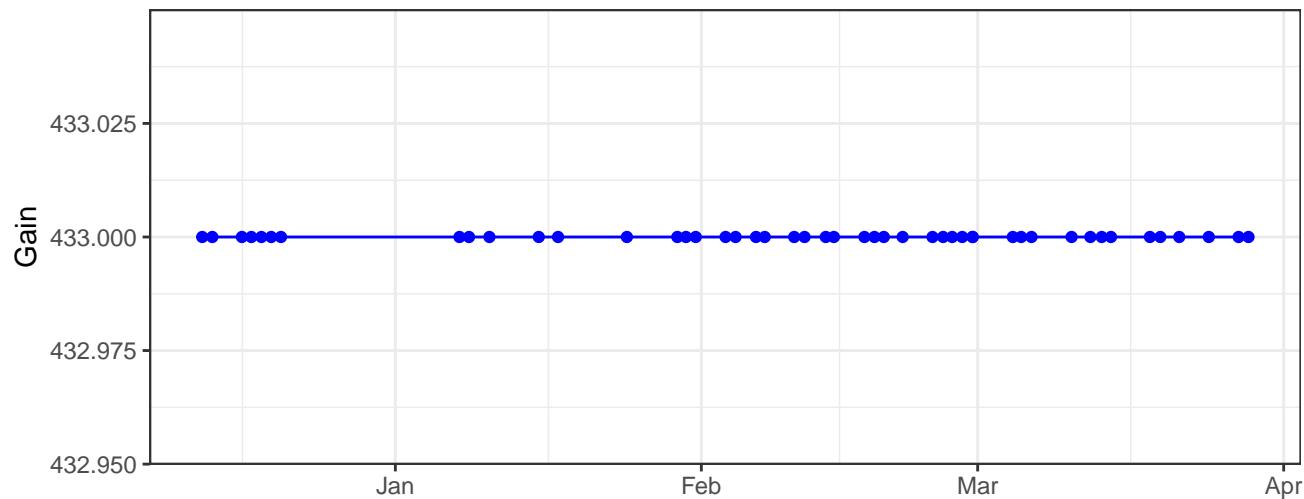


### B585–A\_Gain

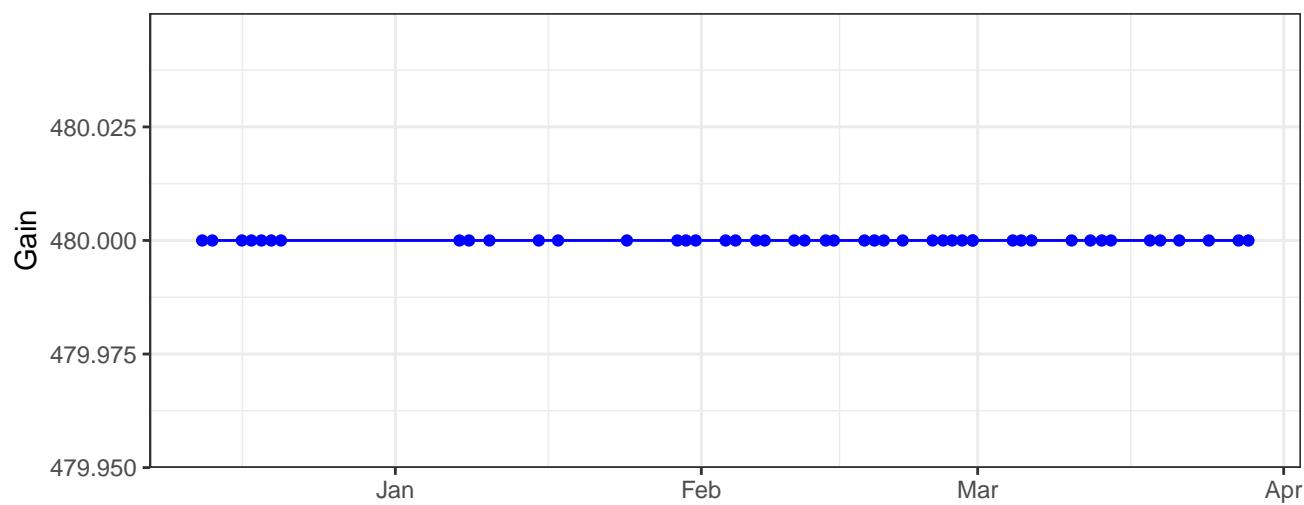


### B695–A\_Gain

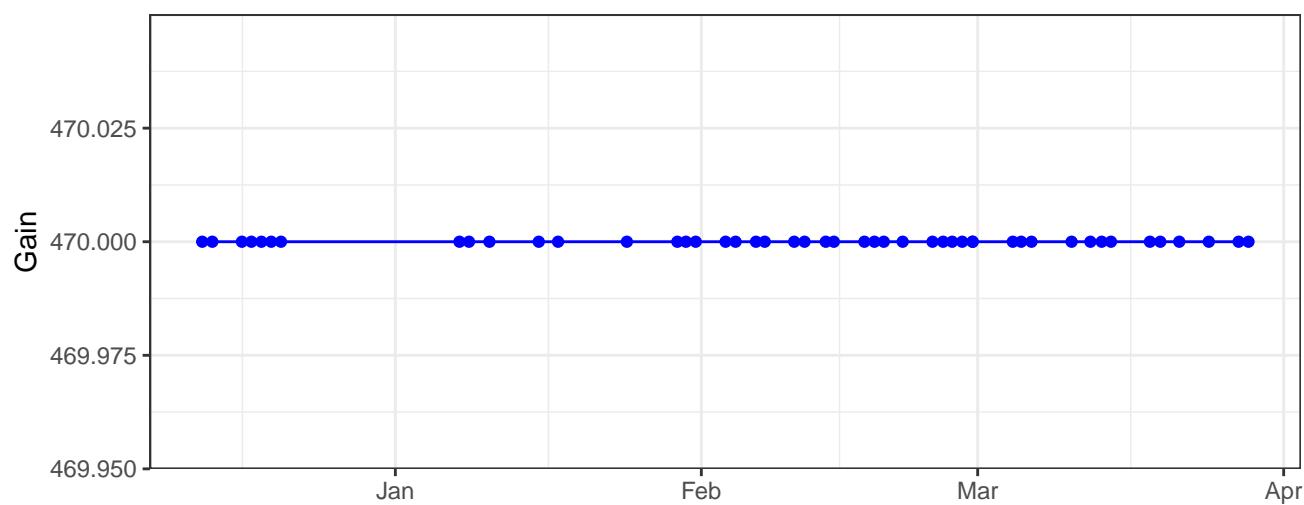


### B780–A\_Gain

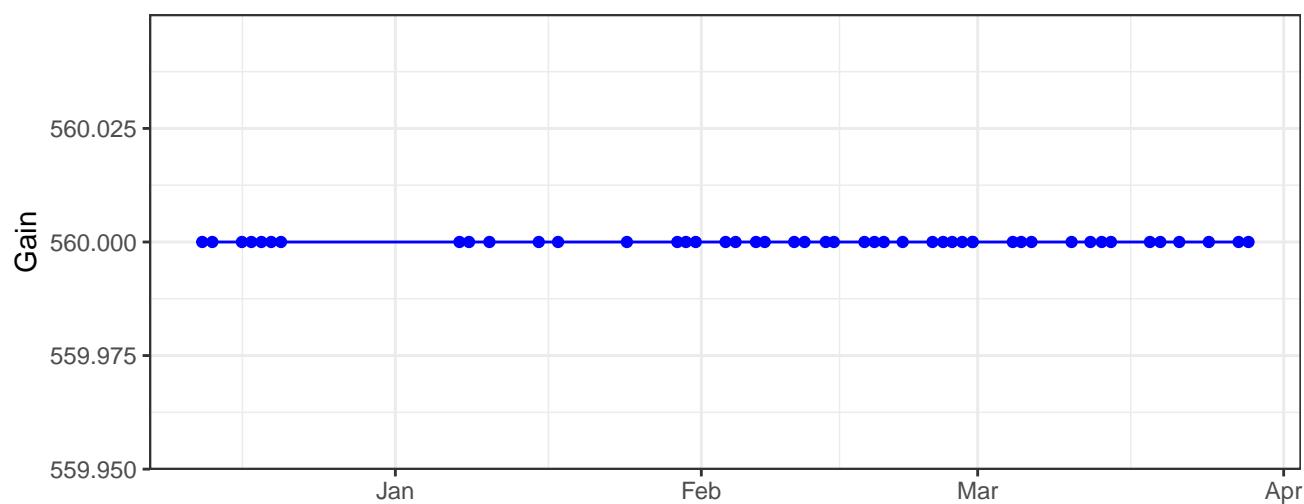


### R670-A\_Gain


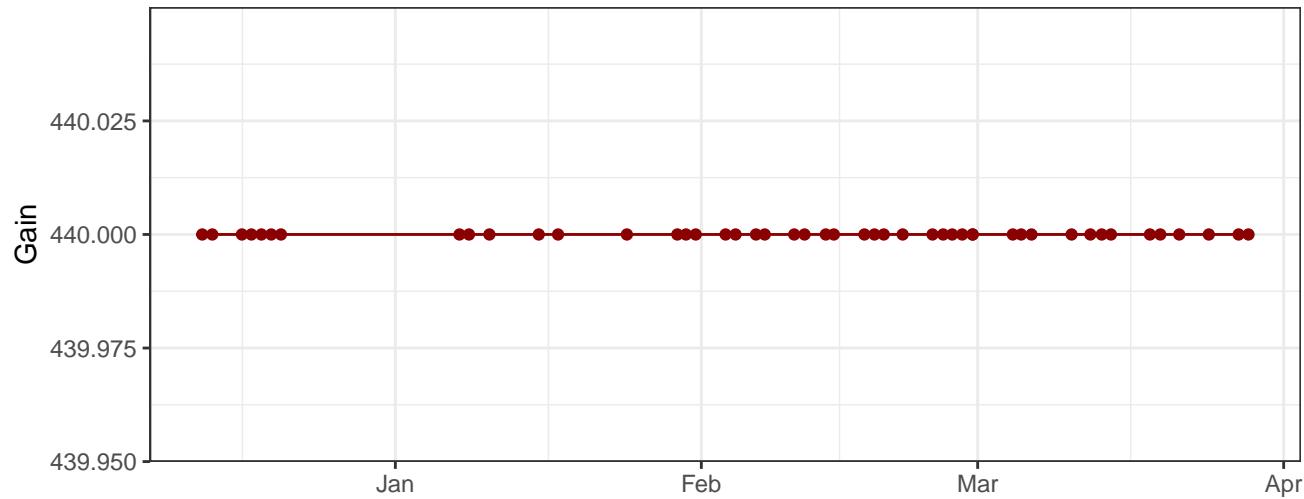





### R780-A\_Gain

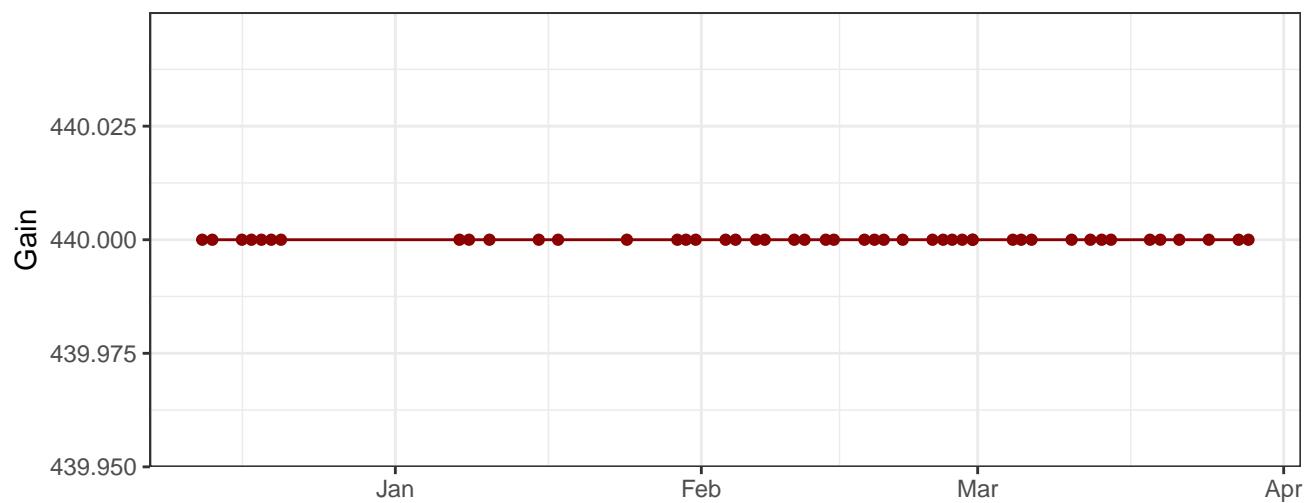


### FSC-A\_Gain

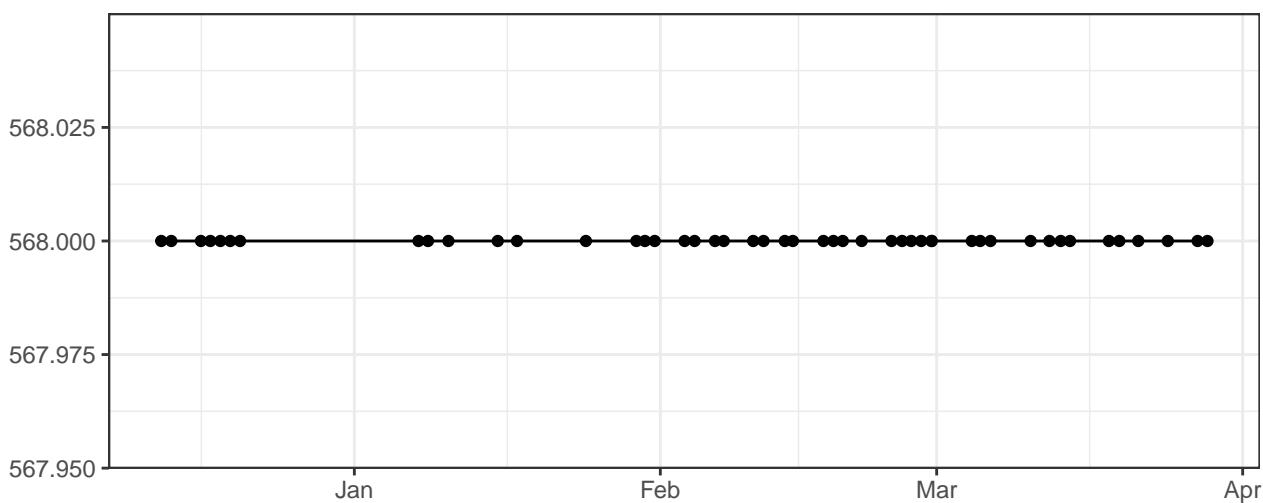

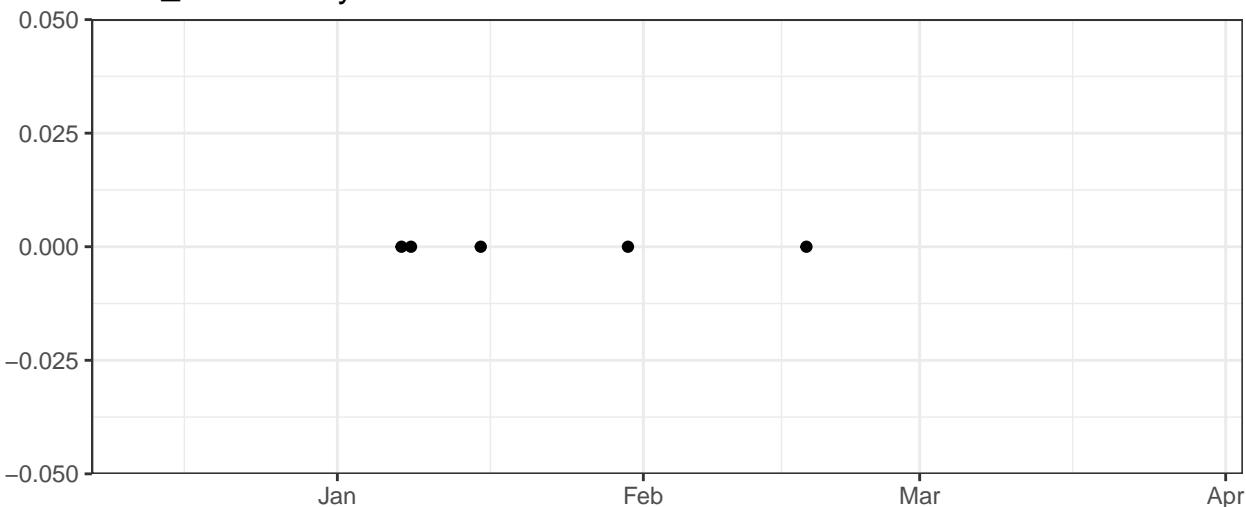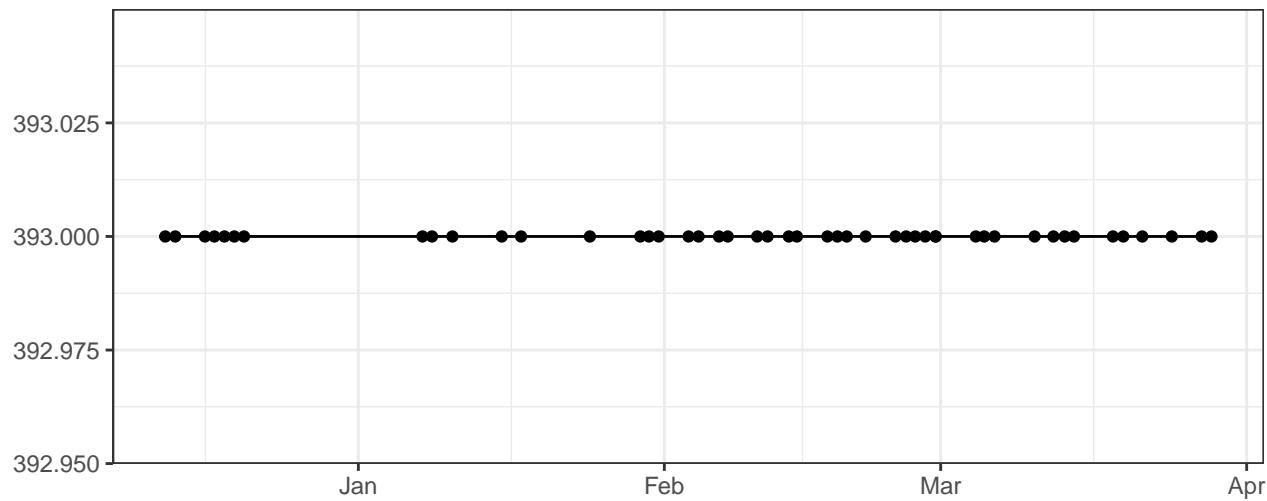


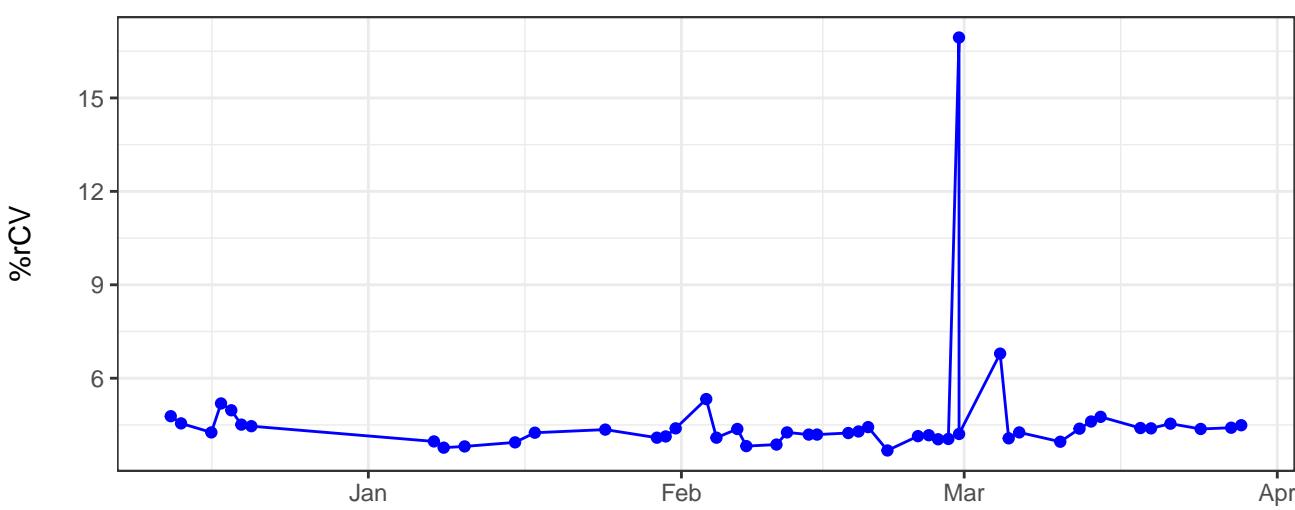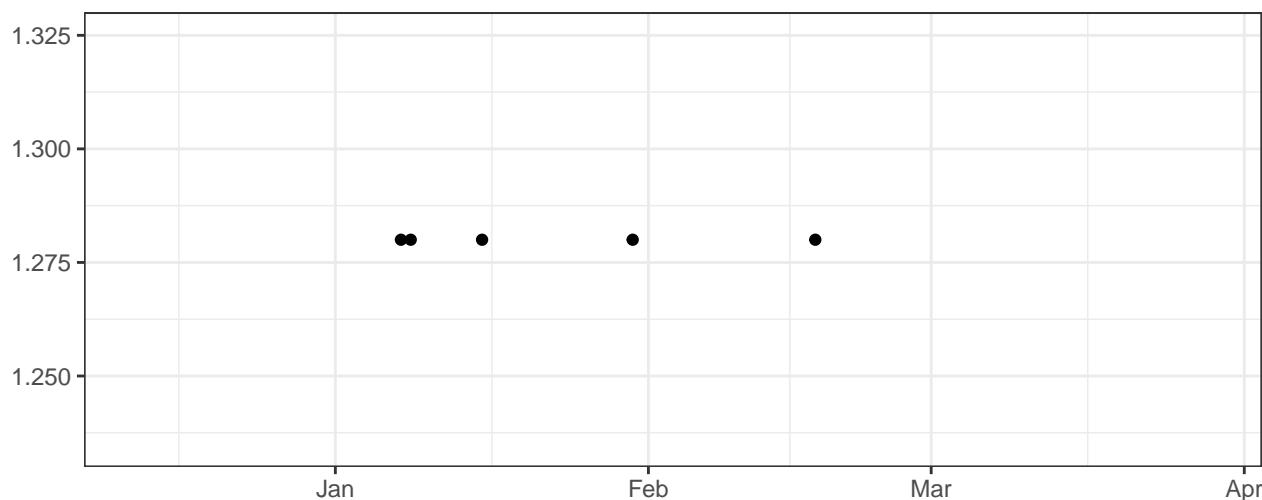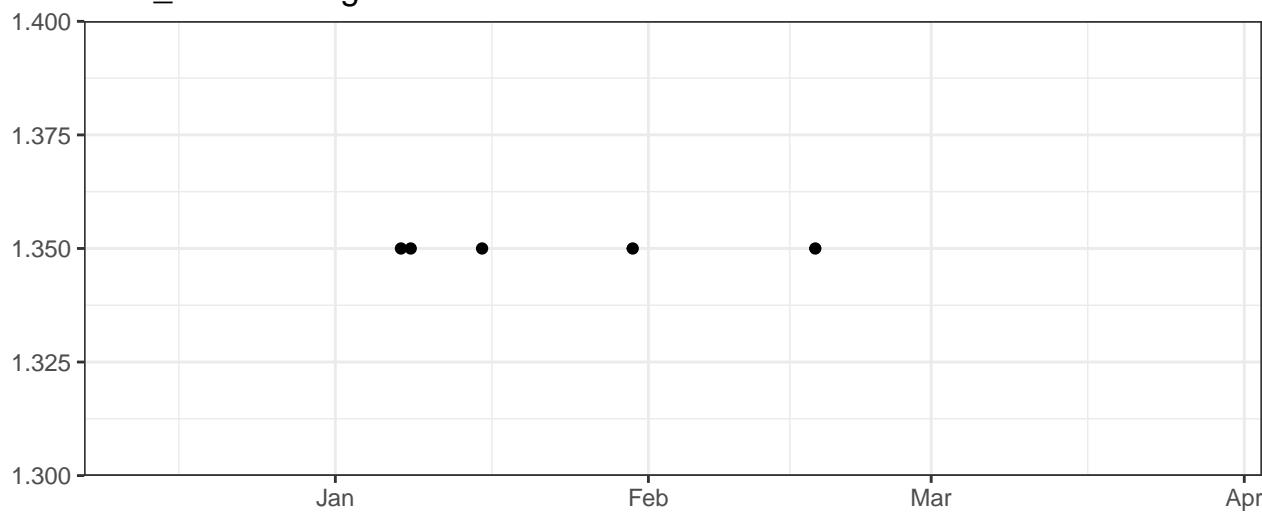


### B585-A-% rCV

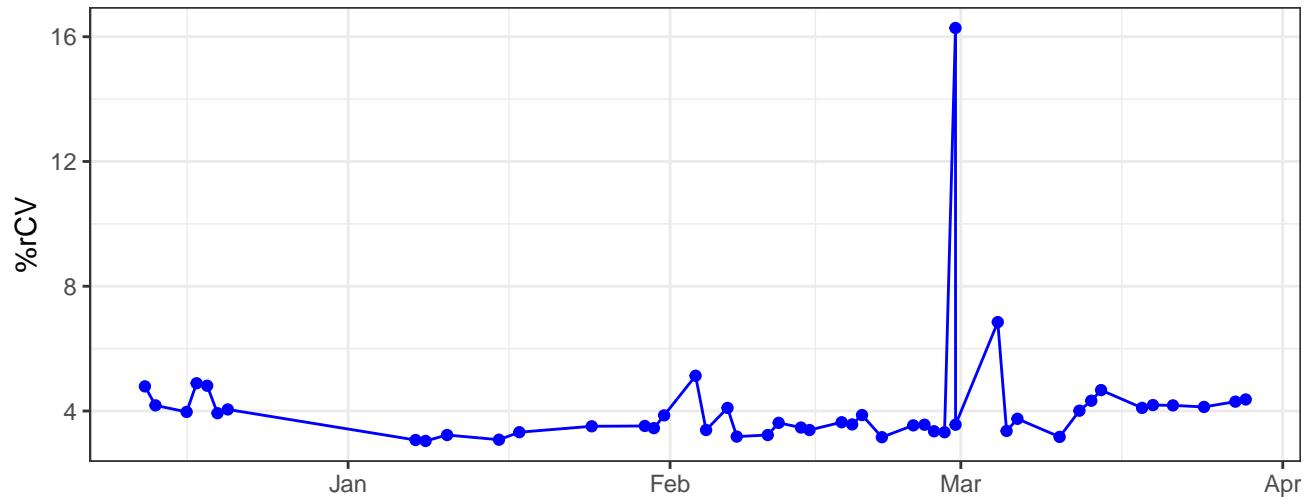


### B695-A-% rCV

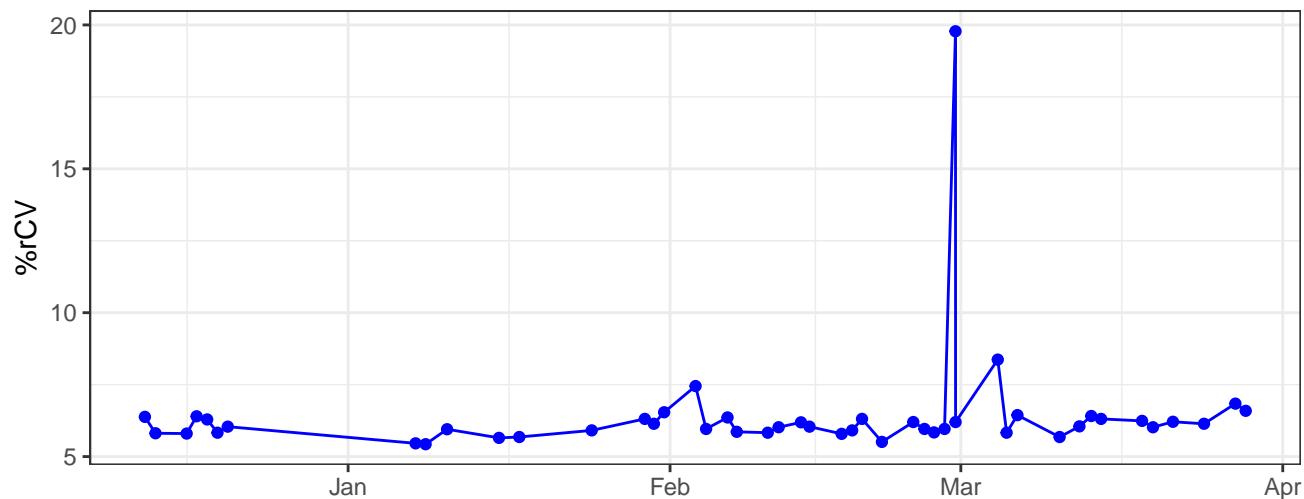


### B780-A-% rCV

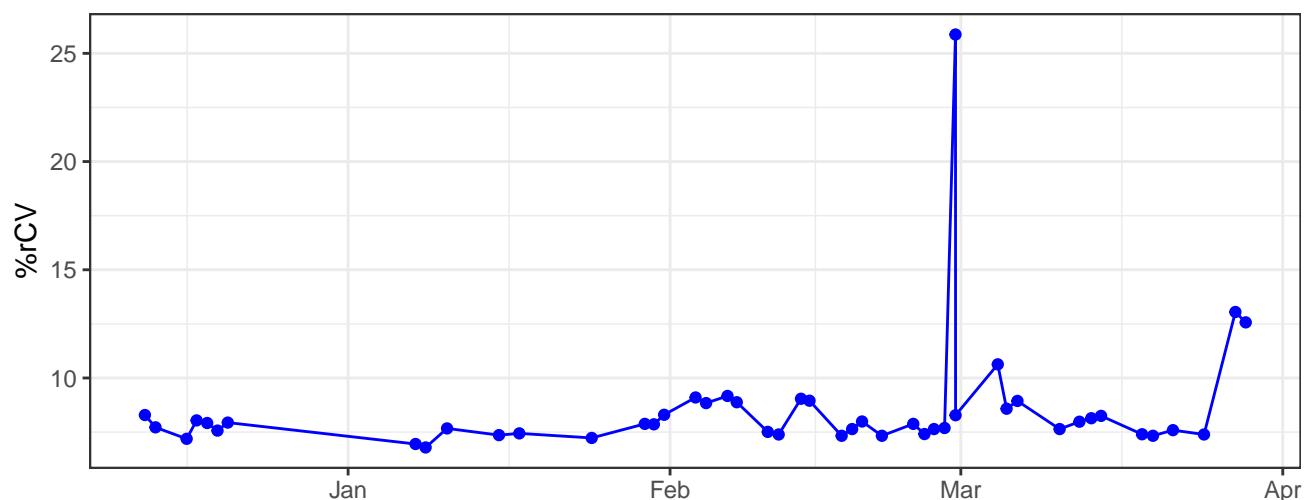

R670-A-% rCV

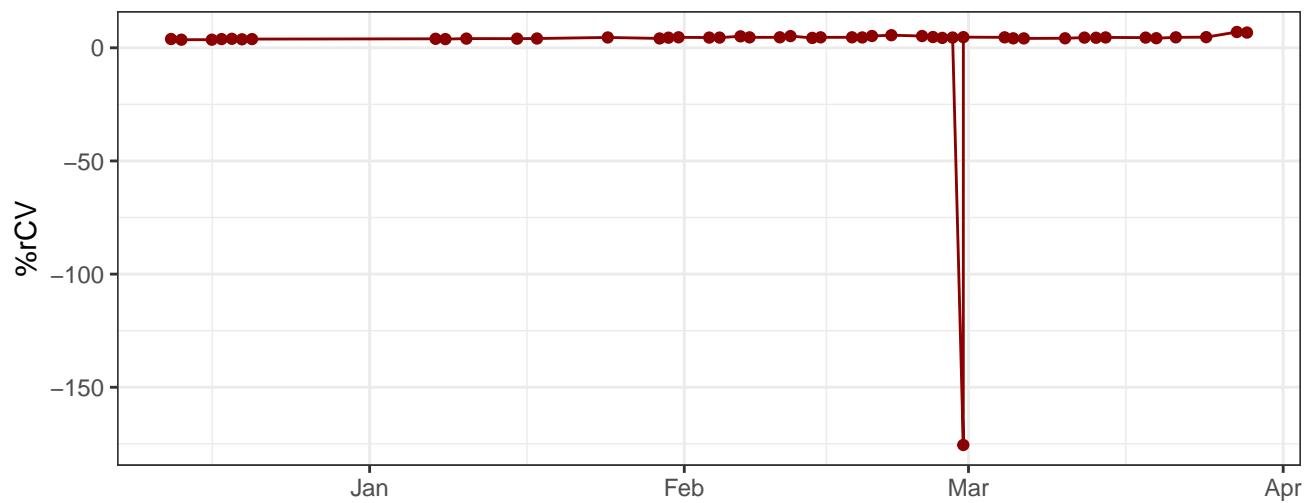

R780-A-% rCV

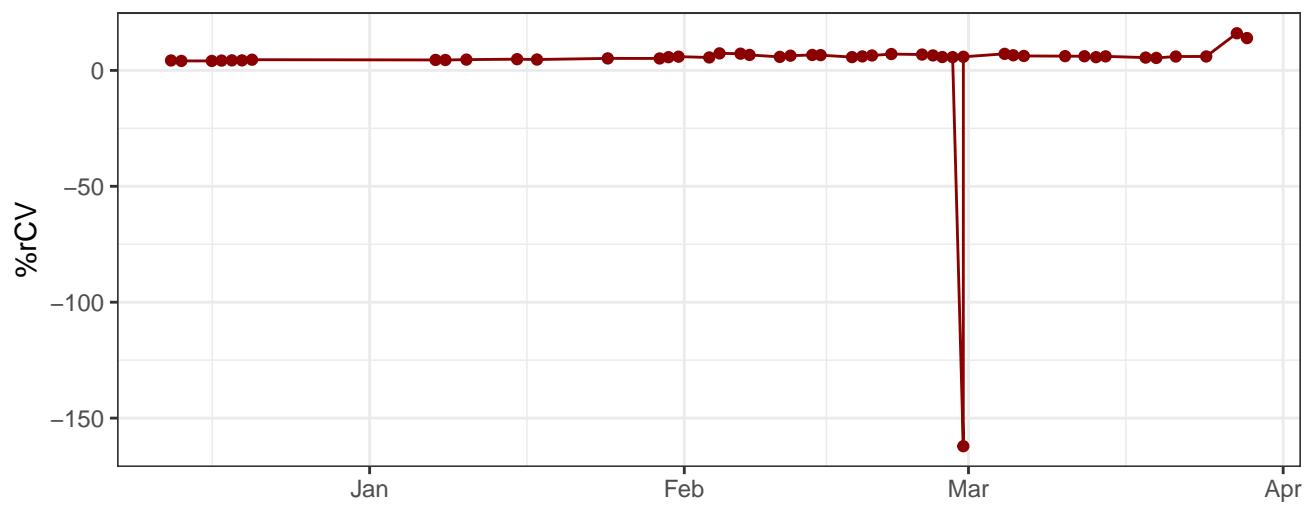

FSC-A-% rCV

