

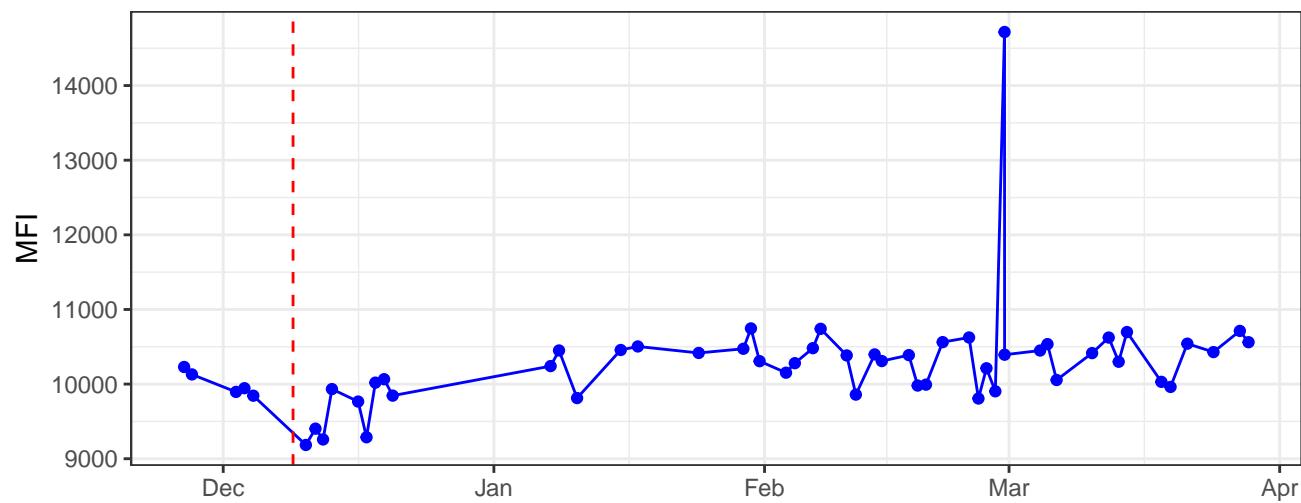
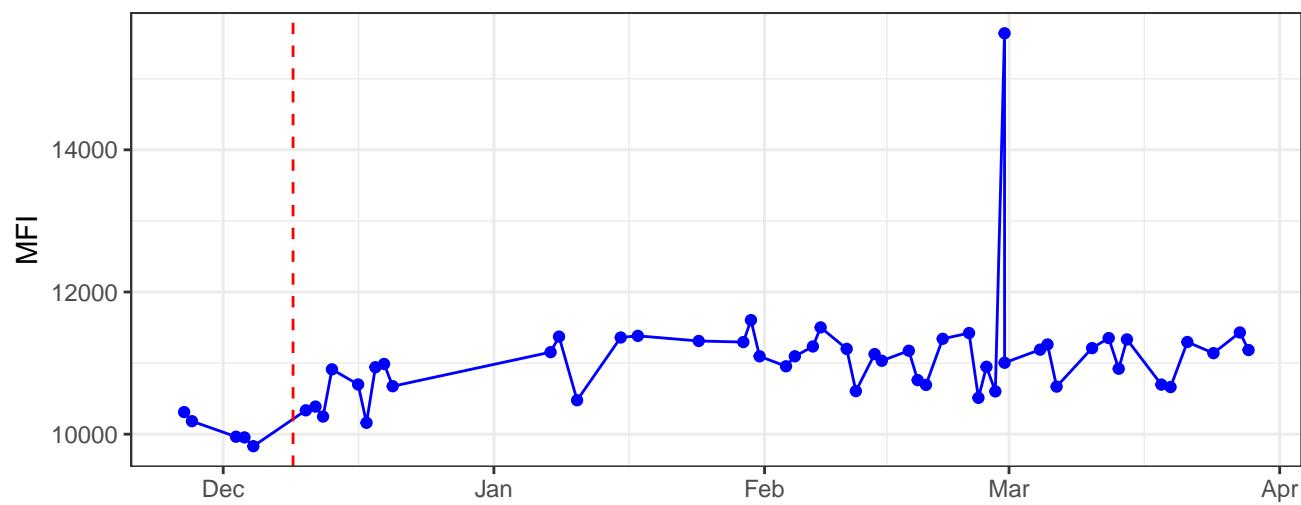
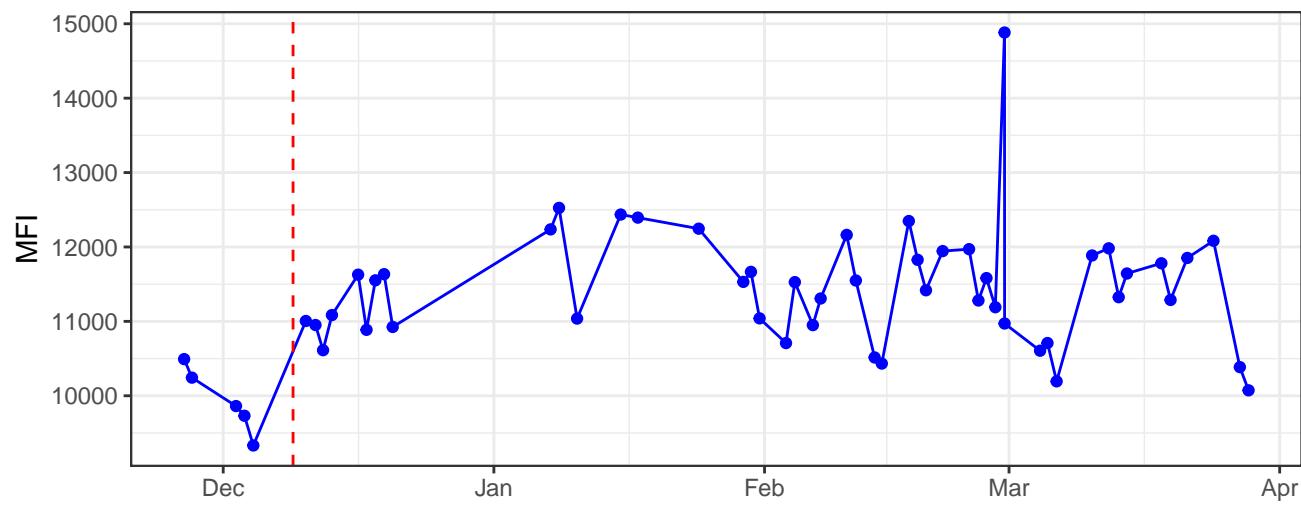


**B530-A****B585-A****B695-A**


B780-A

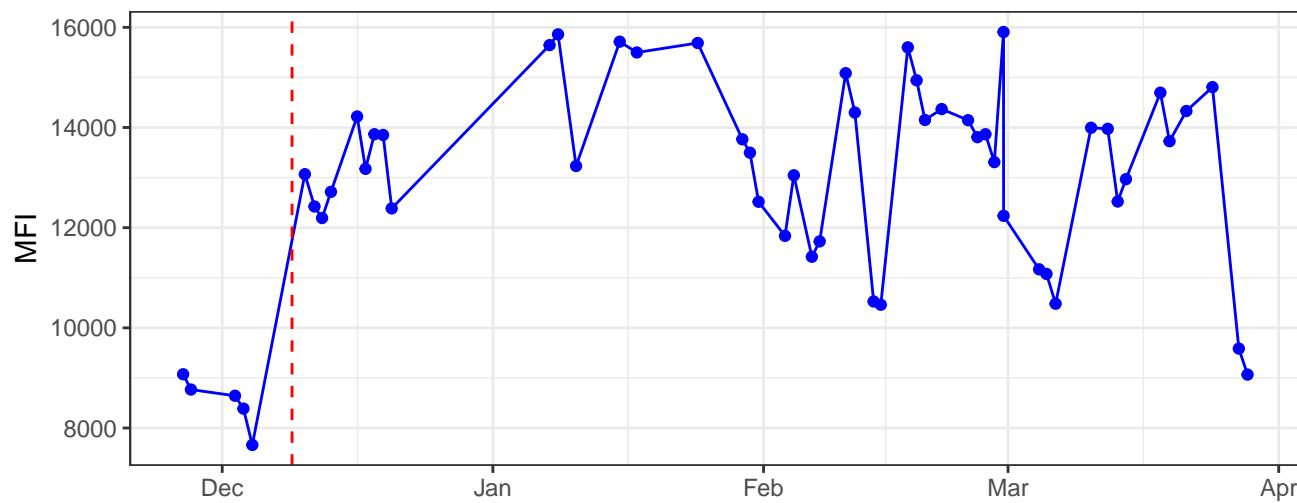


R670-A

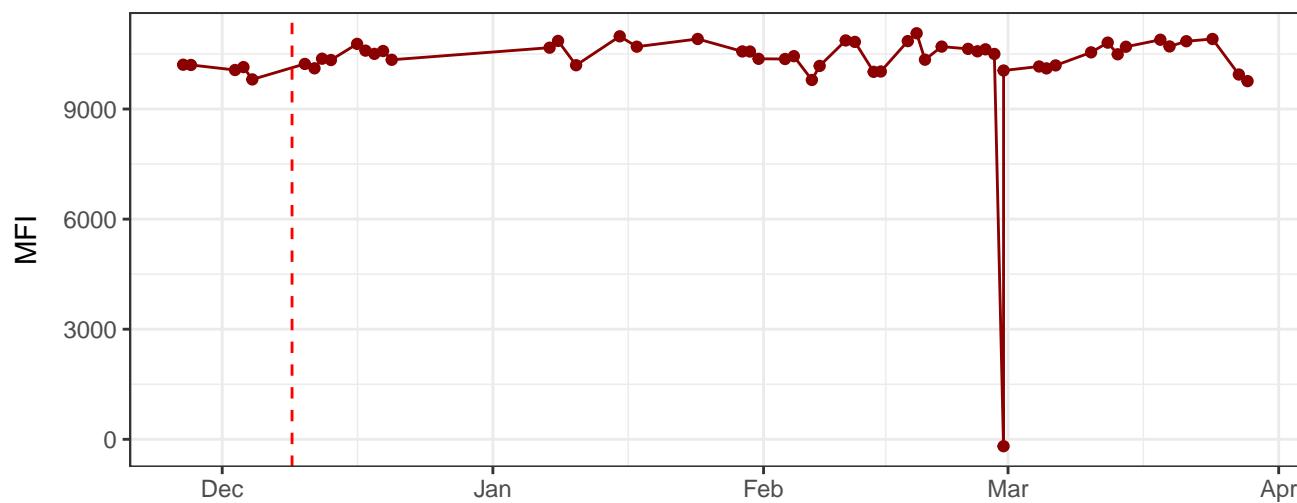


R780-A

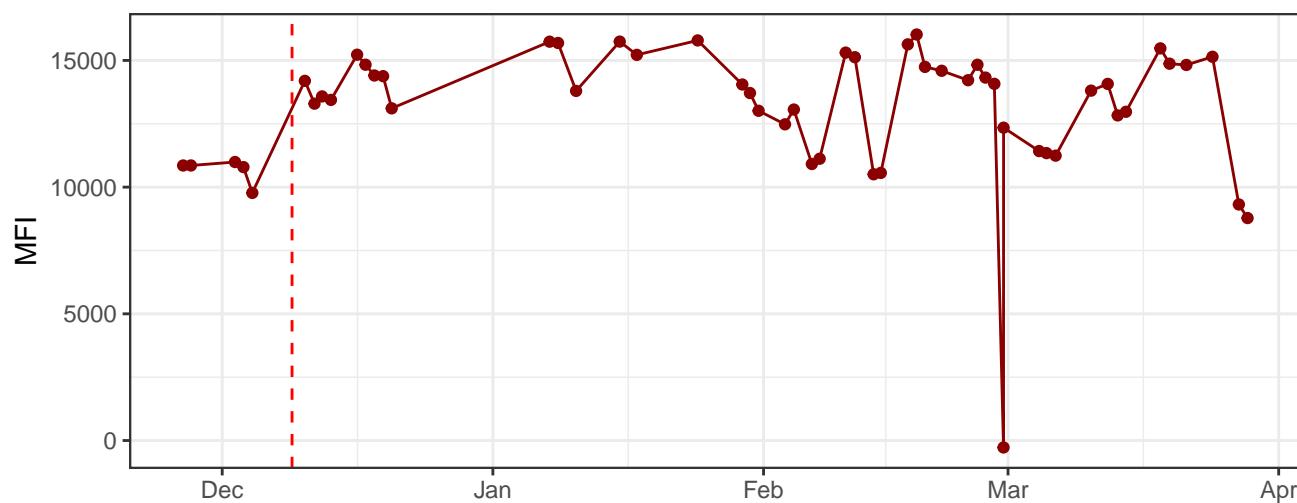


### Blue\_LaserDelay

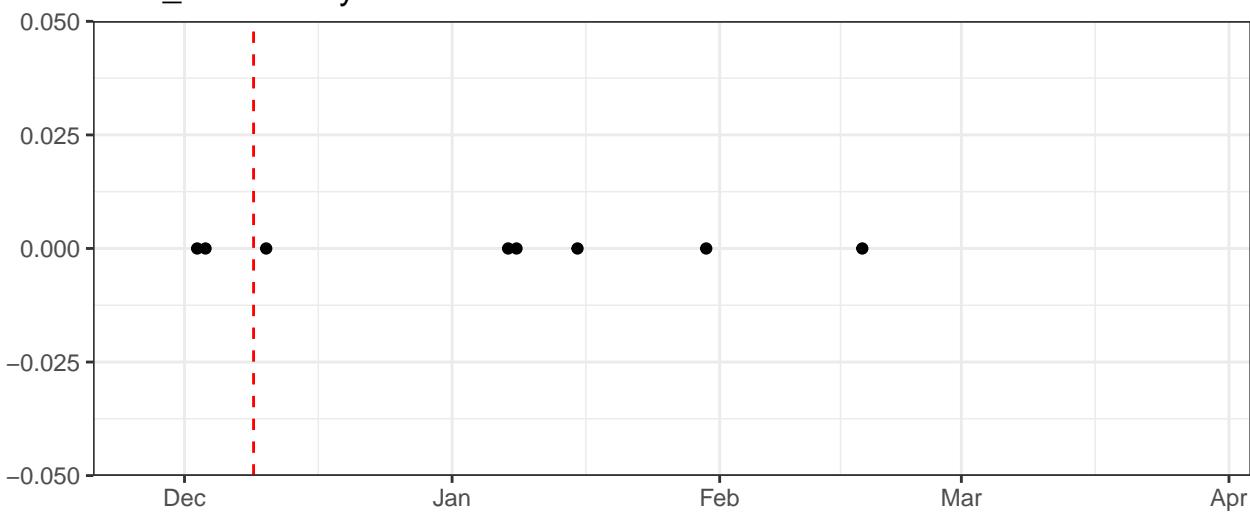


### Red\_LaserDelay

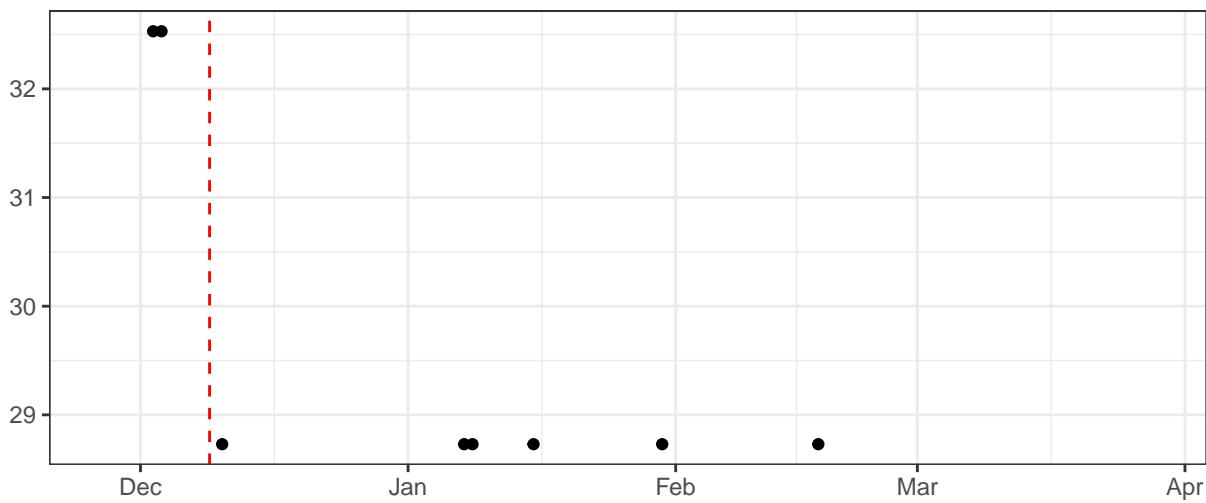


### FSC-A

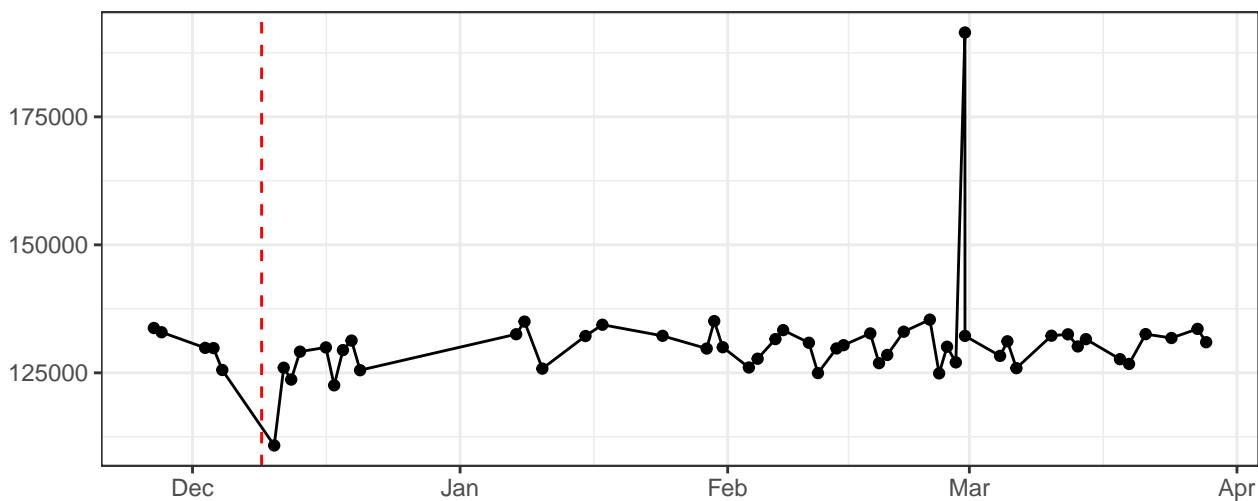


FSC-H

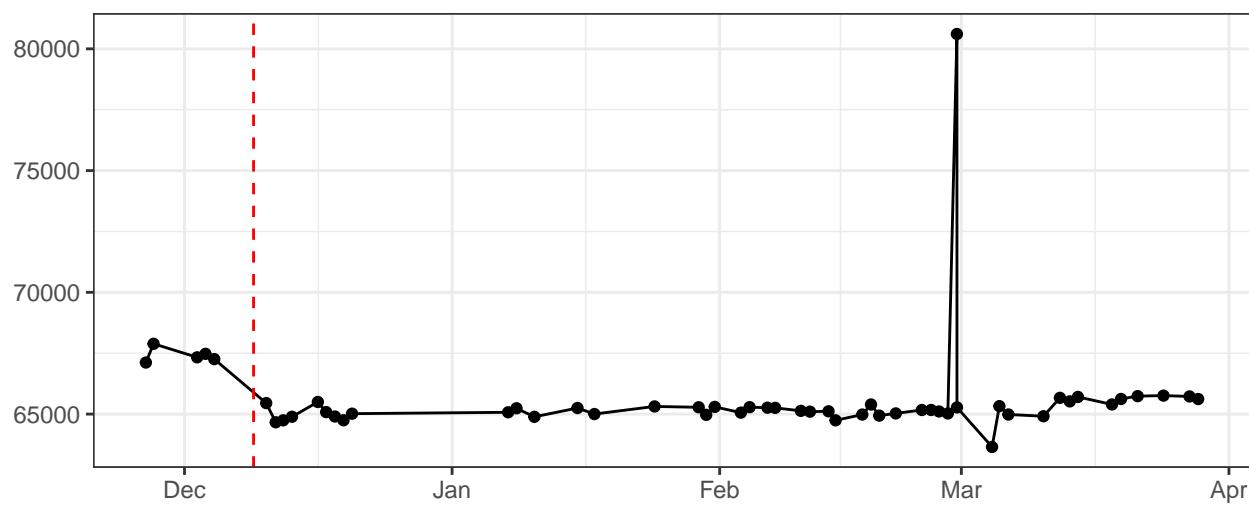


FSC-W

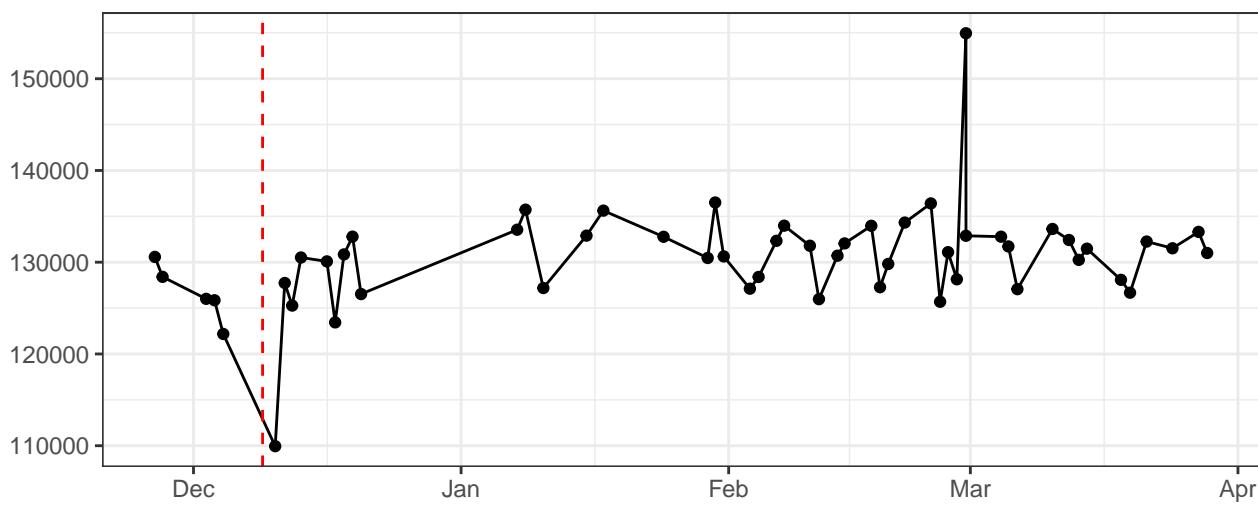


SSC-A

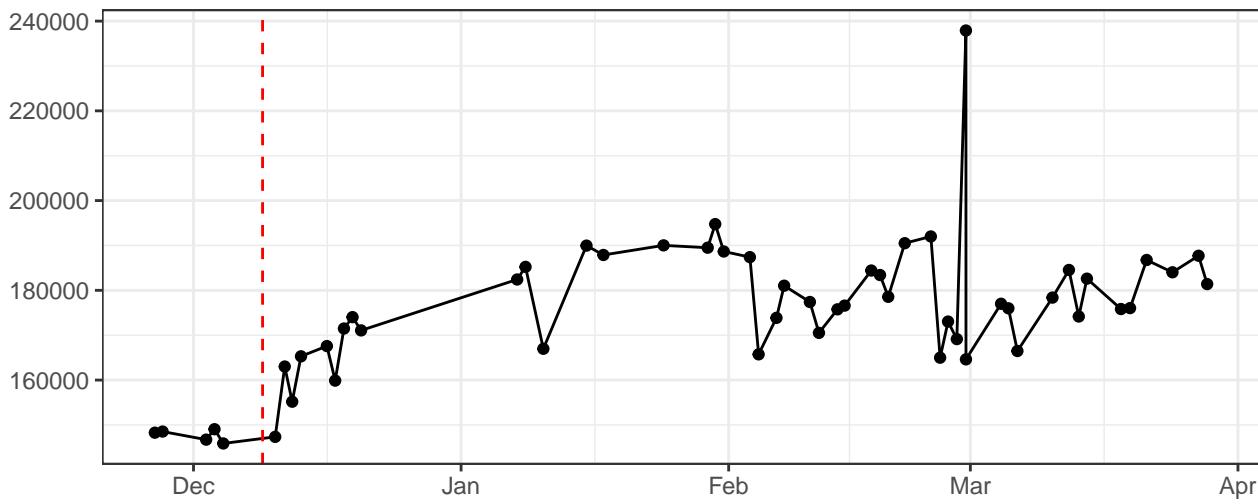


### SSC-H

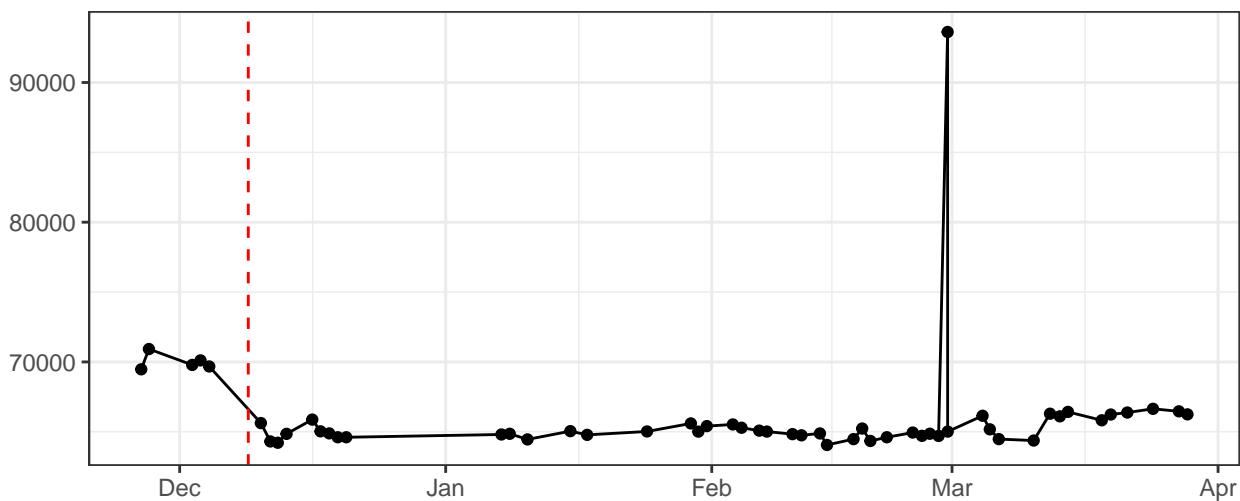


### SSC-W

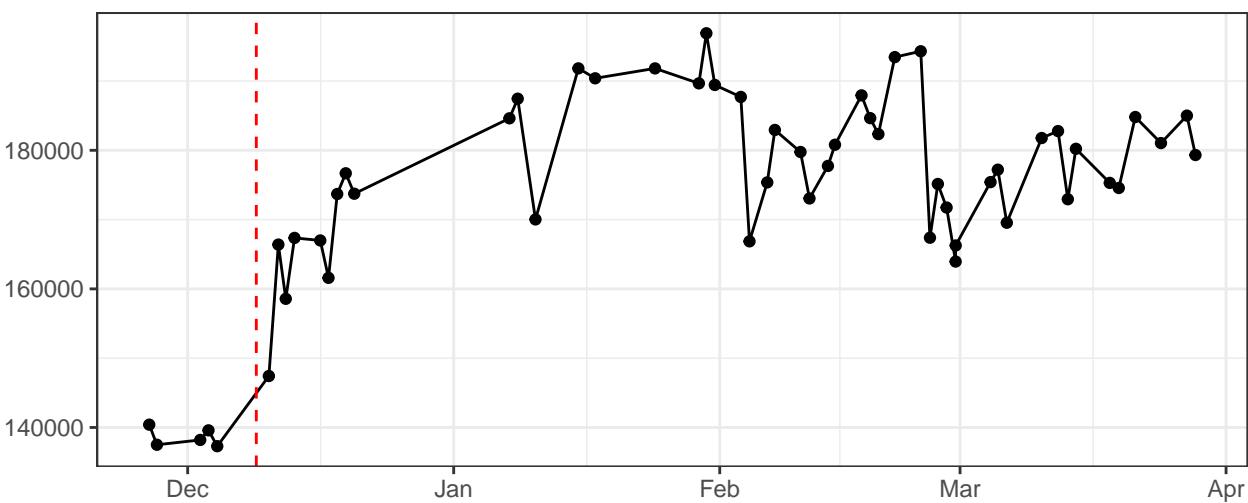


### B530-A\_Gain

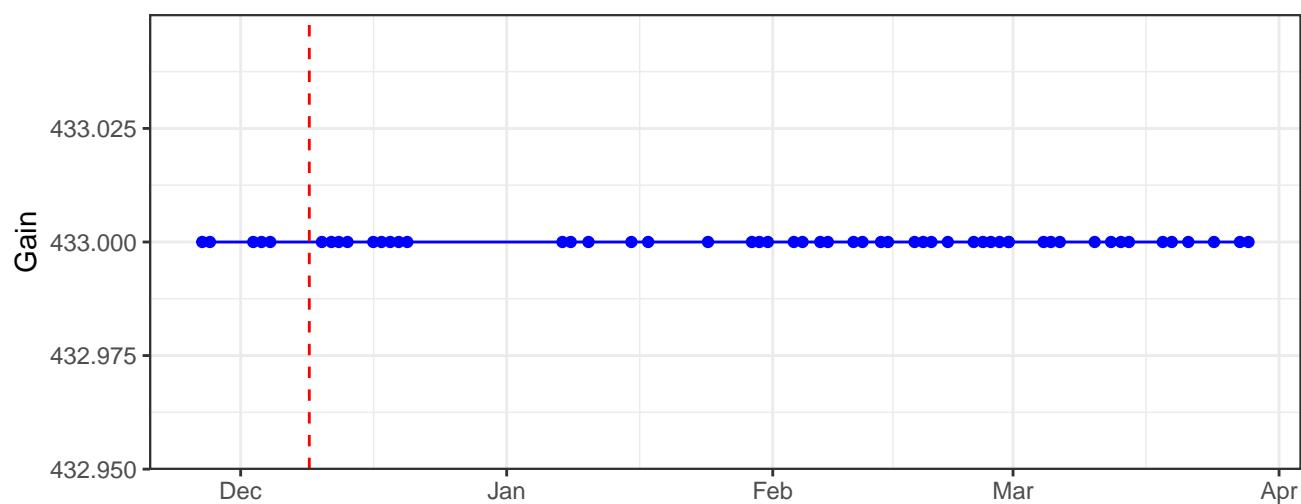


### B585–A\_Gain



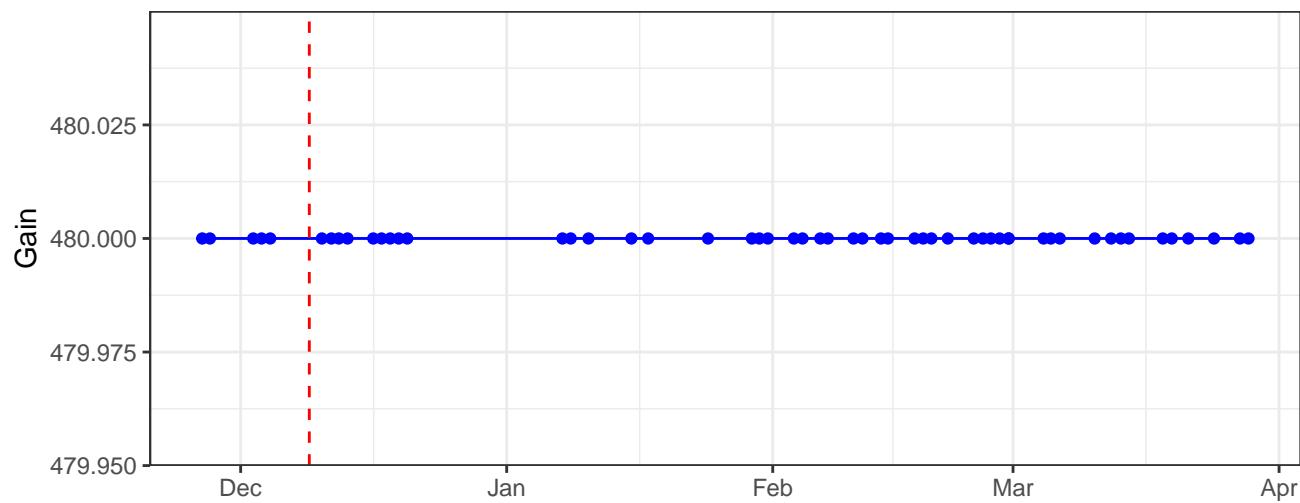


### B695–A\_Gain

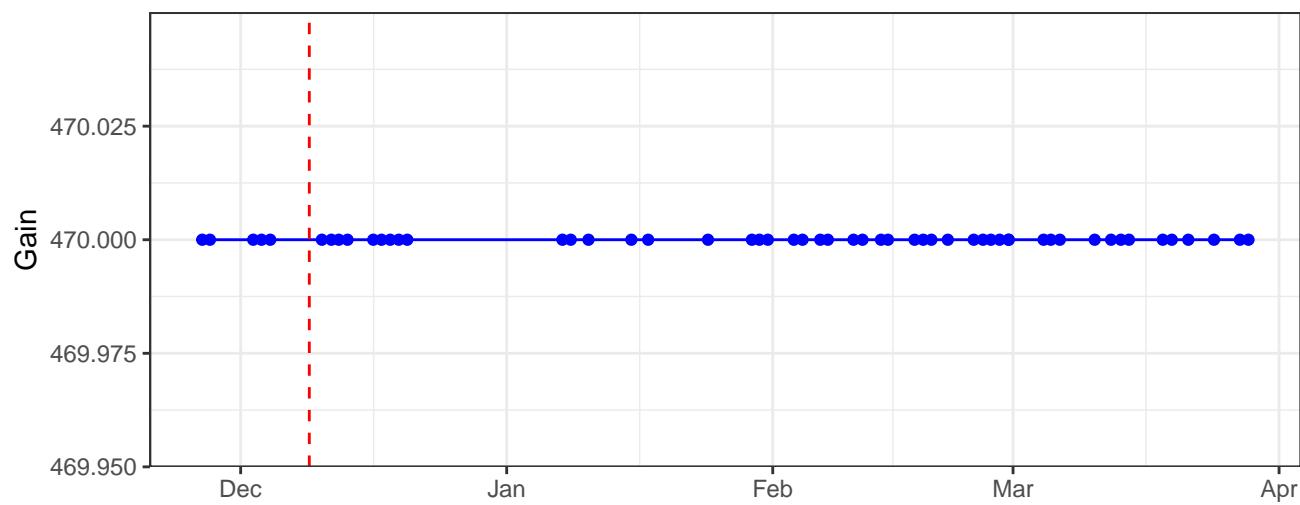


### B780–A\_Gain

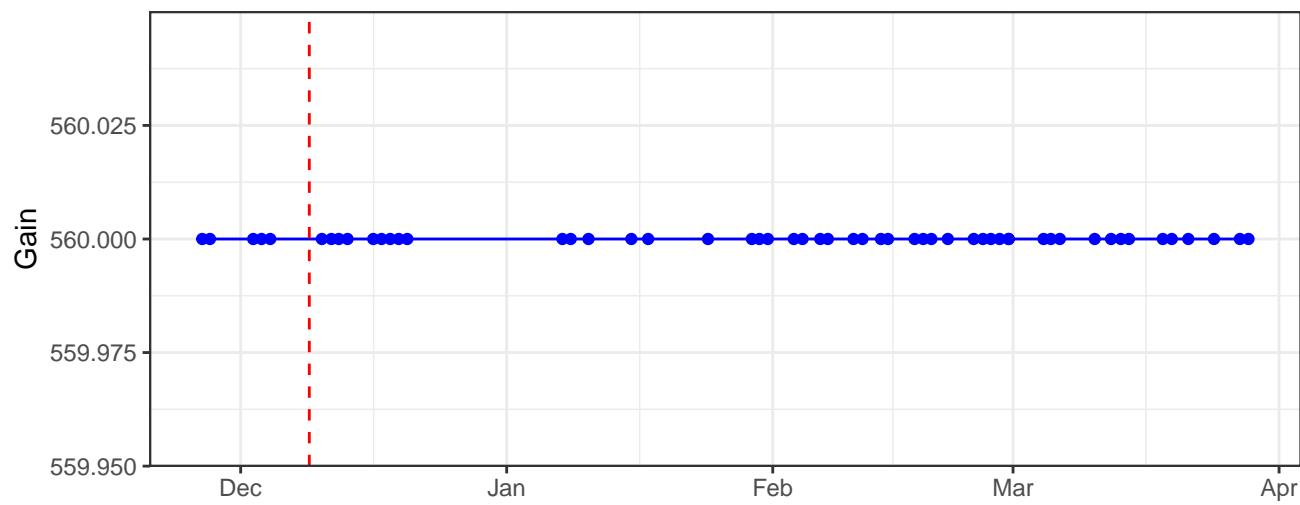


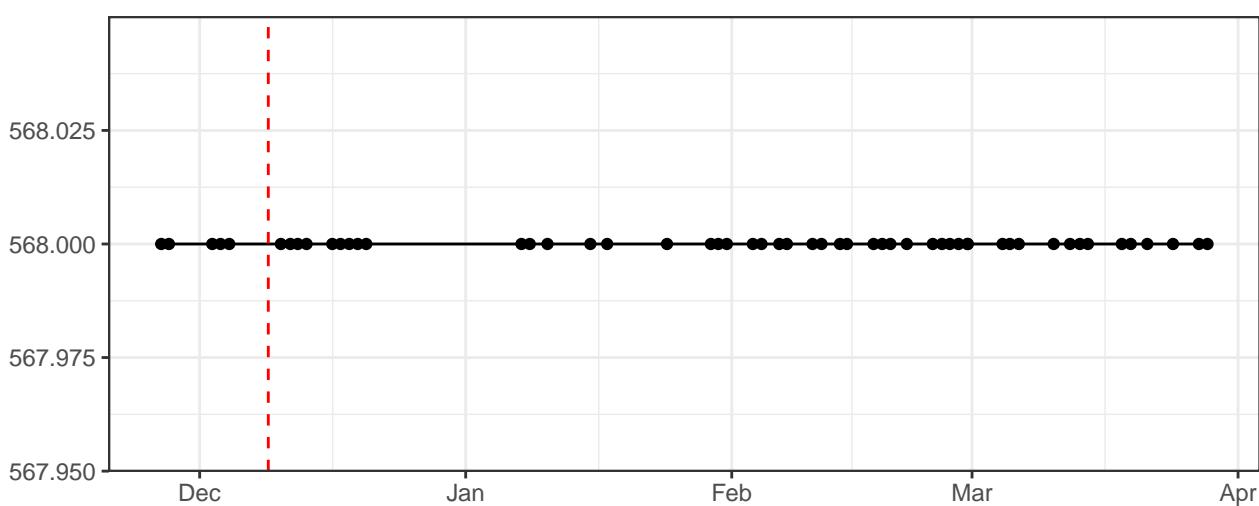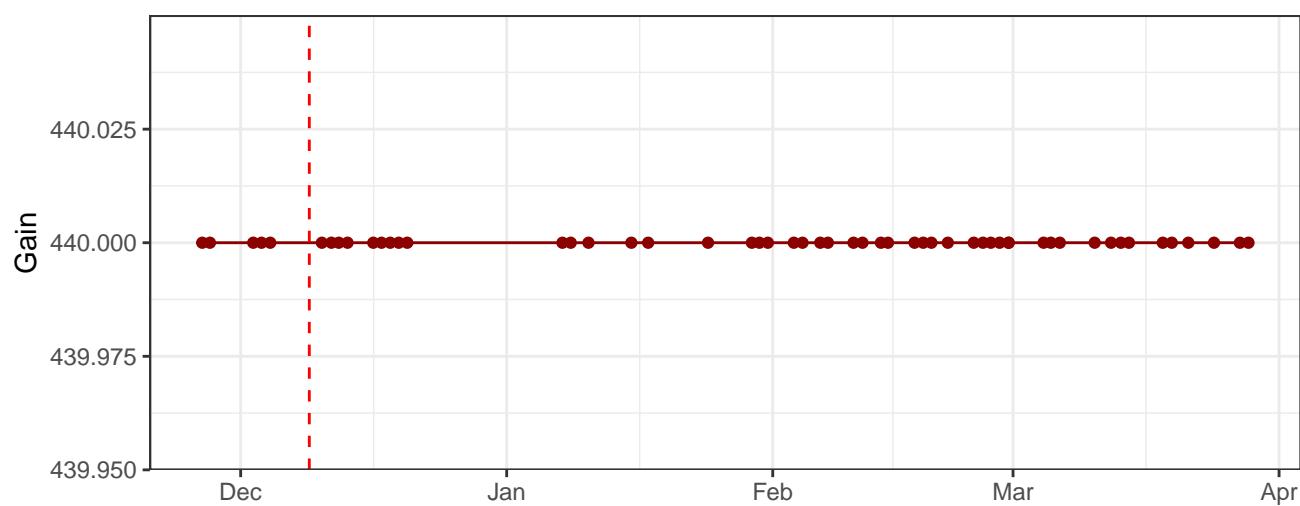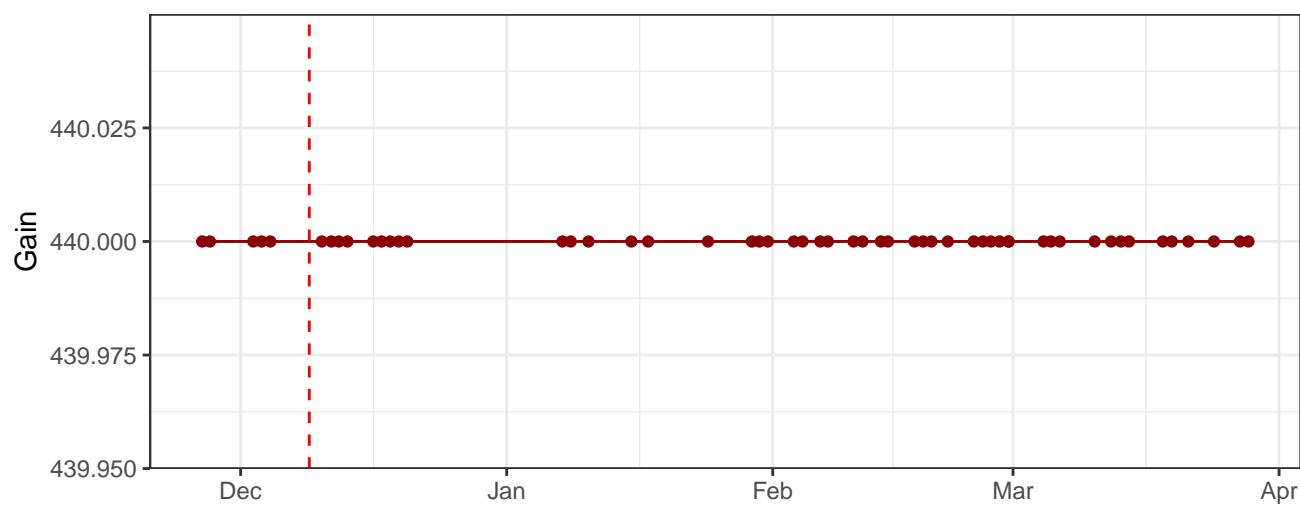


### SSC-A\_Gain

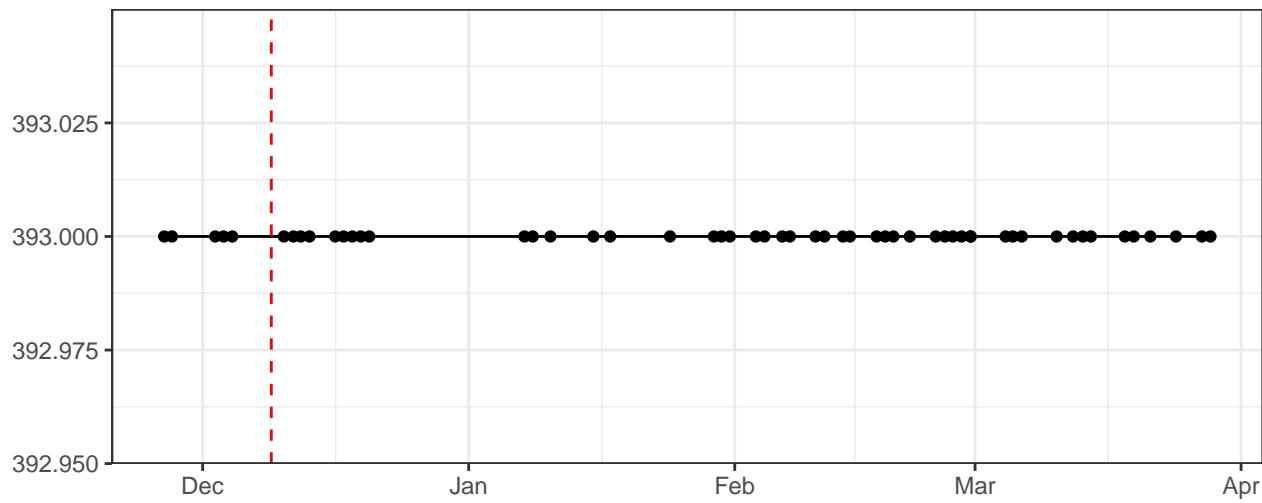


### Blue\_LaserDelay

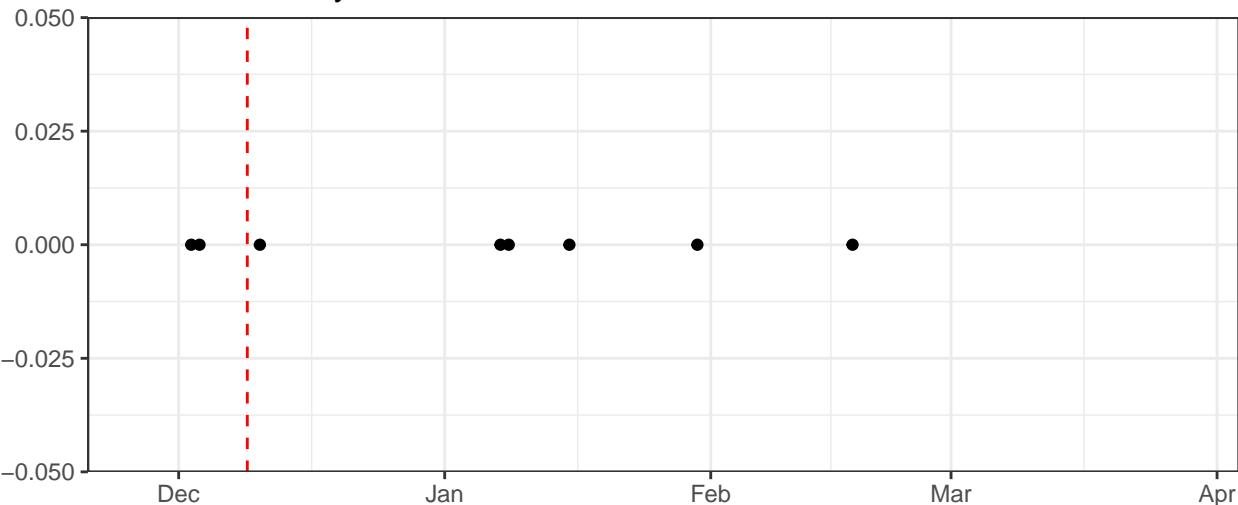


### Red\_LaserDelay

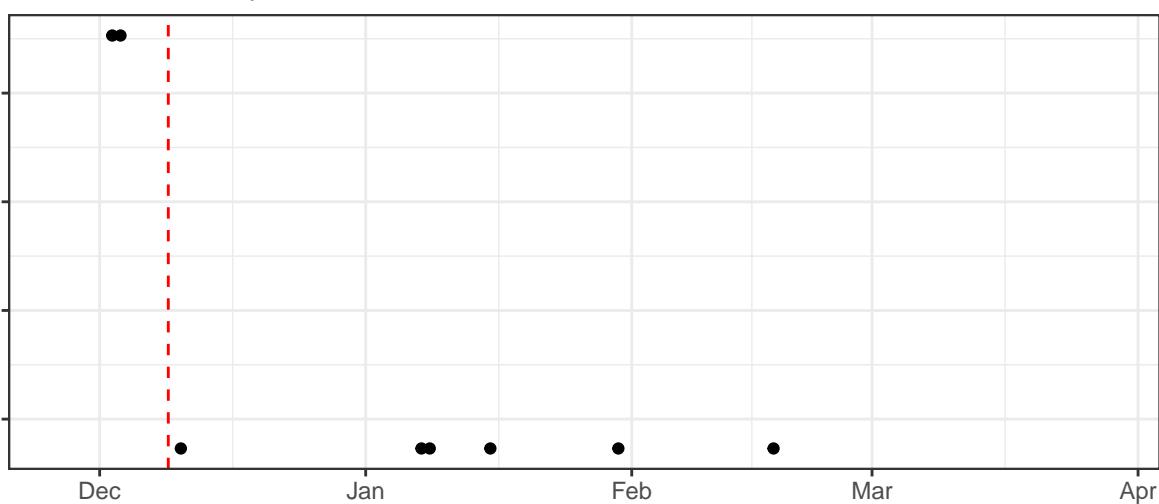


### Blue\_AreaScalingFactor

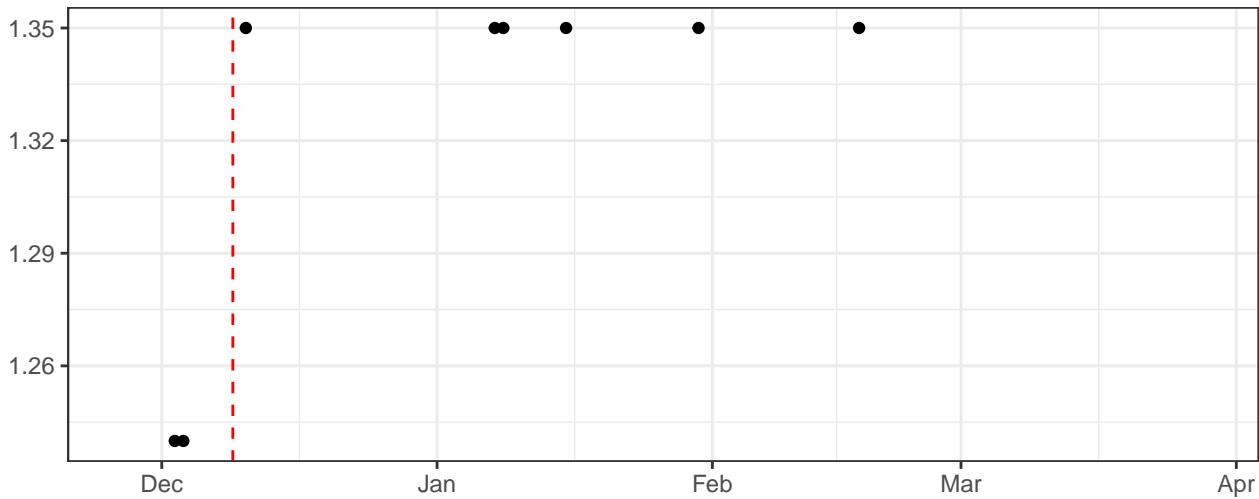


### Red\_AreaScalingFactor

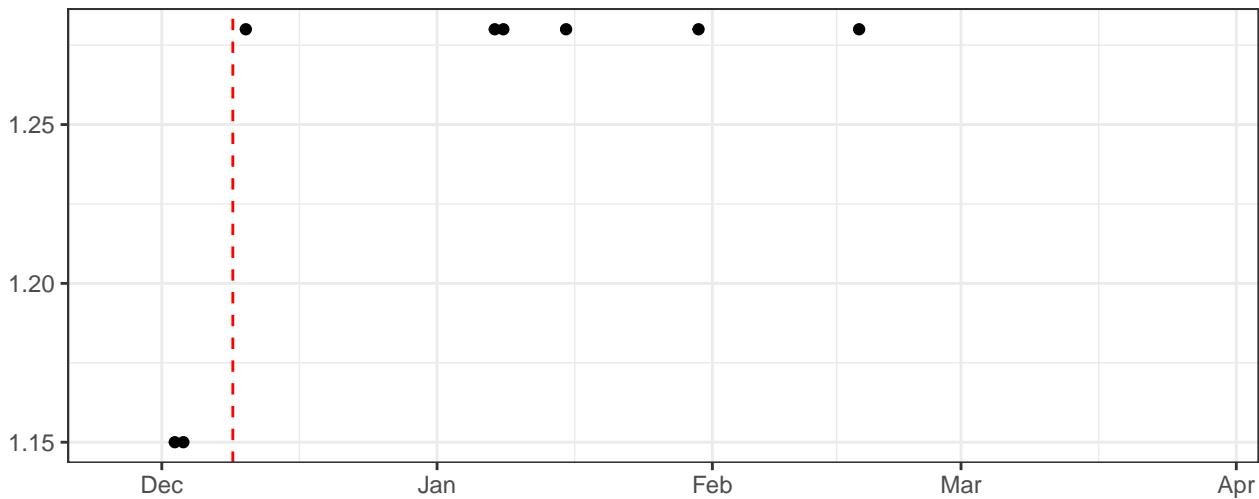


### B530-A-% rCV

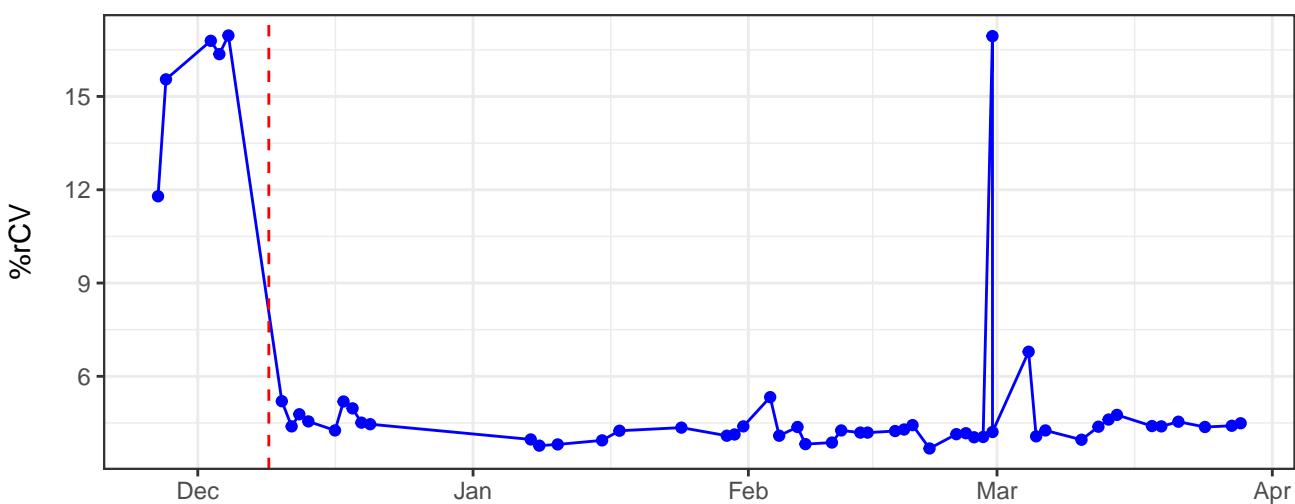


### B585-A-% rCV

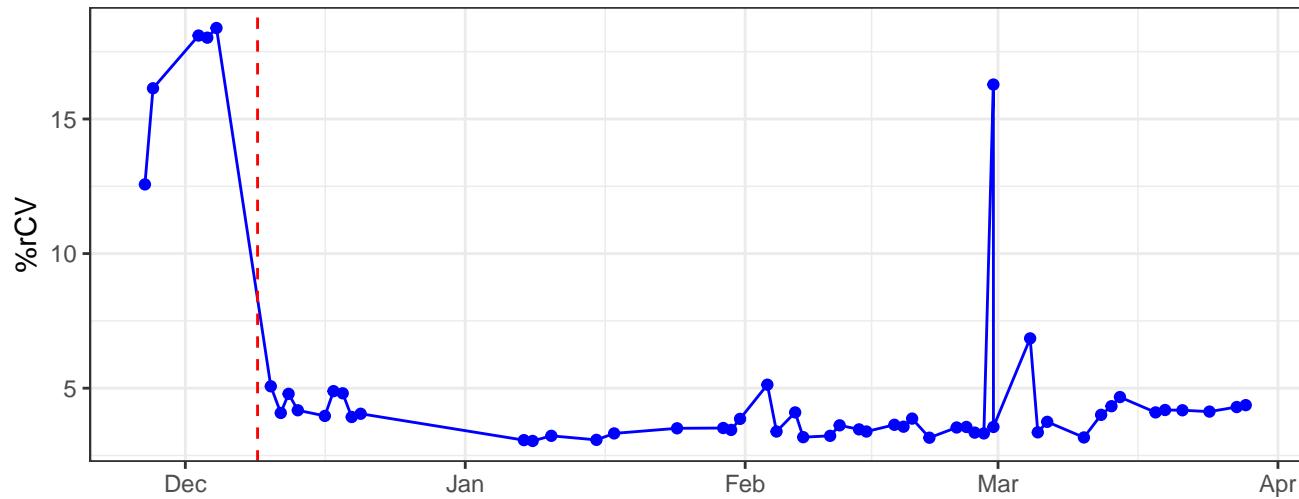


### B695-A-% rCV

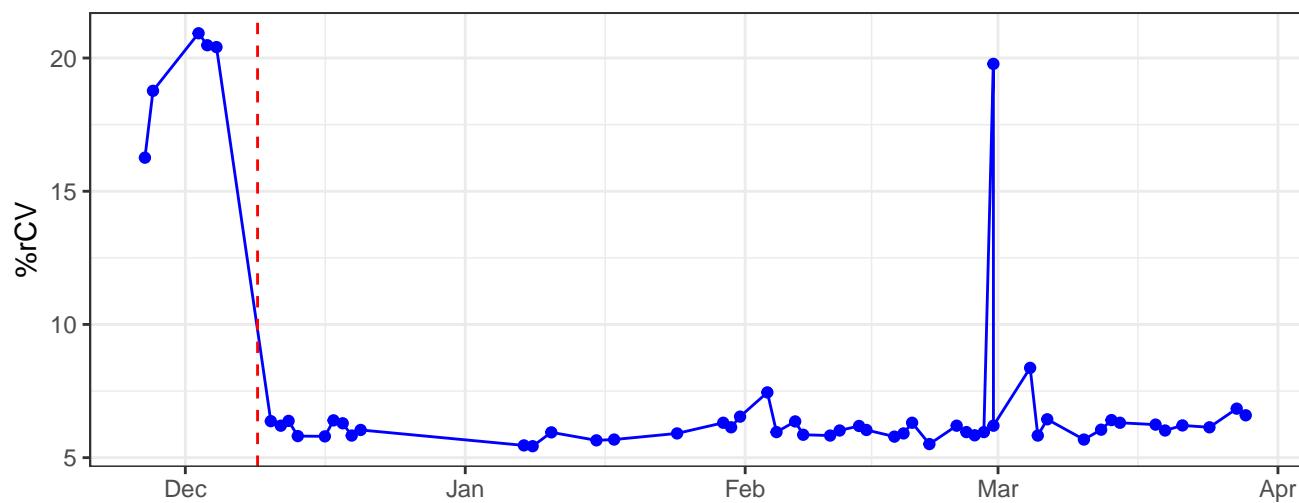


### B780-A-% rCV

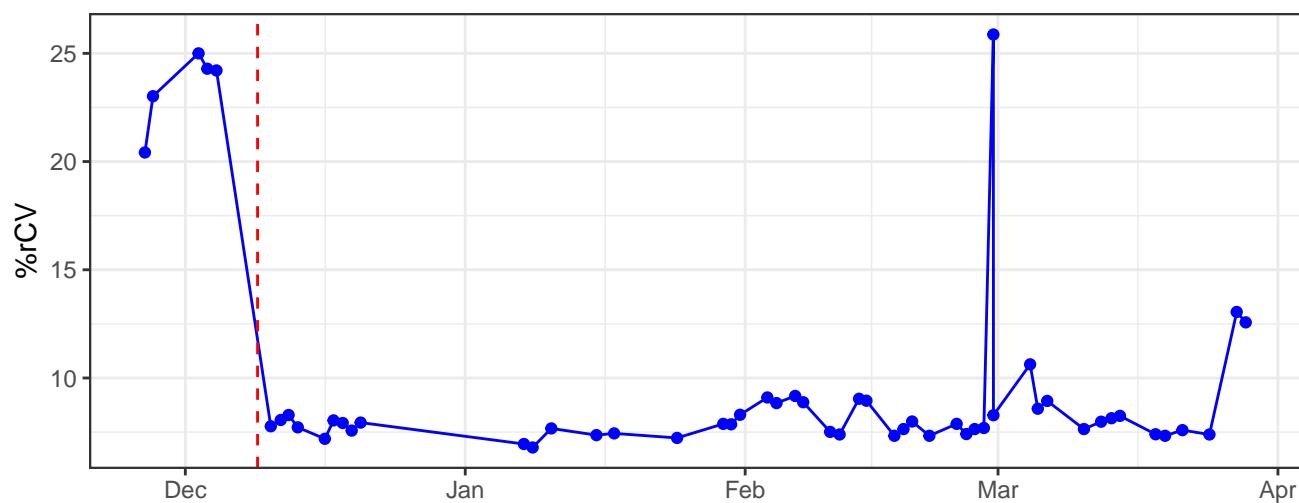


R670-A-% rCV

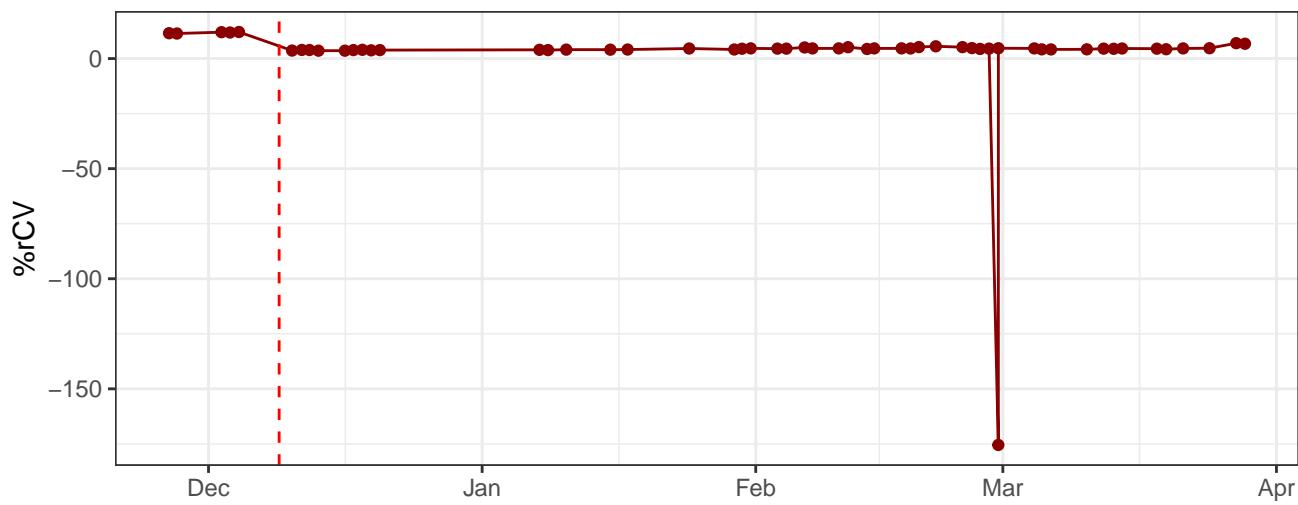


R780-A-% rCV

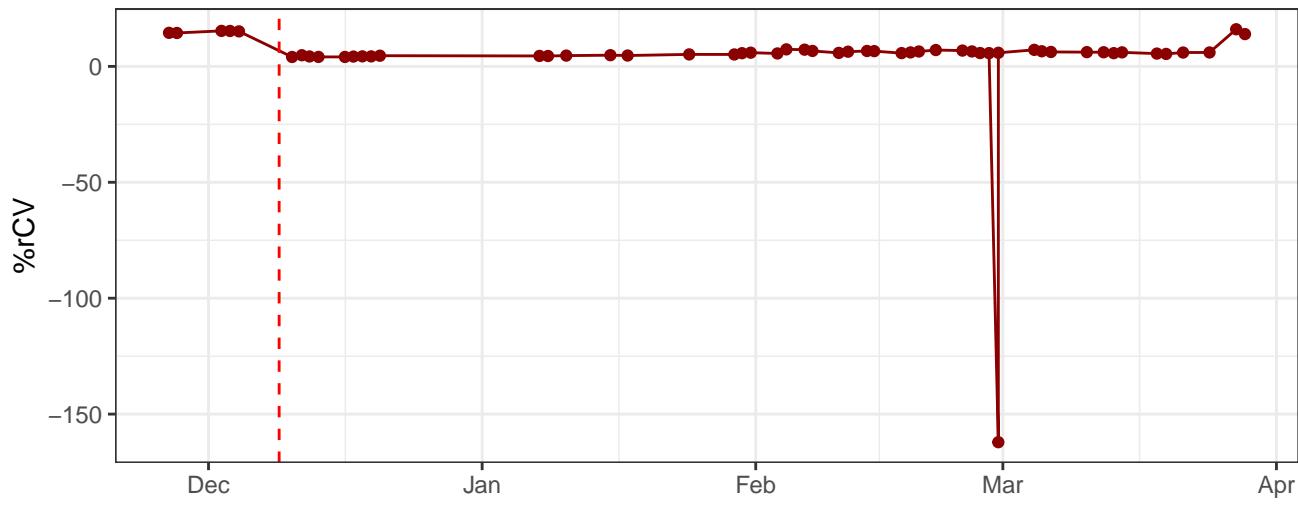


FSC-A-% rCV

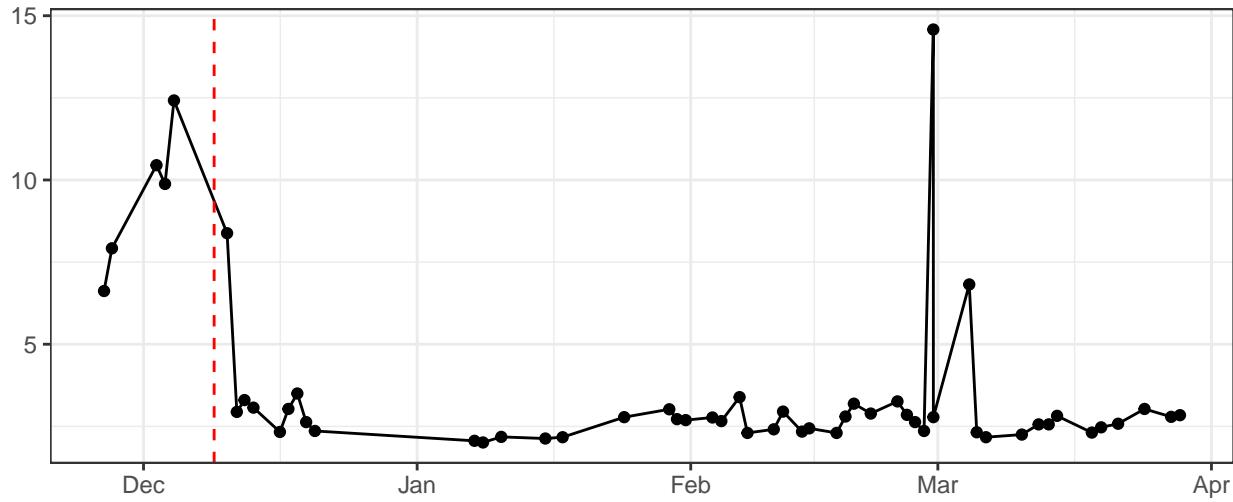


FSC-H-% rCV

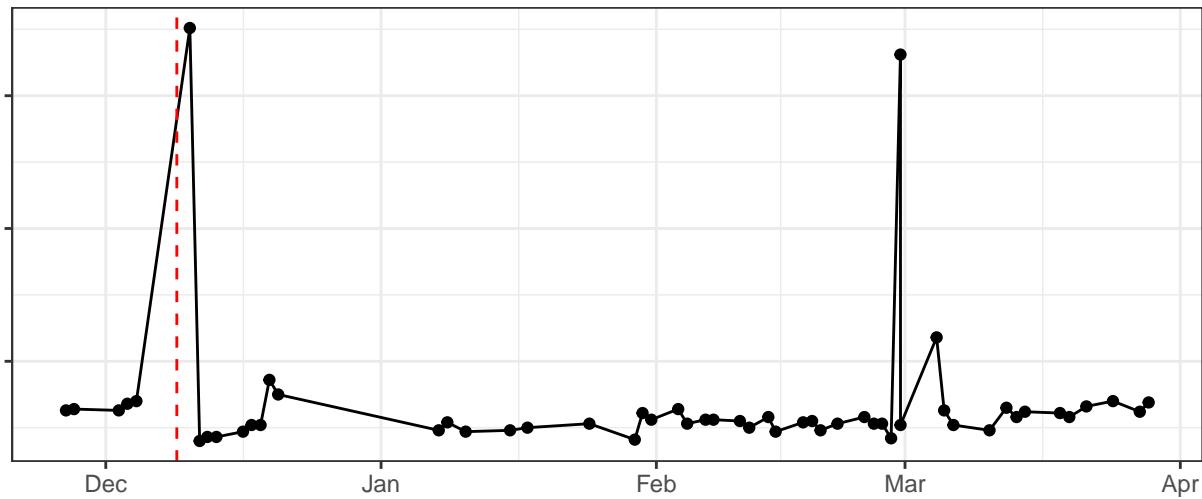

FSC-W-% rCV

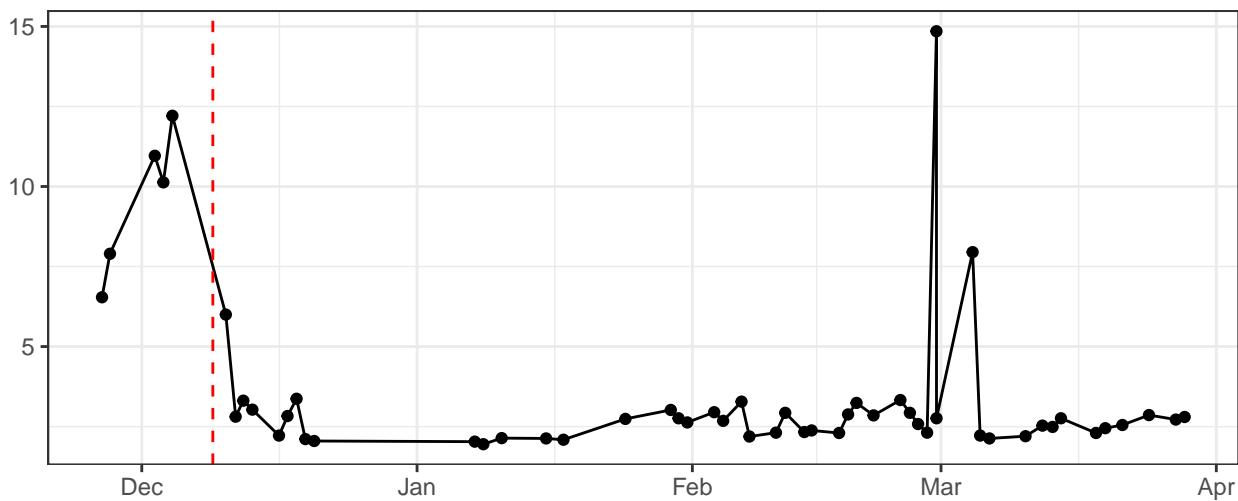

SSC-A-% rCV

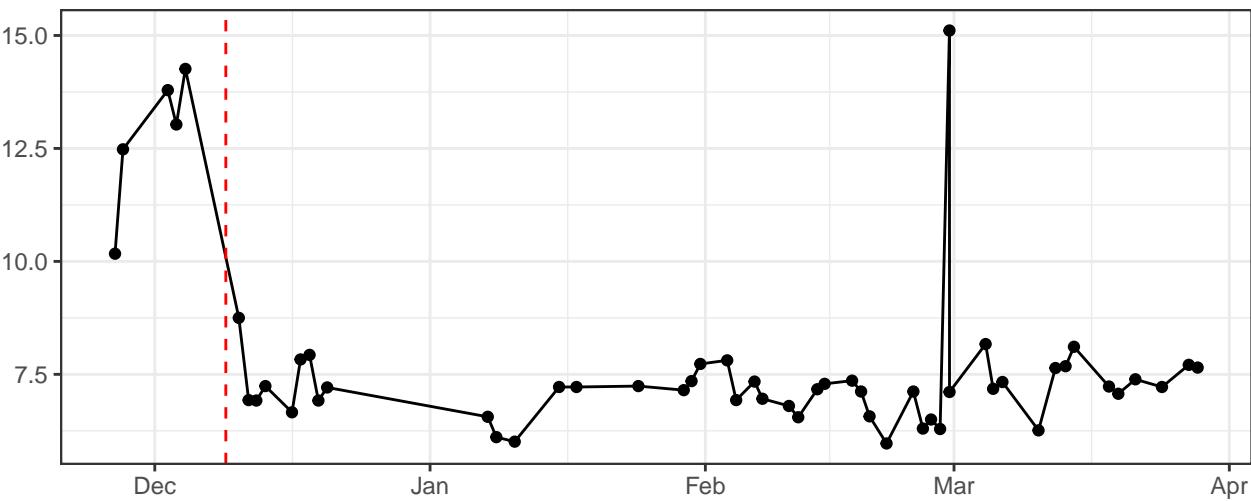

### SSC-H-% rCV

