




B530-A

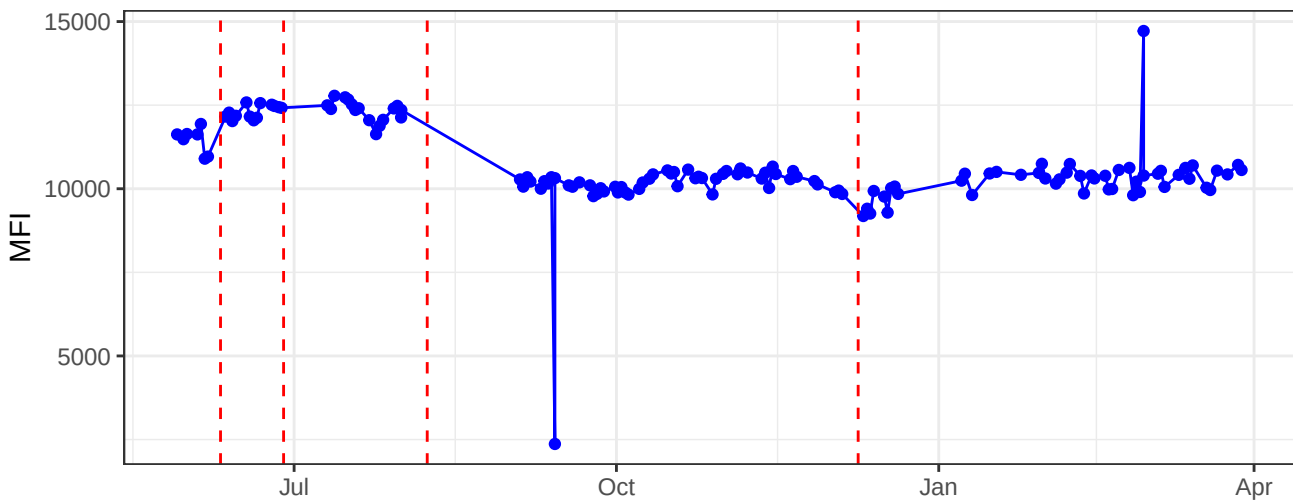


B585-A

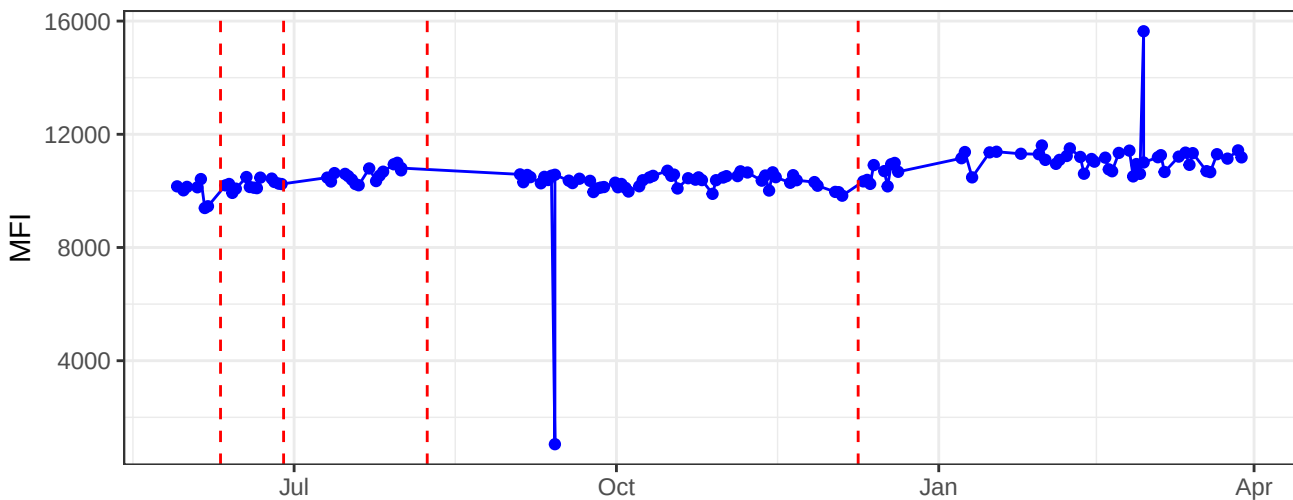


B695-A

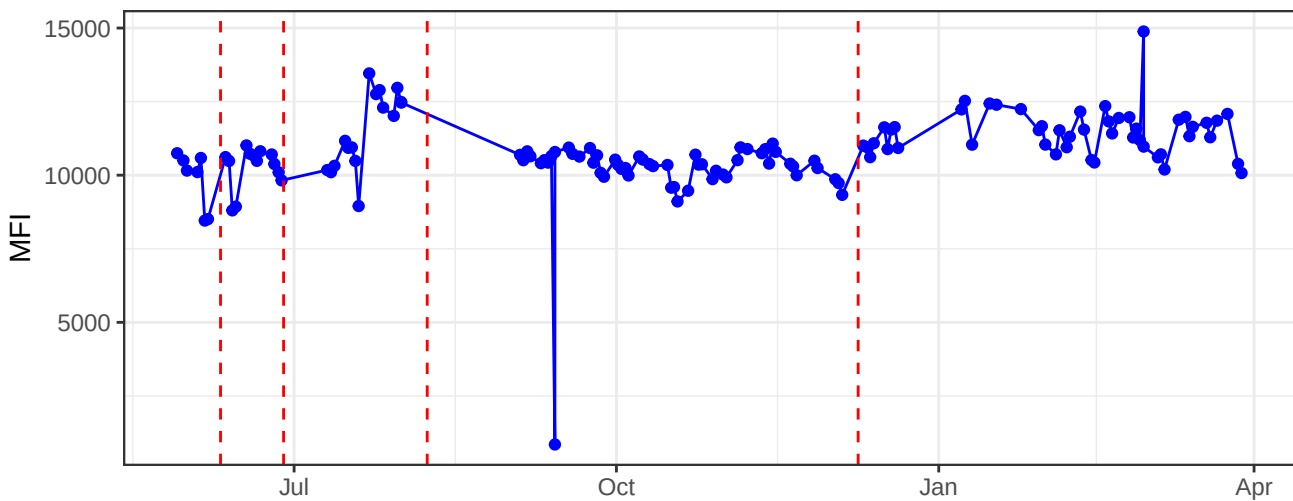


B780-A

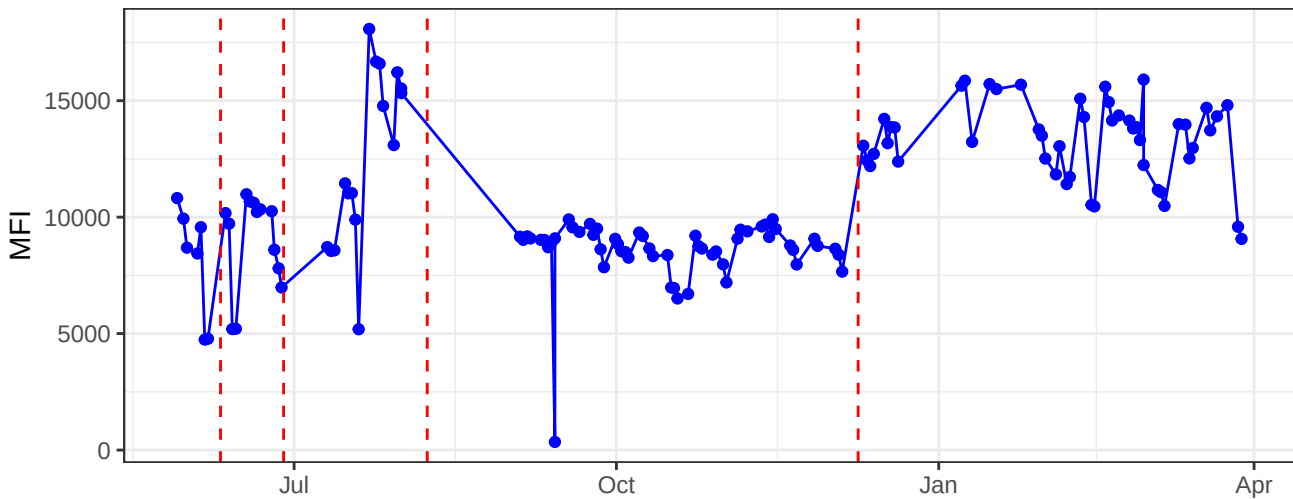


R670-A

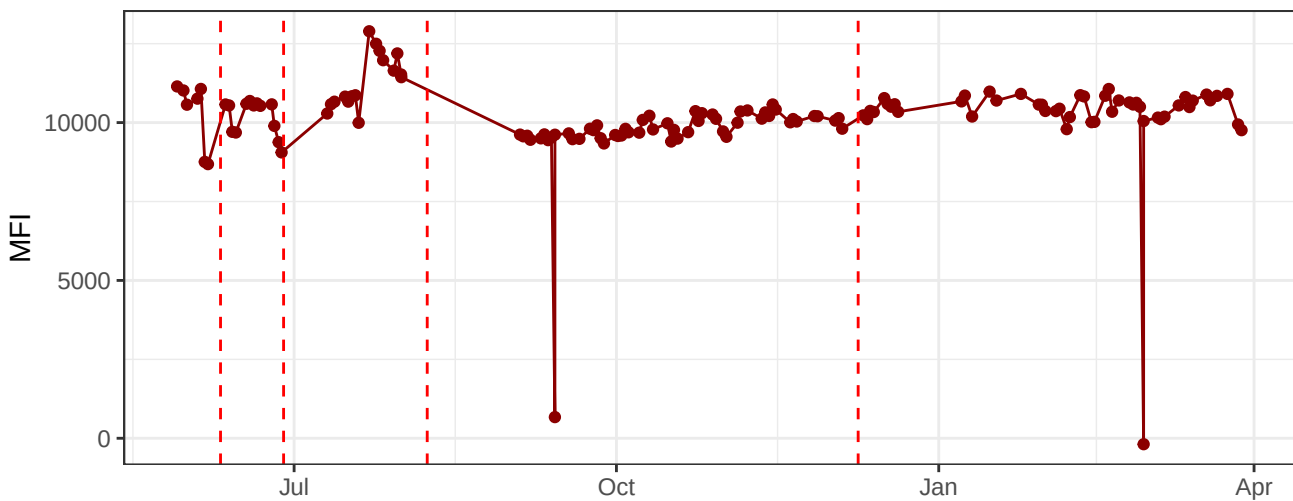


R780-A

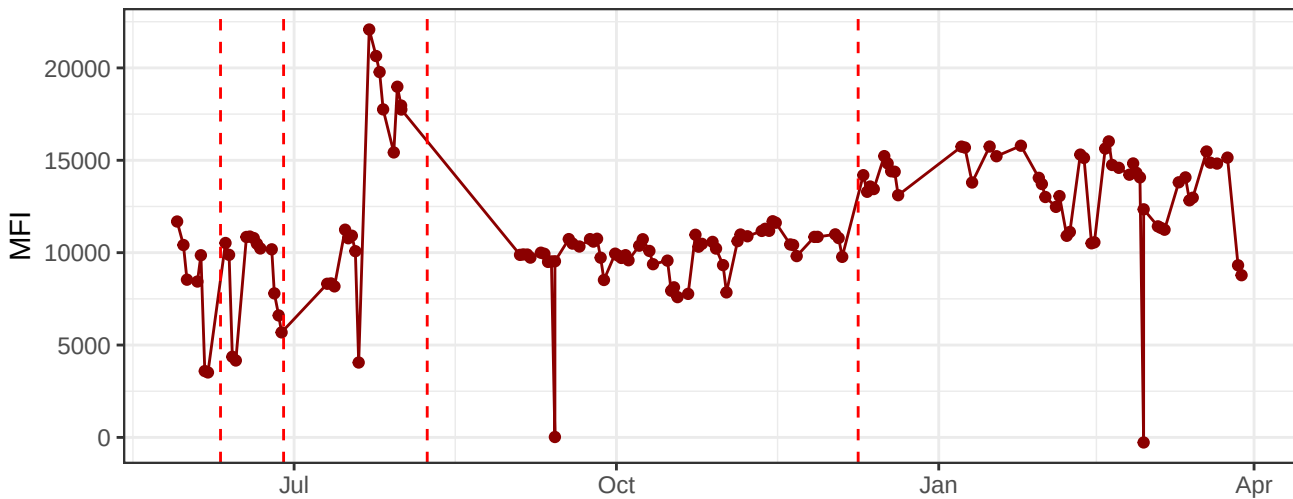


Blue\_LaserDelay

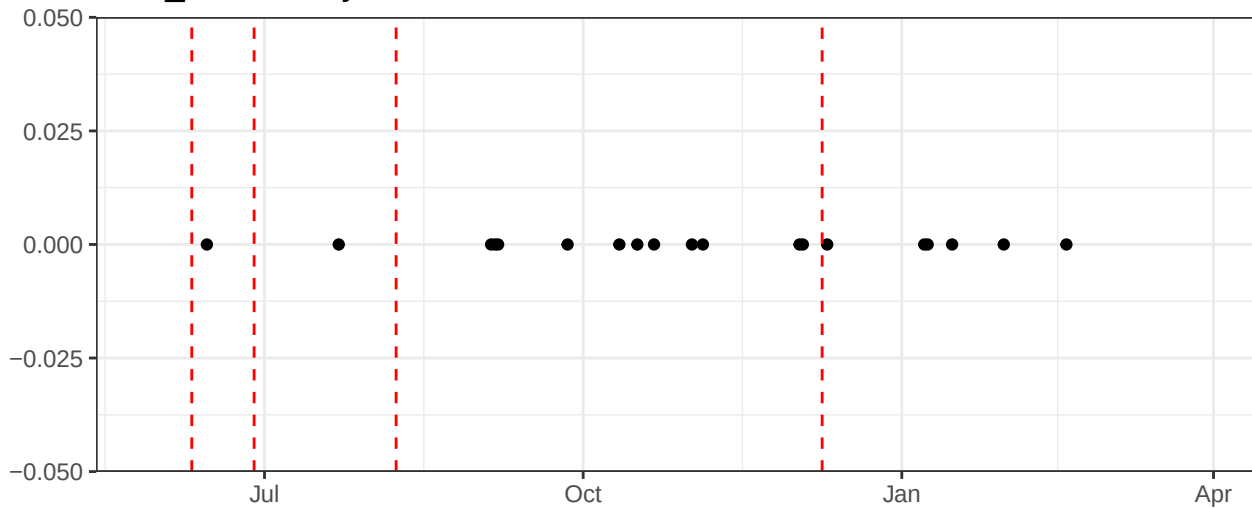


Red\_LaserDelay

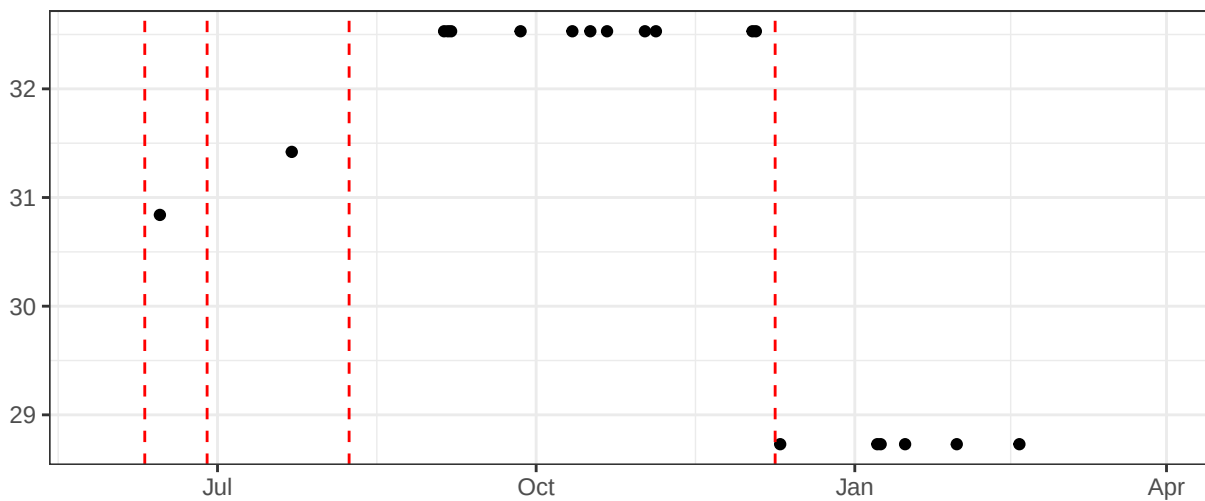


FSC-A

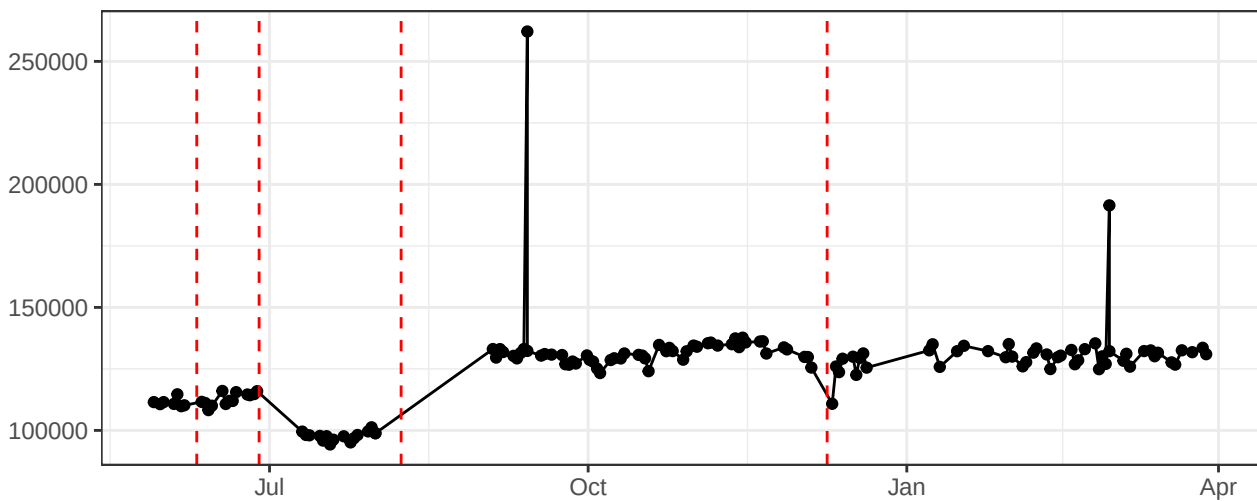


# FSC-H

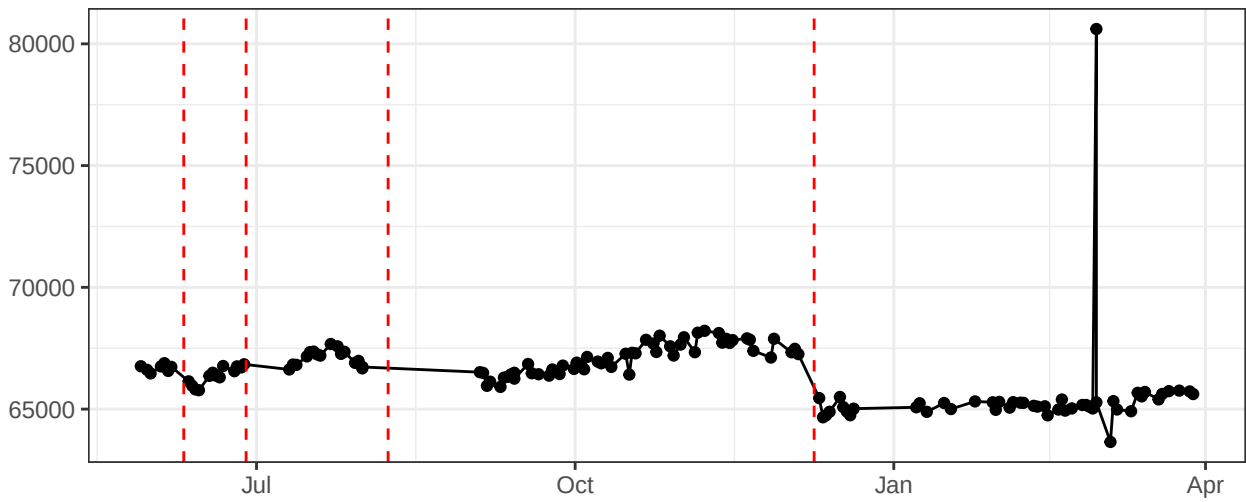


# FSC-W

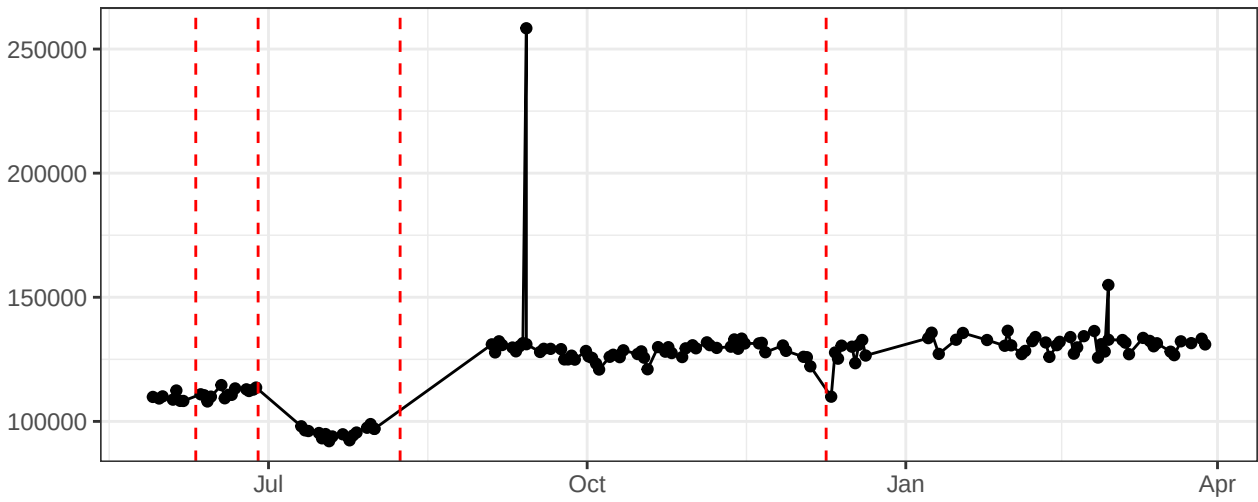


# SSC-A

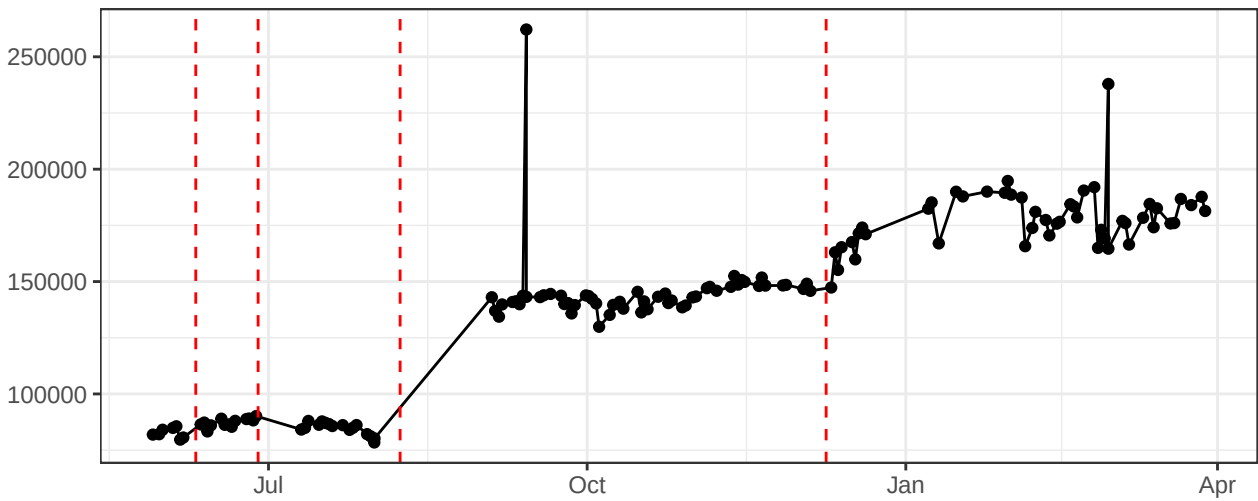


SSC-H

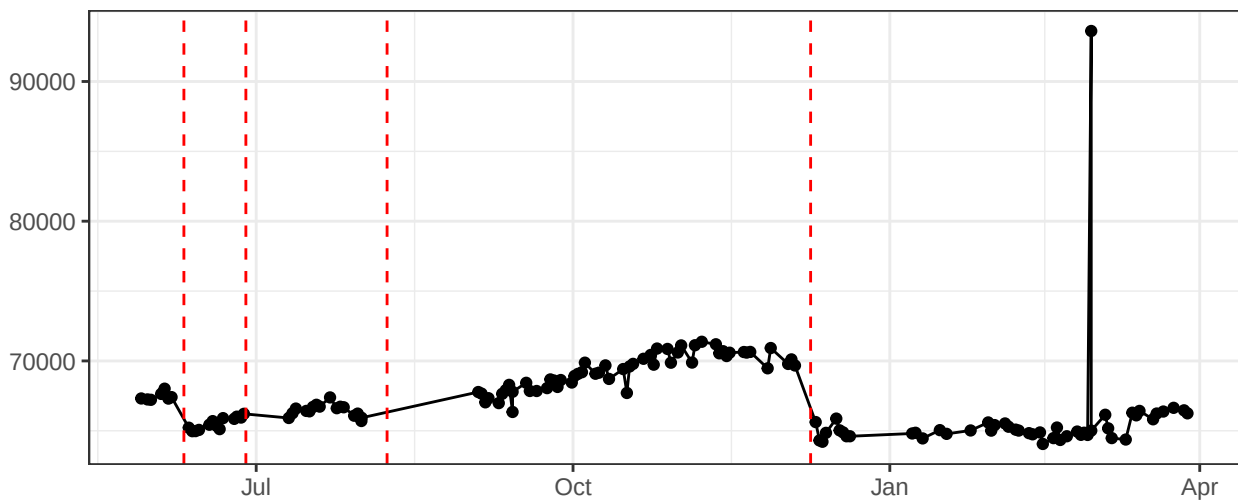


SSC-W

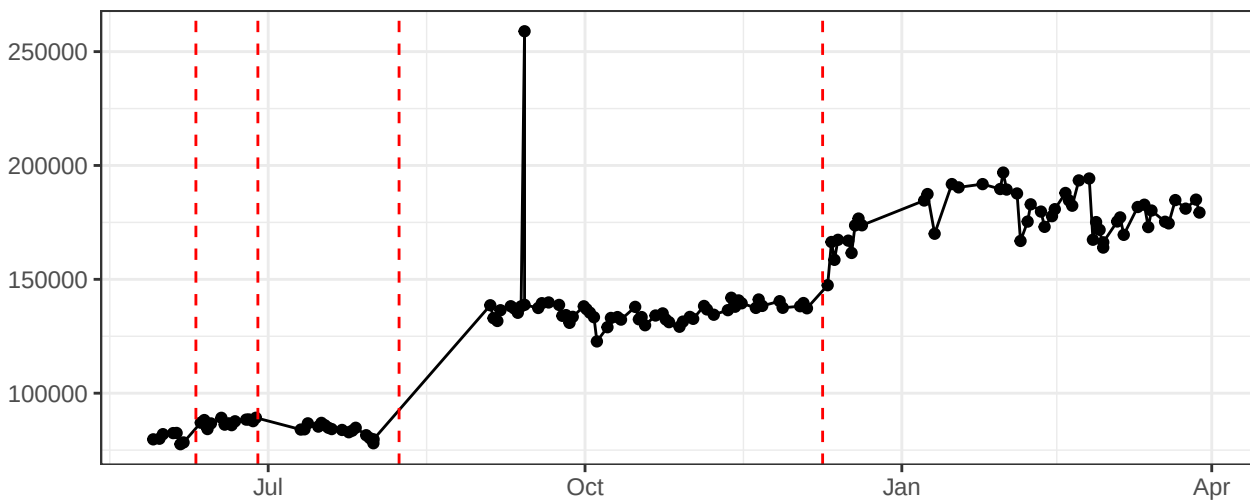


B530-A\_Gain

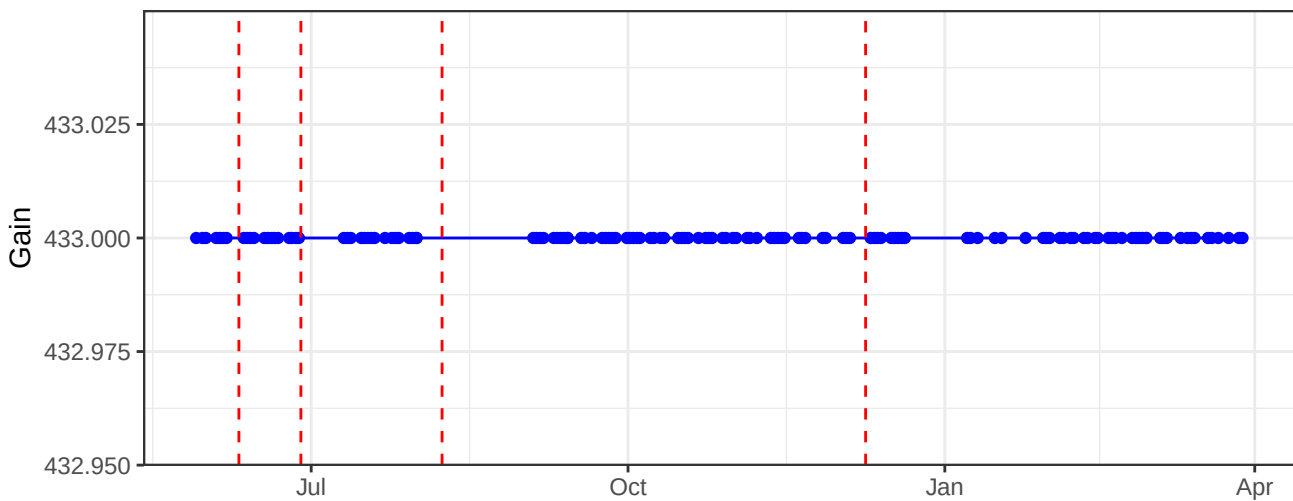


B585-A\_Gain

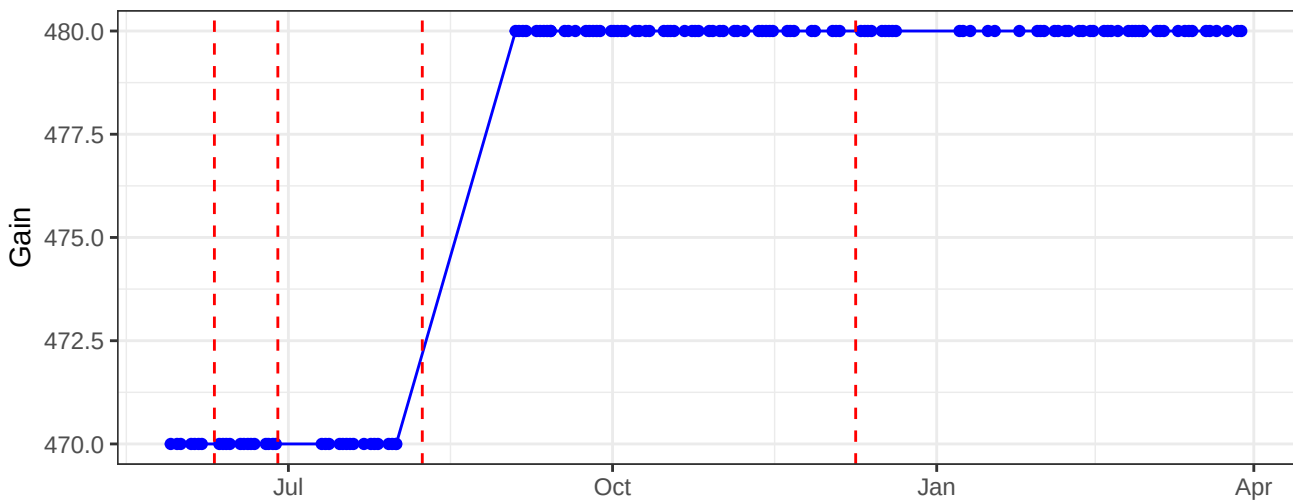


B695-A\_Gain

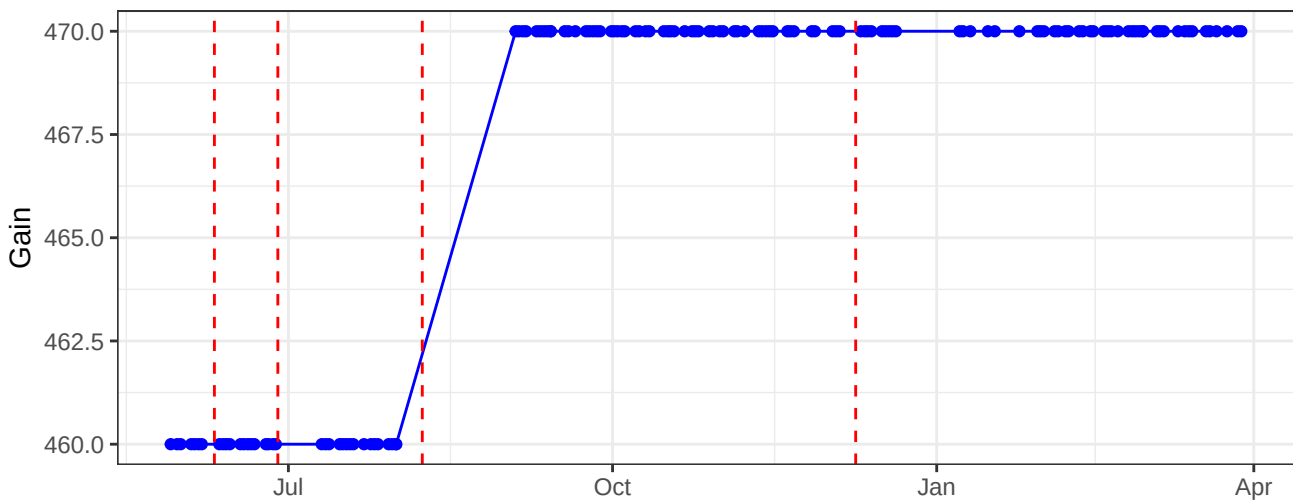


B780-A\_Gain

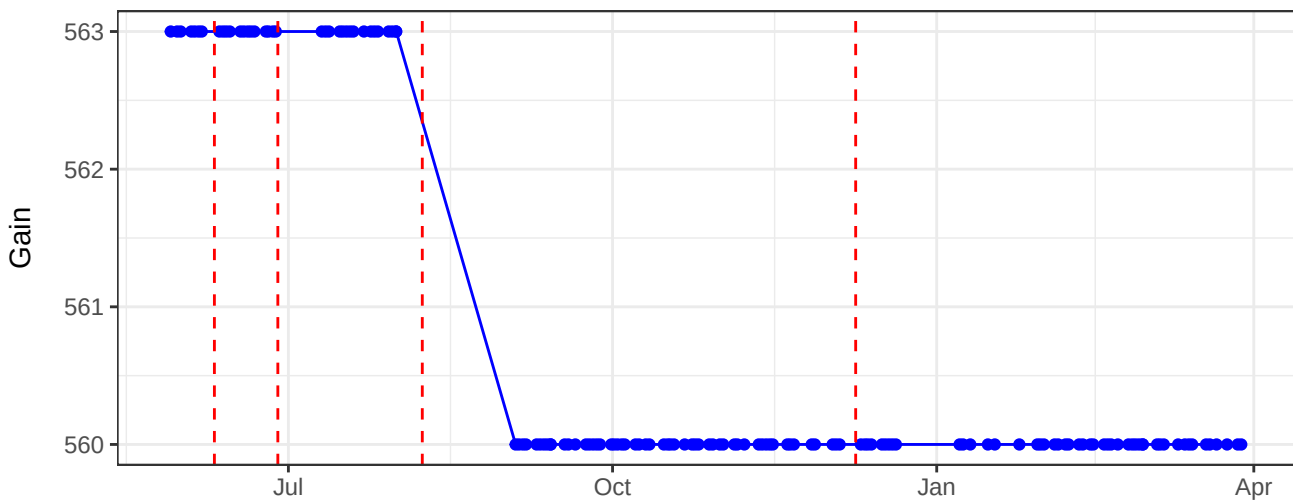


# R670-A\_Gain

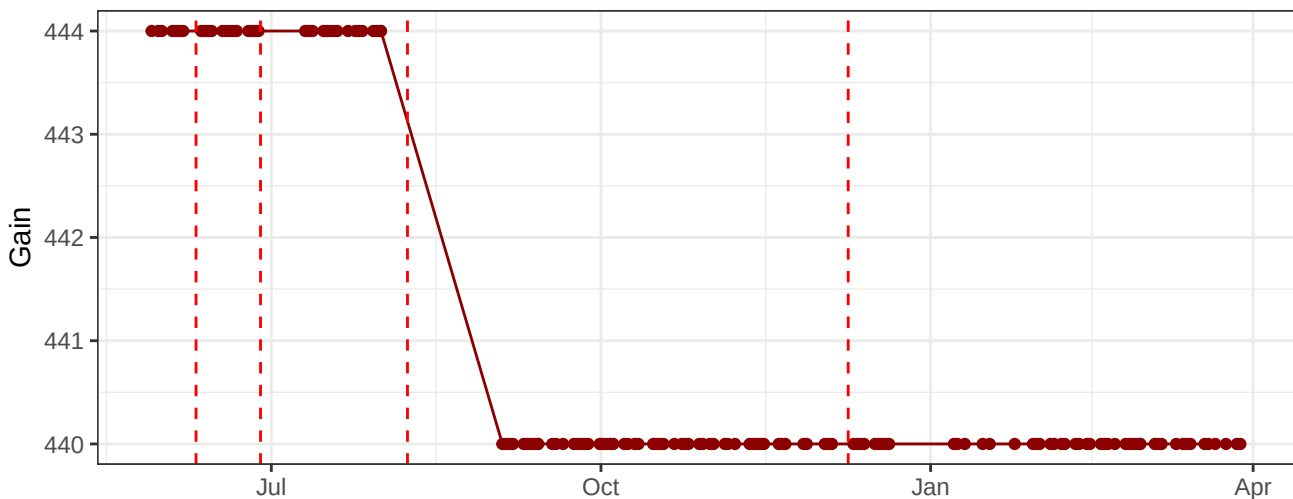


# R780-A\_Gain

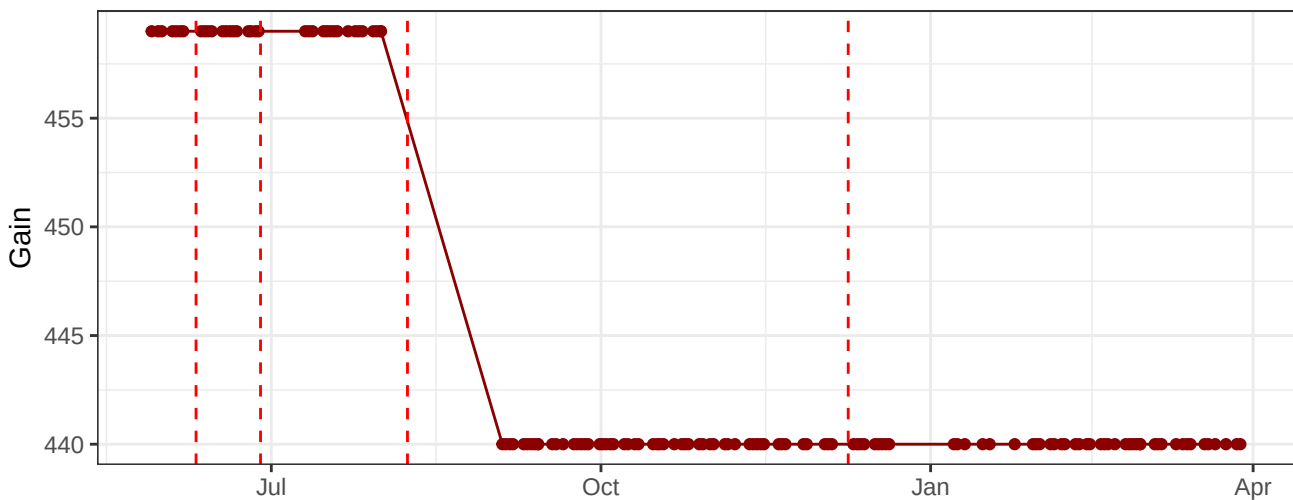


# FSC-A\_Gain

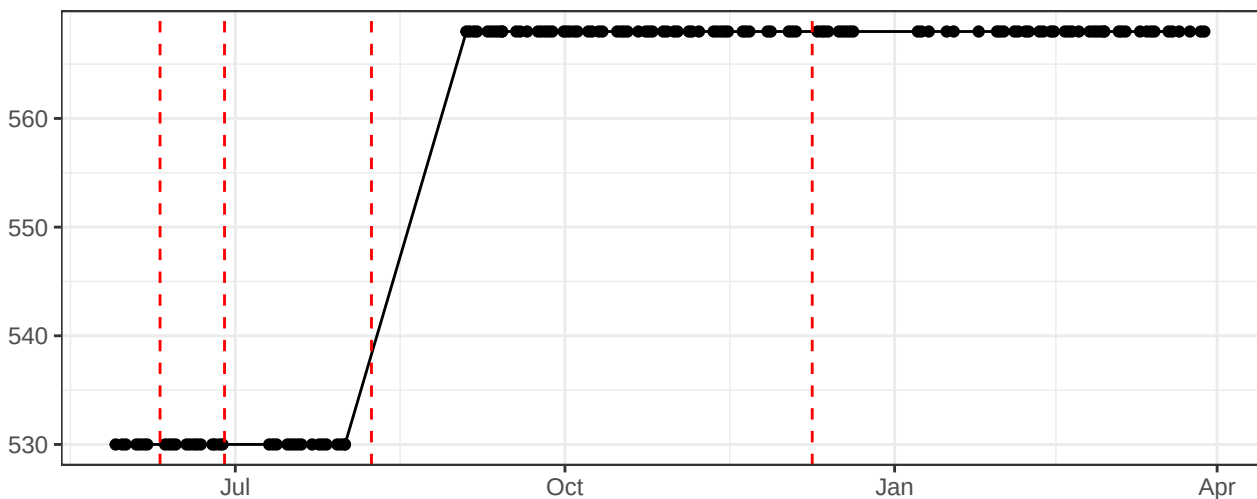


SSC-A\_Gain

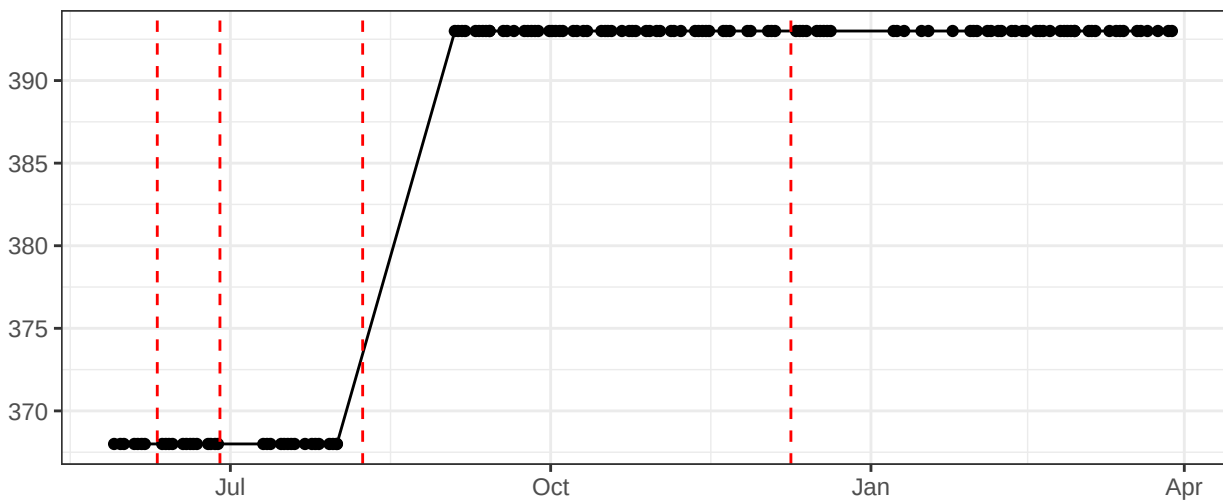


Blue\_LaserDelay

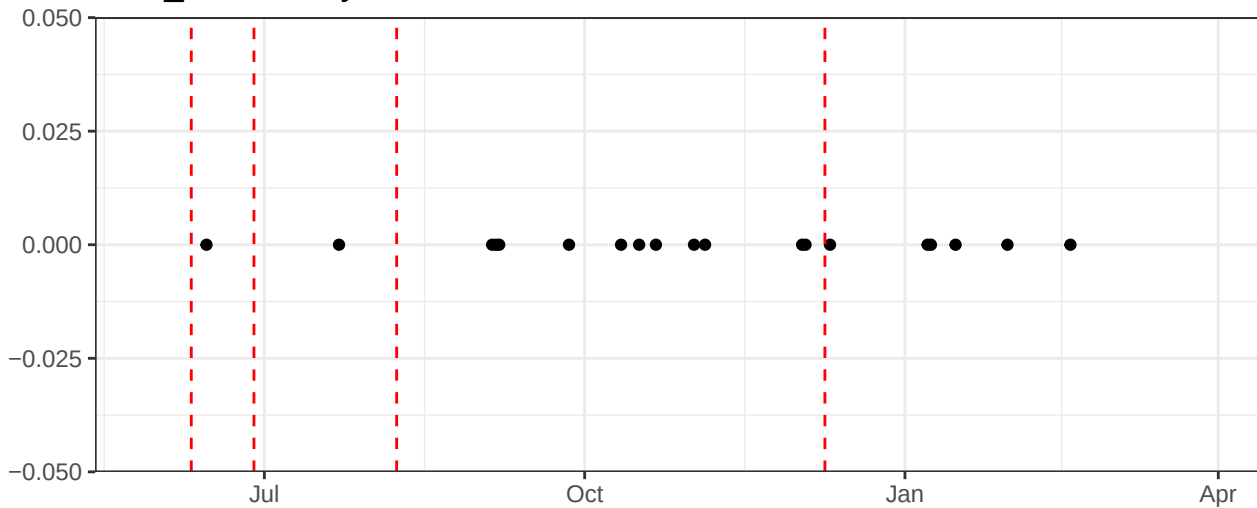


Red\_LaserDelay

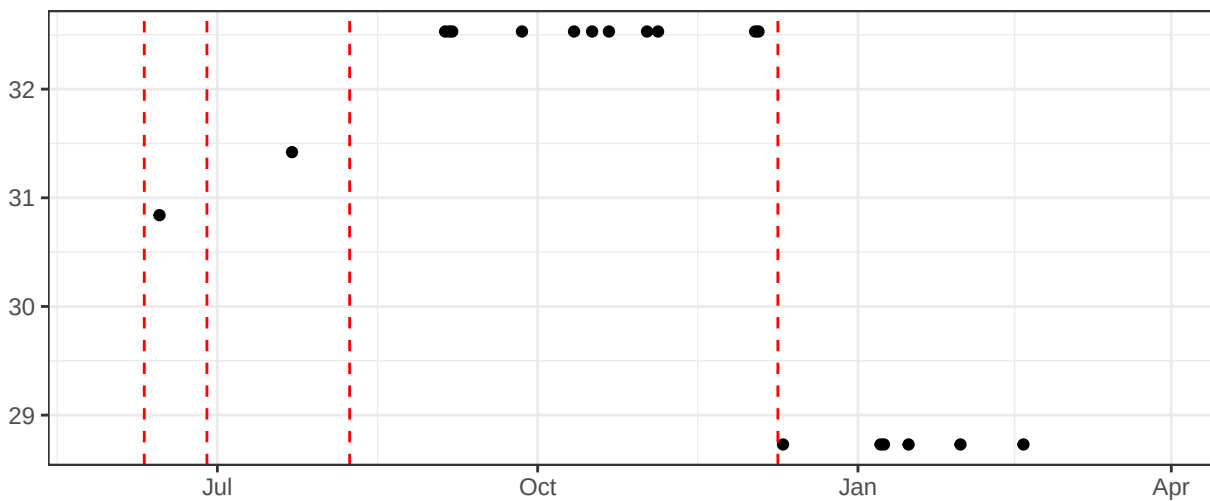


# Blue\_AreaScalingFactor

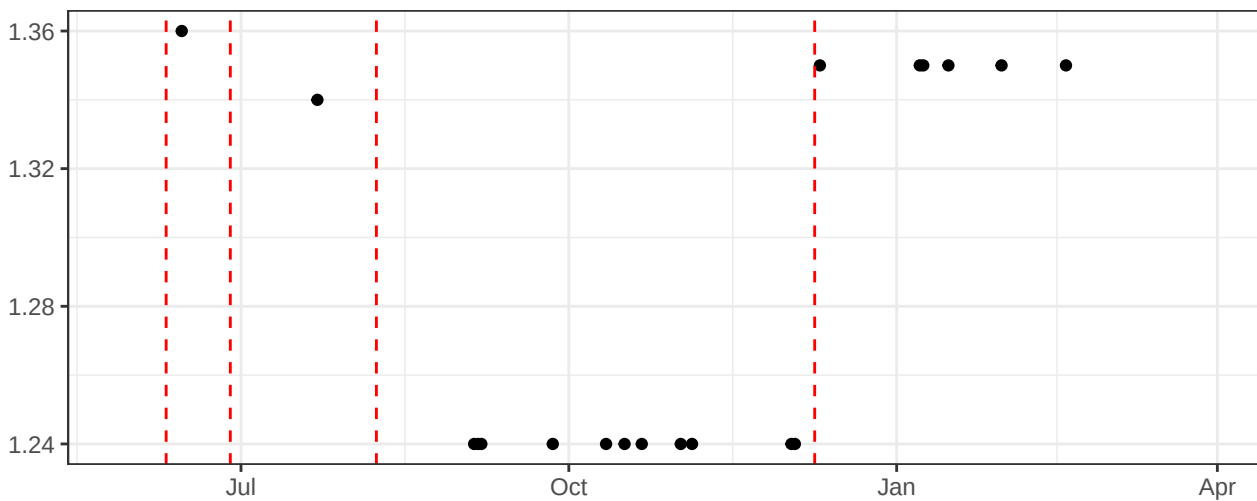


# Red\_AreaScalingFactor

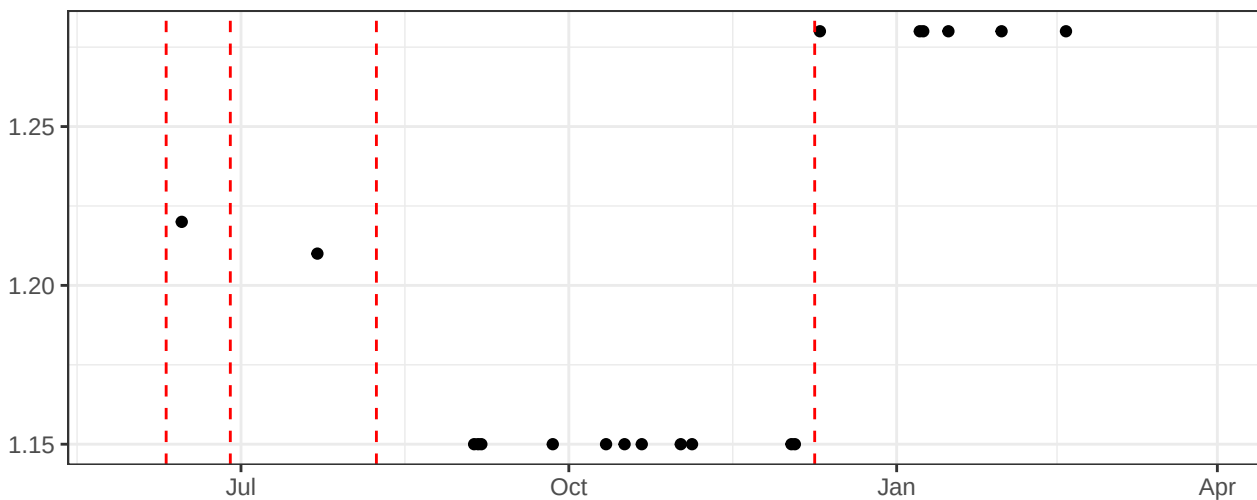


# B530-A-% rCV

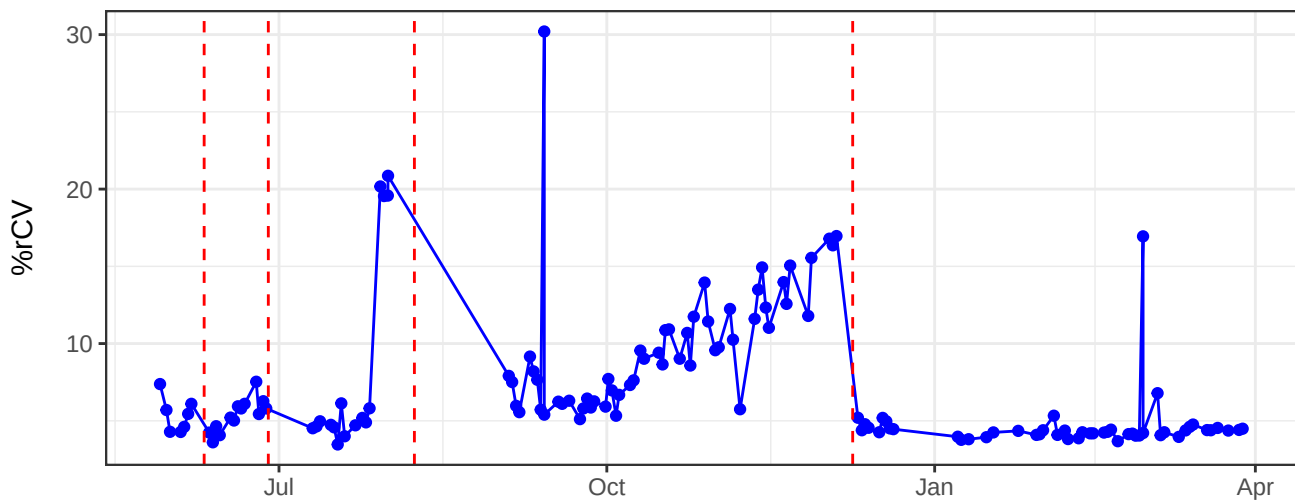


B585-A-% rCV

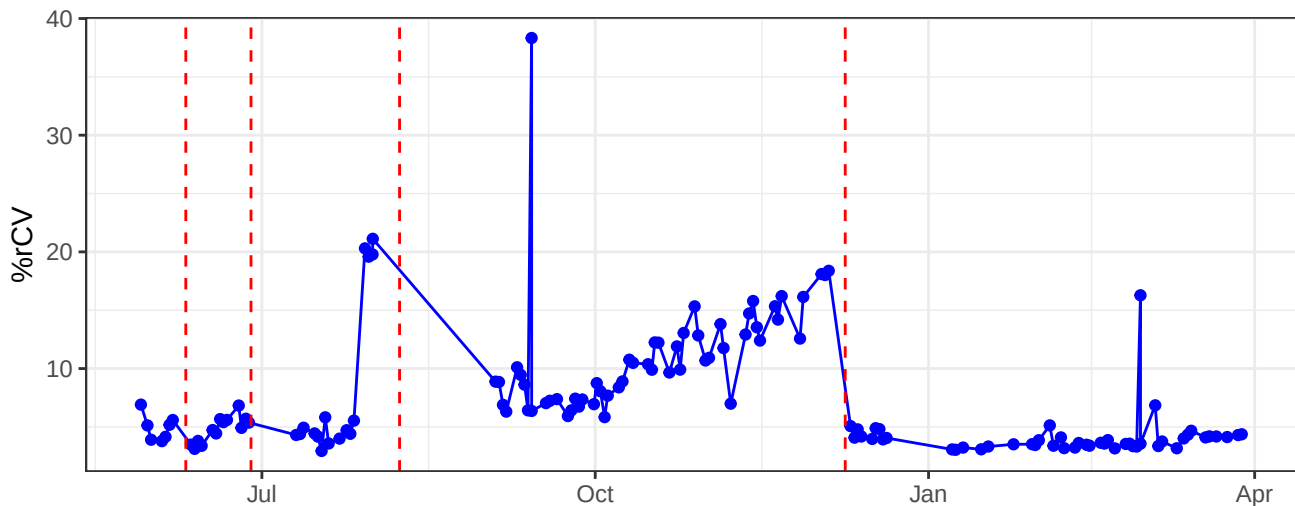


B695-A-% rCV

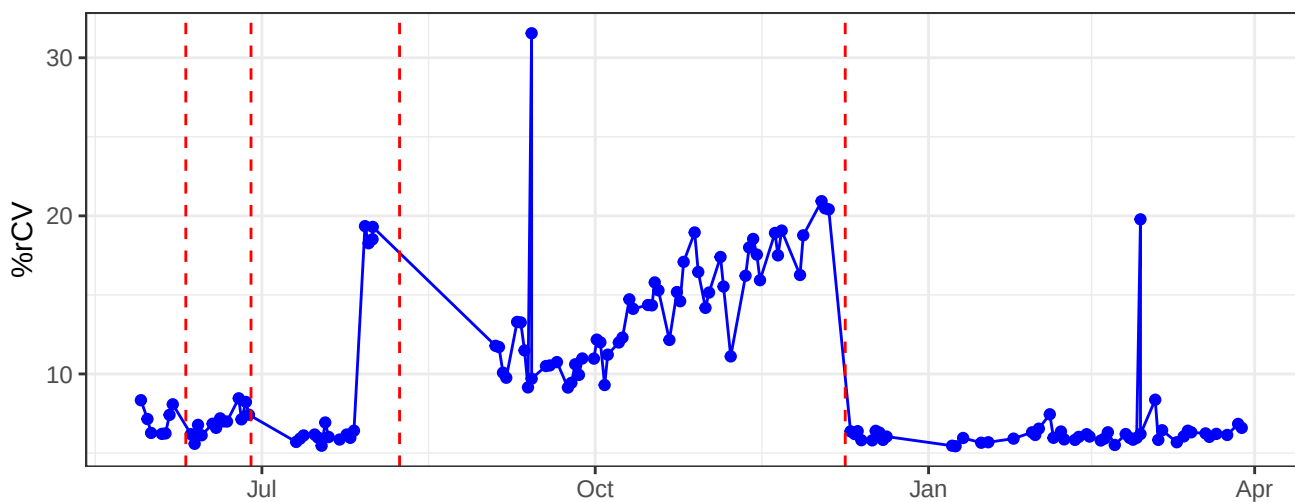


B780-A-% rCV

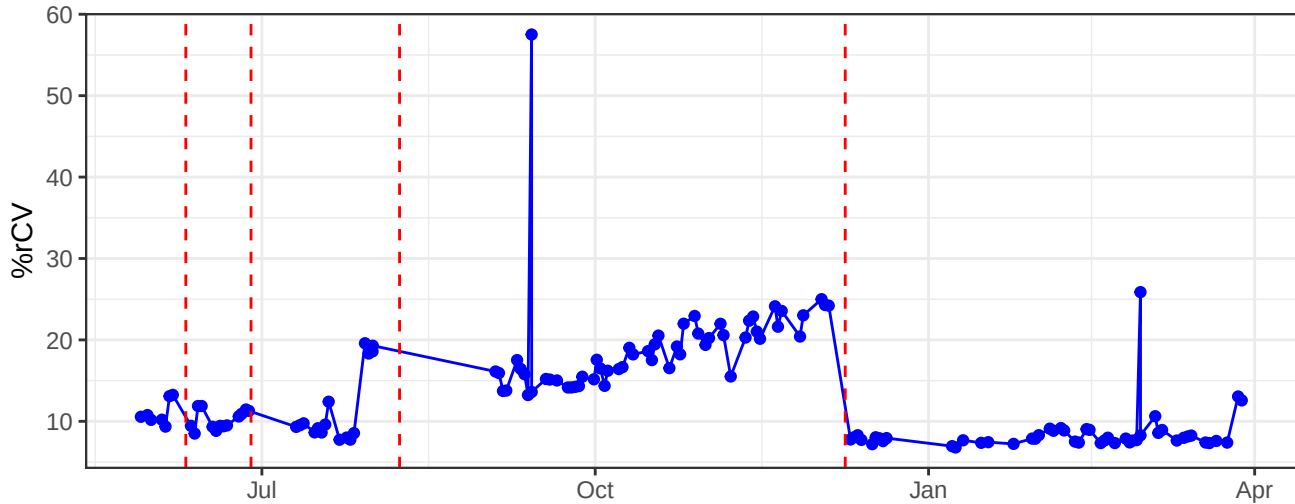


### R670-A-% rCV

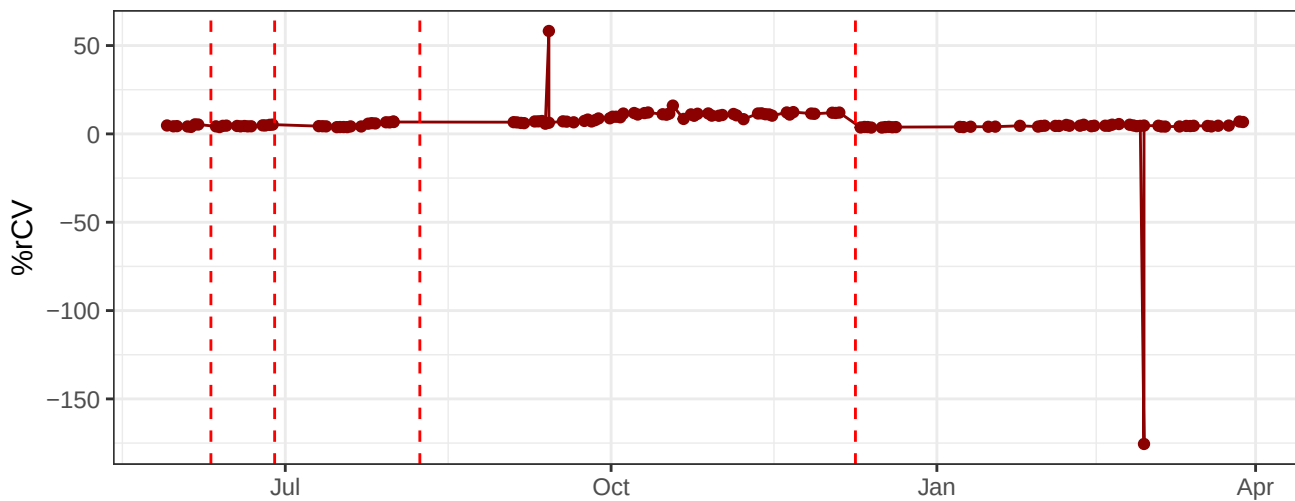


### R780-A-% rCV

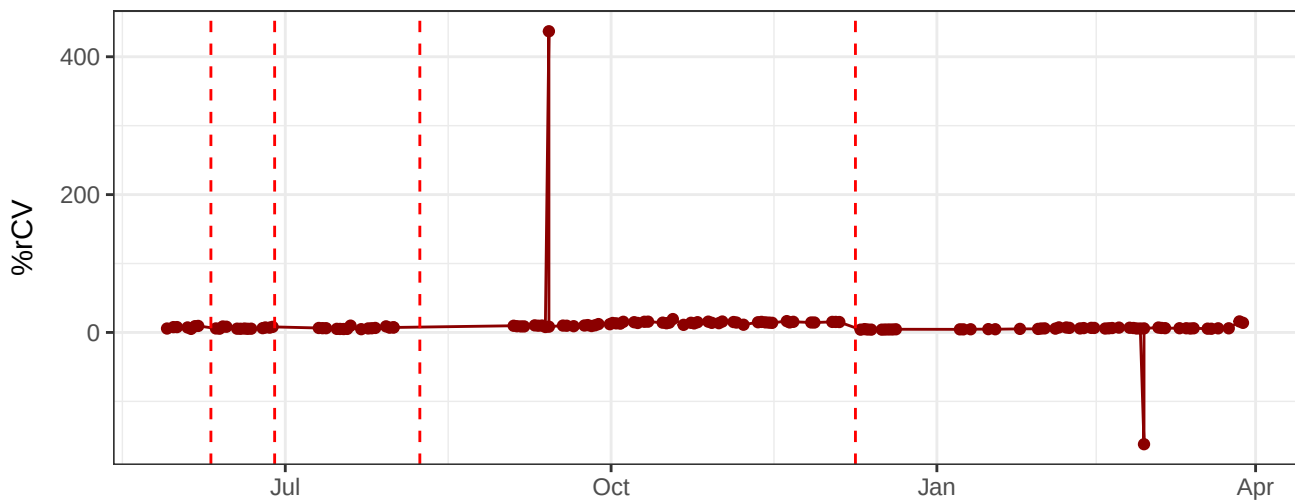


### FSC-A-% rCV

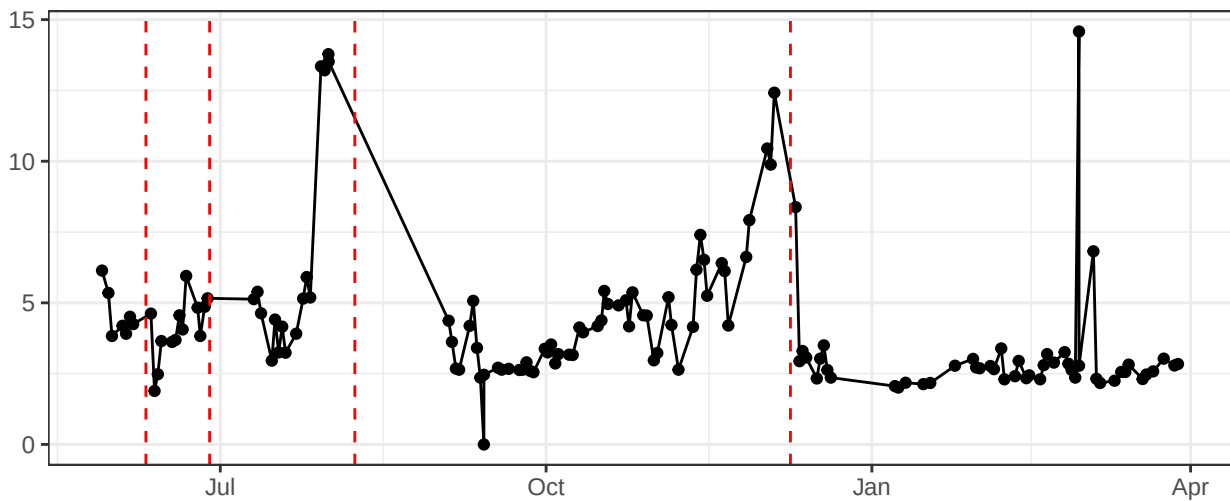


FSC-H-% rCV

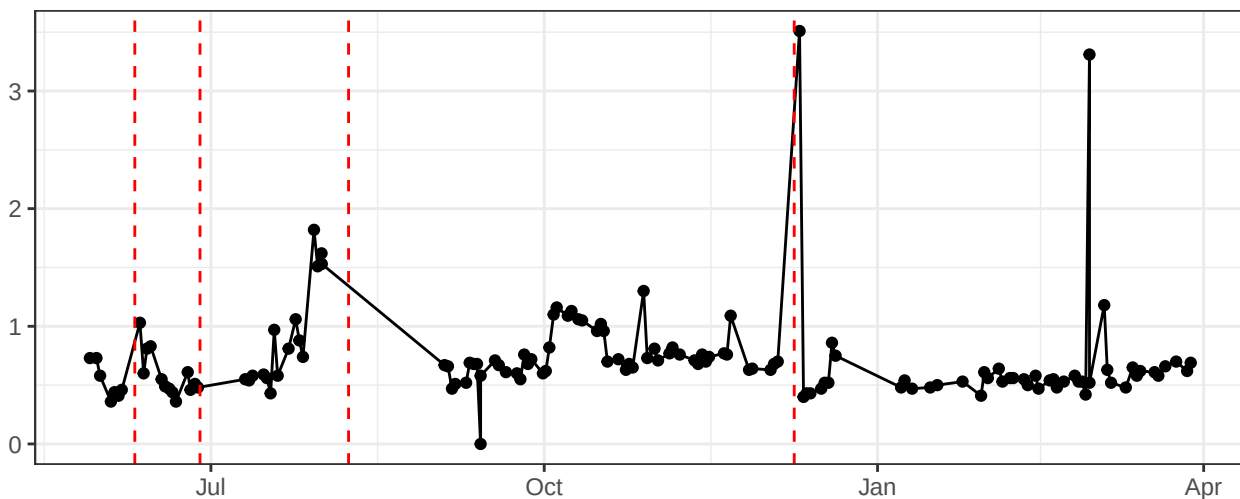


FSC-W-% rCV

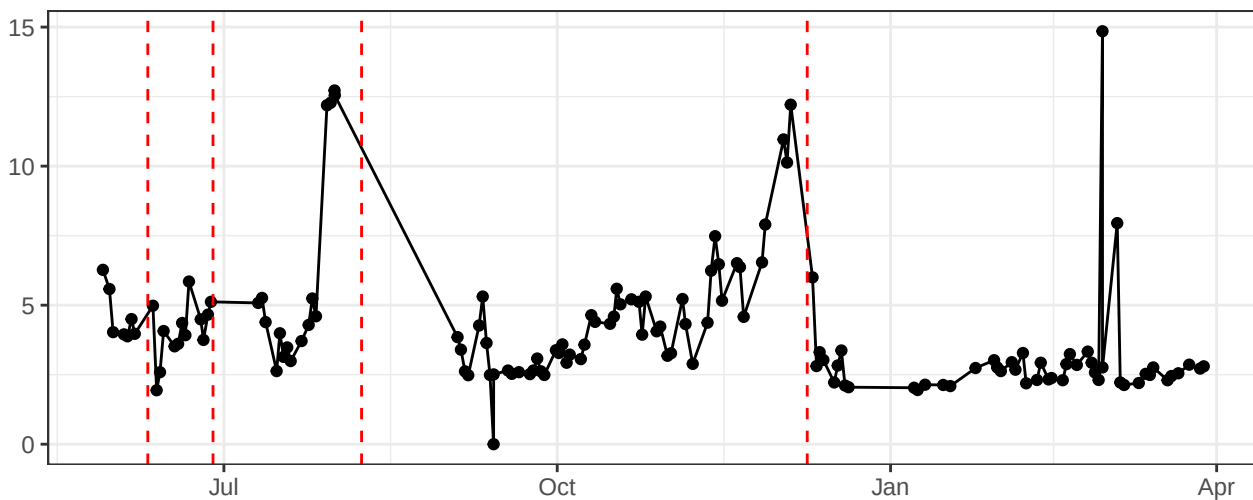

SSC-A-% rCV

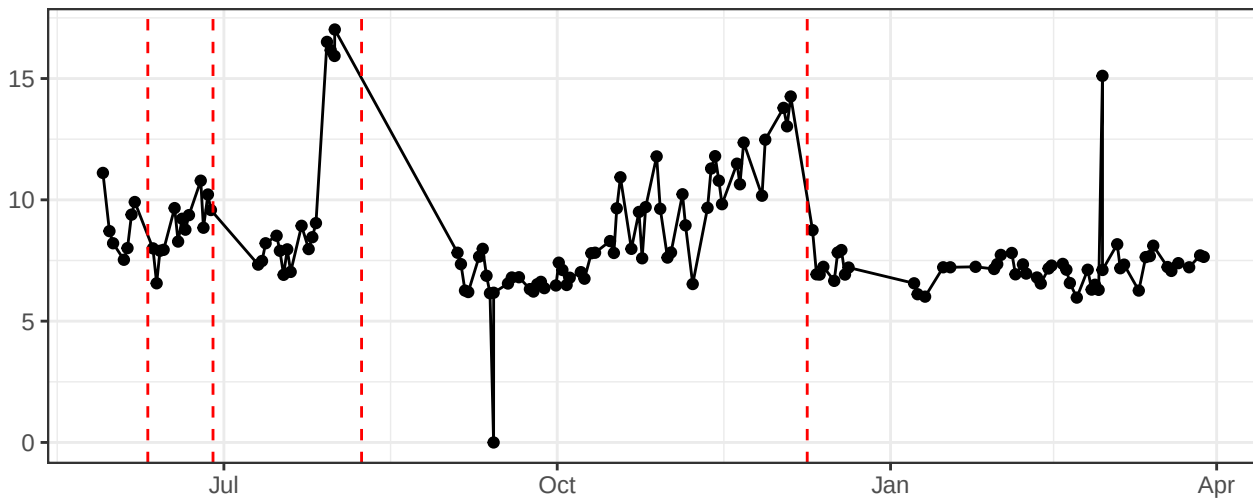

SSC-H-% rCV

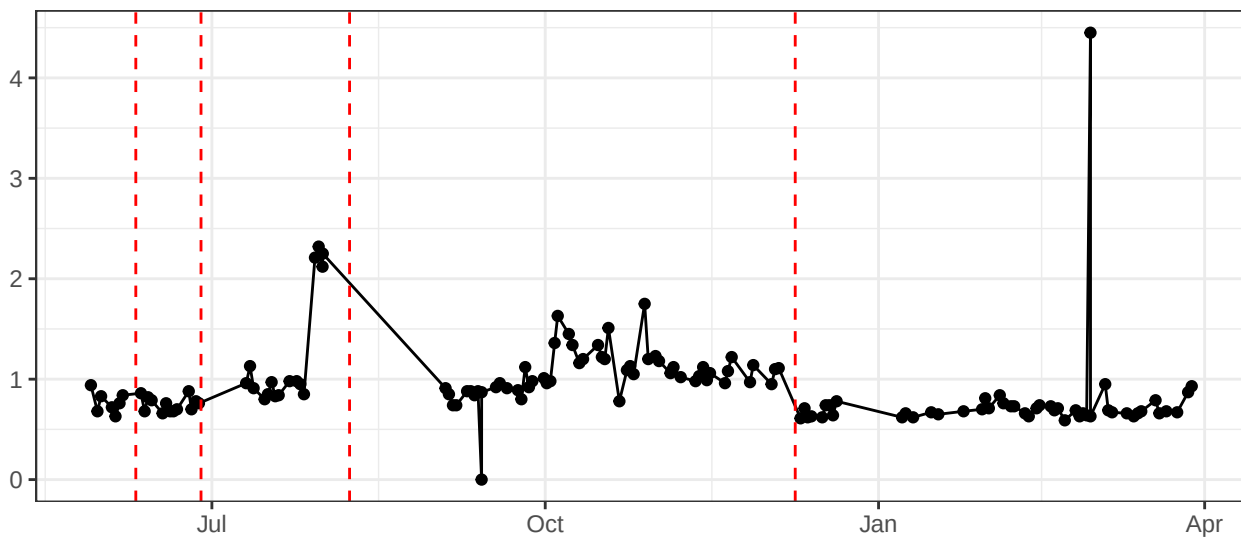

SSC-W-% rCV

