

-
-
-
-
-

Chapter 4

Work Station Management



Confirm Work Station Schedule



1/MJW

Changing the status of a work station schedule to firm enables you to manipulate schedule quantities, dates and work station assignments to achieve a desired production pattern. Only firmed daily work station schedules can be manipulated.

Once schedules have been firmed and possibly amended, they can always be compared with current suggested work station schedules.

Any firm and unplanned work station schedules (status 2 & 3) for schedule controlled items which are outside the end date of the firming period specified is deleted. The exception to this is for flow route schedules that are after the firming end date, but which have related schedules that are before or on the firming end date.

Flow routes have operations which may be considered to be chained together and only the last operation can be a count point.

The facility is also given to optionally confirm MPS/MRP related item schedules during the confirm work station processing routine. A system generated schedule reference is created for each suggested supply. This number is automatically passed to the dependent work station schedules thereby enabling a work station schedule to be linked directly to the generating item schedules.



When Confirm Work Station Schedule is selected on the Work Station Management menu, the Create Firm Work Station Schedule screen is displayed.



Note: The MRP, Create Work Station Schedules option, must have been run for the live organisational model, and should cover the firm period.

MR235	Z1 - GB Demonstration Company	User GBJBAMS	8/12/95 17:07:04
Create Firm Work Station Schedule			
Organisational Model...? _			
From Date..... 8/12/95			
To Date..... 8/12/95			
Confirm Item Schedules.. _ (1=Yes)			
F3=Exit F4=Prompt F8=Confirm			
06-45	SA	MW	KS IM II KENB20A PET166S2

Fields:

Organisational Model

You must enter the live organisational model. The records generated depend on the suggested and planned work stations schedules that already exist for the model entered.

From Date

Enter the earliest date for which suggested schedules are to be firmed.

To Date

Enter the date to which suggested schedules are to be firmed.



Note: Remember that firm and unplanned schedules beyond this date are deleted for non flow routes.

Confirm Item Schedules

The option is given to confirm or not to confirm related MPS/MRP item schedules.

0 - Item schedules are not confirmed and the schedule status remains at SS (suggested).

1 - Item schedules are confirmed and the schedule status changes to CS (confirmed).



Warning: It is possible to specify a range of dates which overlap the previously defined Firm Period. Should you specify such a date range, you are cautioned and asked to confirm your date parameter.



Warning: Any dates previously firmed which are once again included within the firm date range are fully refreshed with current suggested daily schedules and firmed based on these schedules. This means you could lose schedule details previously manipulated.



Note: Any manipulated item which is re-confirmed in this way is not set back to the suggested quantity, IF it is dependent on a previous operation which is already confirmed. That is, previously firmed figures have been replaced by the newly created suggestions.

Review Work Station Load



2/MJW

This function allows you to view graphically the scheduled load for any work station beginning with a selected date. In addition, the screen provides access to the Manage Work Station Load screen.



When Review Work Station Load is selected on the Work Station Management menu, the Work Station Load Enquiry screen is displayed.

MJ502 Z1 - GB Demonstration Company User GBJBAMS 08/12/95
15:07:52

Work Station Load Enquiry

Work Station.....? WS01 Firming End Date

Start Date..... 08/12/95 Capacity Basis. 1 (1=Std 2=Max) 08/00/00

Capacity	.00	.00	.00	.00	.00	.00	.00	.00
Load	.00	.00	.00	.00	.00	.00	.00	.00

Select 08/00 08/00 08/00 08/00 08/00 08/00 08/00

1=Manage Work Station Load - - - - - -

F3=Exit F4=Prompt F12=Previous F15=Include Unplanned

05-23 S4 MW KS IM II KENB20A PET166S2

Fields:

Work Station

Enter a work station to enquire on its load. To switch to another work station, simply type over the previous one and press Enter.

Start Date

The capacity and loads are displayed for the day entered here, followed by the same information for the next seven working days. To change the eight day period displayed, enter a new start date and press Enter. The default start date is the current date. Use PageUp and PageDown for subsequent and previous displays.

Capacity Basis

This indicates whether the Capacity field should display the standard or maximum capacity of the work station as defined via Work Station Maintenance.

- 1 - To display standard capacity.
- 2 - To display maximum capacity.

Firming End Date

This is a system maintained field and displays the last date for which firm work station schedules have been created.



When **Enter** is pressed, the schedule load relating to the requested work station is displayed.




Tip: For the start date and the next seven working days, the work station's capacity is displayed (in hours) with the amount of work (load in hours) currently scheduled to be performed alongside. This provides a visual barchart comparison of capacity and load.

The columns showing the scheduled work are constructed as follows:

- The left hand column shows the capacity available (green).
- For the firm period, the right hand column shows the firm schedules (yellow). If the firm schedule quantity is less than the current suggested schedule quantity, this is indicated by a section at the top of the column in a different shade (red). If unplanned schedules exist then these may be viewed using **F15=Include Unplanned**. This condition indicates that a firm schedule on this date was changed to a smaller quantity or deleted.
- Beyond the Firm Period End Date, where schedules have been suggested but not firmed, the suggested schedules are shown (blue). Firm schedule quantities may have been manually scheduled beyond the end of the Firm Period. If so, the firm schedules are shown at the bottom and any suggested schedules at the top of the right hand column.
- Work station. This can be changed without going back to the previous screen.
- Display from date. This can be changed without going back to the previous screen.
- Capacity basis. This can be changed without going back to the previous screen.



Warning: The colours used on the display may be changed by the user and may not be the colours quoted here. Sufficient to say that the various elements of scheduled time/hours are portrayed in different colours.

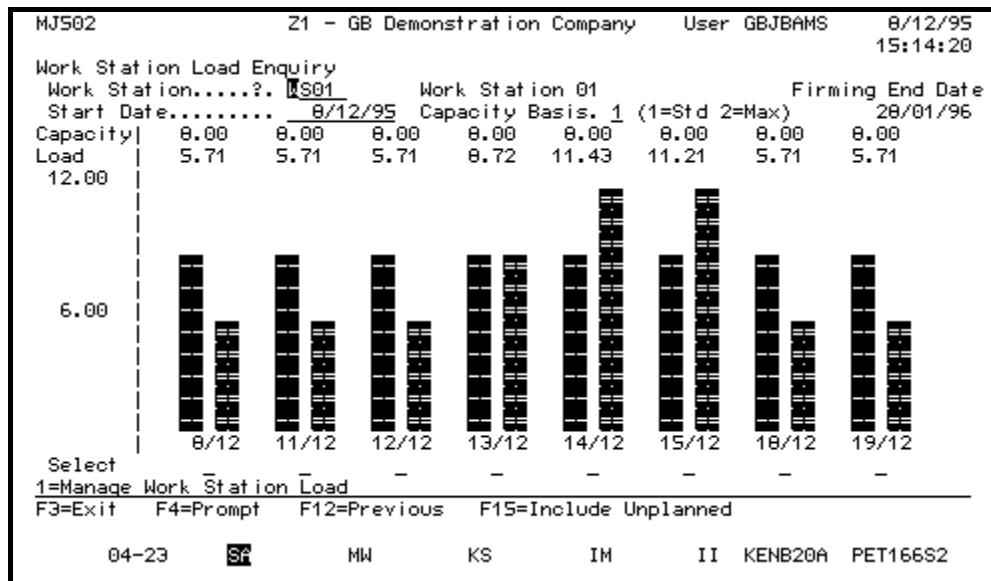

Fields:

Select

Enter 1 beneath a column and press **Enter**. The Manage Work Station Load screen is displayed.

Functions:

F15

Include Unplanned. Changes the display to include unplanned schedules.

Manage Work Station Load



3/MJW

This function displays the schedules for a selected work station and provides access to the following:

- Work station rescheduling screens
- MPS/MRP enquiry function
- WIP Stock Status/Operation Schedule Enquiry
- Work Station Capacity window



When Manage Work Station Load is selected on the Work Station Management menu, or 1 is entered in the Select field on the Review Work Station Load screen, the Work Station Schedule Review screen is displayed.

Work Station Schedule Review Screen



When Manage Work Station Load is selected on the Work Station Management menu, or 1 is entered in the Select field on the Review Work Station Load screen, the Work Station Schedule Review screen is displayed.

The Work Station Schedule Review screen contains the following fields:

MJ503		Z1 - GB Demonstration Company		User GBJBAMS		8/12/95	
						15:15:09	
Work Station Schedule Review				Firming End Date			
Work Station...?		MS01		Work Station 01		28/01/96	
Start Date.....		8/12/95				More: + -	
Scheduled				W/Station		Scheduled	
Sel	Date	Sequence	Item/Order	Rt	Opsq M/c Hours	Quantity	Status
-	8/12/95	_____	MS002	1	20 5.7142	7.000	2
-	11/12/95	_____	MS002	1	20 5.7142	7.000	2
-	12/12/95	_____	MS002	1	20 5.7142	7.000	2
-	13/12/95	_____	MS002	1	10 .0033	.000	2
-		_____	MS002	1	10 2.1667	13.000	2
-		_____	MS002	1	20 .5667	.000	2
-		_____	MS002	1	20 5.7142	7.000	2
-		_____	MS002	1	20 .1904	.000	2
-	14/12/95	_____	MS002	1	20 5.7142	7.000	2
-		_____	MS002	1	20 5.7142	7.000	2
-	15/12/95	_____	MS002	1	20 4.9285	6.000	2
Select							
1=Reschedule 2=WIP Enquiry 3=MPS/MRP Enquiry 4=Select Order							
F3=Exit F4=Prompt F12=Previous F14=W/Stn Capacity F8=Update F15=Incl Unplanned							
F10=Add Schedule							
04-19		S4		MW KS IM II		KENB20A PET166S2	

Fields:

Work Station

Enter a work station to enquire on its load. To change to another work station simply enter the name and press **Enter**.

Start Date

Defaults to current system date. This forms the start point of the information displayed. To change the date, enter the date and press **Enter**.

Sel

Select. This column allows you to select the action you wish to perform.

- 1 - To reschedule the line (only available if the line is a firm schedule or unplanned).
- 2 - To see the WIP inventory position for the item.
- 3 - To perform an MPS/MRP enquiry on the item.
- 4 - Select order (not available for schedule controlled items).

Scheduled Date

Against the first line of each days production with schedules is displayed the date.

Sequence

This field may be used to control the sequence in which the schedules are worked on that day. Use **F8=Update** to update.

Item/Order

The item scheduled for production. This can be a production order number.

Rte

The route code reference for this item/work station production.

Opsq

The operation to which this line relates.

W/Station M/C Hours

The work station load in hours represented by this schedule on this date including shrinkage factors.

Scheduled Quantity

The quantity of the item/operation due to be processed on this schedule on this date.

Status

- 1 - Suggested. Suggested schedules cannot be rescheduled.
- 2 - Firm.
- 3 - Unplanned.

When reviewing works stations which include production order loadings:

Status Code 1=Confirmed production order.

Status Code 2=Released or active production order.

Functions:

F10

Add Schedule. Allows you to add schedule.

F14

W/Stn Capacity. When this function is selected, the Work Station Capacity window is displayed.

F15

Include Unplanned. Removes/includes unplanned schedules from the display.

Item/Operation Rescheduling Window (Option 1)



When 1 is entered in the Sel field on the Work Station Schedule Review screen, the Item/Operation Rescheduling window is displayed.

This window enables you to delete/amend schedules.

MJ503		Z1 - GB Demonstration Company		User GBJBAMS		8/12/95	
						15:15:09	
ion Schedule Review							
Work Station...?		WS01		Wo			
Start Date.....		8/12/95					
Scheduled							
Sel	Date	Sequence	Item/				
1	8/12/95	_____	MS002				
-	11/12/95	_____	MS002				
-	12/12/95	_____	MS002				
-	13/12/95	_____	MS002				
-		_____	MS002				
-		_____	MS002				
-		_____	MS002				
-	14/12/95	_____	MS002				
-		_____	MS002				
-	15/12/95	_____	MS002				
Select							
1=Reschedule		2=WIP Enquiry					
4=Prompt		F12=Previous					
F10=Add Schedule							
09-36 S2 MW KS IM II KENB20A PET166S2							

Item/Operation Rescheduling

Item	MS002	Operation	20
Suggested	259.000	Firm	7.000
Unplanned	252.000	Date	8/12/95

Sel	Date	Station	Quantity	Time	Typ
1	8/12	WS01	7.000	5.7142	1

1=select 2=insert Setting prior 4=delete
0/00/00 .000 .0000
F4=Prompt F8=Update F12=Prev. F16=Comp. Avail.

Fields:

Item

The item to which this operation schedule relates.

Operation

The operation to which this schedule relates.

Suggested

The current total quantity of suggested schedules for this work station/item/operation/date.

Firm

The total quantity of firm production schedule for this work station/item/operation/date.

Unplanned

The total quantity of production for this work station/item/operation/date that has been removed from the firm schedule as a result of schedule manipulation.

Date

The original reference date to which this schedule relates.

Sel

Select.

Enter 1-Select to display the schedule line detail at the bottom of the window, ready for amendment.

It is just as simple to add an additional operation schedule record by entering directly into the entry line at the bottom of the window screen.

Press **Enter** and the new entry is displayed with the existing operation schedule lines. The suggested quantity is accounted for by calculated changes to the unplanned quantity.

Enter 2-Insert Setting Prior to display an input line at the bottom of the window for definition of setting hours. Subsequently, inserts a setting schedule line prior to selected line.

Enter 4-Delete to delete a schedule line.

Date

The date on which this operation quantity is currently scheduled.

Work Station

The work station to which this operation quantity is currently scheduled.

Quantity

The quantity associated with this item/operation schedule line.

Time

The duration in hours that this schedule line represents.

Type

The schedule line type 0 indicates a setting type. 1 indicates a production type.

Functions:

F16

Comp Avail. Displays a list of available components.



When 2 is entered in the Sel field on the first Item/Operation Rescheduling window, additional fields are displayed.

You are provided with an entry field for entering set-up hours to be planned.

ion Schedule Review				Item/Operation Rescheduling			
Work Station...? <u>WS01</u> Wo				Item MS002 Operation 20			
Start Date..... <u>8/12/95</u>				Suggested 259.000 Firm 7.000			
Scheduled				Unplanned 252.000 Date 8/12/95			
Sel	Date	Sequence	Item/	Work			
1	8/12/95		MS002	Sel	Date	Station	Quantity
-	11/12/95		MS002	2	8/12	WS01	7.000
-	12/12/95		MS002				Time
-	13/12/95		MS002				Typ
-			MS002				
-			MS002				
-			MS002				
-			MS002				
-	14/12/95		MS002				
-			MS002				
-	15/12/95		MS002				
Select				1=select 2=insert Setting prior 4=delete			
1=Reschedule 2=WIP Enquiry				8/12/95 WS01 .000 .0000 0			
4=Prompt F12=Previous				F4=Prompt F12=Previous F16=Comp.availability			
F10=Add Schedule							
21-65 SF MW KS IM II KENB20A PET166S2							

Fields:

After entering the set-up hours, press **Enter** and the set-up is placed in the operation schedules just prior to the operation schedule to which it relates. Note that the TYP column indicates that this is a set-up with a code of 0.



Tip: Delete an operation schedule line by selecting the line with a 4, and pressing **Enter**. Confirm deletion by selecting **F11** in response to the confirmation prompt.

The resulting window shows the current position for the work station/item/operation schedules for this date.



Select **F8** to apply the changes made to the operation schedules and return to the Work Station Schedule Review screen.

If an unplanned quantity exists (the total firm operation schedule does not equal the suggested schedule quantity for that date), it is displayed on the date of the underlying suggestion with a status of 3. Use **F15=Include Unplanned** to display/suppress unplanned schedule quantities.



Note: Select any operation schedule line for an item operation and the Item/Operation Rescheduling window, which collects all of the operation schedules which relate to the original suggested operation schedule, is displayed. This includes elements of the schedule which may have been maintained to other work stations and other dates.

Component Availability Window (F16)



When **F16=Comp Availability** is selected on the Item/Operation Rescheduling window, the Component Availability window is displayed.

This window presents the WIP inventory position of the item being scheduled at the prior count point operation as well as the component requirements relating to this operation.

It also displays the component available stock positions for the stockrooms from which they are drawn (based on the planning order route for this parent).

ion Schedule Review				Component Availability		
Work Station...? MS01				Item MS002 Operation 10		
Start Date..... 8/12/95				Previous WIP Inventory .000		
Sel	Date	Sequence	Item/	Component	Required	Available
-	8/12/95		MS002	RAM01	30.420	2027.000
-	11/12/95		MS002	RAM02	65.000	4107.000
-	12/12/95		MS002	RAM03	26.000	1656.000
1	13/12/95		MS002	RAM04	19.500	1347.000
-			MS002			
-			MS002			
-			MS002			
-			MS002			
-	14/12/95		MS002			
-			MS002			
-	15/12/95		MS002			
Select				F12=Previous		
1=Reschedule 2=WIP Enquiry						
***MJ022 4=Prompt F12=Previous						
F10=Add Schedule						
09-36 SF MW KS IM II KENB20A PET166S2						

Fields:

Item

The item for which schedule review is in progress.

Operation

The operation of the item for which review is in progress.

Previous WIP Inventory

The WIP inventory available position of this item at the prior count point operation.

Component

A list of components required by this operation.

Required

The quantity of this component required to support the schedule quantity being reviewed for component availability.

Available

The available quantity of this component at the stockroom which is designated on the parent item planning route.

WIP Location Stock Status Window (Option 2)



When 2 is entered in the Sel field on the Work Station Schedule Review screen, the WIP Location Stock Status window is displayed.

This window supports enquiry against other operations for the item under review without having to exit the window.

MJ503				Z1 - GB Demonstration Company		User GBJBAMS		8/12/95									
17:18:02																	
Work Station Schedule Review																	
Work Station...?. <u>WS01</u> Wo																	
Start Date..... <u>8/12/95</u>																	
Scheduled																	
Sel	Date	Sequence	Item/														
2	8/12/95		W000191														
-			W000191														
-			W000191														
-			W000191														
-			W000191														
-	11/12/95		MS002														
-	12/12/95		MS002														
-	13/12/95		MS002														
-			MS002														
-			MS002														
Select																	
1=Reschedule 2=WIP Enquiry																	
F3=Exit F4=Prompt F12=Previous																	
F10=Add Schedule																	
WIP Location Stock status <table border="1"> <thead> <tr> <th>Loc</th> <th>Available</th> <th>Held</th> <th>Subcontractor</th> </tr> </thead> <tbody> <tr> <td>FS</td> <td>3.000</td> <td>1.000</td> <td>2.000</td> </tr> </tbody> </table> Operation: <u>10</u> F12=Previous F16=Lot Enquiry F19=Held Detail F17=Subcontractor F18=Operation Schedule										Loc	Available	Held	Subcontractor	FS	3.000	1.000	2.000
Loc	Available	Held	Subcontractor														
FS	3.000	1.000	2.000														
04-73 S2 MW KS IM II KENB20A PET166S2																	

Functions:

F16

Lot Enquiry. Shows lot availability.

F17

Subcontractor. Shows Subcontractor details, if any and goes on to show expanded detail and shipper status by means of further function keys.

F18

Operation Schedule. Shows detail of the Operation Schedule with a further option to make a Work Station Load enquiry.

F19

Held Detail. Shows Held item detail, if any.

MPS/MRP Enquiry (Option 3)



When 3 is entered in the Sel field on the Work Station Schedule Review screen, the MPS/MRP enquiry screen are displayed.

Enquiries can then be made on the item by using the standard MPS/MRP function. All these functions are explained in Production Planning.

Work Station Capacity Window (F14)



Select **F14=W/Stn Capacity** on the Work Station Schedule Review screen to display the Work Station Capacity window.

This window displays details of the work station capacity hours available and shift profile information if defined.

MJ503		Z1 - GB Demonstration Company		User	GBJBAMS	8/12/95
						17:25:58
Work Station Schedule Review						Firming End Date
Work Station..?		WS01		Work Station 01		28/01/96
Start Date.....	-					
Scheduled	-	Work Station Capacity				
Sel	Date	Sequ	Date..... 8/12/95			
-	8/12/95	-	Shift Profile.....			
-		-	Length..... 8.00			
-		-	Standard Capacity.. 8.000			
-		-	Maximum Capacity.. 8.000			
-		-	Shift Start End Length Std.Capacity Max.Capacity			
-		-				
-	11/12/95	-				
-	12/12/95	-				
-	13/12/95	-				
-		-				
Select	F12=Previous					
1=Reschedule	2=W					
F3=Exit	F4=Prompt					
F10=Add Schedule						
06-23		SE	MW	KS	IM	II KENB20A PET166S2

Fields:

Shift

Identifies the sequence of shifts within the shift profile.

Start/End

The start and end time of the shift using the 24 hour clock.

Length

The duration of the shift calculated from the start and end times.

Std Capacity

The standard or (budget) effective capacity of the work station to produce.

Max. Capacity

Maximum capacity of the work station; calculated from the profile capacity factor set when the work station is maintained.

Line Schedule Maintenance Screen (F10)



When **F10=Add Schedule** is selected on the Work Station Schedule Review screen, or 1 is entered in the Sel field on the Work Station Schedule Review screen for a schedule with a Firm status, the Line Schedule Maintenance screen is displayed.

All the available flow line routes are displayed.

A new schedule may now be added or the quantities and/or dates changed for an existing schedule. Any changes made are enacted immediately. There is no need to rerun MPS.



Tip: Subsequent enquiries can be made for these changes. The change of route may move the item to a different work station.

Considerations

- The parent items must be MPS.
- The parent items must be schedule controlled.
- This function is not available for process groups.
- Only the last operation on a flow route may be a count point.



Warning: When using this option to move items to another flow line route the status is changed to FIRM on the NEW route. This is done irrespective of the data range chosen for the firm period using the Confirm Work Station Schedule option.

MJS20		Z1 - GB Demonstration Company		USER GBJBAMS	8/12/95
					17:27:07
Line Schedule Maintenance					
Item.....?		MS002		Product B	
Total Quantity Required.		0	Original Route	Qty Scheduled	0
Quantity Rescheduled....		0			
Quantity to Reschedule..		0			
S	Route	Description	Quantity	Due Date	Start Date
■	2	FLOW ROUTE A	0	0/00/00	0/00/00
-	3	FLOW ROUTE B	0	0/00/00	0/00/00
1= View Work Station Time					
F8=Update		F12=Previous			
11-03	SA	MW	KS	IM	II KENB20A PET166S2

Fields:

S

Select. Enter 1-View Work Station Time to display the Work Station Times window, as explained below.

Quantity

Enter a quantity.

Due Date

Enter a due date. The system derives and displays a start date.

Work Station Times Window (Option 1)



When 1 is entered in the S field on the Line
Schedule Maintenance screen, the Work Station
Times window is displayed.

MJ520	Z1 - GB Demonstration Company	USER GBJBAMS	8/12/95 17:28:46
Line Schedule Maintenance			
Item.....?	MS002	Product B	
Total Quantity Required.	0	Original Route Qty Scheduled	0
Quantity Rescheduled....	0		
Quantity to Reschedule..	0		
■ Work Station Times Item Quantity Scheduled.. Route..... 3 FLOW ROUTE B Opsq Description W/Stn M/C Time Lab Time Set Time No Work Station Times available for this Route F12=Previous			
F8=Update F12=Previous			
10-04	S ^a	MW KS IM II	KENB20A PET166S2

Order/Operation Rescheduling Window (Option 4)

 If the Status field on the Work Station Schedule Review screen is 2 (Firm), when 4 is entered in the Sel field on that screen, the Order/Operation Rescheduling window is displayed. This option is not valid for schedules.

This window enables the production order to be rescheduled. For production orders, you can also use Maintain Orders.

MJ503		Z1 - GB Demonstration Company		User GBJBAMS		8/12/95 17:31:58	
ion Schedule Review							
Work Station...?		WS01		Wo			
Start Date.....		8/12/95					
Scheduled							
Sel	Date	Sequence	Item/				
4	8/12/95		W000191				
-			W000191				
-			W000191				
-			W000191				
-			W000191				
-			MS002				
-	11/12/95		MS002				
-	12/12/95		MS002				
-	13/12/95		MS002				
-			MS002				
-			MS002				
Select				1=select 2=insert Setting prior 4=delete			
1=Reschedule 2=WIP Enquiry				0/00/00 .000 .0000			
4=Prompt F12=Previous				F4=Prompt F8=Update F12=Prev. F16=Input Avail.			
F10=Add Schedule							
09-36		S*		MW		KS IM II KENB20A PET166S2	

Special Function:

F16

Input Avail.

Maintain Work Station Status

1...
2... **4/MJW**

You can manually update the work station operational status.

This status can be displayed by selecting the Work Station Production List option on the Production Order Enquiries And Reports menu.



When Maintain Work Station Status is selected on the Work Station Management menu, the Work Station Status Maintenance screen is displayed.

PC350	Z1 - GB Demonstration Company	User GBJBAMS	8/12/95 17:33:00
Work Station Status Maintenance			
Work Station.....? _____			
Status.....? _____			
Order.....? _____			
Item.....? _____			
Operation.....? _____			
Reason.....? _____			
1 = Start Operation 3 = Complete Operation			
4 = Start Setting 5 = Complete Setting			
6 = Start Maintenance 7 = Complete Maintenance			
F3=Exit F4=Prompt F16=Review Orders			
05-24 SP MW KS IM II KENB20A PET166S2			

Fields:

Work Station

This is a mandatory field. Enter the work station to which the status setting is to apply.

Status

Enter the task that is to be the recorded status of this order/operation or item/operation. Valid entries are displayed at the bottom of the screen.

1 - For start operation

3 - For complete operation

4 - For start setting

5 - For complete setting

6 - For start maintenance

7 - For complete maintenance

Order

Enter the number of the production order against which the status setting is to be recorded. This must be a valid order which has attained Released status.

A production order or an item reference must be entered, along with the associated operation against which the status setting is to apply.

Item

Enter the item number of the item against which the status setting is to be recorded..

Operation

Enter the operation sequence which identifies, in conjunction with the order or item entered, the status the setting is to be recorded against.

The system checks that there is work firmed against the work station for this order/operation or item/operation. If there is no work firmed, an error message is displayed.

Reason

Enter an appropriate reason code for the status setting.

Reason codes are defined in the Inventory Management, Descriptions file, against major type MOVR.

Special Function:

F16

Review Orders.



Press **Enter** to update.

Deallocate Floor Stock

1...
2...

11/MJW

This function de-allocates out-of-date floor stock. This ensures that allocations which have never been consumed by production booking are removed from the shop floor stockroom, so that the Daily Material Pull List netting calculation is based only on current production allocations. This option should be run before the Daily Material Pull List.



When Deallocate Shop Floor Materials is selected on the Work Station Management menu, the Deallocate Shop Floor Materials screen is displayed.

MJ270		Z1 - GB Demonstration Company		User GBJBMS		8/12/95	
						17:16:43	
Deallocate Shop Floor Materials							
From Stockroom...? ☐				To Stockroom...? ☐			
From Item.....?				To Item.....?			
From Route.....				To Route.....			
From Operation....				To Operation....			
Deallocate requirements up to date..... 8/12/95 (inclusive)							
F3=Exit F4=Prompt F8=Submit Job							
06-22 Sf MW KS IM II KENB20A PET166S2							

Fields:

Stockroom Range

Enter a shop floor stockroom range. Blank includes all locations.

Item Range

Enter an item range. Blank includes all floor stock items.

Route Range

Enter a single route range. Blank includes all routes.

Operation Range

Enter an operation range. Blank includes all operations.

Deallocate Requirements Up To Date

Defaults to the current system date. Enter a date up to and inclusive of which floor stock allocations not consumed by production are de-allocated and become free floor stock.

Daily Material Pull List

1...
2...

12/MJW

This report provides a list, by stockroom, of materials needed to support the firm schedule within a date range. The report can be run for a stockroom, range of stockrooms, or WIP location(s).

This report can be used to advise the appropriate stores personnel of material required by the selected work station within the selected data range.

The report prints requirement quantities as integers or includes decimal values (where appropriate) according to the setting of the rounding policy for the item's issuing unit of measure; as defined on the parameter file, against type UNIP.

Scheduled daily requirements for floor stock inputs are allocated in the related WIP location, shop floor stockroom. Free stock in the shop floor stockroom is netted against the scheduled requirement and only the net requirements for additional material is included.



When Daily Material Pull List is selected on the Work Station Management menu, the Daily Material Pull List Report screen is displayed.

MJ655	Z1 - GB Demonstration Company	User GBJBAMS	8/12/95 17:16:10
Daily Material Pull List Report			
Organisational Model...? █			
Issuing Stockroom from.? __ to __			
WIP Locations From.....? __ to __			
Work Stations From.....? ____ to ____			
Date From..... 8/12/95 to 8/12/95			
Print Shop Floor Items Only... 0 (0=No 1=Yes)			
Include Production Order Requirements.. 0			
F3=Exit F4=Prompt F8=Submit Job			
05-36	84	MW	KS IM II KENB20A PET166S2

Fields:

Organisational Model

Enter the organisational model code.

Issuing Stockroom From/To

Controls which stockrooms are included in the report.

WIP Locations From/To

Limits WIP locations to be included on the report.

Work Stations From/To

Limits work stations to be included on the report.

Date/From To

Enter the dates for which the report is to be generated. Defaults to current system date.

Print Shop Floor Items Only

The option is given to print floor stock items only 1 or 0 all stockrooms, including floor stock items in the range selected.

Include Production Order Requirements

Enter 1 to include material needed for production orders as well as material requirements for schedules. Leave 0 by default to exclude production order requirements from the report.

Daily Work Station Schedule Report

1...
2... **21/MJW**

This report provides production personnel with an up-to-date view of work station. By default, unfinished jobs from the prior day are listed first and set-up is listed before the run activity to which it relates.

Total resource hours required for each day are printed for each work station. The reports may include either firm or suggested schedules.



When Daily Work Station Schedule is selected on the Work Station Management menu, the Daily Work Station Production Schedule Report Selection screen is displayed.

MJ630	Z1 - GB Demonstration Company	User GJBAMS	8/12/95 17:33:33
-------	-------------------------------	-------------	---------------------

Daily Work Station Production Schedule Report Selection

Organisational Model...?

Date From..... 8/12/95 to 8/12/95

WIP Locations From....? to

Work Stations From....? to

Schedule Status..... 2 (1=Suggested,2=Firm)

F3=Exit F4=Prompt F8=Submit Job

05-35 **SF** MW KS IM II KENB20A PET166S2

Fields:

Organisational Model

This is a mandatory field. Enter the live organisational model.

Date From/To

These are mandatory fields. They set the date range for which the report is to be generated. The default range restricts the report to the current day but this can be extended.

WIP Locations From/To

This sets the limits for WIP locations to be included on the report. If both are left blank, there is no limit and all WIP locations are considered for the report. If an entry is only made in the From field, the report considers all WIP locations, alphabetically, from this location. Similarly, if an entry is only made in the To field, the report considers all WIP locations, alphabetically, up to and including this location.

Work Stations From/To

This sets the limits for work stations to be included in the report. If left blank, there is no limit. Only work stations that are in the selected organisational model are included.

Schedule Status

Enter the selection for the type of schedules to be included in the report.

1 - To include suggested work station schedules only, this should be selected if the Create Work Station Schedule option within MRP has been run but not Confirm Work Station Schedule in Production Control for the date range selected.

2 - To limit the report to firm work station schedules.

Either may be selected to produce a meaningful report if Confirm Work Station Schedule has been run for this date range.

Short Term Labour/Machine Load Report

1...
2...

22/MJW

This report provides a view of work station loading within the organisational model. It is intended to provide a relatively short term picture and is limited to a date range of between one and thirty days. Labour or machine loading can be selected.

If labour loading is selected, the setting and run loads and the total load are printed for each day in the date range for each department in the model. The department load is the sum of all work station labour loads in the department.

If machine loading is selected, machine load details are printed separately for each work station in the planning model. The run and setting loads are printed and the total compared to capacity on each day in the range. The discrete differential for each day and a cumulative differential are included in this report.

Either suggested or firm schedules can be selected for inclusion. Suggested schedules are schedules generated by MRP. Firm schedules, when created, are simply copies of the current suggested schedules for the dates being firmed. Once confirmed, schedules may be amended. Both suggested and firm schedules may exist at the same time, so reports may be produced for comparison of load against schedules of either status.



When Short Term Labour/Machine Load is selected on the Work Station Management menu, the Short Term Labour/Machine Load Report screen is displayed.

MJS10	Z1 - GB Demonstration Company	User GBJBAMS	8/12/95 17:34:11
Short Term Labour/Machine Load Report			
Organisational Model...? ☐			
Work Centre.....? _____			
OR			
Work Station From.....? _____ to _____			
From Date..... <u>8/12/95</u> To Date <u>8/12/95</u>			
Schedule Status..... <u>1</u> (1=Suggested Load, 2=Firm Load)			
Report Type..... <u>1</u> (1=Machine Load, 2=Labour Load)			
Percentage Overload.... <u>.00</u> (Machine Load Only)			
Capacity Basis..... <u>1</u> (1=Standard, 2=Maximum)			
F3=Exit F4=Prompt F8=Submit			
06-35	S	MW	KS IM II KENB20A PET166S2

Fields:

Organisational Model

Enter the live organisation model code.

Work Centre

A work centre may be entered here to refer to an associated group of work stations. This limits the report to these work stations only.

The work centre field and the work station range fields are mutually exclusive.

Work Station From/To

This sets the limit for work stations to be included on the report.

The work station range fields and the work centre field are mutually exclusive. If a work centre is not input and both these fields are left blank, there is no limit and all work stations are considered for the report.

From Date/To Date

These are mandatory fields. The date range can be between one and thirty days. Enter the first and the last day to be included in the report. The default in both fields is the current system date.

Schedule Status

Either suggested or firm schedules can be selected.

Enter 1 for suggested, 2 for firm. Suggested schedules are those generated by MRP. Firm schedules are those that have been confirmed from suggested schedules. They can be amended by users.

Report Type

Select whether the report is to be based on machine or labour load. Enter 1 for machine load, or 2 for labour load.

If machine loading is selected, a daily work station load is calculated for each work station in the model and this is compared to capacity. If labour is selected, a daily load is calculated for each department, adding together the labour loads of each work station in a department.

Percentage Overload

This applies to planning for machine loads only. Enter a percentage variance allowed from standard capacity. The report generates a list including only those work stations whose load, at some stage over the selected time frame, exceeds the capacity by this percentage or more.

The default setting is zero (.00) which includes all work stations on the report.

Capacity Basis

Indicate the capacity basis.

- 1 - Use the standard capacity of the work station.
- 2 - Use maximum capacity.

Schedule Adherence Report

1...
2... **23/MJW**

Suggested daily work station schedules are created from schedules calculated by MRP. They define the production activity required to support the demands which are driving MRP.

Suggested daily work station schedules cannot be changed by the planner until they have first been converted to a firm status.

The user controls the process of firming suggested daily work station schedules by selecting the organisational model and the range of dates to be firmed.

Within the selected date range to be firmed, firm schedules are created which equal the suggested daily work station schedules for those dates.

If a planner does manipulate a firm schedule, the system retains the original suggested schedule without change and is always in a position to compare suggested schedules with firmed schedules.

This report compares actual hours booked with scheduled hours for schedules meeting the selection parameters entered.



When Schedule Adherence is selected on the Work Station Management menu, the Schedule Adherence Report Selection screen is displayed.

MJ710	Z1 - GB Demonstration Company	User GBJBAMS	8/12/95 17:34:54
Schedule Adherence Report Selection			
Organisational Model...? __			
WIP Locations From....? __ to __			
Work Centre.....? _____			
OR			
Work Stations from....? _____ to _____			
Items from.....? _____ to _____			
Date range from..... <u>8/12/95</u> to <u>8/12/95</u>			
Over Production %..... <u>.000</u>			
Under Production %..... <u>.000</u>			
F3=Exit F4=Prompt F8=Submit Job			
05-35	Sr	MW	KS IM II KENB20A PET166S2

Fields:

Organisational Model

Enter the live organisational model.

WIP Locations From/To

This sets the limits for WIP locations to be included on the report. If both are left blank, there is no limit and all WIP locations are considered for the report.

Work Centre

A work centre may be entered here to refer to an associated group of work stations. This limits the report to these work stations only.

The work centre and work station range fields are mutually exclusive.

Work Stations Range

This sets the limit for work stations to be included on the report. The work station range fields and the work centre field are mutually exclusive.

If a work centre is not input and both these fields are left blank, there is no limit and all work stations are considered for the report.

Items From/To

This sets the limit for items to be included on the report.

If both are left blank, there is no limit and all items are considered for the report.

Date Range From/To

These are mandatory fields. They set the date range for which the report is to be generated.

The default range restricts the report to the current day but this can be extended.

Over Production %

This field provides the option to limit the report to specific schedules. A figure entered here is the lowest percentage of over production to be included on the report. The report generates a list including only those schedules whose actual quantity booked exceeds the quantity originally scheduled by this percentage or more. The default is zero (.000) which results in all schedules being included on the report.

Under Production %

This field provides the option to limit the report to specific schedules. A figure entered here is the lowest percentage of under production to be included on the report. The report generates a list including only those schedules whose actual quantity booked falls below the quantity originally scheduled by this percentage or more. The default is zero (.000) which results in all schedules being included on the report.

Compare Suggested and Firm Load Report

1...
2...

24/MJW

Suggested and firm work station schedules may become different because firm schedules are manipulated or because suggested schedules are refreshed by revised schedules planned by MRP in subsequent MRP runs. While the ability to firm and optionally manipulate firm schedules is a critical means of control in many production environments, it is valuable to be aware of inconsistencies between requirements and schedules.

Firm schedules may be subject to revision if the suggested schedules (which reflect current requirements) indicate that the firm schedule is no longer appropriate. The decision still rests with the planner, but this approach provides the basis for informed decisions. The Compare Suggested and Firm Load Report provides visibility to situations where firm work stations schedules no longer match suggested schedules and provides a basis for the review of specific firm work station schedules.

The report compares suggested and firm work station schedules (for final schedule operations) on a day-to-day basis for the date range selected. Any discrepancy between the activity levels required to support demands and firm scheduled production is shown on a daily and cumulative basis.



When Compare Suggested and Firm Load is selected on the Work Station Management menu, the Suggested Vs Firm Operation Schedule Variance Report screen is displayed.

MJ260	Z1 - GB Demonstration Company	USER GBJBAMS	8/12/95 17:34:30
Suggested vs Firm Operation Schedule Variance Report			
Model.....? ☐			
Work Centre.....? _____			
OR			
Work Station Range..? _____ to _____			
Date Range..... 8/12/95 to 8/12/95			
Variance %..... .000			
F3=Exit F4=Prompt F8=Submit job			
06-33	☐	MW KS IM	II KENB20A PET166S2

Fields:

Model

This is a mandatory field. Enter the live organisational model.

Work Centre

A work centre may be entered here to refer to an associated group of work stations. This limits the report to these work stations only. Entering a work centre and entering a work station range are mutually exclusive.

Work Station Range

This sets the limit for work stations to be included on the report.

Entering a work station range and a work centre are mutually exclusive.

If a work centre is not input and the work station range is left blank, there is no limit and all work stations are considered for the report.

Date Range

These are mandatory fields. They set the date range for which the report is to be generated. The default range restricts the report to the current day but this can be extended.

Variance %

The report includes only those schedules whose firm schedule varies from the suggested schedule by this percentage or more, in terms of both under and over production.

The default is zero (.000) which results in all schedules being included on the report.