



PRODUCTION ORDER CONTROL

Version 3.5.2 SP4

Product Guide

FRONTISPIECE

Copyright © 2001, Geac Enterprise Solutions Limited, Product Services Division, Eagle House, The Slough, Studley, Warwickshire, B80 7EN England.

All rights reserved.

No part of the material protected by this copyright may be reproduced or utilised in any form or by any means, stored in a retrieval system, or transmitted, in any form, or by any means, electronic, mechanical, photocopying, or otherwise, without the express prior written consent of Geac Enterprise Solutions Limited.

Although every care has been taken in the production of this manual it cannot be guaranteed that the information contained herein is without error or omission.

This product information relates to:

Production Order Control Version 3.5.2 SP4

If you have any comments please e-mail: **infobase.feedback@geac.com**

Contents

CHAPTER 1 PRODUCTION ORDER MAINTENANCE	1-1
ABOUT PRODUCTION ORDER CONTROL	1-2
MAINTAIN ORDERS.....	1-12
<i>Production Order Maintenance Selection Screen.....</i>	<i>1-13</i>
<i>Production Order Selection Window.....</i>	<i>1-15</i>
<i>Production Order Maintenance Details Screen.....</i>	<i>1-17</i>
<i>Output Quantity Maintenance Window</i>	<i>1-24</i>
<i>Production Order Maintenance Inputs Screen</i>	<i>1-26</i>
<i>Input Item Maintenance Window 1.....</i>	<i>1-28</i>
<i>Input Item Maintenance Window 2.....</i>	<i>1-31</i>
<i>Production Order Maintenance Inputs Copy Screen</i>	<i>1-32</i>
<i>Production Order Maintenance Copy From Another Order Screen.....</i>	<i>1-34</i>
PRODUCTION BATCH BALANCING.....	1-35
<i>Lot Balancing Maintenance Selection Screen</i>	<i>1-36</i>
<i>Lot Balancing Window.....</i>	<i>1-37</i>
<i>Potent Lot Window.....</i>	<i>1-38</i>
RELEASE ORDERS	1-40
<i>Production Order Release Selection Screen.....</i>	<i>1-41</i>
<i>Production Order Release Details Screen.....</i>	<i>1-43</i>
<i>Lot Balancing Window.....</i>	<i>1-46</i>
<i>Potent Lot Window.....</i>	<i>1-48</i>
<i>Filler Requirements Window.....</i>	<i>1-50</i>
<i>Production Order Release Orders Screen</i>	<i>1-51</i>
GENERATE WAREHOUSE REQUIREMENTS	1-54
<i>Generate Warehouse Requirements Screen</i>	<i>1-55</i>
<i>Create Material Requirements Screen</i>	<i>1-57</i>
PRINT ORDER DOCUMENTATION	1-58
<i>Print Order Documentation Option Screen</i>	<i>1-59</i>
<i>Print Order Documentation Selection Screen.....</i>	<i>1-60</i>
ORDER COMPLETION	1-62
<i>Production Order Completion Selection Screen.....</i>	<i>1-64</i>
<i>Production Order Completion Select Order Screen.....</i>	<i>1-66</i>
<i>Production Order Completion Details Screen.....</i>	<i>1-67</i>
GENERATE INSPECTION ORDERS.....	1-69
<i>Create Inspection Orders Option Screen.....</i>	<i>1-70</i>
<i>Create Inspection Orders Selection Screen</i>	<i>1-71</i>
ORDER STOP/RESTART	1-73
<i>Production Order Stop/Restart Selection Screen.....</i>	<i>1-74</i>
<i>Production Order Stop/Restart Order Review Screen.....</i>	<i>1-76</i>
<i>Production Order Stop Confirmation Window.....</i>	<i>1-78</i>
<i>Production Order Restart Confirmation Window</i>	<i>1-79</i>
CHAPTER 2 PRODUCTION ORDER TRANSACTIONS	2-1
ISSUE MATERIALS.....	2-2
<i>Issue Materials Selection Screen.....</i>	<i>2-4</i>
<i>Production Order Selection Window.....</i>	<i>2-6</i>
<i>Record Issues And Adjustments Screen</i>	<i>2-8</i>
<i>Substitutes Window</i>	<i>2-12</i>
<i>Record Unplanned Issue Window.....</i>	<i>2-14</i>
BOOKINGS.....	2-17
<i>Production Order Booking.....</i>	<i>2-19</i>

Production Order Booking Header Screen.....	2-20
Production Order Booking Details Screen.....	2-23
Crew Details Window	2-30
Component Details Window.....	2-31
Outputs Window	2-33
Enter Location Balances Window	2-35
Add/Amend Output Window	2-40
Select Location/Batch Window.....	2-42
Scrap WIP Details Window	2-43
Held WIP Details Window	2-44
Booking Details Window	2-45
<i>Operator Booking</i>	2-47
Operator Booking Header Screen	2-48
Operator Booking Details Screen.....	2-51
BACKFLUSH PRODUCTION RECEIPTS.....	2-58
<i>Backflush Receipts Selection Screen</i>	2-59
<i>Backflush Receipts Detail Screen</i>	2-60
SUBCONTRACTOR WIP SHIPPER.....	2-62
<i>Subcontractor WIP Shipper Entry Screen</i>	2-63
<i>Shipper Details Window</i>	2-67
SUBCONTRACTOR MATERIAL SHIPPER.....	2-68
<i>Subcontractor Material Shipper/Return Screen</i>	2-69
RECEIVE FROM SUBCONTRACTOR	2-72
<i>Subcontractor Order Receipts Entry Screen</i>	2-73
<i>Component Details Window</i>	2-77
<i>Output Details Window</i>	2-78
<i>Add/Amend Outputs Window</i>	2-80
<i>Scrap Window</i>	2-82
<i>Held Window</i>	2-83
<i>Receipt Details Window</i>	2-84
CHAPTER 3 PRODUCTION ORDER ENQUIRIES AND REPORTS.....	3-1
PRODUCTION ORDER ENQUIRIES	3-2
<i>Order Enquiry</i>	3-3
Production Order Enquiry Selection Screen	3-4
Production Order Selection Screen	3-6
Production Order Enquiry Detail Screen.....	3-7
Order Enquiry Operations Review Screen.....	3-9
Order Enquiry Operation Bookings Screen	3-11
Order Enquiry Materials Review Screen.....	3-13
Order Enquiry Material Movements Screen.....	3-15
Order Enquiry Receipts/Adjustments Screen	3-16
<i>Archived Order Enquiry</i>	3-17
Archived Production Order Enquiry Selection Screen	3-18
PRODUCTION INPUT REQUIREMENTS.....	3-20
<i>Production Input Requirements Selection Screen</i>	3-21
<i>Production Input Requirements Detail Screen</i>	3-22
<i>Stock Room Balances Window</i>	3-24
MATERIAL AVAILABILITY	3-25
<i>Material Availability Enquiry Selection Screen</i>	3-26
<i>Material Availability Enquiry Select Order Screen</i>	3-28
<i>Material Availability Enquiry Detail Screen</i>	3-29
<i>Material Availability Enquiry Trial Allocations Screen</i>	3-32
WORK STATION PRODUCTION LIST	3-33
<i>Work Station Production List Selection Screen</i>	3-34
<i>Work Station Production List Review Screen</i>	3-35
<i>Work Station Production List Operations Screen</i>	3-37
<i>Work Station Production List Detail Screen</i>	3-39
PRODUCTION BATCH BALANCE ENQUIRY	3-40

SUBCONTRACT SHIPPER SCHEDULE REPORT.....	3-41
<i>Subcontractor Shipping Schedule Report Screen</i>	3-42
SUBCONTRACT SHIPPER NOTES	3-44
<i>Subcontractor Shipper Print Screen</i>	3-45
SUBCONTRACT STOCK REPORT	3-47
<i>Subcontractor Stock Status Report Screen</i>	3-48
SUBCONTRACT RECEIPTS SCHEDULE	3-51
<i>Subcontractor Receipts Schedule Report Selection Screen</i>	3-52
ORDER STATUS REPORT.....	3-54
<i>Production Order Status Report Screen</i>	3-55
MATERIAL AVAILABILITY REPORT	3-56
<i>Material Availability Report Screen</i>	3-57
WORK STATION PRODUCTION LIST REPORT.....	3-59
<i>Work Station Production List Report Selection Screen</i>	3-60
WIP VALUATION REPORT.....	3-62
<i>Work In Progress Valuation Report Screen</i>	3-63
<i>Cost Presentation Window</i>	3-65
MATERIAL YIELD REPORT.....	3-67
<i>Production Yield Variance Report Selection Screen</i>	3-68
LABOUR EFFICIENCY REPORT.....	3-70
<i>Labour Efficiency Report Selection Screen</i>	3-71
ORDER VARIANCE REPORT.....	3-72
<i>Production Order Variance Report Selection Screen</i>	3-73
PLANNING VARIANCES REPORT.....	3-74
<i>Work Station Production Variance Report Selection</i>	3-75
PRODUCTION VARIANCES REPORT.....	3-77
<i>Work Station Production Variance Report Selection Screen</i>	3-78
GLOSSARY	I
GLOSSARY	II


-
-
-
-
-

Chapter 1

Production Order Maintenance

About Production Order Control

Production Control is the combined functionality of the Production Order Control, Production Schedule Control and Production Support applications. These provide the means to record the actual implementation of the production plan. Production Order Control and Production Schedule Control permit operational transactions to be made against the plan.

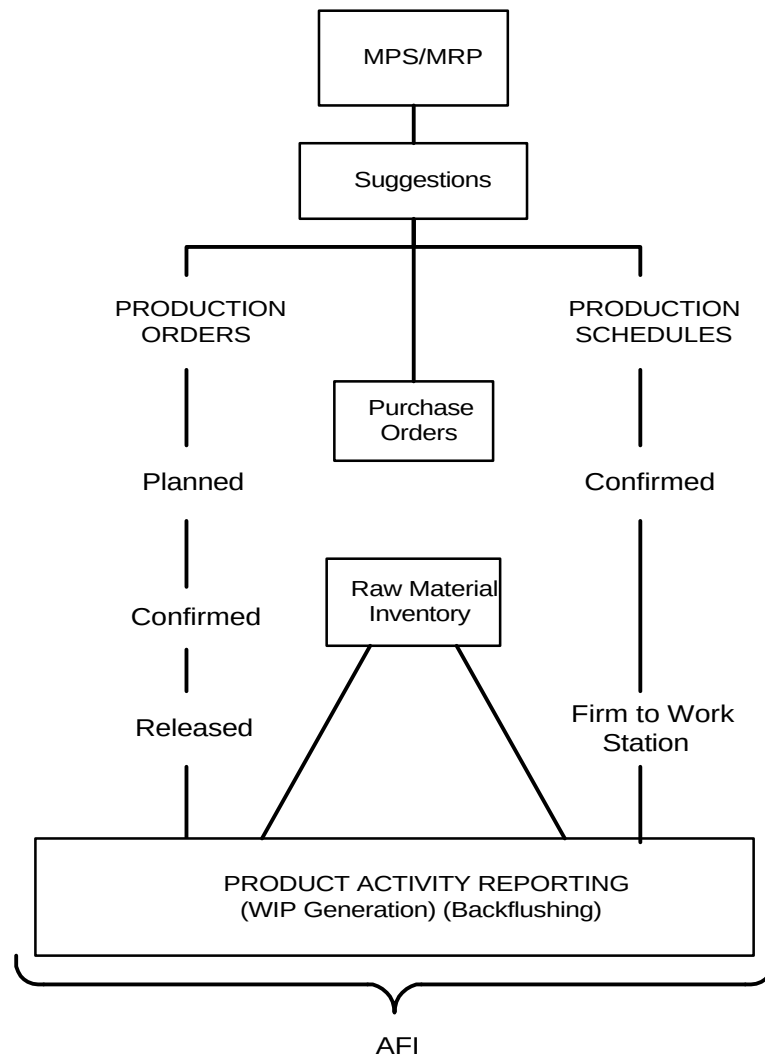

Production Order Control comprises:

- Maintenance
- Transactions
- Enquiries and Reports.

Sales orders, customer schedules and forecasts are combined to create a demand input to Master Production Scheduling (MPS). A high level plan is

created which suggests production and purchase order quantities and dates. This plan normally consists of only customer deliverable or saleable items.

You can then check your capacity to implement the high level plan with Rough Cut Capacity Planning and, if necessary, rerun the MPS planning cycle.

Once a plan is agreed, the suggested orders output from the MPS cycle are then combined with associated component items and raw materials to create a demand input to the Material Requirements Planning (MRP) application. MRP reconciles existing production commitments with the revised MPS demand to create a more detailed production and purchase order plan. This plan suggests all purchase and production orders relevant to a user defined planning horizon.

Again, before confirming any aspect of the new plan, the capacity of the production facility can be checked with the Capacity Requirements Planning (CRP) application to make sure that with realistic loading, it is possible to achieve the plan. This may require a number of iterations of the MRP planning cycle. Rough Cut is not used at this point as it is assumed all planning details have been finalised.

When the production plan is finally approved, production and purchase orders are created and the planning cycle passes to the production cycle.

The production cycle allows orders of varying status to be released to production. Once released, orders may be tracked by notifying the system of operations and transactions completed through the Production Order Control Maintenance and Transactions functions. Completed items pass into Inventory to complete the Operations cycle.

Production Order Control:

- Controls and directs the movement of production orders through all the production processes, from the transfer of raw materials and components into work in progress, and to the delivery of finished goods into Inventory.
- Provides facilities to control and monitor actual shop floor line activities, and is more suited to flexible, low to medium volume product structures.



Note: Purchase Management controls and directs the movements of purchase orders.

You can create production orders from:

- Master Production Schedule (MPS) runs.
- Material Requirements Planning (MRP) runs.
- Manual Entry.

Each item to be produced has a unique order number against which materials can be issued and operational bookings made.

Production orders have a different status according to which stage they have reached in the production process.

Material movements are controlled in two ways:

- Raw materials from Inventory into work in progress.
- Finished items from work in progress to Inventory.

Production Order Status Control

A Production or Works Order is a document that sets out the production details of a specific item, in specific quantities, and is used as an authority to carry out the production processes required.

Each production order passes through a number of stages in its life cycle. Each stage is known as an Order Status. Abbreviations are used for each order status for enquires. They are:

DESCRIPTION	ALPHA CODE	NUMERIC CODE
SUGGESTED	SUG	not used
PLANNED	PLN	1
CONFIRMED	CON	2
RELEASED	REL	3
ACTIVE	ACT	4
COMPLETE	FIN	8
CANCELLED	CNL	9

The following tables show details of each production order status:

Production Order Status: SUGGESTED	SUG	
<u>Created By</u> • MPS runs. • MRP runs. <u>Characteristics</u> • The orders only appear in MPS or MRP. • You can make enquiries on these orders in Production Order Control. • The orders are for a specific item and stockroom. They have a planning route code, due date and quantity. <u>Possible Actions</u> • Firm up into a CONFIRMED order by taking the appropriate action in MPS, MRP or both. • Take no action, in which case any remaining suggested orders are deleted by the next run.		

Production Order Status: PLANNED	PLN	1
<u>Created By</u> Direct entry into Production Order Control. <u>Characteristics</u> • These orders represent a planned supply for which there is as yet no demand for materials or resources. • The orders are for a specific item and stockroom. • They have a planning route, due date and quantity. • You can create planned orders with non standard routes, the route details being entered when the order is raised. This then becomes an amended standard route for this order only. They are shown as On Order in the Inventory system. <u>Possible Actions</u> • Convert into a CONFIRMED order by using the Production Order Control, Maintain Orders option. • Maintain the route details, due dates and quantities. • Convert into a CANCELLED order by using the Production Order Control, Maintain Orders option.		

Production Order Status: CONFIRMED	CON	2
<u>Created By</u> • Firm up of SUGGESTED orders in MPS and MRP. • Conversion of PLANNED orders in Production Order Control. <u>Characteristics</u> • This type of order establishes a demand for materials and resources. • The orders have the same characteristics as SUGGESTED orders, but with the full route details listing materials required and resources to be used. They are shown as On Order in the Inventory Management application. <u>Possible Actions</u> • Convert into a RELEASED order by using the Production Order Control, Maintain Orders option. • Maintain route details, due dates and quantities. • Convert into a CANCELLED order by using the Production Order Control, Maintain Orders option.		

Production Order Status: RELEASED	REL	3
<u>Created By</u> Release of single or multiple CONFIRMED orders in Production Order Control. <u>Characteristics</u> • You can issue materials to this order type and book operational details. • On release, several tasks are available: – Change the order priority – Print the order document – Issue materials for the first operation only, or for all operations – Automatically allocate materials if the required flag is set in the company profile. When materials are subsequently issued, the allocated quantity will be reduced and not the physical quantity. Create Inspection Orders if the QS application is installed. <u>Possible Actions</u> • Make operational bookings. • Issue further materials. • Maintain route details and due dates. • Convert into a COMPLETE order by: – booking finished goods into Inventory – using the manual Order Completion facility in Production Order Control. • Convert into a CANCELLED order by using the Order Completion facility.		

Production Order Status: ACTIVE	ACT	4
<u>Created By</u> Material issues or bookings being made against a RELEASED order. <u>Characteristics</u> The orders have the same characteristics as RELEASED orders. <u>Possible Actions</u> • Make operational bookings. • Issue further materials. • Maintain route details and due dates. • Convert into a COMPLETE order by: – booking finished goods into Inventory – using the manual Order Completion facility in Production Order Control. • Convert into a CANCELLED order by using the Order Completion facility.		

Production Order Status: COMPLETE	FIN	8
<u>Created By</u> • Transfer of finished goods to Inventory. • Manual completion of RELEASED or ACTIVE order. <u>Characteristics</u> You cannot issues materials or make bookings to these orders. <u>Possible Actions</u> • Reopen and make further bookings. • Delete all COMPLETED orders by using the Production System Utilities, Archive Production Orders option.		

Production Order Status: CANCELLED	CNL	9
<u>Created By</u> • Use of the Order Deletion facility within the Production Order Control Maintenance, Order Completion option on PLANNED, CONFIRMED, RELEASED, or ACTIVE orders. <u>Characteristics</u> • You cannot access or maintain these orders in any way. <u>Possible Actions</u> • Enquiries only.		

Order Processing

Order Processing involves:

- Order entry.
- Order maintenance.
- Order release.
- Material issue.
- Documentation issue.
- Production planning.
- Order completion.
- Receipt of finished goods.
- Monitoring progress by means of enquiries and reports.
- Measurement and evaluation of performance.

Potency Control



Note: Inventory Management has facilities for supporting lot control and for the definition of potency, if it is required for an item.

Potency is used when the strength or the effectiveness of an input must be measured to make sure that the final product is of acceptable quality.

There are a variety of industries and processes that can make use of potency control in their production. The brewing industry is one example where some of the raw materials are natural ingredients, and are therefore not all exactly the same. The strength and quality of the hops may vary, not only from year to year, but also from farm to farm.

Not all inputs require potency control. For those that do, the standard potency, that is, the normally expected potency, is defined on the Inventory Lot Header Details. You can use this when creating or maintaining routes to make sure that the route produces the correct quality for the finished item. To do this, the software calculates the number of potency units needed to make the finished item to the required standard.

Potency is expressed as a percentage. If, for example, we had 100 physical units with a potency of 80%, then we would calculate that there would be 80 potency units available from this material.



Warning: To use potency, the items must be lot controlled.

Potency Calculation of Equivalent Physical Quantities Example

For example, the standard potency of a finished product is 50% using 1000 physical units. We have a stock lot of 2000 physical units at an actual potency of 40%. How many physical units of this lot must be issued to make the standard potency?

The finished product must have 500 potency units because this is the standard. To calculate the physical units required:

Potency Units Required / Actual Potency %

In this example: $500 \times 100 / 40$

= 1250 physical units

Normally we would have used 1000 physical units at a standard potency of 50% to make the finished item, but because the actual potency is only 40% we have had to use 1250 to achieve the final result.

This is the figure that is used by MPS and MRP for planning purposes.

Potency Shelf Life

Shelf life is a feature of Inventory Management that limits the availability of specific lots or batches of material to a fixed period.

This period is normally expressed in days, weeks, months or even years from the date it is first received. The goods receiving procedures recognise that the material is subject to a limited shelf life and prompt for expiry dates and, if selected, an expiry time.

Items subject to potency control can have a limited shelf life.

Potency Production Order Processing

This creates a production order to carry out potency control. This is done by either:

- Conversion of suggested order in MPS/MRP, or
- Manually using the Production Order Control, Maintain Orders option.

When you have created the order, you can then release it. The normal procedure when processing a production order subject to lot control is:

1. Raise the order manually using the Maintain Orders option, or from MPS/MRP.
2. Use the Production Batch Balancing task to select the actual quantity of inputs to produce the required number of potency units.
3. Release the order. Note that if you have not performed batch balancing the release task will require you to do so before the order is released.
4. Enquire on batch balance using the Production Batch Balancing option, if required.
5. Issue the material.

Order Release

Within order release you can allocate materials from specific lots. If these lots contain different levels of potency, then you must select the correct number of potency units to use. This process is called lot balancing and is part of the Release Orders option.

Maintain Orders



1/PCM

Use this option to create and maintain production orders. Order maintenance includes:

- Order review.
- Operation and input selection.
- Operation maintenance.
- Input maintenance.
- Text maintenance.
- Inclusion of operations and inputs from another order or route.



Tip: You can also create new orders automatically from MRP and MPS runs.

Production Orders And Non-production Routes

You cannot create production orders for routes that are classified as non-production routes. For more information, refer to the Routes/Structures option in Production Definition Maintenance.

Considerations On Amending Production Orders

- If you change the shrinkage factor, you must manually change the times and the input quantities to take account of the change.
- The times displayed are the total duration time for this operation.
- If you make any amendments to the order details, the Order Type shown on the order header is changed to Amended Standard.
- Having made changes to the details or header date, the start date is compared with the current date. If there is insufficient time to complete the order a message latest start date is before today's date is displayed.

Production Order Maintenance Selection Screen



To display this screen, select the Maintain Orders option.

You use this screen to select the production orders you want to maintain.

You can enter a specific production order number or enter selection criteria to view a list of orders that match those criteria.

```

PC130          Z1 - GB Demonstration Company   USER GBJBAAA4   19/03/99
Production Order Maintenance                   8:44:06
                                                Week: 11 99

Production Order...?.: _____

OR Select by:

Item.....?.: _____
Route.....?.: _ or 1 (1=All routes)
Reference.....?.: _____
Order Type.....: _____ (1=Standard 0=Non-standard)
Orders Due from.....: 19/03/99 to: 19/03/99

F3=Exit   F4=Prompt   F8=Create new order   F16=Review orders

MA  a                                     05/026
  
```

Fields:

Production Order

Enter the number of an existing production order that you want to maintain.

You can also create a new production order by entering a unique order number and selecting **F8=Create New Order**.

Or Select By

You can complete the remaining fields and select **F16=Review Orders** to display all the existing orders that meet the selection criteria.

Item

Enter an item code to display all orders for this finished item, subject to the next three selection criteria.

Leave the field blank to display all orders for all finished items, again subject to the next three selection criteria.

Route

For a single route, enter its code in the first field. For all routes, enter 1 in the second field.



Note: If you enter details in both Route fields, all routes are selected.

Reference

Use this to select orders based on the entries made in the Reference 1 field on the Production Order Maintenance Details Screen.

Order Type

You can enter one of the following options:

0 - Non standard. For orders based on non standard routes.

1 - Standard. For orders based on standard routes, including amended standard routes.

Orders Due From/To

Enter the date range for the orders you want to enquire on. The default date in both fields is the current system date.

Functions:

F8=Create New Order

Use this function to create a new production order. This displays the Production Order Maintenance Details Screen.

You can create a new production order by:

- Entering a unique order number in the Production Order field and selecting **F8=Create New Order**.
- Selecting **F8=Create New Order** without completing any other fields.

F16=Review Orders

Select this option to display a list of orders in the Production Order Selection Window, based on the criteria in the selection fields.



Enter a Production Order Number in the Production Order field and press **Enter** to display the Production Order Maintenance Details Screen.

Production Order Selection Window



To display the Production Order Selection Window, select **F16=Review Orders** on the Production Order Maintenance Selection Screen.

This window lists the orders that meet the selection criteria you entered on the Production Order Maintenance Selection Screen. Other details displayed include:

- The item or process group being ordered.
- The status of the order. Refer to the Production Order Status Control section for details of the different statuses.
- The order quantity.
- The unit of measure and stockroom used for the item.
- The due date for order.
- The route used for the works order.
- The order reference.

```

PC130                Z1 - GB Demonstration Company    USER GBJBAAA4    19/03/99
                                           9:34:55
Production Order Maintenance                               Week: 11 99
Production Order...?: _____

Production Order Selection
S T Order  Item/Group  Sts  Order Qty UOM St Due Date R Reference
-  W003059 MH-P-ALLP   2    2.000 EA FG  9/02/99 A
-  W003060 ADKEY      2    2.000 EA FG  9/02/99 1
-  W003061 MRPPAR1    2   11.000 EA FG 15/02/99 A
-  W003074 ADKEY      2    1.000 EA FG 10/02/99 1
-  W003080 ADKEY      2    1.000 EA FG 11/02/99 A
-  W003081 P-KEY      2    1.000 EA FG 11/02/99 2
-  W003082 MH-P-ALLP   2    1.000 EA FG 11/02/99 A
-  W003083 ADKEY      2    1.000 EA FG 11/02/99
-  W003092 702        2    1.000 EA FG 17/02/99 1
-  W003113 BIKE-MODEL  2    1.000 EA 01 17/02/99 C
1=Select
F12=Previous  F22=Expand/Contract
  
```

Fields:

Select (S)

Enter 1 against an order and press **Enter** to display the Production Order Maintenance Details Screen, with the selected order displayed.

Functions:

F22=Expand/Contract

Use this to toggle between displaying more or less information about all the orders listed in the window.



Enter 1 against an order and press **Enter** to display the second Production Order Maintenance Details Screen.

Production Order Maintenance Details Screen



To display this screen, either select **F8=Create New Order**, or enter an order number and press **Enter** on the Production Order Maintenance Selection Screen;

Or,

Enter 1 against an order on the Production Order Maintenance Selection Window.

You can use this screen to create new production orders or maintain the details of existing production orders.

When you are maintaining existing orders, the information you can amend depends on the status of the order. The remaining fields are shown for information only, and cannot be amended.



Warning: When amending dates on existing production orders, you must blank out the Start Date/Start Week/Due and Date/Due Week as appropriate, so that the changes can be calculated properly.

PC151	Z1 - GB Demonstration Company	USER GBJBAAA4	19/03/99
			11:26:22
Production Order Maintenance			Week: 11 99
Order Number.....: _____ * Enter new order details.			
Order Type.....: 1 (0=Non-Standard)			
Item.....?..: _____			
Process Group.?..: _____			
Route Code.....?..: -			
Quantity.....: _____		UOM.....: _____	
Use Operation Quantities for Duration		Stockroom: _____	
Due Date.....: _____		Calculations (0/1) 0	
Start Date.....: _____ OR		Due Week.....: _____	
		Start Week.....: _____	
Operation Effectivity Policy 0 (0=Due Date, 1=Start Date)			
Calendar Code...?. 01		Reference 1.....: _____	
Planning Filter.?. -		Reference 2.....: _____	
Output Validation. 0		Shelf Life Val.... 0	
Firm Planned Order - (1=Yes)			
F3=Exit F4=Prompt		F8=Add new order F12=Previous	
F16=Item search		F19=Create details	
M0 a			08/022

Fields:

Order Number

If you are creating a new production order, enter an order number here or leave blank for the system generated number.

If you are maintaining an existing order, this field displays the order number and cannot be changed.

Status

This is system generated. The order status changes to Confirmed after you have entered all relevant details and selected **F19=Create Details**. If you want a Planned order, enter the order details, and then select **F8=Add New Order**.



Note: Process groups containing co-products must have a status of Confirmed and cannot have a status of Planned.

Order Type

Specify the order type.

Enter one of the following:

0 - Non standard. You must manually enter all the operations and inputs needed to define the order. When you select **F8=Update Order**, the Production Order Maintenance Inputs Screen is displayed.

1 - Standard. The system generates all the operations and inputs from the route.



Note: You cannot create non standard orders for a process group with lot balanced items, or for a process group containing co-products, but you can amend the order after it has been created.

Item

You can enter any one of the following:

- A finished item code.
- If the order is for a whole process group, enter the process group code.
- For a co-product item that is part of a process group, enter the co-product item code.

Process Group

If you entered a co-product in the Item field, enter the process group that it is part of in this field.

If you entered a process group code in the Item field, you can leave this field blank and the software will update it when you press **Enter**.

Route Code

Enter the code of the route you want to use for the order.



Note: You cannot use non production routes to create works orders.

UOM

This is the unit of measure for the item, as defined on the Process Route Header Maintenance Screen. This is displayed for your information only.



Tip: You use the Routes/Structures option in Production Definition Maintenance to maintain the process route header.

Quantity

Enter the required order quantity.



Warning: *You cannot alter the quantity once an order has been released.*

For standard orders, if left blank, the quantity defaults to the economic order quantity (EOQ) defined on the associated route.

If the order item is a process group, the quantity is used to calculate equivalent quantities of output items that are produced by the order. The software does this by using the standard quantity relationships of the output item, defined on the selected process group route.

If the order item is a co-product on a process group, the associated co-products, by-products and waste products defined on the route are calculated in the appropriate ratio defined on the route.

Stockroom

This is the receiving stockroom, as defined on the Process Route Header Maintenance Screen. This is displayed for information only.



Tip: You use the Routes/Structures option in Production Definition Maintenance to maintain the process route header.

Use Operation Quantities For Duration Calculations

This field is only displayed when you set the Use O/S Operation Quantity field in the production company profile to either 1 or 2.

The settings determine the way the software recalculates work order duration, and hence due date and start date.

Enter one of the following:

0 - Use the order quantity. For duration calculations, the software assumes that the total quantity required will be outstanding at all operations.

1 - Use the operation quantity. The software will use the remaining quantity at each operation to calculate duration. This will result in a shorter lead time for partially complete orders.

Due Date

This is the date by which the order must be completed. You can derive it in one of the following ways:

- You can directly enter a date.
- Press **Enter**, and let the software calculate the due date from the start date by forward scheduling.
- Leave this field, the Start Date and Start Week blank, and the due date will default to the Friday of the specified due week.

Due Week

This is the week when the order will be finished. The week is displayed in the WWYY format, where WW is the week number and YY the year.

You derive it in one of the following ways:

- Enter a value and the due date is calculated from it.

- Leave blank and the system calculates a value from the due date using the associated week in the calendar.

Start Date

This is the earliest start date on which work can begin, or the date you want to begin producing the order on. You can derive it in one of the following ways:

- You can directly enter a date.
- The software calculates it from the due date by backward scheduling.
- It defaults to the current date if the start date and start week are not specified.
- It defaults to the first working date of the start week if the Start Date is blank, but the Start Week contains a value.

Start Week

This is the week when the order is to be started, shown in WWYY form.

If you enter the start date without a start week, the software calculates the start week using the associated week number from the calendar specified in the Calendar Code field.



Note: If you do not enter a due and start date or a due and start week, the default used is the current date and week.

Latest Start Date

This is calculated from the due date by backward scheduling, using the lead time of the order. It is the latest possible date on which the order can be started and still meet the due date of the order. It is possible that the date could be in the past, if the available time is less than the lead time. If this happens, an error message is displayed.

Latest Start Week

This is calculated from the latest start date using the associated week number from the calendar specified in the Calendar Code field.

Operation Effectivity Policy

You must specify the policy that will be used to calculate the lead time for the work order. Enter one of the following:

0 - Use operation effective due dates. This is the default.

1 - Use operation effective start dates. This is normally used for work orders created from MPS and MRP suggestions. This is in line with the lead time calculations, which are based on the start date.

Calendar Code

Enter the code of the calendar to be associated with this order. Leave blank if you want to use the default code specified in the production company profile.

Planning Filter

You can specify the planning filter character associated with this order. The filter is a suffix to the order status code, and this combination defines the

rescheduling policy for the order in MPS and MRP planning runs. You must define the planning filters in the Parameter File, against major type WTyp.

Leave the field blank if no special conditions apply to this order.

Reference 1, Reference 2

In these fields, you can enter references for identification or grouping purposes. You can search for items that have these references, using **F16=Item Search**.

Output Validation

This is only valid for process group items. On making production bookings against this order, you can validate the quantity of all the outputs against the WIP quantity booked. Enter one of the following:

0 - The WIP quantity booked must equal the quantity of the reported primary co-product.

1 - The WIP quantity booked must equal the total of all the output quantities booked.

2 - No validation is needed.

Shelf Life Validation

This flag is only effective for lot controlled items. You can set this so that the order will have a different shelf life validation policy from that normally associated with the item.

This flag may only be maintained for a standard order with an order status of Planned; once the order has been Confirmed, it cannot be changed. For non standard orders, you can maintain the flag at Confirmed status.

Enter one of the following:

0 - For no check to be performed when issuing lots.

1 - When issuing lots to a production order, a check is performed and a warning displayed if the selected lots become unavailable, that is, past their last available date, before the parent item itself becomes unavailable. This is calculated from the order due date and the parent's shelf life. No check is carried out for automatic allocation and issuing.

Firm Planned Order

Enter one of the following:

Blank - No. This is not a firm planned order.

1 - Yes. This is a firm planned order. When the order is processed the following actions will occur:

- Netting will take place after normal supply has been considered.
- Filter settings will be ignored.
- Cancellation and rescheduling, in or out, are prohibited.
- Suggested quantity change is allowed, but is non executable, that is, it is only an indication of the suggested supply requirement.
- The firm supply quantity will always generate dependent demand.

- The firm supply quantity calculates the production lead time.
- The available stock figure is displayed through the planning reviews, and will only consider the firm quantity.

Functions:

F8=Add New Order

Select this function to add an order with a status of Planned or, for process groups, a Confirmed order.

F15=Redistribute Qty

This function is only displayed when editing an existing process group item order. Select this function to display the Output Quantity Maintenance Window, where you can amend the output quantities.

F16=Item Search

Select this to display the Item Master Scan Window, to search for items.

F18=Amend Details

Select this to display the Production Order Maintenance Inputs Screen, where you can amend the order details.



*Note: If the Work Order Amend parameter in Change Management Parameter Maintenance has been set to 1, and the route associated with the work order is subject to change control, the **F18=Amend Details** key is disabled to prevent any of the work order details from being changed. To overcome this, you must raise and authorise an express change request type 72 (work order concession). The work order concession will cover all amendments you need to make to the work order, and will remain in force until you close the change request (status 90). Change type 99 (catch all) does not cover work order concessions.*

F19=Create Details

Select this to create an order with a status of Confirmed and:

- Increment the On Order quantity on the Inventory stock balance.
- Create the operation and input records from the specified route, if this is a standard order.

If you select this function for an existing Planned order, its status changes to Confirmed.

F21=Text

Select this to display the second Text Maintenance Screen where you can add, change and delete text.

F24=Display Outputs

This function is only displayed when editing an existing order for a process group item. Select this function to display the Output Quantity Maintenance Window.



Press **Enter** to validate your entries, then select
F8=Update Order to save your data.

Output Quantity Maintenance Window



To display this window, select **F15=Redistribute Qty** or **F24=Display Outputs** on the Production Order Maintenance Details Screen.

This window displays all of the outputs from the standard route, for a standard order, based on the order quantity of the process group. You can maintain the output quantities.

PC151	Z1 - GB Demonstration Company	USER GBJBAAA4	19/03/99
Production Order Maintenance		16:20:10	Week: 11 99
Order Number.....	W003185	* Existing order maintenance.	
Status.....	Confirmed		
Order Type.....	1 Standard		
Item.....	PGRP01	Process Group	
Output Quantity Maintenance			
Output Item	Output Type	Quantity	Prmy UOM Stkrn
CPRD01	1 Co-product	2.000	1 EA FG
CPRD02	1 Co-product	4.000	EA FG
CPRD03	1 Co-product	6.000	EA FG
BPRD01	2 By-product	1.000	EA FG
WPRD01	3 Waste	1.000	EA FG
F8=Update F12=Previous			
Firm Planned Order - (1=Yes)			
F3=Exit	F4=Prompt	F8=Update order	F11=Delete order F12=Previous
F15=Redistribute qty	F18=Amend details	F21=Text	F24=Display outputs
MA	a	MW	11/041

Fields:

Output Item

The item code of each output item is displayed for information only.

Output Type

The output type of each output item is displayed for information only.

Quantity

The software calculates the quantities for each output item, from the quantities defined on the route. You can amend these quantities here.

Prmy

Indicate which co-product is the primary output item by entering 1 in this field against the appropriate item. The software defaults to this automatically if you have already defined the primary output item within Routes/Structures Maintenance.

UOM

The unit of measure of each output item is displayed for information only.

Stkrn

The primary stockroom of each output item is displayed for information only.



Select **F8=Update** to save the details and return to the Production Order Maintenance Details Screen.



Tip: If you are creating a new order, selecting **F8=Update** will create a confirmed order.

Production Order Maintenance Inputs Screen



To display this, select **F18=Amend Details** on the Production Order Maintenance Details Screen.

Use this screen to amend the order details by amending the route being used. You can:

- Maintain operations - add new operations, amend or delete existing operations.
- Maintain inputs - add new inputs, amend or delete existing inputs.
- Copy operations and inputs from another order.
- Copy operations and inputs from another route.
- Re sequence the operations and inputs.



Warning: You cannot amend or delete an operation if this or subsequent operations are active or complete.

PC152	Z1 - GB Demonstration Company	USER GBJBAAA4	22/03/99 09:20:12
Production Order Maintenance - Inputs			
Order Number: W003184	Item: PGRP01	Quantity: 1.000	UDM: EA
Stockroom: FG	Process Group		
0 Opsq	Insq	Input	ST UM Description Quantity Shr%
—	10		Operation 10 .0
—	10	MATL01	RM EA Raw material 1 1.000 .0
—	20	MATL02	RM EA Raw material 2 1.000 .0
—	20		Operation 20 .0
—	30		Operation 30 .0
1=Maintain			
Enter Sequence to maintain Or Position to Operation			
F3=Exit F8=Update F12=Cancel F17=Copy Order/Route F19=Re-sequence F20=Maintain Outputs F21=Maintain Inputs & Outputs			
M& a			20/030

Fields:

Option (O)

Enter 1 in this field to maintain an operation. This displays the Production Order Maintenance Operation Screen, in Update mode.

Enter 1 to maintain an input. This displays the Input Item Maintenance Window, in Update mode.

For more details on the fields and functions within these maintenance options, refer to Routes/Structures Maintenance within Production Definition Maintenance.

Enter Sequence To Maintain

To maintain an operation, enter the operation sequence number in the first field.

To maintain an input, enter the operation sequence number in the first field and the input sequence number in the second field.

Position To Operation

Enter an operation sequence number to position the screen display at that operation. This is useful if you have a long list of operations and inputs, and you want to maintain one of the items that is not shown on the current display.

Functions:

F17=Copy Order/Route

Use this to copy all or part of an existing item/route or order to the order you are currently maintaining.

F19=Re-Sequence Or Change Details

If you are using Change Management, select this function to view authorised change requests and display specific details. Alternatively, if Change Management is not in use then this function lets you re-sequence, which means that when you add or edit a route, the sequence numbers can change. For example, you can re-sequence the operations and inputs in steps of 10.

F20=Maintain Outputs

Use this to maintain outputs. Output Item Maintenance is similar in operation to Input Item Maintenance.

When booking production information, you do not necessarily have to enter amounts against the main item of the process in order to reflect that quantities of co-products, waste products and by-products exist. The software warns you of outputs defined with zero quantities, but does not prevent you from entering other output type detail.

For more details on the fields and functions within these maintenance options, refer to Routes/Structures Maintenance within Production Definition Maintenance.

F21=Maintain Inputs & Outputs

Select this to display the Process Route Maintenance Inputs And Outputs Screen, where inputs and outputs are listed side by side.



Select **F8=Update** to save the changes and return to the Production Order Maintenance Details Screen.

Input Item Maintenance Window 1



To display this window, on the Production Order Maintenance Inputs Screen, enter 1 against an input, or enter an operation sequence number and an input sequence number, and press **Enter**.

Use this window to add a new input, or amend or delete an existing input. Inputs you add here will only be added to the works order you are maintaining. Use the Routes/Structures option in Production Definition Maintenance to add inputs to the operation.



Note: You cannot delete an input for which stock has been issued.

PC152		Z1 - GB Demo		Input Item Maintenance		1 of 2	
Production Order Maintenance - In				Operation 10 Input Seq. 10 UPDATE			
Order Number: W003184 Item: PGRP				Input Item..... MATL01			
Stockroom: FG Proc				Input Type..... 0 Material			
				Issuing Stockroom ..?.. RM			
0 Opsq Insq Input ST UM				Quantity 1.000			
1 10 10 MATL01 RM EA				Fixed Quantity Per.... (1=Yes)			
20 MATL02 RM EA				Shrinkage %0			
				Reference.....			
				Effective From Date ... 191295			
				Effective To Date 999999			
				UOM Conversion Factor..			
				Substitution Allowed... 1 (1=Yes)			
				Key Input Item.....			
1=Maintain				F4=Prompt F11=Delete F12=Cancel			
Enter Sequence to maintain ____							
F3=Exit F8=Update F12=Cancel F							
F20=Maintain Outputs F21=Maintain Inputs & Outputs							
MA a				06/062			

Fields:

Operation

This field contains the selected operation sequence. This is for your information only and cannot be amended.

Input Seq

This field contains the selected input sequence. This is for your information only and cannot be amended.

Input Item

Enter the item code of the material input required. It must already exist in the Item Detail file. The same input may be used more than once in an operation if you set the flag in the company profile to allow for this.

Input Type

This field displays the material type code and description associated with the entered input item code. This is for your information only and cannot be amended.

Issuing Stockroom

Enter the code of the stockroom from which this input is to be issued. If left blank, the primary stockroom as defined on the Item master file is used. Any MRP run using this route places a demand for this input at this stockroom.

Quantity

Enter the quantity required for the input item for this production order.

Fixed Quantity Per

Specify whether or not the quantity entered in the Quantity field is a fixed quantity regardless of the lot size of its parent. Enter 1 if the previous quantity is fixed, otherwise leave the field blank.

Shrinkage %

Enter the material shrinkage percentage for the standard quantity expected to be lost or scrapped in this operation.

This is different from the operational shrinkage. It is used to calculate the extra material required so that the standard quantity per can be produced. This additional material is included in the item cost.

In any operation there can be both operational and input shrinkage, in which case both are used in material requirement calculations.

Reference

Use this field to group together items that are amended, deleted, or added as a result of a change in the production process. You must enter upper case characters.

Effective From/To Date

Enter the effectivity dates. If left blank the dates default to 000000 and 999999 respectively, indicating a permanently effective route.

MRP and Product Costing only include this material if the control date is later than the From Date and is earlier than the To Date.

UOM Conversion Factor

This is the unit of measure conversion factor for the input item.

Substitution Allowed

Use this field to specify if you can use substitute items when this input item is not available, for example, when it is out of date.

0 - No. Substitute items are not allowed for input item.

1 - Yes. Substitute items are allowed if this input item is not available.

Key Input Item

This field is only applicable if the parent item or process group is lot controlled.

The key input item is the item in a route whose lot number is used to track work-in-process and finished goods lots.

You can only define one effective key input item per route. This means that you can only flag more than one item as a key input as long as the effectivity dates do not overlap. You do not need to define key inputs at the same level operation.

The field is only prompted if the parent item itself is lot controlled. The input must have a material control policy of 3 (issue to floor stock).

You use key input items to both set the last available and expiry dates of the parent item as well as aid the tracking of input lots through the production process.

Enter one of the following options:

0 or Blank - Not a key input item.

1 - The lot number of the WIP is set to the lot number of the key input item after the operation in which the key input item is included. The last available and expiry dates of the parent are set to those of the key input item. You cannot amend them. The lot number of the parent item is set to that of the key input item; however, you can change this in the outputs window when recording a booking.

2 - The lot number of the WIP is set to the lot number of the key input item after the operation in which the key input item is included. The last available and expiry dates of the parent are set to those of the key input item. You cannot amend them. The lot number of the parent item becomes the same as the key input item.



Press **Enter** to save any additions or amendments made and display Input Item Maintenance Window 2.

Input Item Maintenance Window 2



This window is displayed when you press **Enter** on Input Item Maintenance Window 1.

This is the second Input Item Maintenance Window. You use this window to specify what to do with demand that is left outstanding after an operation is completed, with an input requirement partially issued to a works order operation.

Use this to manage MPS and MRP planning in the situation where an input requirement is partially issued to a works order operation. You can complete the operation without the outstanding requirement being issued, and the outstanding demand can either be planned, or ignored, by MPS and MRP.

If you ignore this outstanding demand, the operation will be considered complete.

PC152		Version 3 Dem		Input Item Maintenance		2 of 2	
Production Order Maintenance - In				Operation 10 Input Seq. 10 UPDATE			
Order Number: W000180 Item: D664				Ignore Demand at Completed Ops _ (1=Yes)			
Stockroom: FG Pent							
0	Opsq	Insq	Input	ST	UM		
1	10						
1	10	D664	BOX	FG	EA		
2	20	10	WINDOWS CD	CS	EA		
3	30						
		10	KE105	RM	EA		
		20	HOU3	RM	EA		
		30	V15	RM	EA		
1=Maintain							
Enter Sequence to maintain _____							
F3=Exit F8=Update F12=Cancel F							
F20=Maintain Outputs F21=Maintain Inputs & Outputs							
F11=Delete F12=Cancel							
MA a				04/069			

Fields:

Ignore Demand At Completed Ops

Specify whether you want MPS and MRP to ignore demand created when an input requirement is partially issued to a works order operation.

Blank or 0 - No. Do not ignore this demand. This is the default setting. Use this to plan outstanding demand in MPS and MRP.

1 - Yes. Ignore this demand. Use this if you want this outstanding demand to be ignored and the operation considered complete.



Press **Enter** to save the changes and return to the Production Order Maintenance Inputs Screen.

Production Order Maintenance Inputs Copy Screen



To display this screen, select **F17=Copy Order/Route** on the Production Order Maintenance Inputs Screen.

You can copy all or part of an existing item/route or production order to the order you are currently maintaining.

Use this screen to select either a route or production order, from which to copy details.

PC152	AS - ALG Systems	USER STDMAN	26/06/00
Production Order Maintenance - Inputs			15:49:57
Order Number: W000053		Item: INK ASSY	Quantity: 10.000 UOM: EA
Stockroom: FG		Ink Cartridge Assembly	
0	Opsq	Insq	Input
-	10		ST UM Description
-			Fill Cartridge
-	10	INK CARTRIDGE	RM PL Ink Cartridge
-	20	INK BLACK	RM BX Black Ink
-			Fit Stopper
-	10	INK CARTSTOP	RM PL Ink Cartridge Stopper
			Quantity Shr%
			10.000 .0
			10.000 .0
			10.000 .0
			10.000 .0
Include at Sequence No.. 0000			
Copy from Item/Route...?. _____ Explode Phantoms.. 1 (1=Yes)			
OR Order Number...?. _____			
F4=Prompt F12=Cancel Copy F16=Item search			
MA	a	MW	19/029

Fields:

Include At Sequence No

Enter the operation sequence number you want to add or insert the new details into.

Copy From Item/Route

You can enter an item code in the first Copy From Item/Route field. You can also enter an existing route for the item in the second field.

OR

Order Number

Alternatively, you can enter a production order number to copy details from that order.

Explode Phantoms

Use this field to specify how the details of phantom items are copied. You can only use this for production routes.

0 - No. Only copy details of the parent phantom item to the works order you are maintaining.

1 - Yes. Copy the details of all of the components of the phantom item. This is the default.



Press **Enter** to display the Production Order Maintenance Copy From Another Order Screen.

Production Order Maintenance Copy From Another Order Screen



To display this screen, complete the Include at Sequence Number and Order Number fields on the Production Order Maintenance Inputs Copy Screen and press **Enter**. (These fields are displayed when you select **F17=Copy Order/Route** on the Production Order Maintenance Inputs Screen.)

This screen displays the details of the item/route or production order you selected on the previous screen. You use this screen to select the operations you want to copy.

PC158	AS - ALG Systems	USER STDMAN	26/06/00 15:51:55	
Production Order Maintenance - Copy From Another Order				
Order Number W000053 Item INK ASSY Ink Cartridge Assembly				
Copy details from:-				
Order Number W000052 Item				
Op.Sq	Cp.Sq	Component	St Description Quantity	
10			Inspection of D10128 box	
10	10	D10128 BOX	FG Pentium III 500MHz 10GB 128MB Box	2.000
20			Software Installation	
20	10	WINDOWS CD	RM Windows98 Software Kit	2.000
30			Final inspection	
30	10	KE105	RM Standard Windows Keyboard	2.000
30	20	MOU3	RM 3 Button MS Compatible Mouse	2.000
30	30	V17	RM 17" VGA Monitor	2.000
30	40	D10128 BOX	FG Pentium III 500MHz 10GB 128MB Box	2.000
40			Final PC packing	
Copy details from operation sequence: _____ to operation sequence: _____				
OR position display at operation seq: _____				
F12=Previous				
MA	a	MW	20/043	

Fields:

Copy Details From/To Operation Sequence

You can enter the range of operations to be copied. Both the From and To operations and their inputs are included.

Or Position Display At Operation Seq

You can use this field to enter the operation to position at the top of the display.



Enter the operations you want to copy in the Copy Details From/To Operation Sequence field and press **Enter** to redisplay the Production Order Maintenance Inputs Screen, with the operations copied in.

Production Batch Balancing



2/PCM

Use this option to:

- Perform Batch Balancing if it is not performed at the Order Release task.
- Amend batch balanced items. You should always clear existing allocations before making amendments.

Lot Balancing Example

Lot Size=100

Balancing Quantity=110

Input A - 100 kgs with standard potency of 50%

Input B - 10 kgs (filler)

Production Order raised for 100 kgs.

The following lots of item A are available:

- Lot L714 With a potency of 40%
- Lot L715 With a potency of 75%

To make the order of 100 kgs with a potency of 50% requires 50 potency units:

One way this may be done is to:

Use Lot L714: 50 kgs at 40%=20 potency units

Use Lot L715: 40 kgs at 75%=30 potency units

Total of 90 kgs=50 potency units

Filler needed: 20 kgs to make up quantity to batch balancing total of 110 kgs.

Batch Balancing In A Location Controlled Stockroom

When potent items are stored in a location controlled stockroom, the Enter Location Balances Window is displayed so that you can enter location details for the issue.



Tip: Refer to the Production Order Booking option for more information on the Enter Location Balances Window.



Tip: Refer to Processing With in A Location Controlled Stockroom in the Inventory Management product information for more information on location control

Lot Balancing Maintenance Selection Screen



To display this screen, select the Production Batch Balancing option.

You use this screen to enter the production order number you want to review lot balancing for.

```
PC320          Version 3 Demonstration Company  USER STDMAN  10/12/99
                                           16:53:47

Lot Balancing Maintenance

Production Order number..?: _____

F3=Exit  F4=Prompt

MA a MW 05/032
```

Fields:

Production Order Number

Enter the production order number you want to review lot balancing for.



Press **Enter** to display the Lot Balancing Window.

Lot Balancing Window



To display this window, enter a works order number on the Lot Balancing Maintenance Selection Screen and press **Enter**.

Use this window to select the item you want to perform lot balancing for.

The details displayed include:

- The item number.
- The standard potency number, as specified in the Inventory Item Details.
- The potency range, as specified on the route.
- The outstanding unallocated potency. The software calculates this from the order.

```
PC320          Z1 - UK Demonstration Company  USER GBJBA1MS  21/05/99
                                           15:33:50
Lot Balancing Maintenance
Production Order number..?: W0000033

  Lot Balancing Window
  S Item number   Std Potency   Potency Range   Outstand Qty.
  _ TSTPOT2      6.00000      5.00000      5.00000      10.00000

  1=Lot Selection  2=Existing Allocations
  F8=Update      F12=Previous

F3
```

MA b MW A 11/007

Fields:

Select (S)

Enter one of the following against the required item:

1 - Lot Selection. This displays the Potent Lot Window with details of available lots.

2 - Existing Allocations. This displays the Existing Lot Allocations Enquiry Window. This shows the lot number, available and allocated quantities, and the stockroom where the item is held. Allocations can be cleared and reselected.



Press **Enter** to confirm your selection.

Potent Lot Window



To display this window, enter 1 against an item in the Lot Balancing Window and press **Enter**.

Use this window to select available lots for allocation to the production order entered on the initial selection screen.

For each lot, this window displays:

- From the previous screen, the item number, standard potency, potency range, item unit of measure.
- The outstanding potency units required (O/S Pot Un).
- The assigned lot number.
- The actual potency of this lot.
- The physical quantity required. This is calculated as: $(\text{Potency Units Required} / \text{Actual Potency } \%) \times 100$.
- The allocated number of potency units. This field is blank initially, but displays a value after selection.
- The available potency units in this lot (Avl Pot Un). Lots with available potency units shown as 0 have been used, and are not available.
- The issuing stockroom.



Note: Only lots available on the start date of the order are displayed.

If any lot selected is past its Last Available Date, the software displays a warning. You can still select the lot by using **F8=Update** to override the warning.

If the quantity contained in the lot is greater than the quantity required, then only the quantity required is selected, leaving the balance as available.

When you have made the allocations, the Allocated column is updated and the outstanding potency units required is decreased. When this happens, the software recalculates the physical quantity required, for the remaining lots, for the new outstanding potency unit requirements, if any.

```

PC320          Z1 - UK Demonstration Company  USER GBJBA1MS  21/05/99
                                           15:33:50

Lot Balancing Maintenance

Production Order number..?: W0000033
  
```

Potent Lot Window

Item number	Std Potency	Potency Range	UOM	O/S Pot Un
TSTP0T2	6.00000	5.00000	EA	.600

X Lot Number	Act Potency	Phy Qty Req	Allocated	Avl Pot Un	St
_ A123	6.00000	10.000	90.000	5904.000	JF

1=Select 2=Lot Maintenance 3=Lot Header Enquiry
 F8=Update F12=Previous F14=All stockrooms F15=Issuing Stockroom
 F16=Existing Allocations F18=Clear Allocations

```

MA  b          MW          A          12/003
  
```

Fields:

Select (X)

You can enter one of the following options:

- 1 - Select. Use this to select a lot for the order. It will update the allocated quantity, and reduce the outstanding potency units and available units for the item lot. You can allocate the whole lot if required.
- 2 - Lot Maintenance. Use this to only select a portion of the available quantity for a selected input lot.
- 3 - Lot Header Enquiry. Use this to display the Lot Header Parameters Enquiry window for the selected lot.

Functions:

F14=All Stockrooms

This function toggles the display between displaying all stockrooms for this item, or only the issuing stockroom.

F15=Issuing Stockroom

Select this to display the potent lot information for the issuing stockroom only.

F16=Existing Allocations

Select this to display all existing lot allocations for the item.

F18=Clear Allocations

This is displayed if you have made any lot reservations in this session. Select this to clear the reservations, and make way for new ones.



Select **F8=Update** to update the selections.
 If you have defined a filler on the route, the Filler Requirements Window is displayed; otherwise you will return to the initial selection screen.

Release Orders



3/PCM

Use this option to:

- Amend confirmed production orders.
- Trial Kit confirmed production orders. This simulates the issue of materials to production orders and highlights potential stock shortages. These would result in negative stocks if you released the order.
- Release confirmed orders to the shop floor. This may allocate material to the order, depending on the company profile setting, and allows transactions to be processed against it.
- Print order documentation. This is optional.
- Assign default order priority.
- Issue materials to the first or all operations. This is optional.
- Invoke lot balancing where appropriate.
- Create warehouse requirements. This is optional.
- Carry out order maintenance.
- Check on availability of inputs for a single order or for a number of orders in a session.



Note: An audit report is automatically produced when an order is released.

Production Order Release Selection Screen



To display the first Production Order Release Screen, select the Release Orders option.

You use this screen to select the production orders you want to release. You can only release production orders whose status is confirmed.

You can either select a single production order or enter selection criteria to select a range of orders.

```
PC003                Z1 - GB Demonstration Company    USER GBJBAAA4    15/04/99
                                     9:26:03
Production Order Release

Production Order.....?  █

OR Select by:

Item/Group.....?.  _____
Reference.....?.  _____
Orders Due from..... 15/04/99 to: 15/04/99

F3=Exit  F4=Prompt  F16=Review orders
M0 █ a                                     07/030
```

Fields:

Production Order

To select a single production order, enter the number of the order in this field.



Note: If the order has been stopped, the software displays an error message and prevents you releasing the order.

Or Select By:

You can select a range of production orders by entering selection criteria in these fields.

Item/Group

Enter the item or group number to select all confirmed orders for that item or group.

Reference

Enter the reference number to select all confirmed orders with that reference number.

Orders Due From/To

Enter a date range for the orders you want to select from. The default in both fields is the current date, but you can change that.

Function:

F16=Review Orders

To release, maintain text for or trial kit several confirmed orders, specify your selection criteria and select this function to display the Production Order Release Orders Screen.



Enter a production order number and press **Enter** to display the Production Order Release Details Screen.

Production Order Release Details Screen



To display this screen, enter an order number in the Production Order field on the Production Order Release Selection Screen and press **Enter**.

Use this screen to release, amend or trial kit a single confirmed order.

The following is displayed at the top of the screen for information:

- Production order number.
- Order type.
- Finished item number and description.
- Route.
- Order Quantity.
- Order start and due dates.
- Order references.

PC003	AS - ALG Systems	USER STDMAN	5/05/00 11:26:17
Production Order Release			
Order Number	W000038		
Order Type	Standard	No Order Text Exists	
Finished Item	D532	Pentium II 350MHz 5GB 32MB	
Route	S		
Order Quantity	100.000		
Order Date	26/10/99		
Start Date	29/09/99 / 39/99		
Latest Start Date	29/09/99 / 39/99		
Due Date	1/11/99 / 44/99		
Reference 1		Reference 2	
Order Priority	5	Create Inspect ord @ (0=No 1=Yes)	
Print Shop Documentation	1	(0=No 1=Yes)	
Issue Materials-First Operation Only	0	- All Operations @ (0=No 1=Yes)	
Create Warehouse Requirements	-	(0=No 1=Yes)	
F3=Exit F8=Release Order F12=Previous F17=Amend Order F18=Trial Allocate			
F21=Text F22=Lot Balancing			
MA	a	MW	18/041

Fields:

Order Priority

Set the priority of the order here. This priority is passed down to the operations and is used to sequence production at work stations.

The value must be in the range 0 to 9 inclusive, with 0 having the highest priority. The highest priority orders are processed first.

The default value for this field is set on the Order Priority Default Value field on the production company profile.

Create Inspect Ord

Use this to generate a QS Inspection Order when you release a production order. However, to do this, the Inspection Policy field on the Production Data Item Master Order Policy Screen must be set to 1.

You can decide whether or not to generate a QS inspection lot when this production order is released. Enter one of the following:

0 - No. The QS inspection lot is not created when the production order is released. If you enter 0 in the Issue Materials fields, you will have to generate the inspection lot using the Generate Inspection Orders option.

1 - Yes. If you enter 1 in the Issue Materials fields, an inspection lot is automatically generated when the production order is released, and sent to the QS software. If you enter 0 in the Issue Materials field, you will have to generate the inspection lot using the Generate Inspection Orders option on the menu.

When QS creates an inspection lot, an inspection order can be generated and printed, either manually or automatically. This is configured in the QS software.

Print Order Documentation

You can print order documentation as a separate task. Order documentation consists of work instructions and pick lists. The default from the production company profile is displayed, but you can amend that. Enter one of the following options:

0 - No. Do not print order documentation.

1 - Yes. Print order documentation.

Issue Materials

Use these two fields to specify in these fields whether you want to issue stock only to the first operation on the order, or to all operations. The default from the production company profile is displayed, but you can amend it here



Note: You cannot automatically issue items stored in a location controlled stockroom at production order release. If you set these flags to 1, any location controlled items are ignored and must be issued using the Issue Materials option.

Issue Materials - First Operation Only

Enter one of the following:

0 - No. Do not issue to the first operation automatically.

1 - Yes. Issue the required quantity of material to the first operation automatically, as long as they are not bulk issue items.

Issue Materials - All Operations

0 - No. Do not issue to all operations automatically.

1 - Yes. Issue the required quantity of material to all operations automatically, as long as they are not bulk issue items.

Create Warehouse Requirements

If the materials are warehouse controlled, you can set this field to allow the stock to be allocated in the warehouse. Enter one of the following:

0 - No. Do not generate warehouse requirements.

1 - Yes. Generate requirements.

Functions:

F17=Amend Order

Select this to amend the order. This displays the Production Order Maintenance Details Screen.

F18=Trial Allocate

Use this to trial allocate, or trial kit, materials to be issued to the order. You can trial kit several orders during the release option. Select **F3=Exit** to end the simulation. No materials are issued by this process.

F21=Text

Use this to maintain order header text.

F22=Lot Balancing

Use this for lot balancing of lot controlled items. This displays the Lot Balancing Window.



Select **F8=Release Order** to confirm release of the selected order.



Note: If you issue material using this option, and there is actually insufficient stock of the material available, the software will display a warning message. You can override this message if you have set the Negative Stock Allowed field to 1 for the relevant stockroom. You do this when you maintain stockroom profiles within the Inventory Company profile Maintenance option.

Lot Balancing Window



To display this window, select **F22=Lot Balancing** on the Production Order Release Details Screen.

Use this window to select the item you want to perform lot balancing for.

The details displayed include:

- The item number.
- The standard potency number, as specified in the Inventory Item Details.
- The potency range, as specified on the route.
- The outstanding unallocated potency. The software calculates this from the order.



Note: If you have set the Allocation Of Materials At Order Release field to 1 on the production company profile, allocation takes place when you complete the release.



Note: If the item being balanced is a key ingredient, this causes an allocation to take place in floor stock.

The screenshot shows a production order release screen with a 'Lot Balancing Window' overlaid. The background screen displays 'PC003', 'Z1 - GB Demonstration Company', 'USER GBJBAAA4', and '23/03/99 9:50:34'. Below this is 'Production Order Release' and 'Order Number W003189'. The 'Lot Balancing Window' has a title bar and a table with the following data:

S	Item number	Std Potency	Potency Range	Outstand Qty.
1	L0T1	100.00000	100.00000 100.00000	20.00000

Below the table, the window displays: '1=Lot Selection 2=Existing Allocations' and 'F8=Update F12=Previous'. At the bottom of the window, it says 'F3 F21=Text F22=Lot Balancing'. The bottom of the main screen shows 'M0 a MW' and '11/007'.

Fields:

Select (S)

Enter one of the following against the required item:

1 - Lot Selection. This displays the Potent Lot Window with details of available lots.

2 - Existing Allocations. This to displays the Existing Lot Allocations Enquiry Window. This shows the lot number, available and allocated quantities, and the stockroom where the item is held. Allocations can be cleared and reselected.



Select **F8=Update** to confirm your selection and return to the Production Order Release Details Screen.

Potent Lot Window



To display this window, enter 1 in the Select field on the Lot Balancing Window and press **Enter**.

Use this window to select available lots for allocation to the production order entered on the initial selection screen.

For each lot, this window displays:

- From the previous screen, the item number, standard potency, potency range, item unit of measure.
- The outstanding potency units required (O/S Pot Un).
- The assigned lot number.
- The actual potency of this lot.
- The physical quantity required. This is calculated as: $(\text{Potency Units Required} / \text{Actual Potency } \%) \times 100$.
- The allocated number of potency units. This is blank initially, but displays a figure after selection.
- The available potency units in this lot (Avl Pot Un). Lots with available potency units shown as zero have been used, and are not available.
- The issuing stockroom.



Note: Only lots available on the start date of the order are displayed.

If any lot selected is past its Last Available Date, the software displays a warning. You can still select the lot by using **F8=Update** to override the warning.

If the quantity contained in the lot is greater than the quantity required, then only the quantity required is selected, leaving the balance as available.

When you have made the allocations, the Allocated column is updated and the outstanding potency units required is decreased. When this happens, the software recalculates the physical quantity required, for the remaining lots, for the new outstanding potency unit requirements, if any.

```

PC003              Z1 - GB Demonstration Company    USER GBJBAMS    13/12/95
                                           15:40:00

Production Order Release

Order Number       W000195

Potent Lot Window
Item number      Std Potency      Potency Range      UOM      O/S Pot Un
RAM03           50.00000      50.00000      50.00000      EA      2.000
X Lot Number      Act Potency      Phy Qty Req      Allocated      Avl Pot Un      St
- LOT01           50.00000           4.000           .000      823.000      RM
- LOT02           25.00000           8.000           .000      112.500      RM
- LOT04           75.00000           2.667           .000      150.000      RM

1=Select  2=Lot Maintenance  3=Lot Header Enquiry
F8=Update  F12=Previous  F14=All stockrooms  F15=Issuing Stockroom
F16=Existing Allocations  F18=Clear Allocations

F21=Text  F22=Lot Balancing
12-03    SF    MK    KS    IM    II  KENB20A  PET166S2
  
```

Fields:

Select (X)

You can enter one of the following options:

- 1 - Select. Use this to select a lot for the order. It will update the allocated quantity, and reduce the outstanding potency units and available units for the item lot. You can allocate the whole lot if required.
- 2 - Lot Maintenance. Use this to only select a portion of the available quantity for a selected input lot.
- 3 - Lot Header Enquiry. Use this to display the Lot Header Parameters Enquiry window for the selected lot.

Functions:

F14=All Stockrooms

Toggles the screen between displaying all stockrooms for this item or only the issuing stockroom.

F15=Issuing Stockroom

Select this to display the potent lot information for the issuing stockroom only.

F16=Existing Allocations

Select this to display all existing lot allocations for the item.

F18=Clear Allocations

This is displayed if you have made any lot reservations in this session. Select this to clear the reservations, and make way for new ones.



Select **F8=Update** to return to the Lot Balancing Window.

If you have defined a filler on the route, then when you select **F8=Update** the Filler Requirements Window is displayed.

Filler Requirements Window



This window is displayed when you select **F8=Update** on the Potent Lot Window and you have defined a filler on the route.

Use this window to confirm the amount of filler required by the order to attain the batch balancing quantity. A filler is necessary when the physical quantity of lot balanced items falls short of the target physical quantity required to meet the batch balancing quantity.

The filler must be defined on the route. Also, at least a minimal quantity of the filler must be required as a standard input to the parent item. Flagging an item as a filler on the Input Item Maintenance Window, in the Production Definition Maintenance Routes/Structures option, indicates that the quantity required may be increased so as to meet a physical demand. This increase is unrelated to the quantity per requirement.

PC003	Z1 - GB Demonstration Company	USER GBJBAMS	13/12/95
			15:40:00
Production Order Release			
Order Number	W000195		
Lot Balancing Window			
Sel Item number	Std Potency	Potency Range	Outstand Qty.
- RAM03	50.00000	50.00000 50.00000	.00000
Filler Requirements			
Filler Item..:		RAM01	
Operation Seq:		010	
Component Seq:		010	
Required Qty.:		6.000	
F8=Confirm F12=Previous			
1=Lot Selection 2=Existi F8=Update F12=Previous			
F21=Text F22=Lot Balancing			
17-57	SA	ML	KS IM II KENB20A PET166S2

Fields:

Required Quantity

Enter the quantity of filler required or accept the default calculated. This is the production order equivalent balancing quantity, minus the sum of the quantity allocated and issued for all potent items, and the quantity of filler issued to-date. Care should be taken to ensure that the physical quantity of allocated lots, plus the filler, do not exceed the balancing quantity for this order.



Select **F8=Confirm** to complete the transactions and display the Potent Lot Window.

Production Order Release Orders Screen



To display this screen, select **F16=Review Orders** on the first Production Order Release Screen.

If you enter selection criteria on the Production Order Release Selection Screen to view a range of production orders; this screen displays all orders that satisfy these criteria.

You can use this screen to perform the following actions for one or more confirmed orders:

- Select for release.
- Maintain text.
- Trial kit.

Opt	Order	Type	Item	Route	Start Dt	Due Date	Quantity
—	W000031	1	D532	S	4/08/99	13/09/99	98.000
—	W000043	1	D532 BOX	1	4/08/99	28/10/99	100.000
—	W000018	1	DM10128	S	6/08/99	24/09/99	100.000
—	W000032	1	D532	S	11/08/99	20/09/99	100.000
—	W000029	1	D532	S	12/08/99	20/08/99	30.000
—	W000019	1	DM10128	S	13/08/99	1/10/99	100.000
—	W000033	1	D532	S	18/08/99	27/09/99	100.000
—	W000020	1	DM10128	S	20/08/99	8/10/99	100.000
—	W000045	1	D664 BOX	1	23/08/99	26/08/99	10.000
—	W000034	1	D532	S	25/08/99	4/10/99	100.000
—	W000027	1	D10128 BOX	1	26/08/99	21/09/99	33.000 +

Order priority..... 5 Create Inspect ord @ (0=No 1=Yes)
 Print shop documentation..... 1 (0=No 1=Yes)
 Issue materials - first operation @ - all operations @ (0=No 1=Yes)
 Create warehouse requirements.... - (0=No 1=Yes)

1=Select for release 2=Text 3=Trial kit
 F3=Exit F8=Release order(s) F12=Previous

MA a MW 06/002

Fields:

Opt

You can enter one of the following options:

- 1 - Select For Release. Enter 1 against the orders you want to release and select **F8=Release Order(s)**, to release those orders.
- 2 - Text. Enter 2 against the orders you want to maintain order header text for and press **Enter** to maintain the text.
- 3 - Trial Kit. Enter 3 against the orders you want to perform trial allocation for and press **Enter** to display the Material Availability Enquiry. This simulates the issue of materials to the order and highlights potential shortages. These would result in negative stocks if you released the order with the Materials To Be Issued At Order Release field set to 1 on the production company profile.

For more details on this facility, refer to the Material Availability Enquiry within Production Order Enquiries and Reports.

Order Priority

Set the priority of the order here. This priority is passed down to the operations and is used to sequence production at work stations.

The value must be in the range 0 to 9 inclusive, with 0 having the highest priority. The highest priority orders are processed first.

The default value for this field is set in the Order Priority Default Value field on the production company profile.

Create Inspect Ord

Use this to generate a QS Inspection Order when you release a production order. However, to do this, the Inspection Policy field on the Production Data Item Master Order Policy Screen must be set to 1.

You can decide whether or not to generate a QS inspection lot when this production order is released. Enter one of the following options:

0 - No. The QS inspection lot is not created when the production order is released. If you enter 0 in the Issue Materials fields, you will have to generate the inspection lot using the Generate Inspection Orders option on the menu.

1 - Yes. If you enter 1 in the Issue Materials fields, an inspection lot is automatically generated when the production order is released, and sent to the QS software. If you enter 0 in the Issue Materials field, you will have to generate the inspection lot using the Generate Inspection Orders option on the menu.

When the QS software creates an inspection lot from the software, an inspection order can be generated and printed, either manually or automatically. This is configured in the QS software.

Print Order Documentation

You can print order documentation as a separate task. Order documentation consists of work instructions and pick lists. The default from the production company profile is displayed, but you can amend that. Enter one of the following options:

0 - No. Do not print order documentation.

1 - Yes. Print order documentation.

Issue Materials

Use these two fields to specify in these fields whether you want to issue stock only to the first operation on the order, or to all operations. The default from the production company profile is displayed, but you can amend it here



Note: You cannot automatically issue items stored in a location controlled stockroom at production order release. If you set these flags to 1, any location controlled items are ignored and must be issued using the Issue Materials option.

Issue Materials - First Operation Only

Enter one of the following:

0 - No. Do not issue to the first operation automatically.

1 - Yes. Issue the required quantity of material to the first operation automatically, as long as they are not bulk issue items.

Issue Materials - All Operations

0 - No. Do not issue to all operations automatically.

1 - Yes. Issue the required quantity of material to all operations automatically, as long as they are not bulk issue items.

Create Warehouse Requirements

If the materials are warehouse controlled, you can set this field to allow the stock to be allocated in the warehouse. Enter one of the following:

0 - No. Do not generate warehouse requirements.

1 - Yes. Generate requirements.



Select **F12=Previous**, to return to the previous screen.

Generate Warehouse Requirements



4/PCM

You can use this option to generate warehouse requirements for production orders. Warehouse requirements can also be generated with the Release Orders option.

Order Release

Production Order Release can be used in the normal manner when there are Warehouse Controlled items. There is an extra field at the foot of the second Production Order Release Screen that generates warehouse requirements if you set it to 1.

Generate Warehouse Requirements

Use this option for production orders with warehouse controlled items that are not currently being processed by Warehousing. The orders are displayed on the Generate Warehouse Requirements Screen, subject to selection parameters.

Once you accept the order, you cannot carry out any further extraction for an order line until you have issued stock to this line from the Warehousing application.

You can also alter the recommended quantity to reflect the real issue units from the warehouse. For example, you require three caps, issue a box of 200, and return 197 to the warehouse.



Warning: You cannot manually issue warehouse controlled items to a production order using the Issue Materials option. You must use the Production Order Release or the Generate Warehouse Requirements option instead.



Note: Generating warehouse requirements creates a stock allocation in the warehouse stockroom.

Generate Warehouse Requirements Screen



To display this screen, select the Generate Warehouse Requirements option.

You use this screen to enter selection criteria for the production orders you want to generate warehouse requirements for.

You can enter selection ranges in the To and from fields. If you leave the From field blank, the software selects warehouses from the beginning of the file. If you leave the To field left blank, the software selects warehouses to the end of the file.

PC201	Z1 - GB Demonstration Company	USER GBJBAAA4	20/04/99 12:21:26
Generate Warehouse Requirements			
From warehouse.....?..		To warehouse.....?..	
From finished item..?..		To finished item..?..	
From reference.....?..		To reference.....?..	
From op. start date....	0/00/00	To op. start date....	0/00/00
From order.....?..		To order.....?..	
From operation.....		To operation.....	
(Blank or zero implies from start)		(Blank or zero implies to end)	
Include zero balances.. 0 (0=No 1=Yes)			
F3=Exit F4=Prompt			
M0 a		06/027	

Fields:

From/To Warehouse

Enter a range of warehouses for material issue in these fields.

From/To Finished Item

Enter a range of finished items whose input requirements will be displayed on the next screen.

From/To Reference

Enter a range of references to select orders that fall in the range. The input requirements for these orders will be displayed on the next screen.

From/To Op Start Date

Enter a date range in these fields to review requirements for the items needed for operations starting between the range of dates specified.

From/To Order

Enter a range of orders whose input requirements will be displayed on the next screen.

From/To Operation

Enter a range of operations whose input requirements you want to view.

Include Zero Balances

Indicate whether or not you want to display input items with no outstanding balance. Normally, you would not display items with a zero balance on the Create Material Requirements Screen. However, if you do display those items, you will be able to enter unplanned requirements for them. Enter one of the following options:

0 - No. Do not display zero balance items.

1 - Yes. Display all items regardless of the outstanding balance.



Press **Enter** to display the Create Material Requirements Screen.

Create Material Requirements Screen



To display this screen, complete the selection parameters on the Generate Warehouse Requirements Screen, and press **Enter**.

This screen displays a list of orders with warehouse controlled materials or quantities awaiting allocation in Warehousing. The list is based on the selection criteria entered on the previous screen.

PC201		Z1 - GB Demonstration Company		USER GBJBAAA4		23/03/99 14:31:09	
Create Material Requirements							
Order /Fin.Item	S	Opsq	Cpsq	Wh	Start Component /Reference /Description	Conf. Qty	Reqd. Qty
1 W000390	3	10	10	WH	27/05/96 PC0245C1	1.000	1.000
PC0245P					Material for PCV30245 - W Create		.000
1 W000390	3	10	20	WH	27/05/96 PC0245C2	1.000	1.000
PC0245P					Material for PCV30245 - W Create		.000
1 W000719	3	20	10	WH	17/12/96 S00C2	4.000	4.000
TABULA					wh controlled component 2 Create		.000
1 W001077	3	10	10	WH	16/04/97 9010	1.000	1.000
SOLIDO					WH-ITEM 10 Create		.000
1 W001080	3	10	10	WH	17/04/97 MH.I.WH.1	20.000	40.000
MH.P.BF.1					WH-ITEM No.1 Create		20.000
1 W002949	3	10	10	WH	4/01/99 WHINA1063	1.000	1.000
PARA1063					WH-ITEM No.1 Create		.000
1 W002950	3	10	10	WH	4/01/99 WHINA1063	1.000	1.000
PARA1063					WH-ITEM No.1 Create		.000 +
1=Process 5=Issue requirements							
F3=Exit F8=Update and Submit Job F12=Previous							
MA a		MW				07/003	

Fields

Select (Untitled)

Enter one of the following:

1 - Process. Enter 1 against a production order to create and process the input requirements through Warehousing.

5 - Issue Requirements. Enter 5 against a production order and press **Enter** to display details of the material requirements already requested.

Conf. Qty

Confirm the quantity required. This field displays, by default, the outstanding quantity of the input item needed for the order shown. You can increase or decrease this quantity, but you cannot set it to a negative value.



Select **F8=Update and Submit Job** to submit the batch job for processing, and exit the option.

Print Order Documentation



5/PCM

Order documentation consists of:

- Pick lists - providing details of all inputs needed for each operation on each released production order.
- Work instructions - providing details of each operation, including a description on each production order, and including operational text if required.

You control the use of order documentation by the settings made on the production company profile. The actual printing is controlled by one of three methods:

- Automatically, by setting the Print Shop Documentation At Order Release field to 1 on the production company profile.
- Manually, by setting the Print Shop Documentation At Order Release field to 0 on the production company profile, and setting the Print Shop Documentation field to 1 in the Release Orders option.
- Manually, by setting the Print Shop Documentation At Order Release field to 0 on the production company profile and using this option to select orders for documentation printing.

If you have set the company profile flag to print in batch, then when you exit from these options the documents are sent to the job queue, and printed when the batch job is processed.

If you have set the company profile flag to print interactively, then the documents are processed immediately. If you select large numbers of documents, then there may be a delay before you can use the screen again.



*Note: Reprinted documents have ***REPRINT shown in the top right hand corner.*

Print Order Documentation Option Screen



To display this screen, select the Print Order Documentation option.

You use this screen to select the status of the production orders you want to print.



Tip: This screen will open in batch print or interactive print mode, depending on the setting of the Print Shop Documentation At Order Release field on the production company profile.

```
PC042                Z1 - GB Demonstration Company    USER GBJBAAA4    23/03/99
                                          15:23:56
Print Order Documentation                      Print interactively.

Option..... ■ (1=Select from unprinted orders)
                (2=Select from all orders)
                (3=Print all unprinted released/active orders)
                (4=Print all released/active orders)

F3=Exit

M0 a MW 06/022
```

Fields:

Option

Enter one of the following options:

- 1 - Select from unprinted orders. This displays the Print Order Documentation Selection Screen with all unprinted production orders.
- 2 - Select from all orders. This displays the Print Order Documentation Selection Screen with all orders stored on the system.
- 3 - Print all unprinted released/active orders. This automatically prints all the previously unprinted, released orders. This option submits a job that runs either interactively or in batch, depending on the setting in the Issuing/Printing Interactive Or Batch field in the production company profile.
- 4 - Print all released/active orders. This automatically prints or reprints all released and active orders, regardless of their print status. This option submits a job that runs either interactively or in batch, depending on the setting in the Issuing/Printing Interactive Or Batch field in the production company profile.



Select **F3=Exit** to exit from the option.

Print Order Documentation Selection Screen



To display this screen, enter 1 or 2 in the Option field on the Print Order Documentation Option Screen.

You use this screen to select the production orders you want to print. The status of the orders displayed depends on the option you chose on the Print Order Documentation Option Screen.

PC042	Z1 - GB Demonstration Company	USER GBJBAAA4	23/03/99
Print Order Documentation		15:23:56	
		Print interactively.	
0	Order	Item	Reference1 Reference2 Order Qty.
■	DFW2	DW370	2.000
-	W000287	ESCORT	1.000
-	W002236	MH.P.STD	1.000
-	W002290	P-TEST	1.000
-	W002293	P-TEST	1.000
-	W002299	MH.P.LC.1	2.000
-	W002357	DANS-MO	200.000
-	W002373	RC-PAR-1	2.000
-	W002380	PAR2-RC	2.000
-	W002384	PAR1-CC	1.000
-	W002385	PAR1-RC	1.000
-	W002386	PAR1-NONCC	1.000
-	W002387	PAR1-CC	1.000
-	W002388	PAR2-RC	1.000
			+
1=Print as original 2=Print as outstanding * - Already awaiting printing			
F3=Exit F12=Previous F8=Print all released orders F22=Expand detail			
MA	a	MW	06/002

Fields:

Option (O)

You can select which details are printed on the documentation. Enter one of the following options:

- 1 - Print As Original. This duplicates the documentation originally produced for the order selected.
- 2 - Print As Outstanding. Adjust the documentation to represent the current state of the order.



*Note: When * is displayed, this means the order has already been selected and is waiting to be printed.*

Print Status

This field displays the printing status for the order. The following can be displayed:

Blank - Documentation has not yet been printed for the order.

Printed - Documentation has already been printed for the order. However, you can select the order for reprinting.

Selected - The order has been selected, but the documentation has not yet been printed. This situation can arise when printing is submitted as a batch job.

Functions:

F8=Print All Released Orders

Select this to print order documentation for all released orders, including those previously not printed.

F22=Expand Detail

Select this to toggle between displaying more or less detail for each order. The additional details displayed are the Order Type, Route Code used, Start Date, and Due Date.



Select the orders for printing, and press **Enter** to submit the job and redisplay the Print Order Documentation Option Screen.

Order Completion



6/PCM

You can complete orders in either of two ways:

- By booking at the last operation and indicating that the order is complete. This reduces the WIP value and increases the inventory stock level. This should be considered as the normal method of completing orders.
- By selecting this option. You can close down the order, either completely or operation by operation, in production order control only. This does not update the physical stock in Inventory Management and therefore the goods remain as WIP. You can then reopen the order, either entirely or for selected operations, or cancel it through the same facility.

The file updates affected by carrying out order completion by either method are as follows:

Action	Production Orders	Inventory
On completion of an Individual Operation.	Operation status changed to Completed. Completion Date is recorded. Inputs' status changed to Complete.	The inputs' allocated stock is reduced by any outstanding amount (quantity required less quantity issued) and therefore available stock is increased. To allow this, on the production company profile, the Allocation Of Materials At Order Release field must be set to 1.
On completion of an Order.	Header status changes to Complete. Completion Date is recorded. Status of all operations and inputs is changed to Complete.	Parent Item on order balance is reduced by the order quantity. The inputs' allocated stock is updated as above for all operations.

Reopening an order reverses the transactions made on the original completion.



Note: When you complete an operation, any related work station schedules will also be completed. Alternatively, when you reopen an operation, any related work station schedules will also be reopened.

The effects of cancelling an order are that:

- The status is set to cancelled.

- The completion date is not recorded.
- The order cannot be reopened.

Production Order Completion Selection Screen



To display the Production Order Completion Selection Screen, select the Order Completion option.

You use this screen to select the production orders you want to complete.

You can enter a specific production order number or enter selection criteria to view a list of orders that match those criteria.

```
PC005          Z1 - GB Demonstration Company  USER GBJBAAA4  24/03/99
                                     9:21:45
Production Order Completion

Production Order...?: _____

OR Select by:
Item/Group.....?: _____
Reference.....?: _____
Orders Due from.....: 24/03/99 to: 24/03/99

F3=Exit  F4=Prompt  F16=Review Orders

M0 a                                     06/026
```

Fields:

Production Order

Enter the number of the production order you want to complete. You can only select orders that are released or active.

Press **Enter** to display the Production Order Completion Details Screen.

Or Select By

You can complete the remaining fields and select **F16=Review Orders** to display all the existing orders that meet the selection criteria.

Item/Group

Enter the item or process group code for the orders you want to complete.

Reference

Enter a reference code for the orders you want to complete. This limits the orders you can select from to those with the same code in the Reference 1 field on the order header.

Orders Due From/To

Enter a date range for the orders you want to complete. This limits the orders you can select from to those with a due date within the range entered.



Tip: The Orders Due From and Orders Due To fields default to the current system date.

Functions:

F16=Review Orders

Use this to display a list of orders that meet the selection criteria that you have entered. This displays the Production Order Completion Select Order Screen.



Enter a production order number and press **Enter** to display the Production Order Completion Details Screen.

Production Order Completion Select Order Screen



To display this screen, select **F16=Review Orders** on the Production Order Completion Selection Screen.

This screen displays a list of all released and active orders and allows you to select any of them for processing. The details displayed include:

- The order status.
- The order type. Type 1 is for standard orders, and 2 for non standard orders.
- The due date for the order.
- The original order quantity for the finished product.
- The original order quantity, less any receipts into stock.

PC005		Z1 - GB Demonstration Company			USER GBJBAAA4		24/03/99	
Production Order Completion							10:23:08	
O/T	Order	Stat	Type	Item	Rte	Due	Order Qty	Qty O/S
—	W003075	Rel	1	300	1	16/03/99	100.000	100.000
—	W003118	Rel	1	825	2	23/02/99	10.000	10.000
—	W003120	Rel	1	835	1	23/02/99	10.000	10.000
—	W003132	Rel	1	820	1	1/03/99	10.000	10.000
—	W003170	Rel	1	SF		12/03/99	1.000	1.000
—	W003171	Rel	1	SF		12/03/99	1.000	1.000
—	W003173	Rel	1	SF		12/03/99	1.000	1.000
—	W003174	Rel	1	SF		12/03/99	1.000	1.000
—	W003186	Rel	1	LOT	1	23/03/99	1.000	1.000
—	W002981	Act	1	660	1	19/02/99	101.000	101.000
—	W002983	Act	1	660	1	19/02/99	103.000	.000
—	W003076	Act	1	300	1	17/03/99	101.000	101.000
—	W003077	Act	1	300	1	17/03/99	102.000	102.000
—	W003078	Act	1	300	1	17/03/99	103.000	103.000
—	W003079	Act	1	300	1	17/03/99	104.000	104.000
—	W003115	Act	1	820	1	23/02/99	10.000	2.000 +
1=Select order 3=Text								
F3=Exit F12=Previous								
MA		a			06/002			

Fields:

Select (O/T)

Order or Text. You can enter one of the following:

- 1 - Select Order. You can select an order for completion. This displays the Production Order Completion Details Screen with details of that order.
- 3 - Text. Select this to enter, display or edit the header text for an order.



Press **Enter** to display the Production Order Completion Details Screen.

Production Order Completion Details Screen



To display this screen, enter 1 in the O/T field on the Production Order Completion Select Order Screen and press **Enter**.

Or:

Enter a production order number on the Production Order Completion Selection Screen and press **Enter**.

This screen displays the header details and all operations for the selected order. The details shown for your information include:

- The status of the operation. An operation can have any one of the following statuses:
 - 3 - Released Operation
 - 4 - Active Operation
 - 8 - Complete Operation
 - 9 - Cancelled Operation.
- The operation sequence number.
- The recorded start date for this operation, and the due date for completion.
- The scheduled quantity of the item to be produced at this operation.
- The quantity recorded as completed through operation bookings.
- The difference between the scheduled and completed quantity.

```

PC005                Z1 - GB Demonstration Company      USER GBJBAAA4    24/03/99
                                           10:23:08
Production Order Completion

Order Number  W003118                Status      Released
Order Type    Standard                No Order Text Exists
Item          825                    RSX PARENT 2
Route         2
Order Quantity 10.000 Complete      .000 Outstanding 10.000
Start Date    23/02/99 - 8/99      Due Date    23/02/99 - 8/99
* 3=Released, 4=Active, 8=Complete
O S Oper Description      Start   Due   Scheduled   Completed   Outstanding
- 3  10 FIRST             230299 230299    10.000      .000      10.000
- 3  20 SECOND            230299 230299    10.000      .000      10.000
- 3  30 THIRD             230299 230299    10.000      .000      10.000
- 3  40 FOURTH            230299 230299    10.000      .000      10.000

1=Complete Operation  2=Re-open Operation  3=Text
F3=Exit              F8=Complete Order  F11=Cancel Order  F12=Re-select Order
                    F21=Header Text      F19=+/- Additional Balances
MA  a                                           15/002
  
```

Fields:

Option (O)

You can enter one of the following:

- 1 - Complete Operation. Use this to flag an operation as completed.
- 2 - Re-open Operation. Select this to re open a completed operation.
- 3 - Text. Select this to enter, display or edit the operational text.

Functions:

F8=Complete Order

Select this to complete the whole order, regardless of the status of the individual operations. The Status fields of all the operations are amended to 8, Complete.

F11=Cancel Order

Select this to cancel the order. This is only valid for released orders. You will have to confirm this request before it is actually carried out. The order remains on file but cannot be updated in any way. The Status fields of the operations are amended to 9, Cancelled.



Warning: This facility should be used with care, as the order cannot be re-opened.

F12=Re-Select Order

Select this to return to the Order Selection Screen.

F13=Re-Open Order

When reviewing a completed order, select this to re-open it. The Status fields of the operations are amended to 4, Active.

F19=+/- Additional Balances

Select this to display additional detail about the operations. These details show the rework, held and scrap quantities for each operation.

F21=Header Text

Select this to enter, display or edit the header text for an order.



Tip: When you carry out a particular action, the screen is displayed again with the appropriate status detail updated.



Select **F8=Complete Order** to complete the production order.

Generate Inspection Orders



7/PCM

You can generate inspection lots for selected released production orders. The inspection lots are sent to the System 21 Quality Management System software.

For more information about releasing production orders see Release Orders.

When the System 21 Quality Management System software creates an inspection lot, an inspection order can be generated and printed either manually or automatically. You can configure the printing options in the System 21 Quality Management System software. For more information refer to the System 21 Quality Management System product information.



Note: These screens are only available if you enter either 1 or 2 in the Inspection Policy Default field on the Database Options Screen on the production company profile.

Create Inspection Orders Option Screen



To display this screen, select the Generate Inspection Orders option.

You use this screen to select the status of the production orders you want to create inspection orders for.

```
DB325                Z1 - GB Demonstration Company    USER GBJBAAA4    24/03/99
                  11:27:42
Create Inspection Orders

Option..... 1 (1=Select from unflagged orders)
              (2=Select from all orders)
              (3=Create for all unflagged released/active orders)

F3=Exit
M8 a                                06/022
```

Fields:

Option

You can enter one of the following options:

- 1 - Select From Unflagged Orders. This option displays the Create Inspection Orders Selection Screen, displaying all the released production orders for which inspection lots have not been generated.
- 2 - Select From All Orders. This option displays the Create Inspection Orders Selection Screen displaying all the released production orders.
- 3 - Create For All Unflagged Released/Active Orders. This option submits a batch job that generates inspection lots for all released and active production orders.



Enter an option and press **Enter** to display the Create Inspection Orders Selection Screen.

Create Inspection Orders Selection Screen



To display this screen, enter 1 or 2 in the Option field on the Create Inspection Orders Option Screen.

This screen lists the released production orders that match the criteria entered on the previous screen. Details displayed include:

- The production order number, and order quantity.
- The item associated with the production order.
- Reference text for the production order.
- The inspection status for the production order. The following statuses can be displayed:
 - Blank - An inspection lot has not been generated for this production order.
 - Created - Inspection lot has been generated for this production order.

DB325	Z1 - GB Demonstration Company	USER GBJBAAA4	12/04/99
			12:32:13
Create Inspection Orders			
0	Order	Item	Reference1 Reference2 Order Qty.
■	W000630	MTE1	5.000
—	W003075	300	100.000
—	W000083	LIPSTK	100.000
—	W002983	660	103.000
—	W003079	300	104.000
—	W003190	670	101.000
Inspect Status			

F3=Exit	F12=Previous	F8=Generate all released orders	F22=Expand detail
---------	--------------	---------------------------------	-------------------

MA ■	a	MW	A	06/002
------	---	----	---	--------

Fields:

Option (O)

Enter 1 against an order to select it to generate an inspection lot.

Functions:

F8=Generate All Released Orders

Select this to generate inspection lots for all the released orders with 1 in the Option field. The lots are then sent to the System 21 Quality Management System software.

When the System 21 Quality Management System software receives an inspection lot from the system, you can generate an inspection order either manually or automatically. You can also print the inspection order, either manually or automatically. You configure the printing options within the System 21 Quality Management System software.

F22=Expand Detail

Select this to display additional information about each of the orders. The additional information is the order type, route code used, order start and due date.



Select **F12=Previous** to return to the previous Screen.

Order Stop/Restart



8/PCM

You use this option to halt the production of a work order. This means you can suspend production on work orders, without having to close or complete them. You can select one or more work orders and stop them, giving a reason for doing so. You can also re-start work orders that have been stopped with this option.

The Production Order Control options check that the work order has not been stopped before allowing it to be progressed. Bookings and material issues cannot be made against stopped work orders. It is still possible to use the Production Order Maintenance option to change, complete or cancel the work order.



Note: Planning and work station scheduling do not recognise the stopped status of a work order.

Production Order Stop/Restart Selection Screen



To display this screen, select the Order Stop/Restart option.

Use this screen to enter the selection criteria for the work orders you want to stop or restart.

You can select orders in the following ways:

- Enter a single works order.
- Select a range of works orders by parent item, route, reference, order type, order status, due date.
- Select a range of works orders by input item and due date.



Tip: These three selection methods are mutually exclusive.

```
PC260                Z1 - GB Demonstration Company    USER GBJBA1MS    15/06/00
                                                           10:48:27
Production Order Stop/Restart                               Week: 25 00

Production Order...?:  _____

OR Select by:

Item.....?:  _____
Route.....?:  _ or 1 (1=All routes)
Reference.....?:  _____
Order Type.....?  _____ (1=Standard 0=Non-standard)
Order Status.....?  _____
Orders Due from..... 15/06/00 to: 15/06/00
Select Stopped only...  _____ (Blank=All, 1=Stopped Only)

OR Select by:

Input.....?:  _____
Required From..... 15/06/00 to: 99/99/99

F3=Exit  F4=Prompt  F16=Review orders  F17=Review by Input

M& a                                05/026
```

Fields:

Production Order

Enter the works order you want to stop or restart.

Item

Enter the parent item you want to review works orders for. Leave blank for all parent items.

Route

Enter the route you want to review works orders for. Leave blank for all routes.

Reference

Enter the reference you want to review works orders for. Leave blank for all references.

Order Type

Enter the order type you want to review works orders for. Leave blank for all order types.

Order Status

Enter the order status you want to review works orders for. Leave blank for all order statuses.

Orders Due From, To

Enter the range of dates you want to review works orders for.

Select Stopped Only

Use this field to specify whether you want to review all works orders or only works orders that are currently stopped.

Enter one of the following:

Blank – All. Display, on the Production Order Stop/Restart Order Review Screen, all orders that meet the criteria entered in the other selection fields.

1 – Stopped Only. Display, on the Production Order Stop/Restart Order Review Screen, only those works orders that are currently stopped.

Input

Enter the input item you want to review works orders for. Leave blank to display all works orders with input items.

Required From, To

Enter the range of dates you want to review works orders for.

Functions:

F16=Review Orders

Use this function to display the Production Order Stop/Restart Order Review Screen with works orders that match the criteria in the Item, Route, Reference, Order Type, Order Status and Due Dates fields.

F17=Review By Input

Use this function to display the Production Order Stop/Restart Order Review Screen with works orders that match the criteria in the Input and Required Dates fields.



If you enter a single works order, press **Enter** to display one of the confirmation windows.

If you enter selection criteria for the parent item or input item, select **F16=Review Orders** to display the Production Order Stop/Restart Order Review Screen.

If you enter selection criteria for an input item or input item, select **F17=Review By Input** to display the Production Order Stop/Restart Order Review Screen.

Production Order Stop/Restart Order Review Screen



To display this screen, enter selection criteria for parent items on the Production Order Stop/Restart Selection Screen and select **F16=Review Orders**.

Or

Enter selection criteria for input items on the Production Order Stop/Restart Selection Screen and select **F17=Review By Input**.

You use this screen to select the works order you want to stop or re-start.

Depending on the selection criteria you entered on the previous screen, this screen displays:

- Works orders for parent items.
- Works orders for input items.

PC260		Z1 - GB Demonstration Company		USER GBJBA1MS		15/06/00	
						12:12:08	
Production Order Stop/Restart						Week: 25 00	
S	Rsn	Order	Item/Group	Sts	Order Qty	O/S Qty	Due Date R
1	—	W000951	MHPAR2D	3	8.000	8.000	15/06/00 1
1	—	W000952	MHPAR2D	2	4.000	4.000	15/06/00 1
1	—	W000967	MHPAR2E	3	8.000	8.000	15/06/00 1
1	—	W000973	MHPAR2E	2	4.000	4.000	15/06/00 1
1	—	W001010	SCPAR6	2	2.000	2.000	15/06/00 1

1=Stop 2=Restart 3=Order Header Text 4=Order Enquiry			
Reason Code.?. _		Position to... _	
F4=Prompt F10=Stop Orders F12=Previous F14=Restart Orders			
F22=Expand/Contract			

MA	a	20/058
----	---	--------

Fields:

S (Select)

Enter one of the following:

- 1 – Stop. Enter 1 against all works orders you want to stop.
- 2 – Restart. Enter 1 against all works orders you want to re-start.
- 3 – Order Header. Enter 3 against a works order to display the Text Maintenance Screen where you can maintain text for the works order.
- 4 – Order Enquiry. Enter 4 against a works order to display the Production Order Enquiry Detail Screen with information for that works order.

Rsn

You can enter individual work order stop reason codes against each work order. If you leave this field blank the software will use the default work order stop reason code entered in the Reason Code field.



Tip: You do not have to enter a reason code when you are re-starting an order.

Reason Code

Enter a default work order stop reason code. The software will use this reason code for individual work orders where the Rsn fields have been left blank.



Tip: You do not have to enter a reason code when you are restarting an order.

Position To

Enter a line number to position the display at that line on the screen.

Functions:

F10=Stop Orders

Use this function to stop all work orders with 1 displayed against them.

F14=Restart Orders

Use this function to restart all work orders with 2 displayed against them.

F22=Expand/Contract

Use this function to toggle the information displayed about the work orders.



Enter 1 against the orders you want to stop and select **F10=Stop Orders**. The Production Order Stop Confirmation Window is displayed.

Or

Enter 2 against the orders you want to re-start and select **F14=Restart Orders**. The Production Order Restart Confirmation Window is displayed.

Production Order Stop Confirmation Window



To display this window, enter a works order in the Production Order field on the Production Order Stop/Restart Order Selection Screen.

You use this window to enter a reason code and stop the works order entered on the Production Order Stop/Restart Selection Screen.

PC260 Z1 - GB Demonstration Company USER GBJA1MS 15/06/00
12:14:37
Production Order Stop/Restart Week: 25 00
Production Order...?: W000951
OR Select by:
Item.....?:
Route.....?: _ or 1 (
Reference.....?:
Order Type.....: (
Order Status.....:
Orders Due from.....: 15/06/00
Select Stopped only..: (
OR Select by:
Input.....?:
Required From.....: 15/06/00 to: 99/99/99
F3=Exit F4=Prompt F16=Review orders F17=Review by Input
MA a 11/056

Fields:

Reason Code

Enter a works order stop reason code.

Functions:

F10=Stop Order

Use this function to stop the works order.



Select **F10=Stop Order** to stop the works order and return to the Production Order Stop/Restart Order Selection Screen.

Production Order Restart Confirmation Window



To display this window, enter a stopped works order in the Production Order field on the Production Order Stop/Restart Order Selection Screen.

You use this window to enter a reason code and re-start the works order entered on the Production Order Stop/Restart Selection Screen.

```
PC260                Z1 - GB Demonstration Company    USER GBJBA1MS    15/06/00
                                                12:15:04
Production Order Stop/Restart                    Week: 25 00
Production Order...?: W000951
OR Select by:
Item.....?: _____
Route.....?: _ or 1 (
Reference.....?: _____
Order Type.....: _____
Order Status.....: _____
Orders Due from.....: 15/06/00
Select Stopped only...: _
OR Select by:
Input.....?: _____
Required From.....: 15/06/00 to: 99/99/99

F3=Exit  F4=Prompt  F16=Review orders  F17=Review by Input

MA a                                01/001
```

Selected Order is currently Stopped

Press F14 to Restart Order

F12=Previous F14=Restart

Functions:

F14=Restart

Use this function to re-start the works order.



Select **F14=Restart** to restart the works order and return to the Production Order Stop/Restart Order Selection Screen.

-
-
-
-
-

Chapter 2

Production Order Transactions

Issue Materials



11/PCM



Note: If you use System 21 Warehousing, it controls the material issues for the order, and you do not need to use this option. This also applies if the item is a Production Catchweight one using Warehousing.

There are four methods of issuing materials:

- Automatically on order release, for the first operation only or for all operations. This method is quick but may result in negative stocks. However, a warning message is displayed if this should happen, and you can override the issuing request. You can also run order shortage reports to find out if this has happened. For batch controlled items, you have to select a batch number as part of order release. This option is not available if the Warehouse application is in use.
- By manually issuing the items in Inventory Management. However, if you use this method, there is no record of actual material issues in Production Control; therefore production does not record any actual material costs.
- By backflushing items flagged as bulk issue on the item master file during item booking.
- By manually issuing the items in Production Control. Use this method to record issues to the order or shop floor. This costs the actual issues, and reduces the issuing stockroom balances in Inventory.

Floor Stock

You can define items as floor stock items to individually reserve, or control, them before they are used in WIP. This allows the use of controlled items in less rigidly controlled environments. You can issue items to floor stock stockrooms to track lot controlled items in a scheduled environment. You can also issue non lot controlled items from a floor stock stockroom.

To define an item as floor stock, on the Production Details, set the material control policy to Floor Stock Issue, by setting the Material Policy field to 3. Material Control Policies are set up in the Inventory Descriptions file under Major Type BLKI.

The following items should have their Material Control Policy set to 3, Floor Stock Issue:

- Items to be controlled by floor stock issuing.
- All lot controlled key ingredient items.

You should decide which inventory stockrooms you want to use to hold floor stock. You must link the floor stock stockrooms to your work stations using the Maintain Work Station Locations option in Production System Utilities.

You can use the Issue Material options for both production orders and schedules to issue these materials from a raw material stockroom to a floor stock stockroom. This reduces the Inventory material stock and increases the floor stock. The floor stock is shown as fully allocated, because normally there is no freely available stock in the floor stock stockroom. However, it is possible to over or bulk issue items to the floor stock stockroom. The Daily Requirements Pull List routines net any excess that is free stock, against new scheduled requirements.

If items are not formally manually issued, then when you book the next count point operation, the reservation or allocation is backflushed out of the floor stock stockroom. Scheduled requirements are deallocated in FIFO sequence when shop floor stock is consumed.

Issuing Materials From A Location Controlled Stockroom

If you issue materials from a location controlled stockroom, the Enter Location Balances Window is displayed so that you can enter location details for the issue.



Tip: Refer to the Production Order Booking option for more information on the Enter Location Balances Window.



Tip: Refer to Processing With in A Location Controlled Stockroom in the Inventory Management product information for more information on location control

Issue Materials Selection Screen



To display the Issue Materials Screen, select the Issue Materials option.

You use this screen to select the production orders you want to maintain.

You can enter a specific production order number or enter selection criteria to view a list of orders that match those criteria.

You can issue material for all operations on a production order or for a specific operation.

```
PC220          Z1 - GB Demonstration Company   USER GBJBAAA4   12/04/99
                                           14:42:50

Issue Materials

Production Order....?..: 
Operation Sequence....:  (Blank for All Inputs)
Date.....: 12/04/99
Workstation.....?..: 
Shift.....: 00

OR
Item/Group.....?..: 
Reference.....?..: 
Orders Due From.....: 12/04/99 to: 12/04/99

-----
F3=Exit   F4=Prompt   F16=Review Orders
-----
M0  a                MW                05/027
```

Fields:

Production Order

Enter the order number against which issues will be recorded. You can only select orders with a status of Released or Active.



Tip: If the order has been stopped, the software displays an error message and stops you from issuing materials for the order.

Operation Sequence

You can enter the number of the operation that you want to issue inputs to. Leave the field blank to display all operations and inputs for the selected order.

Date

Enter the date on which issues will be made.

Work Station

Enter the work station that the inputs will be issued to. You can use this field to record material issues to work stations other than those defined on a route, or specified during order booking, operator booking, or both. If you enter a work

station here, it overrides the one stated on the route. If you leave this field blank, the software assumes the work station defined on the route for the operation.

Shift

Enter a specific shift from the shift profile for the work station to which materials are to be issued. This can be the work station on the route or the override work station entered on this screen. Alternatively you can accept the default value in this field.

Or

You can complete the remaining fields and select **F16=Review Orders** to display all the existing orders that meet the selection criteria.

Item/Group

Enter an item code to display all orders for this finished item, subject to the next three selection criteria.

Leave the field blank to display all orders for all finished items, again subject to the next three selection criteria.

Reference

Use this to select orders based on the entries made in the Reference 1 field on the Production Order Maintenance Details Screen.

Orders Due From/To

Enter the date range for the orders you want to enquire on. The default date in both fields is the current system date.

Functions:

F16=Review Orders

Select this option to display a list of orders in the Production Order Selection Window based on the criteria in the selection fields.



Enter a production order number and press **Enter** to display the Record Issues And Adjustments Screen.

Production Order Selection Window



To display this window, select **F16=Review Orders** on the Issue Materials Selection Screen.

This window lists all orders that match the selection criteria entered on the Issue Materials Selection Screen. The following details are shown:

- Text flag.



Tip: An asterisk is displayed in the field if text has been entered against the order.

- The current status of the order. The following can be displayed:
 - 1 - Released Order
 - 2 - Active Order.
- The order quantity.
- The unit of measure defined for the item.
- The primary stockroom for the item.
- The due date for the order.
- The route code used.
- The Order Reference.

PC220 Z1 - GB Demonstration Company USER GBJBAAA4 12/04/99
14:42:50

Issue Materials

Production Order...?: _____
Operation Sequence....: _____ (Blank for All Inputs)
Date.....: 12/04/99

Production Order Selection

S	T	Order	Item/Group	Sts	Order Qty	UOM	St	Due Date	R	Reference
■		W003160	500	4	100.000	EA	FG	12/04/99	1	
-		W003161	500	4	100.000	EA	FG	12/04/99	1	
-		W003248	PPWSI-2	4	6.000	EA	FG	12/04/99	1	

1=Select

F12=Previous F22=Expand/Contract

M0 a MW 11/004

Fields:

Select (S)

Enter one of the following:

1 - Select. To display the Record Issues And Adjustments Screen for the selected order.

2 - Text. To enter new text for the order, or amend the existing text.



Tip: The Text option is only displayed if you complete the Item/Group field on the Issue Materials Screen and select **F16=Review Orders**.

Functions:

F22=Expand/Contract

Select this function to toggle between displaying basic and additional details of the orders. The additional details are the process group name and order type.



Select a production order and press **Enter** to display the Record Issues And Adjustments Screen.

Record Issues And Adjustments Screen



To display this screen, enter a production order on the Issue Materials Screen and press **Enter**.

Or:

Select a production order on the Production Order Selection Window and press **Enter**.

When completing this screen, you should consider the following:

- The Type and Reference fields are optional.
- You must enter a valid lot or serial number if the input is subject to lot, batch, or serial control. You can use the Prompt function to display a list of numbers.
- An asterisk (*) shown beside an Issue Qty field means that there is insufficient stock in the displayed stockroom. You can either issue stock from another stockroom, or override the asterisk, resulting in negative stock in the displayed stockroom.
- A less than (<) symbol shown beside an Issue Qty field means that the item is designated as backflushed. You should not formally issue the item, and the field should be left blank.

PC221	Z1 - GB Demonstration Company	USER GBJBAAA4	12/04/99
			16:32:16
Record Issues and Adjustments			
Production Order...: W003252		Operation...:	Date...: 12/04/99
Workstation...: WS01		Shift...: 00	
Process Group/Item: AJA-P1 standard parent AJA			
Order Quantity...: 5.000		UOM: EA	Quantity Complete:
Order Revision Level...			
S Input	Issue Qty	UOM ST	Type Reference Batch
■ AJA-M1	5.000	EA CS	
- AJA-M2	5.000	EA CS	
- AJA-MB1	< EA CS		
1=Select 2=Substitutes			
Reference: W003252		Transaction Type:	Date: 12/04/99 W/S: WS01
F3=Exit F4=Prompt F8=Confirm All Issues F9=Confirm Selected Issues			
F12=Previous F19=Record Unplanned Issue F22=Expand/Contract			
MA	a	MW	10/002

Fields:

Select (S)

Enter one the following:

1 - Select. Enter 1 against an item, and select **F9=Confirm Selected Issues** to confirm the item for issue.

2 - Substitutes. Enter 2 against a particular item to action a substitution. This displays the Substitutes Window.

Issue Qty

Enter the quantity you want to issue to the order. The field displays the default quantity needed to complete the order. If it is blank, it could mean:

- All current requirements are met for formal issue items.
- Or, backflushed items have not been issued. The field is blank because their requirements are met automatically on receipt of a parent item at the count point on an operation routing where they are consumed.

If an item is subject to batch or lot balancing as part of the order release procedure, then the physical quantity calculated by batch balancing is shown below the Issue Qty. A corresponding lot number is shown below the line in the Batch field. You must issue all the material lots to the floor stock.

The lot numbers and physical quantities displayed below the line numbers have been reserved in the issuing stockroom. The software checks that the issues you actually make are not from a different lot or a quantity greater than the reserved quantity.

If you are not issuing key ingredients to floor stock, then you cannot book receipts at the operation where they are required, as it is a mandatory requirement to select lots at that time. Reserved lots are not made available for subsequent selection.

If you are using a substitute, then you must specify a quantity before the software invokes the substitution routine. You cannot substitute more than has been already issued.



If the work order relates to a route and item that are subject to change control, and the Work Order Amend parameter in Change Management Parameter Maintenance has been set to 1, you cannot substitute a material specified as an input on the work order unless you have raised an express change request type 72 (work order concession). The work order concession will cover all amendments you need to make to the work order, and will remain in force until you close the change request (status 90). A change request type 99 (catch all) does not cover work order concessions.

To make an adjustment indicating a return to stock, enter a negative quantity. To do this, enter a quantity with a minus sign suffix. For example, 2-.

UOM

This field displays the default issuing unit of measure of the item. You can change this.

ST

This field displays the default issuing stockroom. For lot controlled floor stock items, this is the Inventory stockroom when reserved, but this changes to the floor stock location when consumed during order booking.

If the material being issued is a floor stock item, the stockroom displayed changes to the designated floor stock stockroom for the relevant workstation and operation.

Type

For each item, you can designate a specific Transaction Type in preference to the default issue transaction type.



Note: A Transaction Type is used for inventory analysis, and does not change item balances. You define transaction types on the Inventory Management Descriptions File against type TRAN.

Reference

You can assign to each item issue a specific reference that overrides the default issue reference.

Batch

For all lot controlled items, you must enter the lot, batch or serial number for the item to be issued.

Add Input Fields

You can add an input to the list by entering details in the Reference, Transaction Type, Date and W/S fields at the bottom of the screen.

Reference:

This defaults to the production order number but you can override this and assign a different reference.

Transaction Type:

You can assign a transaction type to each issue.

Date

This field defaults to the date entered on the Issue Materials Selection Screen but you can enter another issue date.

W/S

If you specified an operation sequence on the first Issue Materials Selection Screen, you can select a work station to issue to. The default is the work station you originally entered.

Functions:

F8=Confirm All Issues

Select this to confirm the issue of all the items on the screen.



*Note: If you are issuing a Production Catchweight item, then when you select **F8=Confirm All Issues**, a window is displayed showing the item's secondary unit of measure and values. Press **Enter** to update the data and confirm the issues.*

F9=Confirm Selected Issues

Select this to issue selected items only. Enter 1 against the items and select this function to confirm the issues.

F19=Record Unplanned Issue

Select this to display the Record Unplanned Issue Window.



Note: This function is only available for packaging or utility material types when using lot balancing.

F22=Expand/Contract

Select this to display additional details for each input. These details include the description of the input, quantity issued to date, lot details, and sequence number.



Select **F12=Previous** to return to the previous screen.

Substitutes Window



To display this window, enter 2 against an input on the Record Issues And Adjustments Screen.

You can display the substitute items that have been defined for the selected item.



Tip: You define substitutes as part of the Additional Parameters within Production Details.

PC221	Z1 - GB Demonstration Company	USER GBJBAAA4	12/04/99
Record Issues and Adjustments		16:32:16	
Production Order...: W003252		Operation...: Date...: 12/04/99	
Substitutes			
Orig Item	AJA-M1	Desc Material 1 - Std. co	Qty 0/S 5.000
Seq Substitute	Item Description	Qty Req St UOM	Avail Qty
- 010	AJA-M3	Material 3 - Std. c	5.000 CS EA 200.000
Qty To Be Issued			.000
1=Select 2=View Stock			
F8=Issue Substitute F12=Previous			

MA a MW 09/003

Fields:

Select (Untitled)

Enter one of the following:

1 - Select. To select a substitute and change the quantity to be issued. Press **Enter** and select **F8=Issue Substitute** to issue the substitute quantities to the order.

2 - View Stock. To display the stockroom balances for the substitute.



Note: You cannot use substitutes when the Issue Qty is zero; that is when the full quantity has already been issued.



Note: If the Work Order Amend parameter within Change Management Parameter Maintenance has been set to 1, you are prevented from substituting a material specified as an input in a work order raised against a route and item that are subject to change control. To overcome this, you must raise and authorise an express change request type 72 (work order concession). The work order concession will cover all amendments you need to make to the work order, and will remain in force until you close the change request (status 90). A change request type 99 (catch all) does not cover work order concessions.

Functions:

F8=Issue Substitutes

Use this to issue the substitute quantities to the order.



Select **F8=Issue Substitute** to issue the substitute quantities and return to the previous screen.

Record Unplanned Issue Window



To display this window, select **F19=Record Unplanned Issue** on the Record Issues And Adjustments Screen.



Warning: This window is only available for packaging or utility material types if you are using lot balancing.

Use this window to record the issue of inputs that are not found on the route used for the order.

PC221	Z1 - GB Demonstration Company	USER GBJBAAA4	12/04/99 16:36:45
Record Issues and Adjustments			
Production Order...	W003252	Operation...	Date...: 12/04/99
Workstation.....	WS01	Shift.....	00
Process Group/Item:	AJA-P1	standard parent AJA	
Order Quantity....	5.000	UOM: EA	Quantity Complete:
Order Revision Level...			
S Input	Issue Qty	UOM ST	Type Reference Batch
AJA-M1	5.000	EA CS	
Record Unplanned Issue			
Operation Sequence: _____			
Unplanned Input?..: _____			
Quantity.....	_____	UOM...?..: _____	
Stockroom.....	_____	Batch...?..: _____	
Reference.....	W003252		
Transaction Type?..	_____		
Date.....	12/04/99	Reason Code...?..: _____	
F4=Prompt F8=Confirm Issue F12=Previous			
Reference: W003252 Transaction Type: _____ Date: 12/04/99 W/S: WS01			
F3=Exit F4=Prompt F8=Confirm All Issues F9=Confirm Selected Issues			
F12=Previous F19=Record Unplanned Issue F22=Expand/Contract			
M8	a	MW	12/025

Fields:

Operation Sequence

Enter the operation sequence at which you will issue the material. If you do not enter an operation, when you press **Enter** the field defaults to the first operation on the route.

Unplanned Input

Enter the input item that you want to issue.



Note: If the Work Order Amend parameter within Change Management Parameter Maintenance has been set to 1, you are prevented from issuing an unplanned material to a work order raised against a route and item that are subject to change control. To overcome this, you must raise and authorise an express change request type 72 (work order concession). The work order concession will cover all amendments you need to make to the work order, and will remain in force until you close the change request (status 90). A change request type 99 (catch all) does not cover work order concessions.

Quantity

Enter the quantity of the input that you want to issue.

UOM

Enter a valid issuing unit of measurement, as defined to Inventory, for the input. If you leave the field blank, it will default to the UOM in the primary stockroom when you press **Enter**.

Stockroom

Enter a valid stockroom for the input. If you leave the field blank, it will default to the primary stockroom for the item when you press **Enter**.

Batch

If the input is lot controlled, then you must enter a lot reference number.

Reference

The default issue reference displayed for the item is the work order number. However, you can override the default with a specific item reference.

Transaction Type

For each item, you can designate a specific Transaction Type in preference to the default issue transaction type.



Note: A Transaction Type is used for inventory analysis, and does not change item balances. You define transaction types on the Inventory descriptions file against major type TRAN.

Date

You can enter an issue date. If you do not enter a date, the field defaults to the current system date for all issues.

Reason Code

You must enter a reason code for the issue. This is an analysis code that can be used in variance reports. You define reason codes in the Inventory descriptions file against major type MOVR.

Functions:

F8=Confirm Issue

Select this to confirm the issue, after you have entered all the appropriate data.



Select **F8=Confirm Issue** to confirm the issue
and return to the previous screen.

Bookings

You use production booking to capture information that can be meaningfully associated with activities and events involving productive resources. This includes, for example, information about operators, work stations, materials and subcontractors.

The activity type that you select for the booking session determines which data is mandatory, optional or prohibited.

As well as the activity type definition, there are flag settings on the company profile, organisational model, and route against which a booking is made, that qualify the format, interpretation and use of prompted details.

When making bookings, you can enter, review, or amend crew, input, output, scrap and held details in a window associated with the specific bookings.

There are two methods of booking production orders:

- Production Order Booking.
- Operator Booking.



Note: For warehouse controlled materials, you must follow a series of picking or issue routines in Warehousing to issue the materials, before you begin the transaction booking.



Note: Inspection Orders are created when production bookings are made if the QS application is installed and active and if the cross-reference file in QS has been maintained.

Production Order And Operator Booking And WorkStation Schedule Relief

If the Relieve Item And Work Station Schedules field, in the Maintain Activity Control option, has been set to 1 for the activity that you are using, the booking options allow you to override the system date with the date when the original work was produced. This is so that the correct firm work station schedule can be relieved.

You can do this if Relieve Item And Work Station Schedules has been activated against any activity using reporting type 34. This includes SCRAP.

If a corresponding firm schedule for the booking has not been found, a warning message is displayed. This allows the user to verify that the booking is an unplanned booking or that there is an error in the data input.

The match for a corresponding firm schedule is done on:

- Item.
- Route.
- Operation.
- Work Station.

- Date. This is the Reference Date, unless the Production Date has been entered in the new window above.

Booking And Non-production Routes

You cannot book against routes that are classified as non-production routes. For more information, refer to the Routes/Structures option in Production Definition Maintenance.

Catchweight In Production Warehousing

When warehoused input item are issued through the booking options, because they are backflushed or floor stock items, the software checks to see if they are defined as Catchweight items. If they are, the secondary value and unit of measure (UOM) is calculated. The software displays a window for Catchweight items of type 1 or 2, and you can override their secondary values, UOMs, or both. These details then update the component usage records.

Issuing Lot Controlled Backflush Items

It is possible to issue lot controlled backflush items to a works order or schedule when there is insufficient stock to satisfy the production requirement. You are allowed to continue with the production and the system creates a transaction exception.

To subsequently issue the missing lots for the backflush items, use the booking options. Book a good quantity of 0, then use **F14=Component Details** to issue the missing quantities.



Note: Because you book a good quantity of 0, no standard material issue transactions are created.



Tip: Use the transaction exception report to produce a list of lot controlled backflush items that are consumed by production when there is insufficient stock available.

Production Order Booking

1... **12/PCM**
2...

You can use this option to book activities performed on a number of production orders by an operator or crew, without having to re-input information about them for every order or activity.

You can book activities such as set-up, production booking or scrap reporting.

When booking production information, you do not have to enter amounts against the main process group item to reflect that quantities of co-products, waste products and by-products exist. Outputs defined with 0 quantities are highlighted as warnings, but do not prevent the entry of other output type detail.

Order Booking In A Location Controlled Stockroom

When items are stored in a location controlled stockroom, the Enter Location Balances Window is displayed so that you can enter location details for the issue.

Production Order Booking Header Screen



To display this screen, select the Production Order Booking option.

You use this screen to enter the header details for a production order booking.

```
MG200          Z1 - GB Demonstration Company      User GBJBAAA4   13/04/99
                                                    15:56:29
Production Order Booking
Header details
Date..... 03/04/99  Shift ____
Work Station.?  Dept.? ____
Operator.....?  Cr.? ____

F3=Exit  F4=Prompt

M8 a MW 05/018
```

Fields:

Date

You must enter a date here. The default is the current system date, but you can override this. All bookings made during this session are recorded against the date you enter, unless you amend it at a later stage.

Shift

You can enter the shift number that the booking relates to. This provides a more precise time frame for recording booking, if you do not enter a start and finish time on the Production Order Booking Details Screen. The shift number that you enter should be on the shift profile in force on the booking date, at the work station at which the booking is made.



Tip: If the activity type you are using allows it, this field may be left blank.
The activity type is displayed in the Activity field on the Production Order Booking Details Screen.

Work Station

You can enter the work station against which the booking is to be made. This would usually be the work station assigned to the operation on the relevant production route for the production order.

If you enter a non standard work station, any WIP inventory that you book will be recorded against the WIP location associated with that work station.



Tip: A non standard work station is one that is different from the original work station for that operation on the route.

If the work station WIP location is different from the original one on the route, the system displays a warning message stating that the reported WIP location is not the standard for this operation. You must manually confirm that you want to continue the booking process.

If the operation booking involves the issue of floor stock from a floor stock location linked to the standard work station on the route, then you must associate any non standard work station with that floor stock location. Then, you can issue materials previously allocated to this order. Otherwise, you must transfer the allocated stock on the system to the new floor stock location.

Dept

You can enter a department code against which the booking will be made.

Departments are analysis tools, and can also be MRP planning tools. Departments do not impose any constraints over WIP inventory, work station operator or crew bookings.

If you enter a work station but not a department, by default the system displays the department assigned to the work station definition, if one exists, when you press **Enter** to validate header details.

If you enter a department but not a work station, booking details assume the standard work station defined for the operation on the order route.

If you do not enter a department, but an operator has been assigned to a department through Operator Maintenance, the system defaults to that department when you press **Enter** to validate the header details.

You define departments within the Maintain Parameters facility, against type DEPT.



Note: You can also enter departments for stockrooms in Inventory Management. If you use Department (Cellular) MRP planning or Departmental Cost Analysis, it is important that you keep Production and Inventory Management department codes in tandem.

Operator

You can enter an operator code identifying the person who performed the work.

You can enter an operator or a crew but not both.

Crew (Cr)

Enter a crew code identifying the group of operators who performed the work.

You can enter an operator or a crew but not both.

Any booked time associated with the operation is allocated to each member of the crew automatically. For example, if you enter an operator time of 8 hours, each member of the crew is assumed to have worked 8 hours on the operation.

To amend these times, select **F13=Crew Details** on the Production Order Booking Details Screen to modify the time on an individual basis.



Press **Enter** to display the Production Order Booking Details Screen.

Production Order Booking Details Screen



To display this screen, press **Enter** on the Production Order Booking Header Screen.

You use this screen to enter the details of a production order booking. You should be aware that the definition of the Organisational Model may change the fields displayed on this screen.

This screen displays the header details that were entered on the previous screen. You can change them on this screen if you want to book to a different set of details.

MG200	Z1 - GB Demonstration Company	User GBJBA1MS	3/07/00 15:07:46
Production Order Booking			
Header details			
Date.....	3/07/00	Shift	__
Work Station.?	ASEM	Dept.?	AA
Operator.....?	_____	Cr.?	_____
Booking Details			
Activity.....?	PRODRP	Rev Ind	@
Work Order...?	_____		
Operation...?	_____		
Lot Number...?	_____		
Time			
Oper Elapsed.	_.00		
W/S Elapsed.	_.00		
Quantity			
Good..	_____		
Scrap.	_____	Reason.?	SC
Held..	_____	Reason.?	QI
Op Complete.	@	Order Complete.	@
F3=Exit F4=Prompt F12=Previous F13=Crew Details F14=Component Details			
F16=Outputs F17=Scrap F18=Hold F19=Booking Details			
MA	a	MW	10/018

Fields:

Header Details

Date

This field displays the date entered on the previous screen. You can change it here.

Shift

This field displays the shift entered on the previous screen. You can change it here.

Work Station

This field displays the work station entered on the previous screen. You can change it here.

Dept

This field displays the department entered on the previous screen. You can change it here.

Operator

This field displays the operator entered on the previous screen. You can change it here.

Crew (Cr)

This field displays the crew entered on the previous screen. You can change it here.

Booking Details

Activity

You can enter the code of the activity type that you want to report. You must first define the activity type within the Production Activity Control File Maintenance option. Every activity type is associated with a reporting type that determines which fields are mandatory, optional or prohibited. It also determines which transactions are reported in the production activity database.

This field defaults to the activity type with the lowest sequence value.



Warning: Check that the default activity code is correct for the booking you are about to make. The cursor does not go directly into this field.



*Note: If you change the default activity code, press **Enter** to validate the new code before you put in further detail.*

Rev Ind

Reversal Indicator. Set this field to 1 to indicate whether or not the current booking is being entered to correct a previous booking. Enter one of the following:

0 - Standard Booking. This booking is not a reversal of a previous booking. This is the default.

1 - Reversal. This indicates that the activity you are reporting is a reversal. This means that any quantity that you enter moves the opposite way to the standard transaction, and any times and booked input and output quantities are reported as negative. When displayed in the Booking Details Window, the associated order number is highlighted.

Work Order

Enter the production order number that you are making the booking against. The order must be at a status of Released or Active, or an error message will be displayed.

Operation

Enter the operation for this booking.

The work station and operation relationship determines the WIP location used to create, enquire on and maintain WIP inventory balances. This would usually be the one defined on the planning route, but as work may be reported at non standard work stations, you can record WIP inventory as being held at different WIP locations for the same order.

To successfully backflush WIP inventory between count point operations, it is essential that you always book all WIP inventory relating to an order at the standard work station. Alternatively, you can book the WIP at a non standard work station with the same WIP location as the standard work station.

You must transfer any WIP booked against a non standard WIP location to the standard WIP location assigned to the work station on the route.

You must set the Reporting Type flag within Operation Maintenance to 0 (Count Point) before you can book WIP inventory at that operation. The booking process updates the WIP inventory balances at the booking operation. It also backflushes all operations back to, but excluding, the previous count point operation. The last operation on the route must be a count point.

If you have set the Reporting Type flag on the operation to 1 (Backflushed), you can only book scrap details, held details, operator, crew and work station time, and operation rework activity by certain activity type codes.

If you have set the Generate Cost Recovery flag on the organisational model to 1 (yes), then standard activity cost records are created when WIP inventory is booked at a count point operation. The software calculates the value of WIP inventory at that count point operation and for any backflush operations. You can book shrinkage on the route as scrap quantity.



Tips: If the operation is subcontracted, make bookings with the WIP Shipper and Receive From Subcontractor options.

Lot Number

You can enter a lot number relating to the quantity being booked. This is only a memorandum field for non lot controlled items. The number you enter does not need to be the same one entered as a final lot when received into inventory.

If you have set the WIP Lot Tracking flag on the organisational model to 1 (yes), you must enter a lot number here. Also, the quantity booked at the operation must be less than or equal to the quantity booked against the same lot number at the previous count point operation.

If you do not use WIP lot tracking, you do not need to enter a lot number at this point, even for lot controlled items. However, you must enter a lot number when the finished goods are received into inventory.

If a key ingredient is an input to an operation, leave the Lot Number field blank. When you select the key ingredient lot from the floor stockroom, the required lot number is set to the default. This function occurs irrespective of the WIP Lot Tracking field setting.

If the key ingredient is input to an operation other than the first, and WIP lot tracking is required, lot numbers must be used at all operations up to and including the key ingredient input operation. However, all subsequent operations enforce the use of the key ingredient lot number.

Time

You can only specify a maximum of 24 hrs per booking



Warning: It is essential that you understand which policy is in operation before booking time, or it can result in incorrect times, costs and efficiencies.

The method you use to enter times in these two fields depends on the settings of the Time Reporting Policy and Time Booking Policy flags on the organisational model.

If you set the Time Reporting Policy flag to 0 (Elapsed Time), then you must make a single entry specifying time spent. This field is further qualified by the Time Booking Policy flag, which determines whether time should be booked in decimal hours or hours and minutes.

If the Time Reporting Policy flag is set to 1 (Time In, Time Out), you must enter a start and finish time in 24hr clock format. The software calculates the total time spent.

Oper Elapsed

Enter the time spent by the operator in this field. The time entered in this field is equal to the labour time when producing costings.

Time spent is allocated to the operator if specified; or to each member of the crew if a crew code was entered, or to the standard crew size on the route if neither operator nor crew were entered.

W/S Elapsed



Note: You can only specify a maximum of 24 hours per booking.

Enter the work station usage time. This may be more or less than or equal to the operator or crew time.

Quantity

The method you use, and the interpretation of the quantities you enter in these fields depends on certain flag settings that are explained below:

- The Quantity Reporting flag on the organisational model can be set to:
 - 0 (Exclude Scrap and Held). The first Quantity field is displayed as Good on the booking screens and excludes the scrap and held quantities entered in the following fields
 - 1 (Include Scrap and Held). The Quantity field is displayed as Total, and includes scrap and held quantities booked.

Scrap and held quantities are always entered independently of the good or total quantity.

- The Count Reporting Policy flag on the organisational model can be set to:
 - 0 (Total Quantity) where a single number is prompted
 - 1 (Count In, Count Out) where a start and end number are prompted. The software determines the actual quantity by subtracting in from out. You should take care with this policy if the quantity you are reporting is exclusive of scrap and held.

- If the parent item is a process group, the Output Validation flag on the route header qualifies the quantity you enter. The flag can be set to:
 - 0 (Co-product Quantity). The quantity entered should be that for the primary co-product only. All other co-products, by-products and waste quantities are calculated accordingly
 - 1 (All Quantities). The booked quantity should be equal to the sum of all output quantities
 - 2 (No Validation). The process group quantity should be booked and individual outputs confirmed.
- If you book operation WIP in a different UOM from the parent item, defined on the route as the Reporting UOM, the UOM Conversion factor defined on the route is used, to determine the parent equivalent quantity, and the outstanding planned quantity. For example, if WIP is booked in grams and the parent quantity is 1 Kg, then booking 500 at the WIP operation leaves an outstanding quantity of 0.5 Kg, not an overproduction of 499 Kg.

If you are using WIP lot tracking, the quantity entered must be less than or equal to the quantity reported at the previous count point operation for the lot number entered.

Good

Enter the quantity of the item that you are booking into inventory.

If the current reported quantity plus the quantities booked to date equal the planned order quantity, the software automatically prompts with Operation Complete. Press **Enter** to continue.

Scrap

Enter the quantity scrapped at this operation. The software assumes that the full quantity of materials, labour and work station time required to make an equivalent good quantity is also consumed in the production of scrap.

Scrap balances are not maintained for an item and operation.

If the quantity has not yet been scrapped, but will be, then record the balance as held. Enter a reason code for the held quantity to indicate that it will be scrapped.

Reason

You must enter a reason code if you have reported a scrap quantity. The default displayed is the one held on the organisational model.

You define reason codes on the Inventory descriptions file, against major type MOVR.

Held

Enter the quantity held at this operation being reported. The held balance is updated for the item and operation being reported. Quantities may be held, for example, for rework or quality inspection.

If you book a rework activity type at an operation, you must have booked a held quantity equal to that reworked in WIP Inventory at the previous operation. Held quantities are then reduced when the rework is booked good.

There is also an activity type available to record rework associated with extra time spent on an operation. This does not affect standard WIP, but can generate an actual time booking or cost against the order.

You must enter a held reference if you have set the Held Inventory Tracking flag on the organisational model to 1 (yes). The software prompts for entry when you press **Enter** to validate booking details.



Tip: To make any held WIP inventory available, you can use the Release Inventory option within WIP Inventory Control. Alternatively, you can scrap held WIP inventory using the Scrap Held Inventory option.



Note: If the QS application is installed and active, the booking of an item subject to quality control must be a held quantity. This quantity will remain as held until the Material Disposition decision is made. If the items pass inspection, the quantity (less any scrap test pieces and so on.) will be automatically released and will be available for the next operation, or moved into Inventory if it is the last operation.

Reason

You must enter a reason code if you have reported a held quantity. The default displayed is the one specified on the organisational model.

You define reason codes on the Inventory descriptions file, against major type MOVR.

Op Complete



*Note: This field is automatically prompted after you have entered a good quantity, where the booked WIP inventory is equal to the planned operation quantity. If the operation is complete, then press **Enter** to confirm this. The status of the operation is then updated to Complete. You cannot then make further bookings or material issues for the operation.*

Use this field to indicate whether or not further bookings are expected at this operation. You can enter one of the following options:

0 - The operation is not complete, further booking is expected.

1 - Operation complete. No further booking is expected. The total booked may be less than or greater than planned.



Tip: You can set an operation or order to Complete, and re-open a complete operation or order, using the Order Completion option.

Order Complete



*Note: This field is automatically prompted following entry of a good quantity at the final operation, where the booked WIP inventory is equal to the order output quantity. If the operation is complete, then press **Enter** to confirm this. The status of the operation is then updated to Complete. You cannot then make further bookings or material issues for the operation.*

You can indicate in this field whether or not any further bookings of outputs are expected. You can enter one of the following options:

0 - The order is not complete, further booking is expected.

1 - Order complete. No further booking is expected. The total booked may be less than or greater than planned.

The quantity booked as good at the final operation on the route is transferred to Inventory, and recorded against either the finished goods, or receiving, stockroom for the item. This is defined on the planning route for the item. Otherwise, it is booked against the stockroom displayed in the Outputs Window. If you do not want to transfer the finished items to Inventory at the booking stage, then you can hold the items, and they can then be released later as required.



Note: The software displays a warning message if you set this field to 1, but book less than the planned quantity at the final operation.

Functions:

F13=Crew Details

Select this to display the Crew Details Window. You can only select this if you have entered a crew in the Crew field.

F14=Component Details

Select this to display the Component Details Window. This window will be displayed automatically if backflush materials, key ingredients or substitute items are defined for the operation, or if you have made reverse bookings at the operation.

F16=Outputs

Select this to display the Outputs Window. This window will be displayed automatically when booking the last operation on a route.

F17=Scrap

Select this to display the Scrap WIP Details Window. Use this to enter a reference and scrap reason code against the full scrapped quantity, or a range of codes against a number of quantities.

F18=Hold

Select this to display the Held WIP Details Window. Use this to enter a reference and held reason code against the full held quantity, or a range of codes against a number of quantities.

F19=Booking Details

Select this function to display the Booking Details Window. This window is displayed after entry and completion of the first operation booking.



Press **Enter** to validate your entries and display the Booking Details Window.



Note: If the order has been stopped, the software displays an error message and prevents you completing the booking.

Crew Details Window



To display this window, select **F13=Crew Details** on the Production Order Booking Details Screen.

This window lists the operators in the crew involved in producing the order. You can make additions, amendments and deletions to the default crew members and job times for the activity reported.

MG200		Z1 - UK Demonstration Company		User GBJBAJSS		26/06/00	
Production Order Booking							
Header details							
Date.....	26/06/00	Shift					
Work Station..?	WS01	Dept.?	AA				
Operator.....?		Cr.?	CREW1				
Booking Details							
Activity.....?	WORDRP	Rev	Ind	@			
Work Order...?	W002095						
Operation....?	10						
Lot Number...?	A123/009						
Time							
Oper Elapsed.	.00						
W/S Elapsed.	.00						
Quantity							
Good..	5.000						
Scrap.		Reason.?	SC				
Held..		Reason.?	QI				
Op Complete.	@	Order Complete.	@				
F3=Exit	F4=Prompt	F12=Previous	F13=Crew Details	F14=Component Details			
F16=Outputs	F17=Scrap	F18=Hold	F19=Booking Details				
MA	b	MW	07/076				

Crew Details				
S	Operator	Time-In	Time-Out	Elapsed
-	J DOE	.00	.00	1.50
-	W SMITH	.00	.00	2.00
-		.00	.00	
-		.00	.00	
-		.00	.00	
-		.00	.00	
-		.00	.00	
-		.00	.00	
-		.00	.00	
-		.00	.00	
-		.00	.00	
				More...
4=Delete				
F12=Previous ENTER to accept				

Fields:

Select (S)

You can enter the following option:

4 - Delete. Enter this to remove operators from the crew, for this activity only. Press **Enter**, then select **F11=Confirm Deletion** to confirm the deletion.

Operator

You can enter the names of the individual crew members.

Time-In

If you have set the Time Reporting Policy flag in the organisational model to 1 (Start/End), you can enter the start time.

Time-Out

If you have set the Time Reporting Policy flag in the organisational model to 1 (Start/End), you can enter the finish time.

Elapsed

If you have set the Time Reporting Policy flag in the organisational model to 0 (Elapsed), you can enter the elapsed time.



Press **Enter** to validate your entries and return to the previous screen.

Component Details Window



To display this window, select **F14=Component Details** on the Production Order Booking Details Screen.



Note: This window is displayed automatically for floor stock, backflush, and warehouse controlled items. It is also opened automatically for key ingredients and substitute items, and if you have made any reverse bookings.

This window shows any backflush items, floor stock items, substitute items or key ingredients that are included in the route for the parent item being booked. You can make any necessary amendments to the standard quantities expected for this booking. You should not use this window for issuing materials with a Material Type of 0 (Formal Issue) on production orders.

The following details are displayed:

- The component name.
- The operation sequence number at which the component is used.
- The standard quantity of the component, based on the operation quantity of the activity reported, or the amended quantity if you have entered one.

MG200		Z1 - GB Demonstration Company		User GBJBAAA4		15/04/99	
Production Order Booking							
Header details							
Date.....		15/04/99		Shift		___	
Work Station.?		WS01		Dept.?		___	
Operator.....?		___		Cr.?		CREWA	
Booking Details							
Activity.....?		PRODRP		Rev Ind		0	
Work Order....?		W003252		___			
Operation....?		10		___			
Lot Number...?		___					
Time							
Oper Elapsed.		1.00					
W/S Elapsed.		2.00					
Quantity							
Good..		5.000					
Scrap.		___					
Held..		___					
Op Complete.		0		Order Complete.		0	
F3=Exit		F4=Prompt		F12=Previous		F13=Crew Details	
F16=Outputs		F17=Scrap		F18=Hold		F14=Component Details	
F19=Booking Details		F19=Booking Details					
M0		a					
						15/044	

Component Details

S	Component	Opsq	Quantity
-	AJA-MB1	0010	5.000

Add/Amend Bottom

Stockroom..?. ___

1=Select Lots 3=Amend

F4=Prompt F8=Confirm F12=Previous

Fields:

Select (S)

Select an input detail for lot definition or amendment. You can enter one of the following options:

- 1 - Select Lots. Enter this to select lots consumed for lot controlled inputs.
- 3 - Amend. Enter this to amend a line quantity or stockroom.

Add/Amend

You can add a new component or amend the details of an existing component by entering the component, operation sequence and quantity in these fields.



Note: If the Work Order Amend parameter in Change Management Parameter Maintenance has been set to 1, you cannot add an unplanned material to a work order if the associated route is subject to change control. To overcome this, you must raise and authorise an express change request type 72 (work order concession). The work order concession will cover all amendments you need to make to the work order, and will remain in force until you close the change request (status 90). Change type 99 (catch all) does not cover work order concessions.

Stockroom

You can enter the stockroom name in this field.



Select **F8=Confirm** to validate your entries and return to the previous screen.

Outputs Window



To display this window, select **F16=Outputs** on the Production Order Booking Details Screen.

This window is automatically displayed:

- For lot controlled items.
- When booking the final operation.

This window shows the standard output quantities for the booked quantity, as defined on the route. The displayed quantities can be amended to record the actual quantities.

Other details displayed are:

- The name of the output item.
- The lot number for lot controlled output items.
- The quantity of the output item still outstanding.
- The primary output item in the process group, if there is one. 1 is displayed in this field against the primary output item.
- The Unit of Measure for the output item.
- The item's primary stockroom.

ME200		Z1 - GB Demonstration Company		User GBJBAAA4		15/04/99	
Production Order Booking							
Header details							
Date.....		15/04/99		Shift ____			
Work Station.?		MMH1		Dept.?		AA	
Operator.....?				Cr.?			
Booking Details							
Activity.....?		PRODRP		Rev Ind		0	
Work Order....?		W003326					
Operation....?		10					
Lot Number...?							
Time							
Oper Elapsed.		1					
W/S Elapsed.		3					
Quantity							
Good..		2					
Scrap.				Reason.?		SC	
Held..				Reason.?		QI	
Op Complete.		0		Order Complete.		0	
F3=Exit		F4=Prompt		F12=Previous		F13=Crew Details	
F16=Outputs		F17=Scrap		F18=Hold		F14=Component Details	
F19=Booking Details							
MA		a		MW		07/042	

Outputs

1 Output	Quantity	UOM	ST
Lot Number	Qty.	Outstd.	Prmy
2010	2.000	KG	FG
2021	8.382	1	
2022	.205	KG	FG
2023	.860		
	.122	KG	FG
	.510		
	.095	KG	FG
	.398		

Bottom
1=Select 2=Autoreceive 3=Ignore
4=Complete 5=Lot Details
F8=Confirm F9=Receive Sel
F12=Previous F14=Unplanned Output

Fields:

Select (1)

You can enter one of the following options:

1 - Select. To display output details for the item in the Add/Amend Output Window, where you can make amendments.

2 - Autoreceive. This also displays the Add/Amend Output Window. On a process group route, if the outputs listed are co-products and by-products, they are associated in terms of an output ratio defined on the route. If you change the quantity of any one output, the Add/Amend Output Window is refreshed with new quantities for the rest of the group to maintain the ratio defined in the route.

Autoreceive is the highest priority amendment for quantities. You can select a line for amendment on its own using either option 1 or 3. If you then select a process group using option 2, the quantities are revised for these lines again.

3 - Ignore. This automatically changes the quantity for an output to zero. This means that the Inventory stock held for this product is not updated.

4 - Complete. This only applies to production orders. It sets the flag on the order to 1, to signify that the order is complete. Nothing more is expected to be booked against it.

5 - Lot Details. This displays the Select Location/Batch Window.

Functions:

F9=Receive Sel

Enter 1 in the selection field and select this function to part receive the selected lines into Inventory, with the displayed quantities.

F14=Unplanned Output

If an unplanned output item that is not defined on the standard route occurs at this operation, select this function to display the Add/Amend Output Window. You can then record the additional output for posting to Inventory. The item must be a valid Inventory item associated to a valid Inventory stockroom for the additional screen to be accepted.



Select **F8=Confirm** to validate your entries and return to the previous screen.



*Note: If the output is a Production Catchweight item, then when you select **F8=Confirm** a window is displayed, showing the secondary UOM and values for the item. Press **Enter** twice to confirm the values and outputs, and complete the booking as normal.*



*Note: If you are using Location Control, when you select **F8=Confirm**, the Enter Location Balances Window is displayed, where you can enter location information.*

Enter Location Balances Window



To display this window, press **Enter** during any stock transaction processing option, if you are using Location Control.

Use this window to record the balances and quantities affected by this transaction.



Note: For more information on location control, see [Processing With in A Location Controlled Stockroom in the Inventory Management product information](#).

The top of the window displays the item and stockroom information. If you are processing a receipt or adjustment of stock, then it displays the legend Target Location. If you are processing an issue of stock, then it displays the legend From Location in the top right hand corner of the screen for your information.

Processing Within A Location Controlled Stockroom Using Catchweight

If you are using both Location Control and Catchweight, then the existing Secondary Balance Entry Window is no longer used. There are three factors that determine how secondary balances and location balances are processed:

1. Is the secondary balance captured or calculated?
2. Is the item stocked in single or multiple locations?
3. Are secondary balances collected at the location level?

These three factors give the following combinations:

Are secondary balances captured or calculated?	Do Items have single, default, locations or multiple locations?	Are secondary balances collected by location?	Categorisation for fields displayed in the window
Calculated (or no secondary balance required)	Multiple	Yes or not applicable	Case 1
Calculated (or no secondary balance required)	Single	No, or not applicable	Case 2 (no window is displayed, normal processing occurs)
Captured	Multiple	No	Case 3
Captured	Multiple	Yes	Case 4

The fields and their descriptions define those displayed if you are processing using Case 1, that is, a Catchweight item with a single, or default, location and you do not need to capture the secondary balance by location. Any variations on this window are detailed under the relevant case section.

MG200 Enter Location Balances		6/00
Produ	Item..... MAN-PAR002	Target Location
Heade	Manufacturing Parent 002	
Date	Order..... W000001	
Work	Operation.. 9999	
Oper	Sequence... 0010	
Booki	Total	5.000 EA
Acti	Cumulative	.000 EA
Work		
Oper	S Location	Quantity Uom
Lot		
Time		
Ope		
W/S	2=Amend, 4=Delete	
Quan		
G	Location (?)	Quantity UoM
S	A01	5.000 EA (?)
H		
O		
F4=Prompt F8=Update F12=Previous		
F3=Exit F4=Prompt F12=Previous F13=Crew Details F14=Component Details		
F16=Outputs F17=Scrap F18=Hold F19=Booking Details		
MA	a	13/042

Fields:

Header Section

Item

This is your selected item code; its description is displayed below the code.

Stockroom

This displays the stockroom that you are processing this transaction from.

Order

This displays the sales, production, works or purchase order that this transaction is attached to, if this is applicable.

Sequence

This is the associated operation sequence number for this item. If there is no sales, production, works or purchase order attached to the transaction then this field displays four zeros.

Location

This is the item's default location.

Total

This is the transaction quantity and the unit of measure that you specified during the transaction.

Cumulative

This is the current total of the location balances and is displayed in the same unit of measure as the transaction quantity.

Batch, Lot Or Serial Controlled Items And Location Control

If you are processing an item that is batch, lot or serial controlled, then the following fields are displayed:

Lot (Batch or Serial Number)

This displays the batch, lot or serial number reference for your selected item in the top section of the window.

Middle Section

Select (S)

Enter one of the following:

2 - Amend. To amend any existing details. Enter 2 against an existing line and press **Enter** to redisplay those details in the line entry fields at the bottom of the window to amend them. Press **Enter** again to redisplay those amended details in the middle of the screen.

4 - Delete. To delete existing details. Enter 4 against a line and press **Enter** to delete them.

Location

This displays the locations you have selected for use for this transaction. During Sales Order Processing Interactive Confirmation Of Despatch, the window will be pre-filled with the locations and balances printed on the pick note.

Quantity

This displays the entered location balance.

UoM (Unit Of Measure)

This displays the entered transaction's unit of measure.

Footer Section

Location

This is where you enter the location you want to use for this balance. It is initially pre-filled with the suggested, or default, location for your selected item in all circumstances except during Confirmation Of Despatch when it is blank. You can prompt to view all active locations for your item.



Tip: If you attempt to use a location that is suspended the system displays an error message.

Quantity

This is the amount of location balance you want to process. This initially defaults to the full transaction amount in all circumstances except during Confirmation of Despatch, but you can change it if required.

UoM (Unit Of Measure)

This is the default unit of measure for the transaction quantity. You can prompt to view the item's other units of measure.

Case 3

If you are processing a Catchweight item with multiple locations and you do not need to capture secondary balances by location, then the following fields are displayed on the Enter Location Balances Window:

Header Section

Secondary Balance



Note: The name of this field depends on the Name of the Secondary Balance Unit Of Measure.

This field is displayed to the right of the Total and Cumulative fields. Enter the total secondary balance value in this field for all locations that are included in the transaction.

Case 4

If you are processing a Catchweight item with multiple locations and you need to capture secondary balances by location, then the following fields are displayed on the Enter Location Balances Window:

Header Section

Secondary Balance



Note: The name of this field depends on the Name of the Secondary Balance Unit Of Measure.

This field is displayed to the right of the Total and Cumulative fields. This displays the cumulative secondary balance value for all locations that are included in the transaction.

Middle Section

Secondary Balance

This displays the secondary balance value for each existing location.

UoM

This displays the unit of measure attached to the secondary balance.

Footer Section

Secondary Balance

Enter the secondary balance value for the selected item that you want to process. This initially defaults to the nominal secondary balance for the transaction quantity but you can change it if required.

UoM

This is the default unit of measure for the secondary balance value you have entered. You can change this to any valid secondary unit of measure attached to the item if required.

Case 5

If you are processing a Catchweight item with a single, default location a different window is displayed. This window performs the same function as the Secondary Value Entry Window although it displays more information about the transaction and the location that will be processed.

Functions:

F4=Location Prompt

Use this to display the Location Prompt Window. If you are processing a receipt or an adjustment, then the window displays all locations that currently stock the

item at the top of the list, followed by all other locations within the stockroom. If you are processing an issue of stock, then the Location Prompt Window will only display locations with stock of the selected item. Suspended locations are always excluded.



Select **F8=Update** to update the location control balances and redisplay the main processing screen for your transaction. You can only select this if your location balance quantities match the transaction quantity.



Note: If you are processing a Catchweight item with a single, default location, the Enter Secondary Balances Window is displayed. Use this window to confirm, or amend your item's secondary balance and location details.

Add/Amend Output Window



To display this window, enter 1 or 2 in the selection field on the Outputs Window, or select **F14=Unplanned Output** on the Outputs Window.

This window displays the default details for amendment. These are taken from the relevant route. You can also record an unplanned output item from the booking process here.

MG200		Z1 - GB Demonstration Company		User GBJBAAA4 15/04/99	
Production Order Booking					
Header details					
Date.....	15/04/99	Shift			
Work Station.?	MMH1	Dept.?	AA		
Operator.....?		Cr.?			
Booking Details					
Activity.....?	PRODRP	Rev Ind	0		
Work Order....?	W003326				
Operation.....?	10				
Lot Number....?					
Time					
Oper Elapsed.	1				
W/S Elapsed.	3				
Quantity					
Good..	2				
Scrap.		Reason.?	SC		
Held..		Reason.?	QI		
Op Complete.	0	Order Complete.	0		
F3=Exit	F4=Prompt	F12=Previous	F13=Crew Details	F14=Component Details	
F16=Outputs	F17=Scrap	F18=Hold	F19=Booking Details		
MA	a	MW			10/061

Outputs		Quantity	UOM	ST
1	Output	Qty. Outstd.	Prmy	
2	Add/Amend Output			
	Op. Seq.....	10		
1	2	Output....?	2021	
		Quantity...	.205	
2		UOM.....?	KG	
		Stockroom.?	FG	
2		Lot.....?		
		Reason.....?		
		Narrative...	W003326	
1=S		Tran Type.?		
4=C		F4=Prompt	F12=Previous	
F8=Confirm F9=Receive Sel				
F12=Previous F14=Unplanned Output				

Fields:

Op Seq

If you are adding an unplanned output, enter the operation sequence at which the output was produced. For amendments, the operation sequence is shown for information only.

Output

If you are adding an unplanned output, enter the Inventory item code for it. Outputs must be valid Inventory items with valid Inventory stockrooms assigned to them. For amendments, this is a display field only.

Quantity

If you are adding an unplanned output, enter the quantity produced.

If you are amending a line, enter the actual amount produced and available for Inventory. The default displayed is the standard quantity of the output produced for the order quantity.

UOM

For additions or amendments, enter the Unit of Measure that the output item is stocked in.

Stockroom

Enter the Inventory stockroom that the output will be received into. It must be a valid Inventory stockroom, to which the item has been defined. The default is the stockroom defined on the route.

Lot

You must enter a lot reference if the item is lot controlled. The default is the production lot. If the quantity being booked will be added to an existing Inventory lot, you can enter that lot number.

If you enter a new lot reference, and select **F8=Confirm** or **F9=Receive Sel** to confirm details in the Outputs Window, the Lot Maintenance Window is displayed. There, you can enter the details for the new lot.

Reason

Enter a reason code for the addition.

This field is mandatory if you are entering an unplanned output.

You define reason codes in the Inventory descriptions file, against major type MOVR.

Narrative

You can enter specific narrative to be associated with this item in Inventory. The default narrative is the WIP lot reference for the item booking, or the concatenation of the production order with the operation when processing orders. The software uses the relevant default if you add an unplanned output, but do not specify any narrative.

Tran Type

You can enter the Inventory transaction type. This is mandatory if you use lot tracking, as this requires all movements to be traceable by location and usage.

The transaction type is used for inventory analysis only and does not affect changes to any stock balances.

You define transaction types in the Inventory descriptions file against major type TRAN.



Press **Enter** to validate your entries and return to the previous window.

Select Location/Batch Window



To display this window, enter 5 in the selection field on the Outputs Window.

This displays existing Inventory lot references, with the physical and available quantities for each listing. The list relates to stocks in the default stockroom for this item. You can select a particular lot and add the current output quantity. You can also review additional stockrooms by entering a new stockroom code.

MG200		Z1 - GB Demonstration Company		User GBJBAAA4		16/04/99																													
Production Order Booking																																			
Header details																																			
Date.....		16/04/99		Shift ____																															
Work Station.?		WS01		Dept.?																															
Operator.....?				Cr.?																															
Booking Details																																			
Activity.....?		PRODRP		Rev Ind 0																															
Work Order...?		W003334																																	
<table border="1"> <thead> <tr> <th colspan="4">Outputs</th> </tr> <tr> <th>1 Output</th> <th>Quantity</th> <th>UOM</th> <th>ST</th> </tr> <tr> <th>Lot Number</th> <th>Qty.</th> <th>Outstd.</th> <th>Prmy</th> </tr> </thead> <tbody> <tr> <td>- AJA-PL0UT1</td> <td>2.000</td> <td>EA</td> <td>FG</td> </tr> <tr> <td>LOT1</td> <td>2.000</td> <td>1</td> <td></td> </tr> <tr> <td>5 AJA-PL0UT2</td> <td>1.000</td> <td>EA</td> <td>FG</td> </tr> <tr> <td>LOT1</td> <td>2.000</td> <td></td> <td></td> </tr> </tbody> </table>								Outputs				1 Output	Quantity	UOM	ST	Lot Number	Qty.	Outstd.	Prmy	- AJA-PL0UT1	2.000	EA	FG	LOT1	2.000	1		5 AJA-PL0UT2	1.000	EA	FG	LOT1	2.000		
Outputs																																			
1 Output	Quantity	UOM	ST																																
Lot Number	Qty.	Outstd.	Prmy																																
- AJA-PL0UT1	2.000	EA	FG																																
LOT1	2.000	1																																	
5 AJA-PL0UT2	1.000	EA	FG																																
LOT1	2.000																																		
Select Location/Batch																																			
<table border="1"> <thead> <tr> <th>Lot</th> <th>Phys</th> <th>Avail</th> </tr> </thead> <tbody> <tr> <td>- LOT1</td> <td>1.000</td> <td>1.000</td> </tr> </tbody> </table>								Lot	Phys	Avail	- LOT1	1.000	1.000																						
Lot	Phys	Avail																																	
- LOT1	1.000	1.000																																	
1=Select Part Number: AJA-PL0UT2 Stock Room: FG F12=Previous F13=Expand/contract																																			
MA		a		MW		13/005																													

Fields:

Select (Untitled)

You can enter the following option:

1 - Select. Select a lot for review.

Stockroom

Enter the receiving stockroom for the output. The default is the receiving stockroom defined on the output details window on the route.

Functions:

F13=Expand/Contract

Select this for each lot to toggle between displaying or hiding the production dates and balances for the following stock quantities: on order, transfer out, transfer in, back order, allocated and frozen.



Select **F12=Previous** to return to the previous window.

Scrap WIP Details Window



To display this window, select **F17=Scrap** on the Production Order Booking Details Screen.

Use this window to report scrapped WIP. You can report multiple quantity and reason code combinations for any single activity transaction. Details displayed include:

- The total scrap quantity from the Production Order Booking Details Screen.
- The quantity of the total scrap that is not yet accounted for.

```

MG200                Z1 - GB Demonstration Company          User GBJBAAA4    16/04/99

Production Order Booking
Header details
Date..... 16/04/99    Shift ____
Work Station.? WS01    Dept.? ____
Operator.....?        Cr.? ____
Booking Details
Activity.....? PRODRP    Rev Ind 0
Work Order.....? W003334
Operation.....? 20
Lot Number....? LOT1
Time
Oper Elapsed.  .00

W/S Elapsed.  .00

Quantity
Good.. 2.000
Scrap.. 1.000 Reason.? SC
Held.. Reason.? 01
Op Complete. 0 Order Complete. 0
F3=Exit      F4=Prompt    F12=Previous  F13=Crew Details  F14=Component Details
F16=Outputs  F17=Scrap    F18=Hold     F19=Booking Details

MA a MW 09/04

```

Fields:

Reference

You can enter a reference for the scrap quantity in this field. It can either be a QA reference or a functional notation. This is optional.

Quantity

You can enter the quantity of scrap relating to this reference.

Reason

You can enter the reason code associated with this scrap quantity.



Press **Enter** to validate your entries and return to the previous screen.

Held WIP Details Window



To display this window, select **F18=Hold** on the Production Order Booking Details Screen.



Note: If you are using Held WIP Tracking, you must enter the required reference, quantity, and reason codes in this window.

You can use this window to report multiple quantity and reason code combinations for any single activity transaction. Details displayed in the window include:

- The total held quantity from the Booking Details Screen.
- The quantity of the total held WIP that is not yet accounted for.

```

MG200                Z1 - GB Demonstration Company        User GBJBAAA4    16/04/99

Production Order Booking
Header details
Date..... 16/04/99   Shift __
Work Station.? WS01   Dept.? _____
Operator.....? _____ Cr.? _____
Booking Details
Activity.....? PRODRP   Rev Ind @
Work Order...? W003335
Operation....? 10
Lot Number...? _____
Time
Oper Elapsed.  .00
W/S Elapsed.  .00

Quantity
Good.. _____ 5.000
Scrap. _____ Reason.? SC
Held.. _____ 1.000 Reason.? Q1
Op Complete. @ Order Complete. @

F3=Exit      F4=Prompt  F12=Previous  F13=Crew Details  F14=Component Details
F16=Outputs  F17=Scrap   F18=Hold    F19=Booking Details

MA  a                MW                                09/042

```

Fields:

Reference

You can enter a reference for the held quantity in this field. It can either be a QA reference or a functional notation. This is optional.

Quantity

You can enter the quantity of held WIP relating to this reference.

Reason

You can enter the reason code associated with this held quantity.



Press **Enter** to validate your entries and return to the previous screen.

Booking Details Window



To display this window, press **Enter**, or select **F19=Booking Details**, on the Production Order Booking Details Screen.

This window is displayed and updated after each operation booking has been completed.

The software displays a message asking you to confirm that the operation or order is complete. The window then lists the existing bookings. It shows the order numbers against which the bookings have been made, booked operation sequence numbers, quantities booked as good, and the activity type of the booking. After you have updated the details in the window, the entry fields on the Production Order Booking Details Screen are cleared, leaving the header details for the previous booking.

Each new line appears under the last line posted. It shows a short history of the bookings that have been made before they are submitted for processing by the Transaction Manager update routines.

MG200		Z1 - GB Demonstration Company		User GBJBAAA4		16/04/99	
						14:17:52	
Production Order Booking				Booking Details			
Header details				! S Work Order Opsq Quantity Act. !			
Date.....		16/04/99 Shift __		! W003340 10		2.000 PRODRP !	
Work Station.? WS01		Dept.? _____					
Operator.....?		Cr.? _____					
Booking Details							
Activity.....?		PRODRP Rev Ind 0					
Work Order....?		_____					
Operation....?		_____					
Lot Number...?		_____					
Time		_____					
Oper Elapsed. ____.		.00					
W/S Elapsed. ____.		.00					
Quantity		_____		Bottom			
Good.. _____		Reason.? SC		! 2=Amend 4=Delete !			
Scrap. _____		Reason.? QI		! F8=Update F12=Previous F20=Lots !			
Held.. _____		_____					
Op Complete. 0		Order Complete. 0					
F3=Exit		F4=Prompt		F12=Previous		F13=Crew Details F14=Component Details	
F16=Outputs		F17=Scrap		F18=Hold		F19=Booking Details	
MW		a		MW		06/041	

Fields:

Select (S)



Tip: You must select **F19=Booking Details** Production Order Booking Details Screen to display this field.

You can enter the following options:

2 - Amend. Use this to make amendments to the selected line. This transfers the line information back onto the Production Order Booking Details Screen, where you can make the changes.

4 - Delete. Use this to delete the selected line. You must confirm this request before actual deletion takes place, by selecting **F11=Confirm Deletion**.

Functions:

F20=Lots

Select this to toggle between displaying the default Booking Details Window and the lot details for the booked operations.



Select **F8=Update** to validate and accept the listed bookings and return to the Production Order Booking Header Screen.

Operator Booking

1...
2...

13/PCM

The reporting facilities for operator booking are similar to those for production order booking. However, with this option, you can enter an order reference for booking, without having to enter the order heading details again. You can then book multiple events that relate to this item and order.



Note: Inspection Orders are created when production orders are made, provided that the QS application is installed and active and that the cross-reference file in QS has been maintained.

Operator Booking In A Location Controlled Stockroom

When items are stored in a location controlled stockroom, the Enter Location Balances Window is displayed so that you can enter location details for the issue.



Tip: Refer to the Production Order Booking option for more information on the Enter Location Balances Window.



Tip: Refer to Processing With in A Location Controlled Stockroom in the Inventory Management product information for more information on location control

Operator Booking Header Screen



To display this screen, select the Operator Booking option.

You use this screen to enter the header details for operator booking.

```
MG200          Z1 - GB Demonstration Company      User GBJBAAA4    16/04/99
                                                    15:15:38

Operator Booking
Header details
Date..... 16/04/99  Shift ____
Work Station.? ____ Dept.? ____
Work Order...? ____
Operation...? ____
Lot Number...? ____

F3=Exit  F4=Prompt

M8 a MW 05/018
```

Fields:

Date

You must enter a date here. The default is the current system date, but you can override this. All bookings made during this session are recorded against the date you enter, unless you amend it at a later stage.

Shift

You can enter the shift number that the booking relates to. This provides a more precise time frame for recording booking, if you do not enter a start and finish time on the Production Order Booking Details Screen. The shift number that you enter should be on the shift profile in force on the booking date, at the work station at which the booking is made.



Tip: If the activity type you are using allows it, this field may be left blank.
The activity type is displayed in the Activity field on the Production Order Booking Details Screen.

Work Station

You can enter the work station against which the booking is to be made. This would usually be the work station assigned to the operation on the relevant production route for the production order.

If you enter a non standard work station, any WIP inventory that you book will be recorded against the WIP location associated with that work station.



Tip: A non standard work station is one that is different from the original work station for that operation on the route.

If the work station WIP location is different from the original one on the route, the system displays a warning message stating that the reported WIP location is not the standard for this operation. You must manually confirm that you want to continue the booking process.

If the operation booking involves the issue of floor stock from a floor stock location linked to the standard work station on the route, then you must associate any non standard work station with that floor stock location. Then, you can issue materials previously allocated to this order. Otherwise, you must transfer the allocated stock on the system to the new floor stock location.

Dept

You can enter a department code against which the booking will be made.

Departments are analysis tools, and can also be MRP planning tools. Departments do not impose any constraints over WIP inventory, work station operator or crew bookings.

If you enter a work station but not a department, by default the system displays the department assigned to the work station definition, if one exists, when you press **Enter** to validate header details.

If you enter a department but not a work station, booking details assume the standard work station defined for the operation on the order route.

If you do not enter a department, but an operator has been assigned to a department through Operator Maintenance, the system defaults to that department when you press **Enter** to validate the header details.

You define departments within the Maintain Parameters facility, against type DEPT.



Note: You can also enter departments for stockrooms in Inventory Management. If you use Department (Cellular) MRP planning or Departmental Cost Analysis, it is important that you keep Production and Inventory Management department codes in tandem.

Work Order

Enter the order number that you are making the booking against. The order must be at a status of Released or Active, or an error message will be displayed.

Operation

Enter the operation for this booking.

The work station and operation relationship determines the WIP location used to create, enquire on and maintain WIP inventory balances. This would usually be the one defined on the planning route, but as work may be reported at non standard work stations, you can record WIP inventory as being held at different WIP locations for the same order

To successfully backflush WIP inventory between count point operations, it is essential that you always book all WIP inventory relating to an order at the standard work station. Alternatively, you can book the WIP at a non standard work station with the same WIP location as the standard work station.

You must transfer any WIP booked against a non standard WIP location to the standard WIP location assigned to the work station on the route.

You must set the Reporting Type flag within Operation Maintenance to 0 (Count Point) before you can book WIP inventory at that operation. The booking process updates the WIP inventory balances at the booking operation. It also backflushes all operations back to, but excluding, the previous count point operation. The last operation on the route must be a count point.

If you have set the Reporting Type flag on the operation to 1 (Backflushed), you can only book scrap details, held details, operator, crew and work station time, and operation rework activity by certain activity type codes.

If you have set the Generate Cost Recovery flag on the organisational model to 1 (yes), then standard activity cost records are created when WIP inventory is booked at a count point operation. The software calculates the value of WIP inventory at that count point operation and for any backflush operations. You can book shrinkage on the route as scrap quantity.



Tip: If the operation is subcontracted, make bookings for it with the WIP Shipper and Receive From Subcontractor options to.

Lot Number

You can enter a lot number relating to the quantity being booked. This is only a memorandum field for non lot controlled items. The number you enter does not need to be the same one entered as a final lot when received into inventory.

If you have set the WIP Lot Tracking flag on the organisational model to 1 (yes), you must enter a lot number here. Also, the quantity booked at the operation must be less than or equal to the quantity booked against the same lot number at the previous count point operation.

If you do not use WIP lot tracking, you do not need to enter a lot number at this point, even for lot controlled items. However, you must enter a lot number when the finished goods are received into inventory.

If a key ingredient is an input to an operation, leave the Lot Number field blank. When you select the key ingredient lot from the floor stockroom, the required lot number is set by default. This function occurs irrespective of the WIP Lot Tracking field setting.

If the key ingredient is input to an operation other than the first, and WIP lot tracking is required, lot numbers must be used at all operations up to and including the key ingredient input operation. However, all subsequent operations enforce the use of the key ingredient lot number.



Press **Enter** to display the Operator Booking Details Screen.

Operator Booking Details Screen



To display this screen, press **Enter** on the Operator Booking Header Screen.

You use this screen to enter operator booking details.

MG200	Z1 - GB Demonstration Company	User GBJBAAA4	19/04/99 09:00:43
Operator Booking			
Header details			
Date.....	19/04/99	Shift	___
Work Station.?	WS01	Dept.?	AA
Work Order...?	W003341		
Operation...?	10		
Lot Number...?	_____		
Booking Details			
Activity.....?	PRODRP	Rev Ind	0
Operator.....?	_____	Cr.?	CREWA
Time			
Oper Elapsed.	_.00		
W/S Elapsed.	_.00		
Quantity			
Good..	1.000		
Scrap.	_____	Reason.?	SC
Held..	_____	Reason.?	QI
Op Complete.	0	Order Complete.	0
F3=Exit	F4=Prompt	F12=Previous	F13=Crew Details
F16=Outputs	F17=Scrap	F18=Hold	F14=Component Details
			F19=Booking Details
MA	a	MW	05/018

Fields:

Header Details

Date

This field displays the date entered on the previous screen. You can change it here.

Shift

This field displays the shift entered on the previous screen. You can change it here.

Work Station

This field displays the work station entered on the previous screen. You can change it here.

Dept

This field displays the department entered on the previous screen. You can change it here.

Work Order

This field displays the work order entered on the previous screen. You can change it here.

Operation

This field displays the operation entered on the previous screen. You can change it here.

Lot Number

This field displays the lot number entered on the previous screen. You can change it here.

Booking Details

Activity

You can enter the code of the activity type that you want to report. You must first define the activity type within the Production Activity Control File Maintenance option. Every activity type is associated with a reporting type that determines which fields are mandatory, optional or prohibited. It also determines which transactions are reported in the production activity database.

This field defaults to the activity type with the lowest sequence value.



Warning: Check that the default activity code is correct for the booking you are about to make. The cursor does not go directly into this field.



Note: If you change the default activity code, then press **Enter** to pick up the new validation for this code before you put in further detail.

Rev Ind

Reversal Indicator. Set this field to 1 to indicate whether or not the current booking is being entered to correct a previous booking. Enter one of the following:

0 - Standard Booking. This booking is not a reversal of a previous booking. This is the default.

1 - Reversal. This indicates that the activity you are reporting is a reversal. This means that any quantity that you enter moves the opposite way to the standard transaction, and any times and booked input/output quantities are reported as negative. When displayed in the Booking Details Window, the associated order number is highlighted.

Operator

You can enter an operator code identifying the person who performed the work.

You can enter an operator or a crew but not both.

Crew (Cr)

Enter a crew code identifying the group of operators who performed the work.

You can enter an operator or a crew but not both.

Any booked time associated with the operation is allocated to each member of the crew automatically. For example, if you enter an operator time of 8 hours, each member of the crew is assumed to have worked 8 hours on the operation. To amend these times, select **F13=Crew Details** to modify the time on an individual basis.

Time

You can only specify a maximum of 24 hours per booking



Warning: It is essential that you understand which policy is in operation before booking time, or it can result in incorrect times, costs and efficiencies.

The method you use to enter times in these two fields depends on the settings of the Time Reporting Policy and Time Booking Policy flags on the organisational model.

If you set the Time Reporting Policy flag to 0 (Elapsed Time), then you must make a single entry specifying time spent. This field is further qualified by the Time Booking Policy flag, which determines whether time should be booked in decimal hours or hours and minutes.

If the Time Reporting Policy flag is set to 1 (Time In, Time Out), you must enter a start and finish time in 24hr clock format. The software calculates the total time spent.

Oper Elapsed

Enter the time spent by the operator in this field. The time entered in this field is equal to the labour time when producing costings.

Time spent is allocated to the operator if specified; or to each member of the crew if a crew code was entered, or to the standard crew size on the route if neither operator nor crew were entered.

W/S Elapsed



Note: You can only specify a maximum of 24 hours per booking.

Enter the work station usage time. This may be more or less than or equal to the operator or crew time.

Quantity

The method you use, and the interpretation of the quantities you enter in these fields depends on certain flag settings that are explained below:

- The Quantity Reporting flag on the organisational model can be set to:
 - 0 (Exclude Scrap and Held). The first Quantity field is displayed as Good on the booking screens and excludes the scrap and held quantities entered in the following fields.
 - 1 (Include Scrap and Held). The Quantity field is displayed as Total, and includes scrap and held quantities booked.

Scrap and held quantities are always entered independently of the good or total quantity.

- The Count Reporting Policy flag on the organisational model can be set to:
 - 0 (Total Quantity) where a single number is prompted.
 - 1 (Count In, Count Out) where a start and end number are prompted. The software determines the actual quantity by subtracting in from out. You should take care with this policy if the quantity you are reporting is exclusive of scrap and held.

- If the parent item is a process group, the Output Validation flag on the route header qualifies the quantity you enter. The flag can be set to:
 - 0 (Co-product Quantity). The quantity entered should be that for the primary co-product only. All other co-products, by-products and waste quantities are calculated accordingly.
 - 1 (All Quantities). The booked quantity should be equal to the sum of all output quantities.
 - 2 (No Validation). The process group quantity should be booked and individual outputs confirmed.
- If you book operation WIP in a different UOM from the parent item, defined on the route as the Reporting UOM, the UOM Conversion factor defined on the route is used to determine the parent equivalent quantity, and the outstanding planned quantity. For example, if WIP is booked in grams and the parent quantity is 1 Kg, then booking 500 at the WIP operation leaves an outstanding quantity of 0.5 Kg, not an overproduction of 499 Kg.

If you are using WIP lot tracking, the quantity entered must be less than or equal to the quantity reported at the previous count point operation for the lot number entered.

Good

Enter the quantity of the item that you are booking into inventory.

If the current reported quantity plus the quantities booked to date equal the planned order quantity, the software automatically prompts with Operation Complete. Press **Enter** to continue.

Scrap

Enter the quantity scrapped at this operation. The software assumes that the full quantity of materials, labour and work station time required to make an equivalent good quantity is also consumed in the production of scrap.

Scrap balances are not maintained for an item and operation.

If the quantity has not yet been scrapped, but will be, then record the balance as held. Enter a reason code for the held quantity to indicate that it will be scrapped.

Reason

You must enter a reason code if you have reported a scrap quantity. The default displayed is the one held on the organisational model.

You define reason codes on the Inventory descriptions file, against major type MOVR.

Held

Enter the quantity held at this operation being reported. The held balance is updated for the item and operation being reported. Quantities may be held, for example, for rework or quality inspection.

If you book a rework activity type at an operation, you must have booked a held quantity equal to that reworked in WIP Inventory at the previous operation. Held quantities are then reduced when the rework is booked good.

There is also an activity type available to record rework associated with extra time spent on an operation. This does not affect standard WIP, but can generate an actual time booking or cost against the order.

You must enter a held reference if you have set the Held Inventory Tracking flag on the organisational model to 1 (yes). The software prompts for entry when you press **Enter** to validate booking details.



Tip: To make any held WIP inventory available, you can use the Release Inventory option within WIP Inventory Control. Alternatively, you can scrap held WIP inventory using the Scrap Held Inventory option.



Note: If the QS application is installed and active, the booking of an item subject to quality control must be a held quantity. This quantity will remain as held until the Material Disposition decision is made. If the items pass inspection, the quantity (less any scrap test pieces and so on.) will be released automatically and will be available for the next operation. However, if it is the last operation the items will be moved into Inventory.

Reason

You must enter a reason code if you have reported a held quantity. The default displayed is the one held on the organisational model.

You define reason codes on the Inventory descriptions file, against major type MOVR.

Op Complete



*Note: This field is automatically prompted after you have entered a good quantity, where the booked WIP inventory is equal to the planned operation quantity. If the operation is complete, then press **Enter** to confirm this. The status of the operation is then updated to Complete. You cannot then make further bookings or material issues for the operation.*

Use this field to indicate whether or not further bookings are expected at this operation. You can enter one of the following options:

0 - The operation is not complete, further booking is expected.

1 - Operation complete. No further booking is expected. The total booked may be less than or greater than planned.



Tip: You can set an operation or order to Complete, and re-open a complete operation or order, using the Order Completion option.

Order Complete



*Note: This field is automatically prompted following entry of a good quantity at the final operation, where the booked WIP inventory is equal to the order output quantity. If the operation is complete, then press **Enter** to confirm this. The status of the operation is then updated to Complete. You cannot then make further bookings or material issues for the operation.*

You can indicate in this field whether or not any further bookings of outputs are expected. You can enter one of the following options:

0 - The order is not complete, further booking is expected.

1 - Order complete. No further booking is expected. The total booked may be less than or greater than planned.

The quantity booked as good at the final operation on the route is transferred to Inventory, and recorded against either the finished goods, or receiving, stockroom for the item. This is defined on the planning route for the item. Otherwise, it is booked against the stockroom displayed in the Outputs Window. If you do not want to transfer the finished items to Inventory at the booking stage, then you can hold the items, and they can then be released later as required.



Note: The software displays a warning message if you set this field to 1, but book less than the planned quantity at the final operation.

Functions:

F13=Crew Details

Select this to display the Crew Details Window. You can only select this if you have entered a crew in the Crew field.

F14=Component Details

Select this to display the Component Details Window. This window will be displayed automatically if backflush materials, key ingredients or substitute items are defined for the operation, or if you have made reverse bookings at the operation. The Component Details Window also allows you book unplanned materials against the work order.



Note: If the Work Order Amend parameter in Change Management Parameter Maintenance has been set to 1, you cannot add an unplanned material to a work order if the associated route is subject to change control. To overcome this, you must raise and authorise an express change request type 72 (work order concession). The work order concession will cover all amendments you need to make to the work order, and will remain in force until you close the change request (status 90). Change type 99 (catch all) does not cover work order concessions.

F16=Outputs

Select this to display the Outputs Window. This window will be displayed automatically when booking the last operation on a route.

F17=Scrap

Select this to display the Scrap WIP Details Window. Use this to enter a reference and scrap reason code against the full scrapped quantity, or a range of codes against a number of quantities.

F18=Hold

Select this to display the Held WIP Details Window. Use this to enter a reference and held reason code against the full held quantity, or a range of codes against a number of quantities.

F19=Booking Details

Select this function to display the Booking Details Window. This Window is displayed after entry and completion of the first operation booking.



Press **Enter** to validate your entries and display the Booking Details Window.



Note: If the order has been stopped, the software displays an error message and prevents you completing the booking.

Backflush Production Receipts



14/PCM

Use this option to record the receipt of finished items and to backflush the equivalent input issues without using the control mechanism of a production order.

The main aims of this task are to:

- Receive quantities of finished items into Inventory.
- Backflush bulk issue components using a specified route.
- Calculate costs of receipts using standard routes and standard issues.



Tip: You do not normally use this option when production is controlled by production orders.



Note: This option does not backflush components of phantoms.

Backflushing In A Location Controlled Stockroom

When items are stored in a location controlled stockroom, the Enter Location Balances Window is displayed so that you can enter location details for the issue.



Tip: Refer to the Production Order Booking option for more information on the Enter Location Balances Window.



Tip: Refer to Processing With in A Location Controlled Stockroom in the Inventory Management product information for more information on location control

Backflush Receipts Selection Screen



To display this screen, select the Backflush Production Receipts option.

You use this screen to enter the item you want to backflush.

```
PC020          AS - ALG Systems          USER STDMAN    26/06/00
                                                16:44:23

Backflush Receipts

Item.....?.. _____

F3=Exit  F4=Prompt  F12=Previous

MA a MW 06/023
```

Fields:

Item

Enter the item you want to backflush.



Press **Enter** to display the Backflush Receipts Detail Screen.

Backflush Receipts Detail Screen



To display this screen, press Enter on the Backflush Receipts Selection Screen.

You use this screen to enter the details of the item you want to backflush.

PC020	AS - ALG Systems	USER STDMAN	26/06/00 16:44:23
Backflush Receipts			
Item.....?..	CDR36	36 Speed CD-ROM Drive	
Quantity Received...			
UOM.....?..	EA		
Stockroom.....?..	RM		
Reference.....	26/06/00		
Transaction Type..?			
Transaction Date....	26/06/00		
Backflush Route..?..	_		
F3=Exit F4=Prompt F12=Previous			
MA	a	MW	08/023

Fields:

Quantity Received

Enter the quantity of the finished item being received into Inventory. This is used in conjunction with the lot size, unit of measure, shrinkage and quantity per fields on the route to determine the quantities to be backflushed. You can enter a negative quantity to record and backflush an adjustment.

UOM

Enter the units of measure in which the received quantity is expressed. The default displayed is the issue unit of measure defined for the stockroom on the planning route of the parent item, or defined for the primary stockroom. Any conversion for the calculation of quantities is performed to the unit of measure in the backflushing route stockroom.

Stockroom

The default displayed is the stockroom held on the planning route for the item, or the primary stockroom held on the item master. You can change it to any valid stockroom for this item, for which a valid route exists.

Reference

You can enter a reference for this receipt. The default reference is the current system date, but you can change this. Any reference you enter is recorded on all the Inventory movements for the finished item receipt and component issues.

Transaction Type

You can enter a transaction type for production purposes. The movement type recorded in Inventory Management is taken from the Inventory Processing Profile definition for the movement.

Transaction Date

Enter the date of the receipt. Each of the issues backflushed carries the same date and this is used to check the effectivity of inputs. The field defaults to the current system date.

Backflush Route

Enter the route to be used by the backflush process. This must be a route that is defined for the received item. The default displayed is the planning route for the item as defined on the Production Details. If this does not exist, the software does not allow the transaction unless you enter a valid alternative route.

The software displays a message to inform you when the backflushing has been completed normally. It also produces an audit report that:

- Lists the receipts made and the resulting costs, using backflush issues.
- Lists the components that were not backflushed because they were not specified as bulk issue on the item master, or are batch controlled.
- Recommends that you perform a manual adjustment, and suggests an issue/adjustment quantity.



Press **Enter** to validate your entries. If the backflush will result in negative stock, a warning message is displayed. Press **Enter** again to update the transaction.

Subcontractor WIP Shipper



15/PCM

Use this option to book out WIP inventory items that will be sent to a subcontractor for processing. You must define the subcontract operation on the production route for the parent item.



Note: There are some important points regarding the setting up of subcontract operations that you must take note of. These are listed in the Subcontractors Maintenance option within Production Definition Management. You should refer to them before using this, or any other subcontract option.



Tip: Use the Receive From Subcontractor option to receive back completed WIP from the subcontractor.

Subcontractor WIP Shipper Entry Screen



To display this screen, select the Subcontractor WIP Shipper option.

You use this screen to enter the details of work in process that you want to ship to a subcontractor for processing. When you press **Enter** to validate your transaction details, the order number, operation and quantity shipped are displayed into the Shipper Details Window

MG230		AS - ALG Systems		User STDMAN		8/05/00 14:36:09	
Subcontractor WIP Shipper Entry							
Shipper Header							
Date	8/05/00	Shift					
WIP Location.....?	RM						
Subcontractor.....?	S100						
Shipper Number.....?							
Ship Via.....?							
Shipper Details							
Order.....?	W000052						
Operation.....?	20						
Lot Number.....?							
PO Number.....?							
PO Line Number...							
Quantity							
Shipped.....	1						
Due Date.....	0/00/00						
Rework Indicator.	0						
Reversal.....	0						
2=Select 4=Delete F12=Previous							
F3=Exit F4=Prompt F8=Update F16=Order Stock Status F19=Shipper Details							
MA a MW 19/021							

Fields:

Date

You must enter the date on which the WIP will be shipped. The default is the current system date, but you can override this.

Shift

You can enter the shift that the shipment relates to. This provides a more precise time frame for recording the shipment on the stated date. You define shift profiles as part of the system set-up procedures. You can also specify unique shifts for each work station.

WIP Location

Enter the WIP location for which inventory balances will be updated when the items are shipped. A WIP location can be a physical or a logical area of the shop floor. It is defined within Inventory as a stockroom, and is linked to a work station in Production.

If you do not enter a WIP location, the software defaults to the location associated with the operation.



Note: If the booking is made against a work station that is not the standard defined in the route, several WIP locations may be valid for this booking.

If WIP Lot Tracking is active on the production company profile, and the balance at the WIP location is not equal to the requested shipment (that is, there is insufficient inventory recorded at the WIP location) an error message is displayed. You can override this message.

Subcontractor

Enter the subcontractor that you will send the WIP inventory to. You must have already defined the operation, route, and subcontractor code as a valid combination in the Subcontractors Maintenance option within Production Definition Management.

If you do not enter a subcontractor, the field defaults to the first subcontractor defined for the item, route and operation combination.

Shipper Number

This is a system generated sequential number that is automatically displayed when you press **Enter** to validate your entries. The last used shipper number is displayed on the organisational model.

You can enter the same number against a number of items, operations or orders, if you are recording multiple despatches of WIP materials to the same subcontractor on the same shipment. You can also print all the details on the same shipping note document.



Note: It is important that you make a note of this number because, if you are using shipper tracking, you will have to quote it when recording receipts from the subcontractor. The number is used to validate the receipt against the WIP quantities shipped for that operation.

Ship Via

If you have set up shipping codes within Purchase Management, you can enter one to indicate the method of transport, or the transporter, used to move the shipment.

Order

Enter the production order number against which the shipment will be recorded.

Operation

Enter the operation number prior to that defined as subcontracted for the items being shipped, unless it is the first operation on the route when WIP shipment is not required.



Note: If the item needs rework, then you should enter the actual subcontracted operation and set the Rework Indicator field to 1.

*You cannot review the available stock status using **F16=Order Stock Status** until you have set the Rework Indicator field to 1.*

Lot Number

If WIP Lot Tracking is active, then the WIP lot to be shipped must exist. If it is not active, you can enter a lot number.

PO Number

If you use Purchase Management you can record the shipment against an active purchase order. The number you enter here is validated in Purchase Management.

PO Line Number

If you have entered a purchase order number above, you must also enter a valid line number on the order.

Quantity Shipped

Enter WIP quantity being shipped.

Due Date

You can enter the date when completion and return from the subcontractor is expected. The default is the current system date. The due date is displayed on enquiries and printed on reports.

Rework Indicator

If the item is being returned to the subcontractor because it is faulty or does not meet quality requirements but can be reworked, then you should indicate this here. Enter one of the following:

0 - The item is being shipped for the first time. This is the default.

1 - The item is to be reworked. The software checks that there is a sufficient held WIP quantity at the receiving operation to warrant the return. An error message is displayed if there is insufficient to ship.

Reversal

You can use this field to correct an error made in a previous shipment detail, or to book back items which were not used by the subcontractor. Enter one of the following:

0 - Standard booking.

1 - To make a reverse booking.



Note: You do not use this to receive back completed WIP from the subcontractor. Use the Receive From Subcontractor option for this.

Functions:

F16=Order Stock Status

Once you have entered an order number and operation, you can select this function to review the WIP inventory balances at the operation, that is, the WIP locations. This opens the WIP Location Stock Status Window. For more details on the window, refer to the Total Stock Status Enquiry within WIP Inventory Control.

F19=Shipper Details

Select this function to display the Shipper Details Window, which lists existing subcontractor WIP shipper records.



Press **Enter** to validate your data, then select **F8=Update** to confirm and update the booking.



Note: If the order has been stopped, the software displays an error message and prevents you completing the booking.

Shipper Details Window



Select **F19=Shipper Details** on the Subcontractor WIP Shipper Entry Screen, after you have pressed **Enter** to record the transaction in the Shipper Details Window.

You use this window to select existing subcontractor WIP shipping details for modification.

When you select a record with option 2 to amend, the data is transferred back to the Subcontractor WIP Shipper Entry Screen for you to make the changes. However, the status of the line in the window is changed to DELETED. When you press **Enter** to confirm your changes, the data is transferred again to this window.

MG230		AS - ALG Systems		User STDMAN		8/05/00 14:13:09	
Subcontractor WIP Shipper Entry							
Shipper Header							
Date 8/05/00 Shift							
WIP Location.....? RM							
Subcontractor.....? S100							
Shipper Number....? 1							
Ship Via.....? -							
Shipper Details							
Order.....? _____							
Operation.....? _____							
Lot Number.....? _____							
PO Number.....? _____							
PO Line Number... _____							
Quantity							
Shipped.....? _____							
Due Date.....? 0/00/00							
Rework Indicator. 0							
Reversal.....? 0							
2=Select 4=Delete F12=Previous							
F3=Exit F4=Prompt F8=Update F16=Order Stock Status							
F19=Shipper Details							
MA a MW 06/044							

Fields:

Select (S)

2 - Select. Enter 2 against an existing WIP shipper record to display it on the Subcontractor WIP Shipper Entry Screen.

4 - Delete. Enter 4 against an existing WIP shipper record to delete it.



Select an existing WIP shipper record and press **Enter** to return to the Subcontractor WIP Shipper Entry Screen with these details displayed.

Subcontractor Material Shipper



16/PCM

Use this option to book out any materials needed by the subcontractor. You must define the materials at the subcontract operation on the production route. They are normally defined as backflushed items.

This generates an increase in the stock of the material item in the subcontractor stockroom defined in the organisational model, and a decrease in the issuing stockroom.

Shipping Materials From A Location Controlled Stockroom

When items are stored in a location controlled stockroom, the Enter Location Balances Window is displayed so that you can enter location details for the issue.



Tip: Refer to the Production Order Booking option for more information on the Enter Location Balances Window.



Tip: Refer to Processing With in A Location Controlled Stockroom in the Inventory Management product information for more information on location control

Subcontractor Material Shipper/Return Screen



To display this screen, select the Subcontractor Material Shipper option.

You use this screen to enter the details of materials to be shipped to or returned from subcontractors.

PC250		Z1 - GB Demonstration Company		User GBJBA1MS		3/07/00	
						15:26:10	
Subcontractor Material Shipper/Return							
Shipper Header				Shipper Details			
Date 3/07/00 Shift _				S Item Lot Number			
Stockroom.....?							
Org.Model.....?							
Subcontractor.....?							
Shipper Number....?							
Ship Via.....?							
Shipper Details							
Item.....?							
Lot Number.....?							
Quantity							
Shipped/Returned. _____				2=Select 4=Delete			
Return Indicator. @				F12=Previous			
F3=Exit F4=Prompt F8=Update				F16=Item/Stockroom Enquiry			
F19=Shipper Details							
MA a		MW				06/023	

Fields:

Date

You must enter the date on which the materials will be shipped. The default is the current system date, but you can override this.

Shift

You can enter the shift that the shipment relates to. This provides a more precise time frame for recording the shipment on the stated date. The shift number you enter should be on the shift profile in force on the shipment date, at the work station defined to the subcontracted operation.

Stockroom

You must enter the issuing stockroom for the material, as defined on the route you are using.

Org Model

Enter the live organisational model that the subcontractor stockroom is defined to. This is the stockroom that the materials are transferred to.

Subcontractor

Enter the subcontractor to whom the materials are to be shipped. The entry is validated against the list of suppliers in Accounts Payable.

Shipper Number

This is a system generated sequential number that is automatically displayed when you press **Enter** to validate your entries. The last used shipper number is displayed on the organisational model.

You can enter the same number against a number of items, operations or orders, if you are recording multiple despatches of WIP materials to the same subcontractor on the same shipment. You can also print all the details on the same shipping note document.



Note: It is important that you make a note of this number because, if you are using shipper tracking, you will have to quote it when recording receipts from the subcontractor. The number is used to validate the receipt against the WIP quantities shipped for that operation.

Ship Via

If you have set up shipping codes in Purchase Management, you can enter one to indicate the method of transport, or the transporter, used to move the shipment.

Item

Enter the material to be shipped. This must be a backflush type item, and must have a valid item, stockroom relationship with both the issuing and subcontractor stockroom.

Lot Number

If the material is lot controlled, you must enter a valid lot reference. Any returns of material are validated against the shipped lot, as well as the shipper number, if Shipper Tracking is used.

Quantity Shipped/Returned

Enter the quantity to be shipped to or received from the subcontractor. The received quantity should be less than or equal to the quantity recorded as shipped to the subcontractor, and you must set the Return Indicator field to 1 for receipts.

Return Indicator

Use this to indicate whether the materials are being shipped to or received from the subcontractor. Enter one of the following:

0 - To ship materials to the subcontractor.

1 - To receive materials from the subcontractor.

Functions:

F16=Item/Stockroom Enquiry

Once you have entered an item and issuing stockroom, select this function to review the inventory balances at that stockroom.

F19=Shipper Details

Select this function to display the Shipper Details Window, which lists existing subcontractor WIP shipper records.



Select **F8=Update** to confirm and update the booking.

Receive From Subcontractor



17/PCM

Use this option to record the receipt of WIP inventory or finished goods received from subcontractors. You use the Subcontractor WIP Shipper option to record inventory sent to subcontractors.

The validation routine checks that the quantity received exists in the WIP location for the subcontractor at the previous operation. This causes a decrease in the WIP stock of the item shown as subcontract at the WIP location for the previous operation, and an increase in the WIP stock at the receiving operation. If this is the last operation, this generates a receipt into the finished goods stockroom designated on the route.

Receiving Into A Location Controlled Stockroom

When items are stored in a location controlled stockroom, the Enter Location Balances Window is displayed so that you can enter location details for the issue.



Tip: Refer to the Production Order Booking option for more information on the Enter Location Balances Window.



Tip: Refer to Processing With in A Location Controlled Stockroom in the Inventory Management product information for more information on location control

Subcontractor Order Receipts Entry Screen



To display this screen, select the Receive From Subcontractor option.

You use this screen to enter the details of WIP or finished goods received from subcontractors.

MG240		Z1 - GB Demonstration Company		User GBJBA1MS		12/06/00	
						16:35:19	
Subcontractor Order Receipts Entry							
Advice Note Header				Receipts Details			
Date 12/06/00 Shift __				S Order Op Lot Quantity			
WIP Location...? __							
Subcontractor...? __							
Advice Note.....							
Advice Note Details							
Order.....? Rev @							
Operation.....? __							
Lot Number.....? __							
PO Number.....? __							
PO Line Number.. Ship Close @							
Shipper Number.? 00000000				Bottom			
Quantity				2=Amend 4=Delete			
Good... Reason.? __							
Scrap.. Reason.? __							
Held... Reason.? __							
Op.Complete..... @				Order Complete.. @			
F3=Exit F4=Prompt F8=Update F14=Input Details F16=Output Details							
F17=Scrap F18=Held F19=Receipt Details							
MA a						05/023	

Fields:

Advice Note Header

Date

Enter the date on which the items will be received. This defaults to the system date.

Shift

You can enter the shift for this receipt to provide a more precise time frame for recording the receipt. The shift number should be on the shift profile in force on the receipt date, at the work station defined to the subcontracted operation.

WIP Location

Enter the subcontract WIP location. This should be the location defined for the work station entered on the route for the current subcontract operation, not the previous operation that the inventory was originally shipped from.

The software displays a warning message if the WIP location entered is different from standard. You may need to transfer lots to the standard location before you book the next operation if you use WIP Lot Tracking.

Subcontractor

Enter the subcontractor supplying the items.

If you use Shipper Tracking, then the quantity of an item received must be less than or equal to the quantity shipped. If you enter a quantity greater than that shipped, the software displays an error message.

If you do not enter a subcontractor, but you enter an order, operation, and shipper number, this defaults to the subcontractor entered at shipment time.

Advice Note

You can use this free format field to record the document number accompanying the received items. This would usually be an advice or despatch note. The number is printed on reports and displayed on enquiries to identify the receipt.

Advice Note Details

Order

Enter the production order number to which the receipt relates.

Rev

Use this field to indicate whether the goods are being received from or returned to the subcontractor.

0 - Receive. Enter 0 to receive the goods from the subcontractor. This is the default.

1 - Return. Enter 1 to return the goods to the subcontractor.

Operation

Enter the sequence number of the subcontracted operation.

Lot Number

If the item is lot controlled, enter the lot number of the item that was shipped and is now being received back from the subcontractor.

PO Number

Enter the relevant purchase order number as quoted on the WIP shipment.

PO Line Number

If you entered a purchase order number, specify the line number on which the item appears.

Ship Close

Use this to indicate whether or not this receipt is the last shipment to be recorded against the entered shipper number. Enter one of the following:

0 - This receipt is not the last shipment from the subcontractor; more receipts are expected.

1 - Yes. This receipt is the last shipment from the subcontractor and completes this booking.

Shipper Number

Enter the shipper number that was generated and used when the WIP inventory was being shipped to the subcontractor. You must enter the number if Shipper Tracking is in use.

Quantity

Good

Enter the quantity of items received in satisfactory status, which will be available for the next operation or for booking into finished goods stock if this is the last operation on the route.

Scrap

Enter any scrap quantity. This is added to the good quantity when determining input usage.

Reason

You must enter a reason code if you have reported a scrap quantity. The default displayed is the one held on the organisational model.

You define codes on the Inventory descriptions file, against major type MOVR.

Held

Enter any held quantity. This is necessary if you will be returning items to the subcontractor for rework. If you do send the items back for rework, this held balance is reduced by the rework quantity so that on completion at a later date it can be received once more. If you have set the Held Inventory Tracking flag on the organisational model to 1, once a held quantity has been entered, select **F18=Held** to use the Held WIP Details Window to record a tracking reference and reason code.

You can also release held quantities using the Release WIP Inventory option in the WIP Inventory Control section. Releasing held WIP makes it available for further operations. Alternatively, held WIP can be scrapped by the Scrap Held Inventory option.

Reason

You must enter a reason code if you have reported a held quantity. The default displayed is the one held on the organisational model.

You define codes on the Inventory descriptions file, against major type MOVR.

Op Complete

Use this field to specify whether or not all receipts relating to this operation on this work order are complete.

0 - No. Further receipts relating to this operation on this order are expected.

1 - Yes. All receipts relating to this operation on this order have been received.

Order Complete

Use this field to specify whether or not all receipts relating this work order are complete.

0 - No. The order is not complete.

1 - Yes. The order is complete.



Tip: You can do this if the subcontracted operation is the final operation on the route, you can set the order status to complete.

Functions:

F14=Input Details

Select this to display the details of the input items for the operation. Once you have entered an order number and operation quantity, you can select this if you want to override the standard input requirements.

F16=Output Details

Select this to display the details of the outputs received. Once you have entered an order number and operation quantity, you can select this if you want to override the standard outputs received.

F17=Scrap

Select this to display the Scrap WIP Details Window. Use this to enter a reference and scrap reason code against the full scrapped quantity, or a range of codes against a number of quantities.

F18=Held

Select this to display the Held WIP Details Window. Use this to enter a reference and held reason code against the full held quantity, or a range of codes against a number of quantities.

F19=Receipt Details

Select this function to display the Receipt Details Window, which lists existing receipts.



Select **F8=Update** to confirm and update the booking.



Note: If the order has been stopped, the software displays an error message and prevents you completing the booking.

Component Details Window



To display this window, select **F14=Input Details** on the Subcontractor Order Receipts Entry Screen.

You use this window to select the input lots you want to receive.



Fields:

Select (S)

You can select the lots you want to receive the input items against.

1 - Select Lots. Enter 1 against the lots you want to select.

3 - Amend. Enter 3 against a lot to amend it. The details are transferred to the two Add/Amend fields at the bottom of this window.

Add/Amend

Use these two fields to add an input item to the receipt or to amend an existing input entry.

Enter 3 against an existing input to select it. The details are transferred to these fields, where you can amend the quantity.



Press **Enter** to accept the input lots you have selected.

Output Details Window



To display this window, select **F16=Output Details** on the Subcontractor Order Receipts Entry Screen.

Use this window to the details of the outputs you want to receive.

MG240		Z1 - UK Demonstration Company		User GBJBAJSS 18/01/00																
Subcontractor Order Receipts Entry																				
Advice Note Header																				
Date 18/01/00 Shift _																				
WIP Location...? FG																				
Subcontractor...? ABBA																				
Advice Note.....																				
Advice Note Details																				
Order.....? W001922																				
Operation.....? 10																				
Lot Number.....?																				
PO Number.....?																				
PO Line Number.. Ship Close @																				
Shipper Number.? 00000000																				
Quantity																				
Good... 1																				
Scrap.. Reason.? _																				
Held... Reason.? _																				
Op.Complete..... Order Complet																				
<table border="1"> <thead> <tr> <th colspan="3">Outputs</th> </tr> <tr> <th>1 Output</th> <th>Quantity</th> <th>UOM ST</th> </tr> <tr> <th>Lot Number</th> <th>Qty. Outstd.</th> <th>Prmy</th> </tr> </thead> <tbody> <tr> <td>ALATCH</td> <td>1.000</td> <td>EA CS</td> </tr> <tr> <td></td> <td>20.000</td> <td>1</td> </tr> </tbody> </table>						Outputs			1 Output	Quantity	UOM ST	Lot Number	Qty. Outstd.	Prmy	ALATCH	1.000	EA CS		20.000	1
Outputs																				
1 Output	Quantity	UOM ST																		
Lot Number	Qty. Outstd.	Prmy																		
ALATCH	1.000	EA CS																		
	20.000	1																		
1=Select 2=Autoreceive 3=Ignore 4=Complete 5=Lot Details F8=Confirm F9=Receive Sel F12=Previous F14=Unplanned Output																				
F3=Exit F4=Prompt F8=Update F14=Input Details F16=Output Details F17=Scrap F18=Held F19=Receipt Details																				
MA a		MW		07/042																

Fields:

Select (1)

You can enter one of the following options:

- 1 - Select. To display output details for the item in the Add/Amend Output Window, where you can make amendments.
- 2 - Autoreceive. This also displays the Add/Amend Output Window. On a process group route, if the outputs listed are co-products and by-products, they are associated in terms of an output ratio defined on the route. If you change the quantity of any one output, the Add/Amend Output Window is refreshed with new quantities for the rest of the group to maintain the ratio defined in the route. Autoreceive is the highest priority amendment for quantities. You can select a line for amendment on its own using either option 1 or 3. If you then select a process group using option 2, the quantities are revised for these lines again.
- 3 - Ignore. This automatically changes the quantity for an output to zero. This means that the Inventory stock held for this product is not updated.
- 4 - Complete. This only applies to production orders. It sets the flag on the order to 1, to signify that the order is complete. Nothing more is expected to be booked against it.
- 5 - Lot Details. This displays the Select Location/Batch Window.

Functions:

F9=Receive Sel

Enter 1 in the selection field and select this function to part receive the selected lines into Inventory, with the displayed quantities.

F14=Unplanned Output

If an unplanned output item that is not defined on the standard route occurs at this operation, select this function to display the Add/Amend Output Window. You can then record the additional output for posting to Inventory. The item must be a valid Inventory item associated with a valid Inventory stockroom for the additional screen to be accepted.



Select **F8=Confirm** to validate your entries and return to the previous screen.



*Note: If the output is a Production Catchweight item, then when you select **F8=Confirm** a window is displayed, showing the secondary UOM and values for the item. Press **Enter** twice to confirm the values and outputs, and complete the booking as normal.*

Add/Amend Outputs Window



To display this window, enter **1** or **2** in the selection field and press **Enter**.

Use this window to make amendments to the output quantities.

MG240		Z1 - UK Demonstration Company		User GBJBAJSS 18/01/00	
Subcontractor Order Receipts Entry					
Advice Note Header					
Date 18/01/00 Shift _					
WIP Location...? FG					
actor...? ABBA					
Advice Note.....					
Advice Note Details					
Order.....? W001922					
Operation.....? 10					
Lot Number.....?					
PO Number.....?					
PO Line Number.. Ship Close @					
Shipper Number.? 00000000					
Quantity					
Good... 1					
Scrap.. Reason.? _					
Held... Reason.? _					
Op.Complete..... Order Complet					
F3=Exit F4=Prompt F8=Update F14=Input Details F16=Output Details					
F17=Scrap F18=Held F19=Receipt Details					
MA a MW 10/061					

Outputs			
1 Output	Quantity	UOM	ST
Lot Number	Qty. Outstd.	Pmy	
1 A	Add/Amend Output		
Op. Seq....: 9999			
Output....?: ALATCH			
Quantity...: 1.000			
UOM.....?: EA			
Stockroom.?: CS			
Lot.....?:			
Narrative..: W001922			
Tran Type.?:			
F4=Prompt F12=Previous			
F8=Confirm F9=Receive Sel			
F12=Previous F14=Unplanned Output			

Fields:

Op Seq

If you are adding an unplanned output, enter the operation sequence at which the output was produced. For amendments, the operation sequence is shown for information only.

Output

If you are adding an unplanned output, enter the Inventory item code for it. Outputs must be valid Inventory items with valid Inventory stockrooms assigned to them. For amendments, this is a display field only.

Quantity

If you are adding an unplanned output, enter the quantity produced.

If you are amending a line, enter the actual amount produced and available for Inventory. The default displayed is the standard quantity of the output produced for the order quantity.

UOM

For additions or amendments, enter the Unit of Measure that the output item is stocked in.

Stockroom

Enter the Inventory stockroom that the output will be received into. It must be a valid Inventory stockroom, to which the item has been defined. The default is the stockroom defined on the route.

Lot

You must enter a lot reference if the item is lot controlled. The default is the production lot. If the quantity being booked will be added to an existing Inventory lot, you can enter that lot number.

If you enter a new lot reference, and select **F8=Confirm** or **F9=Receive Sel** to confirm details in the Outputs Window, the Lot Maintenance Window is displayed. There, you can enter the details for the new lot.

Reason

Enter a reason code for the addition.

This field is mandatory if you are entering an unplanned output.

You define reason codes in the Inventory descriptions file, against major type MOVR.

Narrative

You can enter specific narrative to be associated with this item in Inventory. The default narrative is the WIP lot reference for the item booking, or the concatenation of the production order with the operation when processing orders. The software uses the relevant default if you add an unplanned output, but do not specify any narrative.

Tran Type

You can enter the Inventory transaction type. This is mandatory if you use lot tracking, as this requires all movements to be traceable by location and usage.


The transaction type is used for inventory analysis only and does not affect changes to any stock balances.

You define transaction types in the Inventory descriptions file against major type TRAN.



Press **Enter** to validate your entries and return to the previous window.

Scrap Window



Use this window to record scrap quantities of goods returned from subcontractors.

You can enter a scrap quantity, a reference and a reason code. This is useful when there are quantities of items that are scrapped for more than one reason.

MG240
Z1 - UK Demonstration Company
User GBJAJSS
18/01/00

Subcontractor Order Receipts Entry

Advice Note Header

Date 18/01/00 Shift

WIP Location...? FG

Subcontractor...? ABBA

Advice Note....

Advice Note Details

Order.....? W001924

Operation.....? 10

Lot Number.....?

P0 Number.....?

P0 Line Number.. Ship Close @

Shipper Number.? 00000000

Quantity

Good... 10.000

Scrap.. 5.000 Reason.? SC

Held... 5.000 Reason.? Q1

Op.Complete.... @ Order Complete.. @

Scrap WIP Details

Item ALATCH Oper 0010

Quantity Scrap 5.000

Remaining 5.000

Reference	Quantity	Reason ?
	.000	—
	.000	—
	.000	—
	.000	—
	.000	—
	.000	—
	.000	—
	.000	—
	.000	—

More...

F12=Previous Enter to Accept

F3=Exit F4=Prompt F8=Update F14=Input Details F16=Output Details
F17=Scrap F18=Held F19=Receipt Details

MA a MW
09/04/2000

Fields:

Reference


You can enter a reference for the scrap quantity in this field. It can either be a QA reference or a functional notation. This is optional.

Quantity

You can enter the quantity of scrap relating to this reference.

Reason

You can enter the reason code associated with this scrap quantity.



Held Window



To display this window, select **F18=Held** on the Subcontractor Order Receipts Entry Screen.

Use this window to record held quantities of goods returned from subcontractors.

You can enter a held quantity, a reference and a reason code. This is useful when there are quantities of items that are held for more than one reason.

MG240		Z1 - UK Demonstration Company		User GBJBAJSS		18/01/00	
Subcontractor Order Receipts Entry							
Advice Note Header							
Date 18/01/00 Shift _							
WIP Location...? FG							
Subcontractor...? ABBA							
Advice Note.....							
Advice Note Details							
Order.....? W001924							
Operation.....? 10							
Lot Number.....?							
PO Number.....?							
PO Line Number.. Ship Close @							
Shipper Number.? 00000000							
Quantity							
Good... 10.000							
Scrap.. 5.000 Reason.? SC							
Held... 5.000 Reason.? QI							
Op.Complete..... @ Order Complete.. @							
F3=Exit F4=Prompt F8=Update F14=Input Details F16=Output Details							
F17=Scrap F18=Held F19=Receipt Details							
MA a MW 09/042							

Held WIP Details

Item	ALATCH	Oper	0010
Quantity Held			5.000
Remaining			5.000
Reference		Quantity	Reason ?
		.000	—
		.000	—
		.000	—
		.000	—
		.000	—
		.000	—
		.000	—
		.000	—
		.000	More...
F12=Previous		Enter to Accept	

Fields:

Reference

You can enter a reference for the held quantity in this field. It can either be a QA reference or a functional notation. This is optional.

Quantity

You can enter the quantity of held WIP relating to this reference.

Reason

You can enter the reason code associated with this held quantity.



Press **Enter** to validate your entries and return to the previous screen.

Receipt Details Window



To display this window, select **F19=Receipt Details** on the Subcontractor Order Receipts Entry Screen.

You use this window to select existing subcontractor receipts for modification.

MG240		Z1 - GB Demonstration Company		User GBJA1MS		12/06/00 16:35:19	
Subcontractor Order Receipts Entry							
Advice Note Header				Receipts Details			
Date 12/06/00 Shift __				S Order Op Lot Quantity			
WIP Location...? __				_ W001925 10 5			
Subcontractor...? __							
Advice Note.....							
Advice Note Details							
Order.....? Rev @							
Operation.....? __							
Lot Number.....? __							
PO Number.....? __							
PO Line Number.. Ship Close @							
Shipper Number.? 00000000				Bottom			
Quantity				2=Amend 4=Delete			
Good... Reason.? __							
Scrap.. Reason.? __							
Held... Reason.? __							
Op.Complete..... @ Order Complete.. @							
F3=Exit F4=Prompt F8=Update F14=Input Details F16=Output Details							
F17=Scrap F18=Held F19=Receipt Details							
MA a 05/023							

Fields:

Select (S)

2 - Select. Enter 2 against an existing subcontractor receipt to display them on the Subcontractor WIP Shipper Entry Screen.

4 - Delete. Enter 4 against an existing subcontractor receipt to delete it.



Select an existing subcontractor receipt and press **Enter** to return to the Subcontractor Order Receipts Entry Screen with these details displayed.

-
-
-
-
-

Chapter 3

Production Order Enquiries And Reports

Production Order Enquiries

You can enquire on production orders that are currently stored on the system, or on orders that you have stored in an archive.

Order Enquiry

1... **1/PCE**
2...

This enquiry:

- Reviews orders by status, item or user reference.
- Displays the order header details.
- Displays summaries and details of material issues, operation bookings and finished goods receipts.

Production Order Enquiry Selection Screen



To display the first Production Order Enquiry Screen, select the Orders Enquiry option.

You use this screen to enter the selection criteria for the orders you want to enquire on.

You can select a single order by entering a production order number.

You can select a production order from a list by entering selection criteria and using one of the functions to display the Production Order Selection Screen, showing the selected orders that conform to the selection criteria you enter.

PC010	AS - ALG Systems	USER STDMAN	26/06/00 17:16:32
Production Order Enquiry			
Order Number.....?: _____			
Reference.....?: _____			
Item.....?: _____			
Orders Due from.....: <u>26/06/00</u> to: <u>26/06/00</u>			
Include Status			
Planned <u>1</u> (1 = Select)			
Confirmed <u>1</u>			
Released <u>1</u>			
Active <u>1</u>			
Completed <u>-</u>			
F3=Exit F4=Prompt F14=By Order F15=By Reference F16=By Item			
MA	a	MW	05/026

Fields:

Order Number

If you want to enquire on a specific order, enter the order number in this field.

Reference

Enter a reference code to enquire on. Select **F15=By Reference** to display all orders with that reference code.

Item

Enter an item to enquire on. Select **F16=By Item** to display all orders for that item.

Orders Due From, To

Enter a date range for the orders you want to enquire on. The default in both fields is the current date, but you can change that.

Include Status

Use these fields to select the status of orders that you want to enquire on. You can select more than one status.

Planned

Enter 1 in this field to display all orders with a status of Planned.

Confirmed

Enter 1 in this field to display all orders with a status of Confirmed.

Released

Enter 1 in this field to display all orders with a status of Released.

Active

Enter 1 in this field to display all orders with a status of Active.

Completed

Enter 1 in this field to display all orders with a status of Complete.

Functions:**F14=By Order**

Enter 1 against one or more status categories to include all orders of that status and use this function to display all orders with those status categories on the Production Order Selection Screen. The Order Number and Item fields must be left blank.

F15=By Reference

Enter 1 against one or more status categories and enter a reference in the Reference field to display all orders with these reference and status categories on the Production Order Selection Screen. The Order Number and Item fields must be left blank.

F16=By Item

Enter 1 against one or more status categories and enter an item code in the Item field to display all orders with this item and status categories on the Production Order Selection Screen. The Order Number and Reference fields must be left blank.



Enter an order in the Order Number field and press **Enter** to display the Production Order Enquiry Detail Screen.

Production Order Selection Screen



To display this screen, select **F14=By Order**, **F15=By Reference** or **F16=By Item** on the Production Order Enquiry Selection Screen.

This screen displays the production orders that meet the selection criteria entered on the Production Order Enquiry Selection Screen.

PC011	Z1 - GB Demonstration Company	USER GBJBAAA4	15/03/99 09:49:07			
Production Order Selection						
0	Order Item	Reference1	Reference2	Sts	Order Qty	Outstg.Qty
-	W003172 SF			CON	1.000	1.000
-	W003175 SF			CON	1.000	1.000
-	W003132 820			REL	10.000	10.000
-	W003170 SF			REL	1.000	1.000
-	W003171 SF			REL	1.000	1.000
-	W003173 SF			REL	1.000	1.000
-	W003174 SF			REL	1.000	1.000
-	W003128 MH-P-LAC01			ACT	4.000	4.000
-	W003137 MH-P-TEST1			ACT	3.000	3.000
-	W003138 MH-P-TEST1			ACT	3.000	3.000
-	W003139 910			ACT	10.000	5.000
-	W003141 MH-P-TEST1			ACT	3.000	3.000
-	W003142 MH-P-TEST1			ACT	3.000	3.000
-	W003143 MH-P-COL			ACT	100.000	100.0 +
1=Select order						
F3=Exit F12=Previous F22=More/less detail						
MA a 06/002						

Fields:

Option (O)

1 - Select Order. Enter 1 against a production order to select it. Press **Enter** to display the production order details.

Functions:

F22=More/Less Detail

Toggle between displaying more or less information about each order. The following additional information is displayed:

- The order type.
- The route code.
- The start and due dates.



Select one or more production orders and press **Enter** to display the Production Order Enquiry Detail Screen.

Production Order Enquiry Detail Screen



To display this screen, enter a production order number in the Order Number field on the first Production Order Enquiry Selection Screen, or enter 1 in the Option field on the Production Order Selection screen and press **Enter**.

This screen displays the current header details for the selected production order. You can select functions to display further information, if it is available.

PC010		Z1 - GB Demonstration Company		USER GBJBAAA4	15/03/99 10:46:12
Production Order Enquiry					
Production Order..: W003143		Status...: Active			
Type.....	Standard				
Item.....	MH-P-COL	parent			
Group.....					
Route.....	1				
Revision Level...					
Order Quantity...	100.000	UOM.. EA	Receiving Stockroom.. FG		
Quantity Complete:	.000				
Qty Outstanding...	100.000				
Latest Start Date:	1/03/99 9/99				
Due Date.....	5/03/99 9/99	** OVERDUE **			
Reference 1.....					
Reference 2.....					
F3=Exit		F12=Previous	F13=Reselect	F14=Operations	F15=Materials
F16=Receipts					F23=WIP
MA a					01/001

Functions:

F13=Reselect

Select this to re-display the Production Order Enquiry Selection Screen, where you can enter new selection criteria for the order you want to enquire on.

F14=Operations

Select this to display the operation details in the Order Enquiry Operations Review Screen.

F15=Materials

Select this to display the Order Enquiry Materials Review Screen.

F16=Receipts

Select this to display the Order Enquiry Receipts/Adjustments Screen.

F17=Reservations

Select this to review reservations against the order.



Note: This is only displayed if the works order is reserved against a sales order raised in the Advance Order Entry application.

F20=Outputs

Select this to review the outputs for process groups.



Note: This is only displayed when the order is for a Process Group.

F23=WIP

Select this to display the Order Enquiry WIP Review Screen with details of any existing WIP Inventory for the order.



Note: Qty Completed means the quantity transferred to the finished item inventory stockroom.



Press **Enter** to redisplay the Production Order Selection Screen.

Order Enquiry Operations Review Screen



To display this screen, select **F14=Operations** on the Production Order Enquiry Detail Screen.

This screen displays a summary of details for each operation defined on the selected order. The following information is displayed:

- The operation number and description.
- The current status of the operation.
- The scheduled work station for this operation.
- The scheduled quantity required, allowing for shrinkage during this and later operations.
- The quantity produced during this operation. This is either from a direct booking against this operation, or from a backflush resulting from a booking against a previous operation.
- The outstanding quantity. This is the difference between the quantity scheduled and the quantity completed, representing the remaining workload.

PC010	Z1 - GB Demonstration Company	USER GBJBAAA4	15/03/99
			11:33:22
Order Enquiry - Operations Review			
Order Number	W002427	Type Standard	Status Confirmed
Item	MH.PROGR.N1	mh process group 1, normal	
Order Quantity	1.000	Complete	.000 0/S 1.000
0	Oper Description	Sts W/Stn Qty Sched	Qty Comp Qty O/S
-	10 OP 1	CON MMH	1.000 .000 1.000
-	20 OP 2	CON MMH	1.000 .000 1.000
1=Select 2=Text			
F3=Exit F12=Previous F18=Display Qty Started F19=+/- Additional Balances			
F14=Material Review F13=Reselect			
MA	a		10/002

Fields:

Option (O)

You can enter one of the following:

- 1 - Select. To display operations booking details for the operation.
- 2 - Text. To display operation text for the operation.

Functions:

F13=Reselect

Select this to re-display the Production Order Enquiry Selection Screen, where you can enter new selection criteria for the order you want to enquire on.

F14=Material Review

Select this to display the Order Enquiry Materials Review Screen.

F18=Display Qty Started

Use this function to toggle the display to show the quantity scheduled or the quantity started.

F19=+/- Additional Balances

Select this to display additional details below each line. These are quantities for rework, held and scrap.



Select **F12=Previous** to return to the Production Order Enquiry Detail Screen.

Order Enquiry Operation Bookings Screen



To display this screen, enter 1 in the Option field on the Order Enquiry Operations Review Screen.

This screen lists transactions generated from operation bookings and backflushed operations.

Transaction Types

There are many transaction type codes used to identify the various bookings made and processed by Transaction Manager. These booking codes may form the basis of the extraction of cost data into the General Ledger through the AFI (Advanced Financial Integrator).

The following are the most common codes:

Booking Movement	Transaction Type Code	File
Standard Material	01	PCP62
Actual Material	02	PCP62
Transfer to Floor Stock	03	PCP62
Actual Labour	11	PCP59
Standard Labour	12	PCP59
Actual Work Station Booking	21	PCP59
Standard Work station Booking	22	PCP59
Actual Scrap Production	31	PCP93
Rework	32	PCP93
Indirect Labour	50	PCP58
Indirect Machine	51	PCP58
Indirect Material	52	PCP58
Setting Labour	60	PCP58
Setting Machine	61	PCP58
Setting Material	62	PCP58
Standard Setting	63	PCP58
Subcontract Shipper WIP	41	PCP53
Subcontractor Receipt	42	PCP53
Subcontractor Material Shipper	43	PCP53
Subcontractor Material Return	44	PCP53
WIP Movement	70	PCP56
Held WIP Movement	71	PCP56

Booking Movement	Transaction Type	File Code
Actual Output (Co-product single item)	72	PCP62
Standard Output (Co-product single item)	73	PCP62
Actual By-Product/Waste	74	PCP62
Standard By-Product/Waste	75	PCP62
Standard Cost Recovery	00	PCP52

```

PC010                Z1 - GB Demonstration Company      USER GBJBAAA4      15/03/99
                                                           12:27:56

Order Enquiry - Operation Bookings
Order Number      W002580      Type Standard      Status Active
Item              SUB#11      parent, with subcontract op, lot
Operation         10 op 1 inhouse
Operation Sts     Active      Operation Cost      .00000
Work Station      MMH      Wrkst. Monika
Qty Started       45.000      Qty Comp.      37.000      Qty O/S      8.000
Earliest Start   15/05/98 20/98 Latest   18/05/98 21/98 Due   18/05/98 21/98

  Date   Type   Qty Booked   W/Stn Crew   Start   End   Duration   Tranxn.No.
15/05/98  11           MMH           :00      :00      :00      00022790
15/05/98  21           MMH           :00      :00      :00      00022790
15/05/98  11           MMH           :00      :00      :00      00022791
15/05/98  21           MMH           :00      :00      :00      00022791
15/05/98  70      20.000      MMH           :00      :00      :00      00022790
15/05/98  70      17.000      MMH           :00      :00      :00      00022791

                                                           Bottom

F3=Exit  F13=Reselect  F14=Operation Review  F15=Order Review

```

Functions:

F13=Reselect

Select this to display the first Production Order Enquiry Selection Screen, where you can select another order to enquire on.

F14=Operation Review

Select this to redisplay the Order Enquiry Operations Review Screen.

F15=Order Review

Select this to redisplay the Production Order Enquiry Detail Screen.



Select **F13=Reselect** to return to the previous screen.

Order Enquiry Materials Review Screen



To display this screen, select **F15=Materials** on the Production Order Enquiry Detail Screen, or **F14=Material Review** on the Order Enquiry Operations Review Screen.

This screen displays a summary line for each input or component. The inputs are listed in component sequence number order within operation sequence number order. The following details are displayed:

- The issuing stockroom and unit of measure for the input.
- The original quantity of the input needed to fulfil the schedule, including the appropriate allowance for shrinkage.
- The quantity of the input issued to the operation.
- The outstanding quantity. This is the difference between the quantity required and the quantity issued.

PC010	Z1 - GB Demonstration Company	USER GBJBAAA4	15/03/99
			13:01:14
Order Enquiry - Materials Review			
Order Number	W003113	Type Non-standard	Status Confirmed
Item	BIKE-MODEL	Model Bicycle	
Order Quantity	1.000	Complete	.000 0/S 1.000
Receiving Stockroom 01			
0	Opsq Cseq Component	St UOM Qty Required	Qty Issued Qty O/S
—	10 10 FRAME-M-26	01 EA 1.000	.000 1.000
—	10 20 LAQUEUR-RED	01 LT .500	.000 .500
—	10 30 MUDGUARDS(26")	01 PR 1.000	.000 1.000
—	20 10 HANDLEBARS-DRP	01 EA 1.000	.000 1.000
—	20 20 RACING GEARS	01 EA 1.000	.000 1.000
—	20 30 WHEELS(26")	01 PR 1.000	.000 1.000
—	30 10 5001	01 BX 1.000	.000 1.000
—	30 20 5002	01 CA 1.000	.000 1.000
—	30 30 5003	01 BX 1.000	.000 1.000
—	30 40 5004	01 BX 1.000	.000 1.000 +
1=Select			
F3=Exit F12=Previous F13=Reselect F14=Review Operations			
M0 a			10/002

Fields:

Option (O)

1 - Select. Enter 1 in this field to display the Order Enquiry Material Movements Screen, which contains information about the movements of the selected input.

Functions:

F13=Reselect

Select this to re-display the Production Order Enquiry Selection Screen, where you can enter new selection criteria for the order you want to enquire on.

F14=Review Operations

Select this to redisplay the Order Enquiry Operations Review Screen.



Select **F12=Previous** to return to the previous screen.

Order Enquiry Material Movements Screen



To display this screen, enter 1 in the Option field on the Order Enquiry Materials Review Screen.

This screen gives further details of the selected component item, including a list of all inventory stock movements booked against it. The following details are displayed:

- The date and time of the movement.
- The inventory movement type. This can be manual, automatic, backflush, or W for adjustment, that is negative issue or returns.
- The issuing or receiving stockroom for the movement.
- The quantity recorded for the movement. A negative value indicates an issue. A positive value indicates a return to stock or an adjustment.
- The issuing or receiving bin or lot number. This is only relevant if you are using batch controls.
- The ID of the user responsible for the stock movement.

PC010		Z1 - GB Demonstration Company		USER GBJBAAA4	15/03/99 14:32:50
Order Enquiry - Material Movements					
Order Number	W002450	Type	Amended Standard	Status	Active
Item	MH-PRDGROUP1	mh	process group 1		
Operation	10			Cost	4.00000
Component	20 MH-IN-TEST2	input 2			
Qty Required	6.000	Issued	2.000	O/S	4.000
Reference		From Date	0/00/00	To Date	99/99/99
Date	Time	Type	Movement	Qty	Store UOM Batch Ref.
23/04/98	10:30:44	M		2.000-	RM EA
					User GBJBAMMH
F3=Exit F12=Previous F13=Reselect					
MH a					01/001

Functions:

F13=Reselect

Select this to re-display the Production Order Enquiry Selection Screen, where you can enter new selection criteria for the order you want to enquire on.



Select **F12=Previous** to return to the previous screen.

Order Enquiry Receipts/Adjustments Screen



To display this screen, select **F16=Receipts** on the second Production Order Enquiry Screen.

This screen displays a summary line for each finished goods receipt made into Inventory against this order. The following details are displayed:

- The date and time of the receipt.
- The inventory movement transaction type.
- The quantity booked into the receiving stockroom.
- The receiving stockroom, and the unit of measure in which the receipt was made.
- The receiving bin or lot number. This is only displayed if you are using batch controls.

PC010	Z1 - GB Demonstration Company				USER GBJBAAA4	15/03/99	
						15:57:16	
Order Enquiry - Receipts/Adjustments							
Order Number	W002578	Type Amended Standard		Status Active			
Item	CAKE	Sch.Parent					
Order Quantity	1.000	Complete		1.000	O/S	.000	
Date	Time	Type	Tran	Movement Qty	Store	UOM	Batch Ref.
14/05/98	13:50:01		N	1.000	01	EA	
F3=Exit F12=Previous F13=Reselect F14=Review Materials							
M0 a						01/001	

Functions:

F13=Reselect

Select this to re-display the Production Order Enquiry Selection Screen, where you can enter new selection criteria for the order you want to enquire on.

F14=Review Materials

Select this to redisplay the Order Enquiry Materials Review Screen.



Select **F12=Previous** to return to the previous screen.

Archived Order Enquiry

1... **2/PCE**
2...

Use this option to make detailed enquiries on archived orders, if you have kept detailed data on them. Order header information is always archived and available for review. These archived orders are not available in the normal order enquiry and reporting facilities.



Note: Cancelled orders are not archived. They are deleted from the database during archiving.

Archived Production Order Enquiry Selection Screen



To display this screen, select the Archived Orders option.

Use this screen to enter the selection criteria for the archived production orders you want to enquire on.

PC010A	Z1 - GB Demonstration Company	USER GBJBAAA4	16/03/99
Production Order Enquiry		08:58:19	
		* ARCHIVED ORDERS	
Order Number.....?: _____			
Reference.....?: _____			
Item.....?: _____			
Orders Due from.....: <u>16/03/99</u> to: <u>16/03/99</u>			
F3=Exit F4=Prompt F14=By Order F15=By Reference F16=By Item			
MA	a	A	05/026

Fields:

Order Number

If you want to enquire on a specific archived order, enter the order number in this field.

Reference

Enter a reference code to enquire on. Select **F15=By Reference** to display all archived orders with that reference code.

Item

Enter an item to enquire on. Select **F16=By Item** to display all archived orders for that item.

Orders Due From, To

Enter a date range for the archived orders you want to enquire on. The default in both fields is the current date, but you can change that.

Functions:

F14=By Order

Select this to display a list of all archived orders, from which you can select orders for review.

F15=By Reference

If you have completed the Reference field, use this function to display a list of all archived orders with this reference. You can select orders from the list for review.

F16=By Item

If you have entered an item, use this function to display a list of all archived orders for the selected item.

For further details on the functions used, refer to the Order Enquiry section.



Enter an order on the Order Number field and press **Enter** to display the Production Order Enquiry Detail Screen.

Production Input Requirements



3/PCE

Use this option to:

- Display confirmed released and active production orders that have a requirement for a specified input.
- Display the balances at each of the input stockrooms.
- Identify orders that require a particular input. This is useful if you want to withdraw or change the input, or where there is a problem in obtaining it.

Production Input Requirements Selection Screen



To display this screen, select the Production Input Requirements option.

You use this screen to enter the input item and date range you want to enquire on.

```
PC061          Z1 - GB Demonstration Company      USER  GBJBAAA4      16/03/99
                                                    09:36:01

Production Input Requirements

Input.....?.: BF-INPUT

Requirement from..: 16/03/98 to: 99/99/99

F3=Exit  F4=Prompt  F16=Item Search

M8 a                                           10/036
```

Fields:

Input

Enter the input item you want to enquire on.

Requirement From

Enter the date from which you want to enquire. If you do not enter a date, the software assumes the current date.

Requirement To

Enter the date up to which you want to enquire. If you do not enter a date, the software displays records to the end of the file.



Press **Enter** to display the Production Input Requirements Detail Screen.

Production Input Requirements Detail Screen



To display this screen, enter selection criteria in the Production Input Requirements Selection Screen and press **Enter**.

This screen displays the production orders associated with the selected input. The following details are displayed:

- The works order number.
- The status of the order.
- The input sequence number on the route used.
- The scheduled earliest start date of the operation for which the input is required.
- The scheduled input requirement for the operation, including any shrinkage, actually issued to the operation.
- The amount scrapped during the operation.
- The amount outstanding. This is the difference between the amount required and the amount issued so far.

PC061	Z1 - GB Demonstration Company		USER	GBJBAAA4	16/03/99 09:39:17	
Production Input Requirements						
Input: BF-INPUT		Input backflush				
Planner:		UOM: EA				
Requirement from		16/03/98 to 99/99/99		Grand Total:		2545.000
Order	Sts	Insg	Reqd Date	Required	Issued	Scrapped Outstanding
W002657	ACT	10	10/08/98	10.000	10.000	.000
W002657	ACT	20	10/08/98	15.000	15.000	.000
W002658	ACT	10	10/08/98	10.000	100.000	.000
W002658	ACT	20	10/08/98	15.000	.000	.000 15.000
W002659	ACT	10	10/08/98	10.000	21.000	.000
W002659	ACT	20	10/08/98	15.000	16.000	.000
W002666	CON	10	18/08/98	1000.000	.000	.000 1000.000
W002666	CON	20	21/08/98	1500.000	.000	.000 1500.000
W002667	CON	20	2/09/98	15.000	.000	.000 15.000
W002668	CON	20	18/08/98	15.000	.000	.000 15.000
F12=Previous F17=Stock Balances F22=Expand/Contract						
M8 a 01/001						

Functions:

F17=Stock Balances

Select this to display the Stock Room Balances Window.

F22=Expand/Contract

Use this to toggle between displaying or hiding additional details. The additional details displayed are:

- The route code the order was based on.

- The date from which the input is effective on the displayed route.
- The date from which the input is no longer effective on the displayed route.



Select **F12=Previous** to return to the previous screen.

Stock Room Balances Window



To display this window, select **F17=Stock Balances** on the Production Input Requirements Detail Screen.

This window displays the stockroom balances relating to this input.

```
PC061          Z1 - GB Demonstration Company      USER  GBJBAAA4      16/03/99
                                                    09:39:17

Production Input Requirements

Input:      BF-INPUT      Input backflush
Planner:    UDM: EA
Requirement from 16/03/98 to 99/99/99      Grand Total:      2545.000
Order  Sts  Insq  Reqd Date  Required  Issued  Scrapped  Outstanding
W002657 ACT  10  10/08/98      10.000      10.000      .000

Stock Room Balances
More:
Stockroom  Physical Stock  Allocated Stock  Available Stock
RM          6120.000-      75.000-      6045.000-

F12=Previous  F22=Expand/Contract

MA  a  01/001
```

Functions:

F22=Expand/Contract

Use this to toggle between displaying or hiding additional details. They are:

- The amount of frozen stock.
- The amount of stock in transit.
- The amount of stock on order.



Select **F12=Previous** to return to the previous screen.

Material Availability



4/PCE

Use this option to:

- Enquire on the availability of materials for production orders.
- Perform trial allocation, or trial kitting for confirmed production orders. This simulates the issue of materials to production orders and highlights potential stock shortages. These stock shortages would result in negative stocks if you release of the order.

Material Availability Enquiry Selection Screen



To display this screen, select the Material Availability Enquiries option.

Use this screen to enter the selection criteria for the particular orders you want to enquire on.

```
PC052                Z1 - GB Demonstration Company    USER GBJBAAA4    16/03/99
                                     10:17:58

Material Availability Enquiry

Order Number....?.. _____
Item.....?.. _____
Route.....?.. _____
Ignore Effectivity. 0 (0=No 1=Yes)
As At..... 16/03/99
Quantity Required.. _____ Or Blank For EOQ
Include Materials.. 1 (1=All Operations 2=First Operation Only)

F3=Exit  F4=Prompt  F16=Review Orders

MA a                                     08/028
```

Fields:

Order Number

Enter an order number if you want to enquire on a specific production order.

Item

Enter an item code to display all orders for that item.

Route

Enter a route to display all orders for that route.

Ignore Effectivity

Use this field to specify whether or not you want to ignore the input effectivity dates.

Enter one of the following:

0 - No. Do not ignore. The enquiry considers only inputs effective at the date entered.

1 - Yes. Ignore effectivity. The enquiry considers all inputs effective for the item and route

As At

Enter the control date for the input effectivity.

Quantity Required

Enter the required quantity. Leave blank for the economic order quantity from the route.

Include Materials

Specify which inputs you want to enquire on. Enter one of the following:

1 - All Operations. Enter 1 in this field to view material availability for inputs of all operations.

2 - First Operation Only. Enter 2 in this field to view material availability for inputs for the first operation only. This is useful to see if it is feasible to start work on a production order.

Functions:

F16=Review Orders

Select this to display the Material Availability Enquiry Select Order Screen.



Press **Enter** to display the Material Availability Detail Screen.

Material Availability Enquiry Select Order Screen



To display this screen, select **F16=Review Orders** on the Material Availability Enquiry Selection Screen.

The following details are displayed:

- The production order number.
- The status of the order.
- The order type.
- The input item.
- The production route.
- The scheduled start and due dates.
- The production quantity.



Tip: An asterisk (*) indicates that some text has been entered against the order.

PC052		Z1 - GB Demonstration Company		USER GBJBAAA4		16/03/99		
						10:33:22		
Material Availability Enquiry								
0	Order	Status	Type	Item	Route	Start	Due	Quantity
-	W002946	ACT	1	PAR1463-4	1	21/12/98	21/12/98	2.000
-	W002947	ACT	1	TP1	1	22/12/98	22/12/98	10.000
■	W002951	ACT	1	PARA1063	1	4/01/99	4/01/99	1.000
-	W002965	ACT	1	MH-P-CLEAN	K	13/01/99	13/01/99	17010020.000
-	W002972	ACT	0	MH-P-SCHED-1	9	14/01/99	15/01/99	10.000
-	W002974	ACT	0	POHD-1	1	14/01/99	15/01/99	10.000
-	W002975	ACT	1	POHD-1	1	14/01/99	14/01/99	10.000
-	W002977	ACT	0	POHD-1	1	14/01/99	15/01/99	5.000
-	* W002981	ACT	1	660	1	15/01/99	19/02/99	101.000
-	* W002983	ACT	1	660	1	15/01/99	19/02/99	103.000
-	* W002986	ACT	1	700	1	20/01/99	25/01/99	10.000
-	W002987	ACT	1	701	1	21/01/99	27/01/99	10.000
-	* W002988	ACT	1	700	1	21/01/99	26/01/99	10.000
-	W002995	ACT	1	703	1	22/01/99	22/01/99	1.000
-	W002997	ACT	1	PARA1063A	1	22/01/99	22/01/99	1.000
-	W003005	ACT	1	PARA1063	1	22/01/99	22/01/99	1.000 +
1=Select order 2=Order text								
F3=Exit F12=Previous								
MA		a		08/002				

Fields:

Option (O)

Enter one of the following:

- 1 - Select Order. Select a production order to display the input details on the Material Availability Enquiry Detail Screen.
- 2 - Order Text. This displays order header text for the selected production order.



Press **Enter** to display the Material Availability Enquiry Detail Screen.

Material Availability Enquiry Detail Screen



To display this screen, enter 1 against a production order on the Material Availability Enquiry Select Order Screen.

The screen displays order and route details at the top, and input details at the bottom. The following details are displayed:

- The operation number.
- The material item code and description.
- The quantity needed for the operation.
- The On Hand quantity. For planned and confirmed orders, this is the available stock in the issuing stockroom or all stockrooms, depending on the setting of the **F15=All Stores** function. For released and active orders, the quantity on hand is the physical balance in the issuing stockroom or all stockrooms depending on the setting of the **F15=All Stores** function.



Tip: An asterisk (*) against an operation indicates that some text has been entered against that operation.



Note: Two asterisks (**) against a quantity indicates there is insufficient stock to meet the requirement.

```

PC052                Z1 - GB Demonstration Company    USER GBJBAAA4    16/03/99
                                                10:38:34

Material Availability Enquiry

Order Number  W002983  Standard      Status Active

As At        16/03/99 *Effectivity On
Item         660      Manufactured Item With QS Control
Route        Receiving Stockroom  FG
Order Quantity 103.000 Complete      103.000 Outstanding
Start Date    15/01/99  2/99 Due 19/02/99  7/99 Actual 15/01/99  2/99
Reference 1                                Reference 2

0 Oper Material      Description      Qty.Reqd.      Qty On Hand
  *  10 661          Purchased Item With QS      .000      1000.000- **

                                                Bottom

1=Select Material  2=Operation Text
F3=Exit  F12=Previous  F15=All Stores      F17=Allocate To Trial Kit
F21=Order Text
MA a                                                15/002
  
```

Fields:

Option (O)

Enter one of the following:

1 - Select Material. Enter 1 against an operation to display the Material Availability Enquiry Trial Allocations Screen.

2 - Operation Text. Enter 2 against an operation to display the operation text.

Functions:

F15=All Stores

Use this function to toggle between displaying input stock balances in the issuing stockroom, and in all stockrooms.

F17=Allocate To Trial Kit

This function uses the input requirements shown to assess whether there is sufficient material to meet requirements. You can allocate several orders to trial kits. This temporarily reduces the stock available balance. However, no actual stock movement takes place as a result of allocating to trial kits. It is merely a simulation exercise.

F21=Order Text

Use this to display text entered on the order header.



Enter 1 against an operation to display the Material Availability Enquiry Trial Allocations Screen.

Material Availability Enquiry Trial Allocations Screen



To display this screen, enter 1 against an operation on the Material Availability Enquiry Detail Screen.

This screen displays the details from the stockroom record in Inventory and the results of the trial allocation.

PC052	Z1 - GB Demonstration Company	USER GBJBAAA4	16/03/99 10:38:34
Material Availability Enquiry			
Order Number	W002983	Standard	Status Active
As At	16/03/99	*Effectivity On	
Item	660	Manufactured Item With QS Control	
Route	Receiving Stockroom	FG	
Order Quantity	103.000	Complete	103.000 Outstanding
Start Date	15/01/99	2/99 Due	19/02/99 7/99 Actual 15/01/99 2/99
Reference 1		Reference 2	
Operation	10	Quantity Required	.000
Material	661	Purchased Item With QS Control	
St	Physical	Allocated	Available
RM	Actual Qty.	1000.000-	.000 1000.000-
	Trial Kit Qty.	.000	.000 1000.000-
F3=Exit F12=Previous F21=Order Text F22=+/- Detail			
MA a			01/001

Functions:

F21=Order Text

Use this to display text entered on the order header.

F22=+/- Detail

Use this function to toggle between displaying more or less detail. The additional details are the frozen and on order quantities.



Select **F12=Previous** to return to the previous screen.

Work Station Production List



5/PCE

Use this enquiry to:

- View the operations currently scheduled to run at a particular work station. The operations are listed in priority order and due date order within each priority level.
- View a summary display showing the current status and current job at each work station.
- Manipulate shop floor schedules in the following ways:
 - Change the priority of uncompleted operations
 - Switch operations that are released, but not yet active, to other work stations.

Work Station Production List Selection Screen



To display this screen, select the Work Station Production List option.

You use this screen to enter selection criteria for the work station production lists you want to view.

```
PC016                Z1 - GB Demonstration Company    USER GBJBAAA4    16/03/99
                  13:52:49
Work Station Production List

Work Station.?.. SEM

Include Operations Starting By..... (Blank For All)

Include Operation Status..... 1 Confirmed
                               1 Released
                               1 Active

1=Include
F3=Exit  F4=Review Work Stations

M0 a                                09/042
```

Fields:

Work Station

Enter the work station that you want to enquire on.

Include Operations Starting By

In this field you can enter a starting date for the operations. If you enter a date, the enquiry includes only those operations with a start date on or after the date entered. If you leave this field blank, all operations will be displayed.

Include Operation Status

To include operations of a particular status, enter 1 against the status. You can include any combination of Confirmed, Released or Active operations.

Function:

F4=Review Work Stations

Select this to display a list of work stations that you can enquire on.



Select **F4=Review Work Stations** to display the Work Station Production List Review Screen.

Work Station Production List Review Screen



To display this screen, select **F4=Review Work Stations** on the Work Station Production List Selection Screen.

This screen displays a list of all work stations available to enquire on. For each work station, the following details are displayed:

- The work station number and description.
- The cost centre attached to the work station.
- The current production order number and operation sequence running at this station. For work stations where there are schedules in operation the operation number and status are displayed.
- The current status, which is set by the last operation booking made at the work station. For example:
 - Inactive - Indicates that the latest booking was the completion of maintenance, set-up procedures, or an entire operation
 - Set Up - Indicates that the latest booking was the starting of a set-up procedure
 - Running - Indicates that the latest booking was the start of a job or partial completion booking
 - Down - Indicates that the latest booking was the start of work station maintenance.

PC016	Z1 - GB Demonstration Company	USER GBJBAAA4	16/03/99 13:55:55
Work Station Production List			
0	Work Station Description (#=Deleted)	C/Ctr Dept	Last Rec'd Job Current Order Oper Status
-	C2C3 PRINT ROLLSTOCK	SLIT	Inactive
-	EXT EXTRUD EPOLY COATING	EXT	Inactive
-	GJ1 GJ0's Work Station	GJ1 AA	Inactive
-	IB1 Work Station 1	ASSEM	Set Up
-	* KALI1 W-St. MH1	MON1 AA	W003035 10 Set Up
-	* KALI2 W-St. MH2	MON2 BB	W002751 20 Set Up
-	* KALI3 W-St. MH2	MON2 BB	W001006 10 Set Up
-	KALLE test	CC02 BB	W002310 10 Set Up
-	* KAM1 Wrk-1 Monika	MOS1 AA	10 Set Up
-	* KAM2 Wrk-1 Monika	MOS1 AA	10 Set Up
-	* KARL1 Karl 1	CC01 EE	W000797 10 Set Up
-	* KARL2 Karl 2	CC02 EE	W000797 20 Set Up
-	* KARL3 Karl 3	CC01 EE	W000797 30 Set Up
-	KAT Controlstation	CC02 AA	W003165 20 Set Up
-	KATUM KAT NO 2	CC01 AA	W002977 10 Set Up
-	KAT1 Katum	CC02 BB	W001276 30 Set Up +
1=Select Work Station 2=Work Station Text			
F3=Exit F12=Previous			
MA	a		06/002

Fields:

Option (O)

You can enter one of the following:

1 - Select Work Station. To select a work station to enquire on. This displays the third Work Station Production List Screen.

2 - Work Station Text. To enter new text, display or amend existing work station text.



Tip: An asterisk (*) indicates that some text has been entered against a work station.



Select a work station and press **Enter** to display the Work Station Production List Operations Screen.

Work Station Production List Operations Screen



To display this screen, enter 1 against a work station and press **Enter** on the Work Station Production List Review Screen.

The screen lists the operations currently running or scheduled to be performed at the selected work station. The operations are in due date sequence within priority order for the work station. The following details are displayed:

- The standard efficiency and average efficiency. This is defined in the work station master file and does not directly affect the load or scheduling. It can be used in the Capacity Requirements Planning application.
- The order priority. The default is the value set in the company profile but can be changed under certain conditions by selecting the operation for review. Priority must be between 0 (highest) and 9 (lowest).
- The earliest date at which the operation is due to start.
- The quantity scheduled for this operation, allowing for shrinkage. This is the amount of work to be performed to produce the required order quantity.
- The quantity to be completed during this operation.
- The operation status, which is determined by the work to be completed during this operation, for example:
 - Not Arrived - No bookings have been made against this operation yet. The order is still at an earlier operation.
 - Running - The job is currently active.
 - Complete - The operation has been booked as completed.
 - Ready - A confirmed or released order that is not yet active.
 - Started - The job is active.

PC016	Z1 - GB Demonstration Company	USER GBJBAAA4	16/03/99
Work Station Production List			13:54:12
Work Stn	ASEM	test	Setting
Cost Centre	CC02	cost centre	Start
Department	FF	Std.Efficiency	.000 Av.Efficiency
Foreman			.000
0	Pty	Start	Order
—	5	3/02/98	W002095
—	5	5/02/98	W002097
—	5	2/04/98	W002315
—	5	7/05/98	W002559
—	5	7/05/98	W002559
—	5	13/07/98	W002646
—	5	13/07/98	W002647
—	5	13/07/98	W002647
—	5	13/07/98	W002647
—	5	13/07/98	W002648
		Oper	Item
		10	0101:002
		10	0100
		10	TART01
		10	MH-P-LOADS
		40	MH-P-LOADS
		10	A
		20	A
		30	A
		10	A
		Qty	Sched.
		1.000	
		1.000	
		2.000	
		2.000	
		2.000	
		1.000	
		2.000	
		1.000	
		1.000	
		1.000	
		1.000	
		5.000	
		Qty	O/S
		1.000	Not Arriv
		1.000	Not Arriv
		2.000	Not Arriv
		1.000	Running
		2.000	Started
		1.000	Not Arriv
		1.000	Not Arriv
		1.000	Not Arriv
		.000	Running
		5.000	Not Arr +
1=Select 2=Operation Text			
F3=Exit F4=Review Work Station F12=Previous			
MA a			
11/002			

Fields:

Option (O)

Enter one of the following:

1 - Select. To select an operation for review. This displays the Work Station Production List Detail Screen, with details of the selected operation.

2 - Operation Text. To enter new text, display or amend existing operation text.



Tip: An asterisk (*) indicates that some text has been entered against an operation.



Select an operation and press **Enter** to display the Work Station Production List Detail Screen.

Work Station Production List Detail Screen



To display this screen, enter 1 against an operation and press **Enter** on the Work Station Production List Operations Screen.

This screen shows details of the selected operation. The following information is displayed:

- The earliest date and week at which the operation is due to start.
- The recorded operation start date and week if the operation has started, or the latest start date as determined by back scheduling from the due date and week, if the operation has not begun.
- The scheduled date and week of completion.



*Note: If the due date is before today's date, ****Overdue**** is displayed alongside the Due Finish date.*

```

PC016                Z1 - GB Demonstration Company      USER GBJBAAA4    16/03/99
                                      15:07:11

Work Station Production List

Work Stn      ASEM  test                Setting
Cost Centre   CC02  cost centre          Start
Department    FF   Std.Efficiency    .000  Av.Efficiency    .000
Foreman

Order          W002315 Status Confirmed

Operation      10    1st operation
Item           TART01 Tarte aux Fraise

Oper.Status    Not Arriv      Qty Scheduled      2.000
Priority        5              Qty Outstanding    2.000
Earliest Start 2/04/98 14/98 Latest Start 2/04/98 14/98
Due Finish     2/04/98 14/98 ** Overdue **

Change Priority To..... 5
Move To Work Station?... ASEM

F3=Exit  F4=Prompt  F8=Update Work Station  F12=Previous

MA  a 21/027
  
```

Fields:

Change Priority To

Use this field to change the running priority of the operation at this work station, but only if work has not yet started. The range is 0 (highest) to 9 (lowest).

Move To Work Station

Use this field to transfer the operation to another work station. You can only do this if work has not yet started. This is for orders with a status of confirmed or released.



Select **F8=Update Work Station** to validate and update your entries and return to the previous screen.

Production Batch Balance Enquiry



6/PCE

Use this option to:

- Review the lots reserved for a production order for potent items.
- Enquire on orders that have already been balanced on release, but not yet had materials issued to them.
- Make enquiries on lot balancing for process group items.

This is the same as the Production Batch Balancing option in Production Order Control Maintenance. Refer to this for more information.

Subcontract Shipper Schedule Report

1... 11/PCE
2...

1... 31/MKS
2...

This report shows:

- All operations scheduled to be performed by the subcontractor.
- The WIP to be sent over to the subcontractor (that is, where WIP inventory exists from the previous operation on the route).

You can also include on the report standard input items that the subcontractor needs to complete the remaining subcontract operations on the route. If you do this, the report prints the inventory details and basic production data, for each item and operation due for shipment.

The report considers production due to be completed by a certain date. It holds production data for the firmed workload of each work station used for subcontract operations.

Subcontractor Shipping Schedule Report Screen



To display the Subcontractor Shipping Schedule Report Screen, select the Shipper Schedule option.

Use this screen to select the shipping schedules that you want to report on.

MG665	Z1 - GB Demonstration Company	User GBJBAAA4	10/03/99 15:30:48
Subcontractor Shipping Schedule Report			
Organisational Model.....? ____			
Subcontractor Work Station From...? ____ to ____			
Shipping Date..... <u>10/03/99</u>			
Include Material in Schedule..... _ (1=Yes)			
Order Range From.....? ____ to ____			
F3=Exit F4=Prompt ENTER=Submit Job			
MB	a	MB	05/047

Fields:

Organisational Model

You must enter the live organisational model code.

Subcontractor Work Station From, To

Enter a range of subcontractor work stations that you want to restrict the report to. A work station here could either be on site, or refer to a specific subcontractor or group of subcontractors. It is the work station defined for the parent item route at the subcontracted operation. Leave the fields blank to include all associated work stations.

Shipping Date

Enter the date for which the schedule will be drawn up. This is the scheduled shipping date for the WIP inventory.

You can also use this to restrict the information you extract from the work station loading details.

Include Material In Schedule

Indicate whether or not you want to include material requirements on the report. Enter one of the following:

Blank (the default) - Do not include the material requirements in the report. Print only the subcontract details (both planned and outstanding).

1 - Include the material requirements in the report. The report will include details of the materials and WIP to be shipped for absorption into the subcontract work.

Order Range From, To

Specify a range of production orders to include in the report. The report will be restricted to those orders. Leave the fields blank to include all orders.

If you enter the order range, the report will reflect the planned subcontract shipments, on the date entered, to meet the order range requirements.



Press **Enter** to submit the job for processing,
and exit from the option.

Subcontract Shipper Notes

1... **12/PCE**
2...

1... **32/MKS**
2...

Use this option to print (and reprint) despatch notes to accompany subcontract shipping transactions. The transactions can be for WIP inventory, materials, or both.

Subcontractor Shipper Print Screen



To display the Subcontractor Shipper Print Screen, select the Shipper Notes option.

Use this screen to select the shipper despatch notes that you want to print.

```
MJ730                Z1 - GB Demonstration Company    User GBJBAAA4    11/03/99
Subcontractor Shipper Print                               09:41:46

Organisational Model.? █
WIP Location Range...?  to 
Subcontractor.....? 
Shipper Number.....? 
Shipper Form..... 0 (0=Print titles, 1=Print on form)
Reprint..... 0 (1=Reprint Shippers)

F3=Exit  F4=Prompt  F8=Submit Job
M8 █ a                                                    08/026
```

Fields:

Organisational Model

You must enter the live organisational model.

WIP Location Range

Enter a WIP location range. The notes you print will only include transactions associated with the locations that you enter. Leave the fields blank to include all transactions.



Note: The WIP locations here are those that the WIP inventory will be shipped from. The WIP location is assigned to the work station for the operation prior to the subcontracted operation.

Subcontractor

If you want to restrict the shipping despatches to a specific subcontractor, enter the subcontractor code here.



Note: The software validates the code you enter here against the supplier codes held in Accounts Payable.

Shipper Number

If you want to print a shipper (despatch) note relating to a specific subcontracted despatch, enter the shipper number raised against the despatch. You generate

the shipper number using the Subcontract WIP Shipper or Subcontract Material Shipper options.

The software validates the number you enter here against the data held for subcontractor transactions.

Shipper Form

Indicate here what paper type you want to print the shipper note on. Enter one of the following:

0 - Print titles. Print on plain paper, and include the headings, titles, quantities, and numbers. This is the default.

1 - Print on pre-printed stationery. Print quantities and numbers only.

Reprint

Indicate whether or not the shipper note has been printed before. Enter one of the following:

0 - Print the note for the first time. This is the default.

1 - Reprint a shipper note.



Select **F8=Submit Job** to validate your entries, submit the job for processing, and exit from the option.

Subcontract Stock Report

1... **13/PCE**
2...

1... **33/MKS**
2...

This report shows you details of WIP inventory and materials held at the subcontractors.

You can also use this option to:

- Produce a cost analysis of WIP and materials.
- Print shipper and receipt information.

The costs displayed on the report are calculated to five decimal places. This increases the precision of the consolidated production costs that are transferred to the Advanced Financial Integrator for posting to the general ledger.

Subcontractor Stock Status Report Screen



To display the Subcontractor Stock Status Report Screen, select the Stock Report option.

Use this screen to select the items you want to print on the subcontractor stock status report.

```
MJ732                Z1 - GB Demonstration Company      User GBJBAAA4      11/03/99
Subcontractor Stock Status Report                        10:49:31

Selection:
Organisational Model..? █
WIP Location Range....?  to 
Subcontractor.....? 
Item Number Range....?  to 
Operation Sequence....? 

Report Basis:
Include Valuation..... 0  1=Yes
Include Shipper Details 0  1=Yes
Include Receipt Details 0  1=Yes

Sequence:..... 1  1=By Subcontractor,2=By Item/Operation

F3=Exit  F4=Prompt  F8=Submit Job

M8 █ a                                                    06/03/99
```

Fields:

Organisational Model

You must enter the live organisational model.

WIP Location Range

Enter a WIP location range. The report will only include inventory associated with the locations that you enter. Leave the fields blank to include all inventory.



Note: The WIP locations here are those where you record WIP inventory. The WIP location is assigned to the work station for the operation before the subcontracted operation.

Subcontractor

If you want to restrict the report to the inventory status of a specific subcontractor, enter the subcontractor code here.



Note: The software validates the code you enter here against the supplier codes held in Accounts Payable.

Item Number Range/To

Enter the range of items to include in the report.

Operation Sequence

Enter the operation from which the stock is shipped to the subcontractor(s).

Include Valuation

Indicate if the report should include the value of the stock at the subcontractor.
Enter one of the following:

0 - Do not print the value of material and WIP inventory. This is the default.

1 - Include the material and WIP inventory values. If you do this, you need to set the Generate Cost Recovery flag on the organisational model to 1 (yes). This will provide the cost accounting data that the software needs to produce a valuation on WIP inventory.

The software uses standard costs for production. It will include shrinkage if you set the Include Shrinkage In Reports flag on the company profile to 1 (yes).

The materials that you ship to the subcontractor will be valued at their inventory stocking value.

Include Shipper Details

Indicate if the report should include the shipper details. Enter one of the following:

0 - Do not print shipper details.

1 - Include shipper details on the report. The details are:

- The shipper number.
- The shipped and received quantities.
- The due dates.
- The production and order line numbers.
- The status of the shipment.



Note: This field defaults to 0 if you set the Shipper Tracking flag on the company profile to 0 or 2. If you set the flag to 1 or 3, the default here is 1.

Include Receipt Details

Indicate if you want to print receipts from the subcontractor. Enter one of the following:

0 - Do not print receipt details. This is the default.

1 - Include receipt details in the report. The details are:

- The advice note numbers.
- The received dates.
- The received quantities.

Sequence

Indicate the order that you want the report to be in. Enter one of the following:

1 - By Subcontractor. The report sequence is the subcontractor first, then item operation, valuation (if requested), shipper details, and associated receipt details (if requested). This is the default.

2 - By Item Operation. The report sequence is item operation first, then the subcontractor, valuation (if requested), shipper details, and associated receipt details (if requested).



Select **F8=Submit Job** to submit the job for processing and exit from this option.

Subcontract Receipts Schedule

1...
2...

14/PCE

1...
2...

34/MKS

This report provides an audit list of the receipts (WIP inventory and finished goods) that you expect back from the subcontractors.

For each subcontractor, the report shows:

- The item operation number and descriptions.
- The quantities due back. These are grouped according to the MPS Reporting Profile.
- The total (in the last column).

If the eight buckets do not completely cover the date range, the quantity of the eighth bucket covers all expected receipts from its start date to the end of the date range. For example:

- The reporting policy is seven days per bucket.
- Date range 1/11 to 31/12 = 61 days.
- The eighth bucket starts on 20/12, and should finish on 26/12.
- However, as it is the eighth (and final) bucket, the period it covers will finish on 31/12.

Subcontractor Receipts Schedule Report Selection Screen



To display the Subcontractor Receipts Schedule Report Selection Screen, select the Receipts Schedule option.

Use this screen to select the subcontractor receipts that you want to print on the schedule.

```
MJ734          Z1 - GB Demonstration Company      User GBJBAAA4    11/03/99
                                           14:15:52

Subcontractor Receipts Schedule Report Selection

Organisational Model...?  ___
WIP Locations from....?  ___ to ___

Subcontractor.....?  _____
Items from.....?  _____ to _____

Date range from..... 11/03/99 to 11/03/99

F3=Exit  F4=Prompt  F8=Submit Job

M8 a                                           06/037
```

Fields:

Organisational Model

You must enter the live organisational model.

WIP Locations From, To

Enter a WIP location range. The report will only include receipts associated with the locations that you enter. Leave the fields blank to include all inventory.



Note: The WIP locations here are those where you will receive WIP inventory from the subcontractors. The WIP location is assigned to the work station for the subcontracted operation.

Subcontractor

If you want to restrict the receipt schedule to a specific subcontractor, enter the subcontractor code here.



Note: The software validates the code you enter here against the supplier codes held in Accounts Payable.

Items From, To

Enter the range of items to include in the report.

Date Range

Enter a date range for the report.



Select **F8=Submit Job** to submit the job for processing and exit from the option.

Order Status Report

1... **21/PCE**
2...

This report shows the current status of production orders. You can use this to make a comparison between the original schedule and component requirement.

Production Order Status Report Screen



To display this screen, select the Order Status option.

You use this screen to enter the criteria that determines what is printed on the report.

```
PC035                Z1 - GB Demonstration Company    USER GBJBAAA4    17/03/99
                                      11:21:57
Production Order Status Report

Report Sequence..... 1 (1=By Item 2=By Order)
Finished Item.....?.. To
Order Number.....?.. To
                        (Blank For First) (Blank for Last)

Include Order Status..... 0 Planned
                           0 Confirmed
                           0 Released
                           0 Active
                           0 Completed

0=No 1=Yes
F3=Exit F4=Prompt          ENTER=Submit Job
M0 a                                06/044
```

Fields:

Report Sequence

Indicate how you want to sequence the orders on the report. Enter one of the following:

- 1 - By Item. To print the report in finished item sequence.
- 2 - By Order. To print the report in production order sequence.

Finished Item From, To

Enter the range of finished items required, or leave blank for all items.

Order Number From, To

Enter the range of order numbers required, or leave blank for all orders.

Include Order Status

Select one or more order status categories to include on the report.

0 - Exclude. Enter 0 against an order status to exclude it from the report.

1 - Include. Enter 1 against an order status to include it in the report.



Press **Enter** to validate your entries and submit the job for processing.

Material Availability Report



22/PCE

This report shows the effect of production order input requirements on current stock levels. If inputs are automatically issued at order release, you should run this report regularly to see if any stocks have become negative.

Material Availability Report Screen



To display this screen, select the Material Availability option.

You use this screen to enter the criteria that determines what is printed on the report.

```
PC031                Z1 - GB Demonstration Company      USER GBJBAAA4    17/03/99
                                     11:29:30
Material Availability Report

Report Sequence..... _ 1=Input sequence by operation start
                        2=Input sequence by order start
                        3=Order sequence

Input Item.....?....From _____ To _____
Order Number.....?....From _____ To _____

Order Status.....      1 Planned
                        1 Confirmed
                        1 Released

Include Issuing Stockroom Only.... 0
Print Shortages Only..... 0
Exclude frozen stock..... 0
Include Up To Start Date..... _____

0=No 1=Yes
F3=Exit  F4=Prompt          ENTER=Submit Job

M0 a MW 05/037
```

Fields:

Report Sequence

Indicate here how you want to sequence the items on the report. Enter one of the following:

- 1 - Input sequence by operation start. To sequence the report by the earliest operation start date.
- 2 - Input sequence by order start. To sequence by earliest start date of the production order.
- 3 - Order sequence. To sequence by production order number.

Input Item From, To

Enter the range of input items you want to produce the report for, or leave blank to include all input items.

Order Number From, To

Enter the range of production order numbers you want to produce the report for, or leave blank for all orders.

Order Status

Select one or more order status categories to include on the report.

0 - Exclude. Enter 0 against an order status to exclude it from the report.

1 - Include. Enter 1 against an order status to include it in the report.

Include Issuing Stockroom Only

Use this field to indicate whether all stockrooms should be considered when calculating requirement shortages, or just the issuing stockroom. Enter one of the following:

0 - To show all stockroom balances for the selected items.

1 - To show only the issuing stockroom balance.

Print Shortages Only

Use this field to indicate whether you want to report on all items, or only those where a shortage in available stock has been identified. Enter one of the following:

0 - To show both excess availability and shortages.

1 - To include shortages only.

Exclude Frozen Stock

Indicate here whether or not you want to include frozen stock in the report. Enter one of the following:

0 - Do not include frozen stock in the report.

1 - Include frozen stock in the report.

Include Up To Start Date

Enter a cut-off date to limit the orders included in the report. The report will include only orders with an earliest start date that is before the date you enter.



When you have completed all necessary details, press **Enter** to validate your entries and submit the job for processing.

Work Station Production List Report

1...
2...

23/PCE

This report shows all work outstanding for the work stations you specify.

Work Station Production List Report Selection Screen



To display this screen, select the Work Station Productions List options.

You use this screen to enter the selection criteria for the work stations you want to produce the report for.

```
PC038                Z1 - GB Demonstration Company    USER GBJBAAA4    17/03/99
                                                           12:14:42

Work Station Production List - Report Selection

Latest Operation Start Date..... _____ (Blank For All Operations)
From Work Station.....?.. _____ (Blank For Start Of File)
To Work Station.....?.. _____ (Blank For End Of File)

Include Order Status..... _ Confirmed          1=Include
                           _ Released           1=Include
                           _ Active            1=Include

Include Work Station with no jobs. _ (1=Yes, Blank/0=No)

F3=Exit  F4=Prompt

M& a MW 07/03/99
```

Fields:

Latest Operation Start Date

Enter the latest operation start date to limit the operations that you want to review. The report will only include operations with an earliest start date that is before the date you enter. Leave blank for all operations.

From, To Work Station

Enter the range of work stations that you want to review, or leave blank for all work stations.

Include Order Status

Select one or more order status categories to include on the report.

0 - Exclude. Enter 0 against an order status to exclude it from the report.

1 - Include. Enter 1 against an order status to include it in the report.

Include Work Station With No Jobs

Indicate whether or not you want to include work stations that have no jobs scheduled.

Blank or 0 - No. Do not include work stations with no jobs scheduled.

1 - Yes. Include work stations with no jobs scheduled.



When you have completed all necessary details, press **Enter** to validate your entries and submit the job for processing.

WIP Valuation Report



24/PCE

This report produces a valuation of your current work in process, using standard or current cost centre labour and overhead rates, and standard or non standard material costs.

For each production order, the software calculates the difference between the cost of work started and work completed. The difference between these values is the WIP value. The software also calculates the grand total of all the costs, and this is printed on the report.

The report prints the WIP cost in three columns:

- Started - The cost of the materials needed to complete the order, divided into different cost elements. This is the purchase cost, plus any production costs incurred, if the material has to be processed before being used to produce the parent item. This cost is printed on the report after allocating materials against the order.
- Completed - The cost of the completed manufactured items on the works order. This includes the cost of lower level manufactured items that are intermediate products for making another item.
- WIP value - The cost of work started minus the cost of the completed work.

The cost elements included in the report are determined by the default company controls set on the company profile, but you can override these settings by using the **F18=Cost Presentation** function.

Work In Progress Valuation Report Screen



To display this screen, select the WIP Valuation option.

Use this screen to enter your selection criteria for the report.

PC027	Z1 - UK Demonstration Company	USER GBJBASW7	22/01/99 16:17:04
Work in Progress Valuation Report			
Processing Costs at Standard or Current.....		1	1=Standard 2=Current
Material Costs at Standard or Entered Cost Set.....		1	1=Standard, 2=Cost Set Cost Set.....
Summarise totals by item.....		1	1=Yes
—			
F3=Exit F18=Cost Presentation ENTER=Submit Job			
MR a		17/046	

Fields:

Processing Costs At Standard Or Current

Use this field to specify which labour, machine and overhead rates will be used when calculating the WIP value. Enter one of the following:

- 1 - Standard. To use the standard cost rates.
- 2 - Current. To use the current cost rates.



Note: Both standard and current rates are set up against the cost centres attached to the work station being used.

Material Costs At Standard Or Entered Cost Set

Use this field to specify which material costs will be used when calculating the WIP value. Enter one of the following:

- 1 - Standard. To use the standard costs.
- 2 - Cost Set. To use non standard costs from a cost set.

Cost Set

If you require non standard material costs, enter the code for the cost set to be used when calculating the WIP value.

Summarise Totals By Item

Indicate whether or not you want to print item totals. Enter one of the following:

0 or blank - Do not print item summary totals.

1 - Print item summary totals.

Functions:

F18=Cost Presentation

Select this to override the default cost element settings in the company profile.



Press **Enter** to submit the job.

Cost Presentation Window



To display this window, select **F18=Cost Presentation** on the Work In Progress Valuation Report Screen.

Use this window to override the default cost element settings in the company profile for this report.

PC027
Z1 - UK Demonstration Company
USER GBJBASW7
22/01/99
16:17:04

Work in Progress Valuation Report

Processing Costs at Standard or Current..... 1 1=Standard
2=Current

Material Costs at Standard or Entered Cost Set..... 1 1=Standard, 2=Cost Set

Cost Presentation

Cost Element	Order	Add to	Roll to	Fixed	Description
1 Relief Costs	1	—			Relief Costs
2 Direct Material	2	—			Direct material
3 Packaging	3	—			Packaging
4 Utility	4	—			Utility
5 Labour	5	—			Labour
6 Set-up	6	—			Set-up
7 Machine	7	—			Machine
8 Sub-Contract	8	—			Subcontract

1=Fixed cost

F5=Refresh
F12=Previous
F15=Save
F16=Restore

MR a
14/027

Fields:

Order

The Order fields are displayed for the 16 cost elements. These fields default from the company profile, but you can change them for individual reports.

Enter a number to specify the order in which the cost elements will be presented on the report. If you do not enter a number, the cost element is not displayed or printed.

This facility allows you to report only those costs that are relevant to your business.

Add To

The Add To fields are displayed for the 15 numbered cost elements. These fields default from the company profile, but you can change them for individual reports.

Use these fields to amalgamate different costs into a common reporting element.

You can enter a cost element number here, for example 02, Direct Material, that specifies which element this cost is added into for this report.

The element entered in this field must have an order sequence, and must not have an order number.



Note: The Order and Add To fields are mutually exclusive.

Roll To

This field is displayed for the four user cost elements. These fields default from the company profile and cannot be changed here.

These fields display which standard cost elements, user defined costs are rolled into. This preserves costs for user defined elements entered at a particular level.

If you leave the field blank, user defined costs are rolled up and totalled at each level. Therefore this cost definition is lost, except at the lowest level of a structure.



Note: A special code 99 can be used to indicate a cost that should not be rolled into a higher level.



Tip: You enter user defined costs in Item Cost Maintenance. The costs are then rolled up by item re-cost routines.

Fixed

This field is displayed for the four user cost elements. They allow you to flag each user defined element as a fixed or variable cost. These fields default from the company profile and cannot be changed here.

1 is displayed against a user defined cost that is fixed, and not modified by quantities or shrinkage on a production route. This field is blank if the cost varies with the material usage and batch volumes.

You can use this to distinguish between costs not directly related to production, for example design costs, and those that are, for example material handling.

Description

This field is displayed for the 16 cost elements. These fields default from the Company Profile and cannot be changed here.

You must enter a cost element description if you want to report on this element. Any element without a description is not reportable although costs are calculated for it. Your description is displayed against the cost, rather than the default element description, displayed on the left of the screen.

Functions:

F15=Save

Select this to save the order in which the cost elements are entered.



Select **F15=Save** to validate your entries, then press **Enter** to return to the previous screen.

Material Yield Report



25/PCE

This report calculates the ratio of inputs to outputs on a route for a process group.

The percentage yield of a process is defined as:

$(\text{output quantity} / \text{input quantity}) \times 100$

A process is defined as an activity or series of activities that convert inputs to outputs.

Standard yield is the standard output quantity of an item on a route, as a percentage of the total of the standard input quantities of items defined as yield items.



Note: You must first define items that will be included in the calculation as yield items. Do this in the Production Definition Maintenance, Item Production Details option in the Additional Parameters Window.

Production Yield Variance Report Selection Screen



To display this screen, select the Material Yield option.

You use this screen to enter the selection criteria for the report.

```
PC430                Z1 - GB Demonstration Company    USER GBJBAAA4    17/03/99
                  Production Yield Variance Report Selection - Standard vs. Actual
                  14:37:40

      Work Stations from...?:  to 
      Input Item Range from??:  to 
      Output Item Range from??:  to 
      Date range from.....: 17/03/99 to 17/03/99
      Material Standard Cost...: 1 1=Production, 2=Inventory
      Outputs Summary Report...: _ 1=Yes

      F3=Exit  F4=Prompt  ENTER=Submit job

      M0 a                MW                                08/039
```

Fields:

Work Stations From, To

Enter the range of work stations you want to produce the report for, or leave blank to include all work stations.

Input Item Range

Enter the range of input items you want to produce the report for, or leave blank to include all input items.

Output Item Range

Enter the range of output items you want to produce the report for, or leave blank to include all outputs.

Date Range

Enter the date range you want to produce the report for.



Note: The date range fields default to the current system date.

Material Standard Cost

Specify where you want the material standard cost values to be taken from. Enter one of the following:

1 - Production. To take the material standard cost values from the production records.

2 - Inventory. To take the material standard cost values from the cost held on the primary item, stockroom record, against the item's default costing method. The default costing method can be either standard, latest, average, or FIFO. The costing method is defined on the item details in Inventory Management.

Outputs Summary Report

Indicate whether or not you want an outputs summary report. Enter one of the following:

0 or Blank - No. Do not produce an outputs summary report.

1 - Yes. Produce an outputs summary report.



Press **Enter** to validate your entries, and submit the job for processing.

Labour Efficiency Report



26/PCE

For this report, the software calculates the efficiency of the labour bookings by measuring the actual bookings against standard values. Labour efficiency is the earned standard hours divided by the actual hours worked.

Labour Efficiency Report Selection Screen



To display this screen, select the Labour Efficiency option.

You use this screen to enter the selection criteria for the report.

```

PC420                Z1 - GB Demonstration Company      USER GBJBAAA4    17/03/99
                                                           14:54:37
Labour Efficiency Report Selection

Work Stations from....?: █ ____ to ____
Date range from.....: 17/03/99 to 17/03/99

F3=Exit   F4=Prompt   ENTER=Submit job

MA █ a MW 09/039

```

Fields:

Work Stations From, To

Enter the range of work stations you want to produce the report for, or leave blank to include all work stations.

Date Range From, To

Enter a date range to base the report on.



Note: The Date Range fields default to the current system date.



Press **Enter** to validate your entries and submit the job for processing.

Order Variance Report



27/PCE

You can use this report to:

- Generate material and operational variances sequenced by order or finished item.
- Show the variance between standard and actual costs.

Production Order Variance Report Selection Screen



To display this screen, select the Order Variance option.

You use this screen to enter the range of production orders you want to produce the report for.

```
PC092P          Z1 - GB Demonstration Company      User: GBJBAAA4   17/03/99
                                                15:04:13
Production Order Variance Report Selection

Production Order From..?..      To

F3=Exit  F4=Prompt  ENTER=Submit

M& a                MW                                06/028
```

Fields:

Production Order From, To

Enter the range of order numbers you want to produce the report for, or leave blank to include all orders.



Press **Enter** to validate your entries, and submit the job for processing.

Planning Variances Report



28/PCE

This report shows, by work station and date range, cost variances between output quantities and equivalent quantities on the standard planning route.

Work Station Production Variance Report Selection



To display this screen, select the Planning Variance option.

You use this screen to enter the selection criteria for the report.

```
PC400                      Z1 - GB Demonstration Company      USER GBJBAAA4   17/03/99
                                                                15:13:03
Work Station Production Variance Report Selection - Standard vs. Planned

      Work Stations from....?..: _____ to _____
      Date range from.....: 17/03/99 to 17/03/99

      Include Order Status....: 1 Confirmed (1=Include)
                                1 Released
                                1 Active
                                1 Completed

      Material Standard Cost...: 1 1=Production, 2=Inventory

-----
F3=Exit  F4=Prompt  ENTER=Submit job
-----
M0 a                               MW                               06/039
```

Fields:

Work Stations From, To

Enter the range of work stations you want to produce the report for, or leave blank to include all work stations.

Date Range From, To

Enter the date range you want to produce the report for. The default in both fields is the current system date.

Include Order Status

Select one or more order status categories to include on the report.

0 - Exclude. Enter 0 against an order status to exclude it from the report.

1 - Include. Enter 1 against an order status to include it in the report.

Material Standard Cost

Specify where you want the material standard cost values to be taken from. Enter one of the following:

1 - Production. To take the material standard cost values from the production records.

2 - Inventory. To take the material standard cost values from the cost held on the primary item, stockroom record, against the item's default costing method. The

default costing method can be either standard, latest, average, or FIFO. The costing method is defined on the item details in Inventory Management.



Press **Enter** to validate your entries, and submit the job for processing.

Production Variances Report



29/PCE

Use this report to compare actual values from inputs, outputs, and operations booked against work stations, with either:

- Standard production values, taken from the route.
- Planned production values, taken from production orders.

If you choose to compare actual values to the standard costs from the route, then the route is exploded using either:

- The order quantities. That is, the scheduled production quantities on those orders that actual values have been booked against.
- The receipt quantities.

Work Station Production Variance Report Selection Screen



To display this screen, select the Production
Variance Reports option.

You use this screen to enter the selection criteria for the report.

```
PC410                Z1 - GB Demonstration Company    USER GBJBAAA4    17/03/99
                                                    15:27:52
Work Station Production Variance Report Selection - Standard vs. Actual

Work Stations From.....?..: _____ to _____
Date Range From.....?..: 17/03/99 to 17/03/99
Output Item/Group.....?..: _____

Include Order Status.....: 0 Active (1=Include)
                           1 Complete

Route Option.....: 0 0=Order Route
                   1=Planning Route
                   2=Costing Route

Material Standard Cost...: 1 1=Production
                           2=Inventory

Compare Actual With.....: 1 1=Standard (Routes) - based on Order Qtys
                           2=Standard (Routes) - based on Receipt Qtys
                           3=Planned (Orders)

F3=Exit  F4=Prompt  ENTER=Submit Job

M0 a MW 05/030
```

Fields:

Work Stations From, To

Enter the range of work stations you want to include in the report, or leave blank to select all work stations.

Date Range From, To

Enter the date range you want to produce the report for. The default in both fields is the current system date.

Output Item/Group

Select a specific item or process group to report on, or leave blank to select all items.

Include Order Status

Indicate whether or not you want to include orders with a status of Active, Complete, or both, in the report. Enter one of the following:

0 - Exclude. Enter 0 against an order status to exclude it from the report.

1 - Include. Enter 1 against an order status to include it in the report.

Route Option

Select the standard route option for the comparison with actual values. Enter one of the following:

0 - Order Route. Use the route on the production order.

1 - Planning Route. Use the planning route of the item.

2 - Costing Route. Use the costing route of the item.

Material Standard Cost

Specify where you want the material standard cost values to be taken from.
Enter one of the following:

1 - Production. To take the material standard cost values from the production records.

2 - Inventory. To take the material standard cost values from the cost held on the primary item/stockroom record, against the item's default costing method. The default costing method can be either standard, latest, average, or FIFO. The costing method is defined on the item details in Inventory Management.

Compare Actual With

Specify whether you want to make the comparison with standard costs or production orders. Choose from the following:

1 - Standard (Routes) - Based On Order Qtys. Compare the actual values with standard costs based on order quantities.

2 - Standard (Routes) - Based On Receipt Qtys. Compare the actual values with standard costs based on receipt quantities.

3 - Planned (Orders). Compare the actual values with planned values.



Press **Enter** to validate your entries, and submit the job for processing.

-
-
-
-
-

Glossary

Glossary

Active Production Order

This is a production order which has associated work-in-progress.

Activity Types

These are user definitions of activities to be reported and are linked to a JBA reporting type. There are system dependent activity types that are mandatory for the system to function; and user defined activity types that may be defined to suit user requirements. The associated reporting type defines how the activity will affect updates to the database.

Actual Down Time

See Down Time.

AFI

Acronym for Advanced Financial Integrator.

Allocated Stock

The quantity of an item that has been allocated to customer orders or production orders or schedules. It is usually expressed as a balance at item/stockroom level.

Allocations

Reservation of inventory for consumption in a production order or schedule. It is a 'soft' reservation, and the material can be issued to any order, but it enables the application to calculate available quantities.

Amended Standard Production Orders

Production orders which are based on a standard route and only differ in detail.

Amortised Fixed Costs

This is the method of spreading fixed production costs over a designated batch size to ascertain the effect on unit product costs of the economies of scale production. See also Fixed Costs.

Archived Production Orders

Production orders which have been saved in an archive file and removed from the live order database. They are available for detailed enquiry.

Available

The quantity calculated by Planning to represent current availability on a given day equal to previous period available + supply – demand.

Available Stock

The quantity calculated by subtracting allocations from the physical stock balance. It represents uncommitted inventory which may be used to satisfy production demand.

Average Cost

This is a costing method employed by Inventory Management, whereby the weighted average unit cost of an item is recalculated every time a stock receipt is made.

Average Usage

The average usage per week/period of an item in a stockroom. The weeks or periods which are included in this calculation are defined by the usage profile.

Backflush

The automatic generation of standard material issues based on production quantities reported.

Backflush Item

An item that is designated to be automatically issued in production recording.

Backschedule

The calculation of operation and order start dates from the due date, using the lead time elements of the operations.

Balance

This may be used either to signify a database record holding summary information, such as a stockroom balance, or a single summary quantity field on such a record, such as allocated stock.

Base Version

The Version 3.x Production system is delivered in two editions; Base and Extended. The Base edition delivers functionality equivalent to that which was available in Version 2.0 The Extended edition provides additional function, notably scheduled (or repetitive) production and process industry features such as co-products and potency.

Batch Balancing

This is a method of ensuring that the correct quantity and potency mix of materials is used in a production batch.

Bill Of Material

The definition of the inputs that are required to make a product. Also known as a Product Structure, Recipe or Formula.

BOM

Acronym for Bill Of Material.

Booking

Work-in-progress reporting.

Booking History

A record of all material and production transactions posted during the progress of a production order or production schedule.

Bottleneck

This term is generally used to refer to a position on a production line where the production flow is constrained in some way. This can lead to build-ups of work and potentially have an adverse effect on the efficiency of a line or plant, and ultimately on profitability.

Bucket

In MPS and MRP, the period of time for which supply and demand are summarised for presentation.

Bucketless

This describes the MPS/MRP review process, which balances supply and demand on the date it is scheduled, rather than accumulating it into greater time periods.

Budget Capacity

The capacity of a work station that is compared with its load. It represents the capacity you expect to obtain from a work station. This can be 100% of stated capacity or a factor above or below 100% (see Standard Capacity)

By-Product

A product which is produced incidentally by a process which is primarily for the production of other products. It may have financial value, which will be deducted from the total costs of the mainstream product(s) and will also be treated as a negative cost, displayed in the Relief Cost Element field.

Cancelled Production Order

A production order which has been aborted, and cannot be reopened.

Capacity

The amount of time that a work station is available for work in a given period.

Capacity Planning

The activity of calculating work station capacity requirements by comparison of duration for planned work with the capacity available for the planning period. The work schedule or the capacity may then be adjusted to obtain a balanced work flow.

Capacity Planning Run

The main function of the Capacity Requirements Planning application. This process calculates the work station capacity load that is required to achieve a particular production schedule according to scheduling rules.

Capacity Requirement

The time required at a work station by a particular piece of work or production schedule.

Cell

A group of stockrooms that are related for the purpose of material requirements planning.

Cellular Planning

A planning method by which the demand and supply of materials are identified and satisfied at cell level rather than model level.

Change Management

See Engineering Change Management.

Co-Products

Items that are necessarily produced together as a result of a production process. They share the burden of the cost of production.

Company Profile

A collection of control parameters specific to a Production company.

Completed Production Order

Production orders which have been completed. They cannot have bookings made against them. They may be reopened for further processing.

Component

Any item that is used in the production of another item. (See Input.)

Component Location Reference

A method whereby components may be categorised by their location and position within an assembly, structure or process.

Confirmed Production Order

A production order with a firm commitment to produce an item, which cannot be changed in date or quantity except by explicit planner intervention.

Cost

A value associated with an item in a stockroom, or a movement. It is usually a value related to a single item (a unit cost), but may refer to a quantity of items (a movement cost or value).

Cost Apportionment Method

The method used to calculate the proportion of production costs that are applied to each item, when co-products are produced from a process.

Cost Centre

A functional or organisational area defined for the purposes of defining production costs. Each cost centre defines standard rates for labour, work station, set up and overheads. A cost centre is assigned to a work station and is used to calculate all standard production costs associated with that work station.

Cost Elements

16 cost elements are available to analyse costs. These are: relief costs, direct material, packaging, utility, labour, set up, machine, subcontract, overhead 1, overhead 2 (fixed), overhead 2 (variable), user defined 1-4 and shrinkage.

Cost Relief Apportionment

The method used to calculate any By-Product Relief Costs that are applied to co-product costs in a co-product process.

Cost Roll-Up

The method of generating product costs by calculating and accumulating costs of materials and operations required at each level of manufacture.

Costing Method

This refers to the method used to establish a cost for stock movements or stock balances. The methods available are latest, average, standard and FIFO (First In First Out).

Costing Route

The route designated for an item to calculate its unit cost within a stockroom. A unit cost may be calculated for each stockroom in which an item is stocked by designating a specific production route as a cost route.

Count Point

An operation at which WIP inventory is counted or reported.

Count Reporting Policy

This policy determines the method by which production quantities are recorded during booking. This may be total quantity or start and end quantity.

Creation Date

The date on which a production order is entered.

Crew Size

The standard number of operatives scheduled to work on an operation, either as direct labour or set up labour.

Cumulative Lead Time

The amount of time required to produce an item from scratch. It is based on a full explosion of the bills of material of the item and its sub-assemblies and includes the purchasing lead time of raw materials.

Current Cost

A category of cost. The application generates values for current and standard cost control. Current cost may be considered as the proposed standard cost for the next accounting period. See Standard Cost.

Current Date in Planning

The datum point of an MPS/MRP plan. The start date is determined by subtracting Overdue Days from this date. The Time Fence date is calculated from this date by adding the frozen Lead Time.

Customer Schedule

The forecast of a customer's expected delivery requirements. They can be at different statuses in different time periods.

Customer Shelf Life

The amount of time an item must have left in its life when it is delivered to the customer. If an item is lot controlled, this time will be deducted from the Expiry Date to calculate the Last Available Date.

Delivery Area

Information which is used to identify where items should be moved to. Can be found on the Picking List.

Delivery Days Basis

This parameter is only pertinent to items which are not lot, batch or serial controlled. It allows delivery lead time to be taken into account during planning, and may be calculated using calendar days or working days. For lot controlled items, the Release Lead Time is used.

Delivery Lead Time

The delivery lead time value expressed in terms of the Delivery Days Basis.

Delivery Point

The exact position where items should be move to within the Delivery Area. Can be found on Picking List.

Demand

The forecast or actual requirement for an item.

Demand Policy

Policy which controls the comparison of sales forecasts with sales orders, customer schedules and dependent demand to arrive at the demand to drive MPS or MRP. This may be: no forecast; independent demand only; dependent and independent demand; dependent demand; explode forecasts to inputs; make to forecast only or total demand.

Dependent Demand

Demand for an item which is derived from the manufacture of a parent.

Descriptions File

This is a file maintained within the Inventory Management application which defines a number of parameter codes and their descriptions.

Discrete Manufacturing

A production control method where individual pieces of work are identifiable. Usually, production orders are used to manage this.

Down Time

The amount of time that a work station is out of action. The application provides the facility to record both planned and actual down time.

DRP

Acronym for Distribution Requirements Planning.

Duration Calculation Basis

The method by which the duration of an operation is calculated for scheduling purposes. This may be: set up time only; machine time + set up time; direct labour time + set up time; machine time + direct labour time + set up time; greater of machine time *or* direct labour time + set up time.

This can be set at Company Profile, Work Station or Route Operation level.

Economic Order Quantity

This is an optimum quantity of an item to be produced by a process route or supplied on an order. It may be entered for each process route and may be used as the basis of apportioning fixed costs for an item.

Effectivity

A method of controlling product input configurations. The effectivity of an input is the time period when it can be used in an assembly. The application uses an effective start date and an effective finish date to control input configurations. The system will ignore the item outside the effectivity dates.

Efficiency

The ratio of standard to actual performance.

Efficiency Variance

The difference between standard and actual performance in quantity and cost terms.

End Date (Planning)

The last date to be considered by the run. It can be entered or calculated as Current Date plus item cumulative lead time. It can be extended by setting a number of safety days

Engineering Change Management.

A system which controls and audits, via change requests, the addition, maintenance and deletion of items, route operations and input/outputs.

Equivalent Physical Quantity

This is used where item lots have variable potency. For an item lot with non-standard potency, it is the equivalent quantity of the item at standard potency. It is calculated as $\text{Physical Quantity} \times \text{Actual Potency} / \text{Standard Potency}$

Exception Events

Transactions which are likely to cause a change in the supply and demand status of an item.

Expiry Date

The Expiry Date is calculated as $\text{Lot Creation Date} + \text{Shelf Life}$.

Extended Version

The Version 3.x Production system is delivered in two editions; Base and Extended. The Base edition delivers functionality equivalent to that which was available in Version 2.0 The Extended edition provides additional function, notably scheduled (or repetitive) production and process industry features such as co-products and potency.

FIFO

This is an acronym for First In First Out - one of the costing methods available in the Inventory Management application. Using this method, each stock receipt is valued at actual cost, and issues are valued using these receipt batch costs on a First In First Out basis.

Filler Item

An item that is used to make up the required physical of a production batch, but which has no effect on the properties of the item produced. (See Batch Balancing.)

Finished Goods Receipt

The receipt of a quantity of a production item into an Inventory stockroom, as a result of a production order or schedule.

Firm Planned Production Order

A production order which remains under the control of the planner in terms of timing and quantity and is not recommended for change by Planning functions, unless Planning Filters are set to allow this.

Firming Period

The period for which firm work station schedules have been created.

First Available Date

For a lot controlled item, this is equal to the Creation Date + Release Lead Time (Days). It is the first date the item can be used.

Fixed Cost

An element of item cost that does not vary with the volume of production. Fixed elements of costs are; set up, fixed overhead, fixed user defined costs.

Fixed Order Quantity

An ordering policy used by MPS and MRP to control suggested replenishment orders. It is used to generate suggested supplies of a predefined size.

Fixed Quantity Per

An input to a Bill of Material whose requirement will not vary with batch size.

Floor Stock

Inventory which is issued to a designated floor stock location (logical or physical stockroom) on the shop floor rather than directly for immediate consumption. Floor stock is consumed as it is used at a particular operation.

Floor Stock Location

This is a logical or physical stockroom where items with a Material Control Policy of issue to floor stock are issued and consumed.

Flow Route

This is a route where the individual operations are dependent on each other. Changes to schedules on flow routes for one operation result in changes to the whole route.

Formula

See Bill of Material.

Frozen Stock

The quantity of an item which is designated as 'frozen' and thus is not available for issue or allocation. It is expressed as a balance quantity at item/stockroom level, or item/lot level.

Generated Demand

See Dependent Demand.

Gross Requirement

The total demand for an item in a given time period before stock on-hand and supplies are netted.

GT Family

Group Technology code. This is a user defined classification which may be used as a selection parameter both on a Selective MRP run and MPS and MRP reports.

Held Inventory Tracking

A regimen imposed by the system to force entry of a reference code/description each time a WIP quantity is booked as 'held'. This reference may be for the whole booked quantity or specific to one or more items in the total quantity. Any further movements of Held WIP Inventory (for example, transfer or scrap) necessitate the specification of the held inventory reference.

Held WIP Inventory

WIP inventory which is not available to progress to the next operation until released from held status. This may be because it is awaiting quality control inspection or rework.

In Transit

The quantity of an item which is currently in transit between two stockrooms. It is expressed as a balance quantity at the target item stockroom.

Indented Bill of Material

A multi-level explosion of an assembly or sub-assembly, showing all the levels of inputs, each of which is displayed indented one position from its immediate parent.

Indented Cost Roll Up

A method of simulating the cost of an assembly or sub-assembly with reference to its bill of material and manufacturing operations at all levels, and then rolling up the costs of all its inputs and operations.

Indented Where-Used

This is the inverse of the indented bill of material, and shows the parents of an input, each parent indented one position from its immediate children. The analysis is multi-level, and identifies the parents, grandparents, great grandparents, and so on, of an item.

Independent Demand

Demand for an item originating from sales orders or forecasts. That is, direct demand for the item itself.

Ingredient

Any item which is used in the production of another item. See Input.

Input

Refers to any material, sub-component, sub-assembly, ingredient and so on. specified on a bill of material/formula/recipe. It is the standard term of reference to any material input.

Input Reference

The key used to access Component Location Reference information. Can also be used as a reference field in its own right. See Component Location Reference.

Input Reference Text

Holds additional text information relating to input references on input items and routes. Used in conjunction with the Component Location Reference.

Input Route

The mechanism describing the way that input items are identified and used on bills of materials.

Input Shrinkage

The planned or anticipated percentage of a quantity of material that will be unusable when it is issued to the production process.

Input Where-Used

The identification of where an input is used in assemblies and sub-assemblies.

Inventory Audit Record

When a revaluation of Inventory takes place during a transfer of standard costs from Production, a control record is created for each stockroom revaluation.

Item

The single term used to describe an element of stock identified by a unique number. Also required to identify non-stock or phantom items.

Item Group Minor

Inventory Management classification used in Production Forecasting to define the product family to which an item belongs.

Item Schedule

The planned production of an item expressed as quantities on Due Dates.

Item Stockroom

This is the highest level at which costs and inventory balances are held. The item/stockroom record also defines stock management rules for an item in a stockroom used within Inventory Management.

Item Type

Provides a general classification of an item within the Production system. This may be: made (manufactured/produced); bought out; phantom; reusable tool; consumable tool; gauge or purchased.

Just-In-Time

This is a scheduling and material management philosophy that relies on efficiently organised plants, educated and committed employees, and co-operative suppliers. Its objective is to reduce stock holding to a minimum and optimise the flow of production, synchronised to market demand, thus reducing lead times and increasing customer service. Also referred to as JIT.

Key Ingredient

A specific ingredient input on a route that is used to control the lot characteristics of the finished product. Only one key ingredient per route may be defined.

Labour

Work performed by operators.

Labour Time

The length of time required by an operation in terms of labour.

LAD

Acronym for Last Available Date.

Last Available Date

For a lot controlled item, this is the Expiry Date - Customer Shelf Life. It represents the last date on which the item can be used. It is deemed to be frozen after this date.

Latest Cost

One of the Costing Methods available in the Inventory Management application. Using this method, each stock receipt is valued at actual cost and all issues are valued at this cost. In addition, total inventory is valued at this cost.

Lead Time

The amount of time required to produce or procure an item. For production items it is derived from the sum of the lead times of the individual operations required to produce the item and any sub-assemblies. It also relates to procurement times for purchased items. See also Production and Cumulative Lead Time.

Load

The capacity requirement on a work station in terms of time arising from an operation scheduled at that work station.

Location Reference

See Component Location Reference.

Logical Stockroom

A stockroom which does not physically exist but is used as a reference for the recording of WIP inventory, phantom items or floor stock. Recordings may be made to physical stockrooms if they exist, logical stockrooms are simply an alternative.

Lot Balancing Policy

For lot controlled items, an item may be defined such that its potency will determine the actual physical quantity to be issued.

Lot Control

This refers to a level of stock control lower than item/stockroom; also referred to as batch control, for which a group of items received into stock is given a code. Issues from the group require the classification of this code for audit tracking purposes.

Lot Traceability

Where stock control is specified at batch or lot level, this refers to the ability to trace the movement of stock at this detailed level.

Low Level Code

The lowest point in Bills of Material or production orders at which an item exists. It indicates the maximum level at which the item resides. It is used by MRP to determine when to plan the item in the fully exploded product sequence.

Machine

A piece of equipment upon which or with which work is performed.

Machine Time

The length of time consumed by an operation in terms of machine work.

Master Production Scheduling

MPS calculates and balances demand and supply for master scheduled items, and generates a production schedule with suggested dates and quantities.

Material Control Policy

This parameter defines the method of item issues to production. This may be: formal issue; backflush or floor stock issue.

Material Requirements Planning

MRP calculates and balances demand and supply for purchased materials and lower level manufactured items and generates a suggested schedule for production and purchases, with suggested dates and quantities for actions.

Material Type

Parameter used to determine an item's material type. This may be: direct material; packaging or utility.

Maximum Capacity

The theoretical capacity of a work station in hours when working at its peak rate.

Maximum Capacity Factor

This factor may be applied to a shift profile to allow calculation of the maximum number of hours available at a work station, if for example, the work station consists of several machines or multiple operators. For example, if the work

station has a standard shift profile which defines 8 working hours per day, applying a factor of 3 would indicate that 3 x 8 (24) hours are available.

Maximum Order Quantity

A value set for an item to control the suggested supply batch sizes suggested by MPS and MRP. It is an advisory parameter, and does not restrict the size of the suggested batch, but a warning is shown on the plan reports when a batch size exceeds it.

Maximum Stock

The preferred maximum stock balance of an item in a stockroom. This may be set manually for each item

Minimum Order Quantity

A control parameter set for an item to manage the suggested supply batch sizes recommended by MPS and MRP. It ensures that a supply is never less than the defined minimum order value.

Move Days

The length of time required to transport work to a given work station to perform an operation.

Movement Type

This refers to the classification of movements by type of transaction, for example, sundry receipts, customer order issues.

MPS

Acronym for Master Production Scheduling.

MPS Item

An item which is under the scheduling and planning control of Master Production Scheduling. It is typically an end-product, critical sub-assembly, or key material.

MRP

Acronym for Material Requirements Planning.

Multiple Order Quantity

A control parameter set for an item to control the suggested supply batch sizes recommended by MPS and MRP. It defines the increments that are applied to a batch to meet a demand quantity. It sets a defined batch quantity and the ruling that a demand quantity must be supplied in whole batches of the set quantity. For example, demand equals 110; multiple order quantity equals 20; required equals $110/20=5.5$ which would convert to 6 batches.

Net Change

An MRP planning method which is driven by exception conditions in the supply and demand status of an item (cf. Regenerative).

Net Demand

Net demand equals gross demand less available stock, adjusted by demand policy parameters.

Net Requirements

The difference between net demand due on a day and the total suggested supplies planned to be available on that day, adjusted by pre-set Order Policy parameters.

Non-Standard Production Orders

Production orders which are not based on a standard production route, but are created by the user to represent non-standard production operations, resources or input requirements.

On Order

The quantity of an item for which outstanding purchase or production orders exist. It is expressed as a balance quantity at item/stockroom level.

On-Hand Quantity

The quantity shown in Inventory as being physically in stock. For WIP inventory this is calculated as the sum of the Available + Subcontractor + Held balances.

Operation

A stage in the production route of an item.

Operation Costs

The costs specific to individual production stages. In the Extended edition of the software, costs can be held at route and operation level as well as item level.

Operational Shrinkage

Percentage loss of work-in-progress as a result of performing an operation.

Order Policy

Order policy is used by MPS and MRP when building a suggested schedule. Policies may be: discrete; discrete above minimum; fixed quantity; number of days supply or multiples above minimum.

Order Release

The point at which a production order is made available for processing on the shop floor. Materials may be allocated and issued at this point.

Order Status

Identifies the stage that a production order has reached. Possible statuses are: suggested, planned, confirmed, released, active, cancelled or completed.

Organisational Model

The organisational model is a control mechanism based on a view of production resources. The model enables the setting of important default values, and the definition of certain procedures and policy issues which will be implemented at resource group level. To use this facility, work stations must be defined to an organisational model.

Output

An item produced as a result of a manufacturing process. This can be a single product, a co-product, by-product, waste or an unplanned product.

Overdue Days (Planning)

Indicates the number of days of overdue supply and demand to be considered in MPS/MRP runs.

Overhead Rate

The rate per hour or percentage rate applied to absorb production overhead costs in to the item unit cost. Specified on Cost Centres together with an Overhead Recovery Method.

Overhead Recovery Methods

Different recovery methods are available based on production costs, process time, material inputs or outputs in terms of values or quantities.

Overlapped Operations

An operation is defined as an overlapped operation if the next operation can begin before completion of the full quantity at the operation. For example; if 100 items are to be made at operation 10 in batches of 10; but operation 20 can start when 5 batches have been completed at operation 10, then an overlap situation occurs and operation 10 is defined as overlapped. This will be taken into account by planning and scheduling functions.

Overload

The condition where a work station has more work scheduled to be performed than it has available time in a given period.

Parameter File

Contains system and user defined codes which set control parameters or allow the amendment of standard code descriptions.

Phantom Item

This represents a collection of inputs which are collectively linked together via a 'phantom' item number. This is an item which is not physically stocked but which may be referred to as a generic route input, and will trigger the planning of its component parts via a phantom explosion.

Phantom Operation

A phantom Bill of Material is provided with a pseudo operation to link its inputs together on a route. This is a phantom operation, and it has no operational impact, although a work station may be assigned to the operation for the purpose of calculating material overheads when the phantom is introduced.

Physical Stock

The total quantity of an item in a stockroom. It is expressed as a balance quantity at item/stockroom level and also at item stockroom lot level.

Pick List

A document detailing the inputs required to be picked for a particular operation on an order or production schedule. This is also referred to as a pulling list.

Planned Available

The quantity calculated to be available at any point in time if MRP or recommendations are implemented.

Planned Down Time

See Down Time.

Planned Material Scrap Rate

This is another way of expressing input shrinkage.

Planned Production Order

A production order that is not yet confirmed, but represents an intention to generate a supply. It does not have input and operation details, and is based on a standard production route.

Planner

A logical grouping of items for the purpose of planning.

Planning Filter

This determines the sensitivity of MPS and MRP rescheduling logic when balancing supply and demand.

Planning Horizon

The end date of an item planning run in MPS or MRP.

Planning Model

A method of defining a view of supply and demand for planning purposes. It is defined in terms of stockrooms. Multiple planning models may be defined to produce differing views of the production environment. One particular model

must be defined as that from which MPS or MRP suggestions may be confirmed to production.

Planning Route

This is the route designated for an item to be used in the planning of its input materials and scheduled manufacturing dates and times in MPS and MRP.

Planning Type

The planning category of an item; MPS controlled or MRP controlled.

Potency

A percentage defining the strength of an item in an inventory lot.

Primary Co-Product

The dominant item in a set of process group co-products, which is used to drive the planning for that group of outputs.

Primary Process Group

For a co-product which can be produced in a number of manufacturing process groups, this is the process group to be used as the preferred group in its costing calculation.

Primary Stockroom

The default stockroom for issuing and receipt of an item, when defining a route. On costing routes, the issuing stockroom for an input must be its primary stockroom.

Priority

The relative importance of an order in the work flow. It is used to control the sequence of jobs queuing at work stations.

Process Group Type

Parameter that indicates whether or not the item is a process group in which multiple co-products may be defined.

Process Route

This is a definition of the processes (operational stages) and materials required to produce an item or set of items. It may also be referred to as a production route.

Process Yield

The yield of a process route. It is calculated as the ratio of inputs to the route to outputs from the route.

Product Family

The grouping of related items for forecasting and planning purposes. Group codes are defined on the Inventory Management, Descriptions File, and entered against items in the Inventory Management Product Group Minor field.

Production Calendar

The definition of the production environment in terms of working days, non-working days, holidays and shutdown periods. Production calendars, once defined may be assigned to: Company Profile, Work Stations and MPS/MRP planning profiles.

Production Lead Time

The amount of manufacturing time required to produce an item from its immediate inputs and operations. No reference is made to the lead time of its inputs.

Production Schedule

The plan which contains the sequence and timings of items and operations to achieve the planned production output.

Production Sequence (Major)

An item parameter which controls the sequence in which items are planned in MPS and MRP.

Production Sequence (Minor)

An item parameter which controls the sequence in which item operations are performed, recognising the need to make products in a preferred sequence due to, for example, colour change or set up costs.

Quantity Per

This the standard quantity of a input that is required to make its standard parent lot size.

Quantity Reporting Policy

This policy determines how a WIP inventory quantity booked is interpreted. The quantity recorded may represent the total quantity inclusive or exclusive of scrap and held values.

Queue Time

The length of time that a job will wait, on average, at a work station after arrival before it is worked upon. This is an element of inter-operation time, and should be reduced wherever possible.

Re-Order Point

The quantity of an item in a stockroom which, when reached, should trigger a re-order action. This may be set manually. This Inventory value is used as the safety stock value when using cellular planning. Non-cellular planning, safety stock is taken from the production item master file.

Recipe

See Bill of Material.

Recommended Supply Orders

Suggested replenishments generated by MPS and MRP to support defined inventory stocking policies and to meet outstanding demand.

Regenerative

An MRP planning method which replans every MRP controlled item, regardless of its demand and supply status.

Release Lead Time

This is the time set against a lot controlled item to represent a standard delay between its manufacture/purchase date and its availability for further use/despatch. This lead time is expressed in its Release Lead Time Unit.

Release Lead Time Unit

Indicates the unit in which the Release Lead Time is measured. This may be: days, weeks, months or years.

Released Lead Time Policy

This parameter is pertinent to lot controlled items and allows a set time delay to be taken into account during planning.

Released Production Order

This is a production order which has been released to the production (shop floor) process. Inputs may be allocated and issued to it, and production activities may be booked against it. Any bookings of material or production will automatically change its status to Active.

Repetitive Manufacturing

The style of manufacturing in which high volumes of similar products are produced. Typically, production orders are *not* used in these environments; but daily production is scheduled against work stations by item and quantity.

Reporting Profile

Although MPS and MRP calculate demand/supply on a daily basis, information pertaining to the production plan may be 'bucketed', that is, grouped into time slots, in accordance with a reporting profile defined for each planning model. Usually, this requires the grouping of data into small time periods at the start of the plan; then longer time periods as the plan moves out into future periods.

Reporting Type

On a process route this indicates whether an operation is a count point for WIP inventory; or a backflush (non count) operation. The last operation must be a count point.

They are a part of standard processing rules and transactions which control the effects of booking production.

Resources

These are the facilities which contribute to the production of items. Within the Production system, these comprise: cost centres, work stations, work centres, production calendars, shift profiles, labour grades, operators, crews and subcontractors.

Revision Level

Indicates the current revision level of a route/structure.

Revision Level

Indicates the current revision level of a route/structure.

Rework

This is work necessary to correct a sub-standard item rejected during or after its manufacture.

Rough Cut Capacity Planning

A method of testing the feasibility of an MPS plan by comparing the planned capacity requirements (load) with available capacity at the required production resources at the times required. This may be completed at early planning stages to highlight bottleneck or overload situations before firming or progressing the plan.

Rough Cut Route

The summary bill of capacity used in Rough Cut Capacity Planning. That is, a route/structure which may be set up purely for the purposes of rough cut capacity planning which may be an abridged version of the usual planning route.

Route

A definition of the operational stages involved in producing an item, sequenced in order of manufacture, and specifying the inputs required in terms of materials and resources.

Route Code

The identification code representing an item structure and production method. There can be different routes created for an item. A preferred planning and cost route can be defined.

Route/Structure

This defines both the route (production stages) and material requirements (BOM, recipe, formula) required to produce an item.

Run Time

The length of time required by an operation.

Safety Lead Time (Planning)

Used to set an end date beyond the cumulative lead time of an item. The end date is calculated as item horizon plus safety lead time.

Safety Stock

The desired level of stockholding for an item to support a customer service or availability policy.

Sales Forecast

A statement of the anticipated market demand for a product. It can be compared with actual sales orders, in MPS/MRP calculations to determine the net demand to be met by production. This is dependent upon the Demand Policy code set for the item.

Schedule

See Production Schedule.

Schedule Control

An environment in which item/work station schedules are used in preference to production orders - usually in a high volume, repetitive form of production.

Schedule Controlled Item

An item that is schedule and not production order controlled in MPS and MRP processes. A production order can be raised if required.

Scheduled Receipt

A planned supply in MPS/MRP; this may be a released or active production or purchase order or a suggested or confirmed schedule.

Scheduling

The process of calculating and suggesting due dates, quantities and action dates for the supply of an item to meet required demand quantities and dates.

Seasonal Profile

Method used to spread forecasts using indices for each forecast period and entering a total figure to spread. Can be used to speedily determine forecast values which display seasonal fluctuations.

Serial Number Control

A form of lot control which maintains single, uniquely identified (serialised) units.

Set-Up

The activity of preparing machines or processes for production. Set-up time forms part of the lead time of an operation.

Set-Up Time

The duration of the set-up for a work station. This is expressed as a labour time.

Shelf Life

The life of an item expressed in its Shelf Life Unit.

Shelf Life Unit

Indicates the unit in which an item's shelf life is measured. this may be: days, weeks, months, years or unlimited.

Shift Length

The duration of an individual working shift for a work station.

Shift Profiles

These describe the pattern of shifts in a day. Shift profiles use effectivity dates to reflect planned changes in patterns. A default shift profile may be assigned to a work station; or a shift profile assigned to each working day within a week at a work station. The shift profile defines the number of productive hours available on a working day.

Shipper Number

A number assigned to each shipment of items to or from a subcontractor if Shipper Tracking is in use.

Shipper Tracking

A method of tracking materials or WIP inventory to or from subcontractors.

Shrinkage (Material)

The planning factor applied to an input on a route to reflect expected loss.

Shrinkage (Operation)

The planning factor applied to an operation to reflect expected losses. Scheduling uses the factor to inflate the standard times to make the required lot size.

Shrinkage Cost

The amount of item unit cost attributable to operational or material shrinkage in the production process. It is held by Cost Element and can optionally be consolidated into the item cost elements. A shrinkage element can be configured to display the total shrinkage cost.

Simulated Cost

A function which projects product costs by applying variables to the cost structure to ascertain likely future costs, or by changing inputs to ascertain the cost impact of the changes.

Single Level Enquiry

A one level explosion of a Bill of Material and route and which costs the inputs and operation processes required to make the parent item.

Smoothing Policy

A planning policy which smoothes sale forecast demand to provide a level production schedule.

Specification Ref

This refers to how an item is specified.

Standard Capacity

The daily capacity in hours of a work station when operating at its normal rate, and normal shift patterns.

Standard Capacity Factor

This may be applied to a shift profile to determine the standard number of hours available at a work station. In situations where the work station comprises multiple machines or personnel, the factor will represent the number of machines/people at that work station. For example, for a shift profile of 10 hours

at a work station where two machines operate, a capacity factor of 2 would be entered, to indicate a standard capacity of 20 hours.

Standard Costs

A costing method available in Production and Inventory. Standard costs are calculated for items based on standard cost rates and operation times and the standard costs of inputs. They form the yardstick for performance measurement in a given period.

Standard Efficiency

The percentage of the standard capacity of a work station which you expect to achieve under normal operational circumstances. This percentage may be used in capacity planning enquiries and reports.

Standard Lot Size

Standard batch size in terms of which input quantities and operation times are expressed in a route/structure.

Standard Potency

The standard strength of an item expressed as a percentage. Applies to lot controlled items only.

Standard Production Orders

Production orders which are based on a standard route to obtain input requirements and operation details.

Start Date

The scheduled release date of a production or purchase order or schedule.

Start Date (Planning)

This is the first date considered by MPS and MRP Demand and Supply prior to this date is ignored. It is the Current Date less Overdue days set for the planning run.

Stock Forecast

A forecast used in MPS and MRP to plan variable levels of inventory availability to maintain desired customer service levels over and above standard safety stock

Stock Monitor

An Inventory Management function which maintains the integrity of lot controlled stock availability. It determines whether a lot is available or has passed its Last Available or Expiry date. All lots are frozen when the Last Available Date is passed.

Stock Movement

A movement of a quantity of an item into or out of a stockroom. More particularly, this will refer to the recording of such a movement in the application, and the transaction record created as a result.

Stock Run Out Policy

Controls the planning of requirements of an item based on its stock balance, rather than effective dates. The available policies are: use up stock and do not replenish; or use up stock and then use a nominated replacement item or items.

Stockroom

A discrete area where stock for an item is recorded and controlled separately from other company stocks. Stockroom codes are also used to define logical stockrooms used to hold WIP inventory, and Floor Stock Locations which may be physical or logical stockrooms.

Stockroom Balance

See Balance and Item/Stockroom.

Subcontract Operation

Work on the production of an item which is carried out by another manufacturer. This entails sending materials or WIP which are worked on by the subcontractor before being returned for further operations, or quality inspection or receipt into stock.

Subcontractor Stockroom

A logical stockroom which holds all subcontractor *material* balances. Subcontractor *WIP inventory* balances are held as balances at operations in the associated work station WIP location.

Substitute

An item which has been designated as an allowable replacement for an item. It may be issued in whole or part to a production order, if there is insufficient stock of the primary item.

Substitution Policy

Defined on a route/structure input item definition, indicating whether it is permissible to use a substitute item if there is a stock shortage of the primary item.

Suggested Production Order

An MPS or MRP recommendation to create a production order to satisfy a shortage identified by the planning process.

Suggested Purchase

An MPS or MRP recommendation to create a purchase order to satisfy a shortage identified by the planning process.

Supply

The planned or scheduled receipt of item quantity from a purchase order or production order or a production schedule item.

Target Yield

Desired yield of a route.

This Level

The final level of manufacture for an item with a multi level route/structure, as opposed to lower levels of manufacture such as sub-assemblies.

Time Basis Code

Code indicating how operation times are expressed on a route. These are: time per lot; time each; quantity per hour; fixed time, time per 1000; time per 100; time per fixed batch.

Time Booking Policy

Parameter set on the Organisational Model to control the time booking format in Production reporting. This may be in decimal hours or hours and minutes. This policy is set only if the Time Reporting Policy is set to elapsed time.

Time Fence

The date which the schedule is fixed no recommendations are made by MPS or MRP to change existing production or to suggest new production.

Time Fence Days (Planning)

The number of days that are added to the Current Date to calculate the Time Fence Date.

Time Fence Policy

Parameter set at item level indicating whether shortages occurring within the time fence should be ignored, or satisfied on the Time Fence date.

Time Reporting Policy

Parameter set on the Organisational Model to control the format in which operator and work station times at an operation are entered. This may be set for entry as elapsed time or as work start time and stop time.

Time Units

The units in which operation times are expressed. This is defined in the Company Profile and can be in hours or minutes.

Total Shelf Life

The life of an item lot. The shelf life is added to the creation date to calculate the Expiry Date.

Transaction Manager

The function that processes production and WIP inventory transactions, generating movement records and updates balances. It runs in its own subsystem and may be started and stopped. It must be running in order to keep balances and transaction details up-to-date during production bookings.

Transaction Number

Each production booking entered on the system is allocated a system transaction number which may be accessed and displayed for subsequent reference in enquiries and reports.

Transaction Type

JBA transaction codes which represent a particular balance update or movement generation. The transaction type calls a program which ultimately updates the database.

Trial Kit

A method of simulating input allocation to a production order or route to assess availability to meet the requirements. You can use the Material Availability Enquiry option to perform trial kitting.

Trigger

The mechanism used to drive Net Change MRP. Item Triggers are created when transactions are recorded for unplanned events. Triggers may be generated through maintenance changes; sales/purchase/production orders set up changes; stock issues/receipts; MPS/MRP schedule amendments.

Trigger Tolerance

This is the percentage (above or below) of safety stock which, if breached by the projected available stock, will cause a net change trigger to be written for the item.

Unit Cost

The amortised cost of a single unit of an item.

Unit of Measure

The unit in which a balance quantity or unit cost is expressed.

Unplanned Issue

Issue of inputs to a production order which has not been previously allocated.

Unplanned Receipt

Receipt into inventory of an item or items not expected at the booking operation. That is, not standard on the route, or order.

Usage

The quantity of an item issued from a stockroom in a given period.

Usage Profile

A user defined profile which specifies the pattern of periods to be included in the calculation of average usage.

Utilisation

The extent to which the capacity of a work station is expended by actual work performed.

Utility

An item may be defined with a Material Type of utility. For example, electricity, gas, water and so on. Items of this type do not have a physical balance changed when used in production.

Value/Usage

The value/usage setting for an item in Inventory. It positions the item in a matrix of value/usage. It is a selection criterion for selective MRP.

Variance

A difference between the standard cost or volume of a process and the actual recorded cost or volume.

Waste Product

An output from a process route which does not have any intrinsic worth or saleable value; and which may incur a cost in its disposal or shortage.

WIP

Acronym for Work-In-Progress. Also known as Work-In-Process.

WIP Inventory

Work-in-progress inventory; transparent to Inventory Management, but accessible through enquiries in Production WIP Inventory Control.

WIP Location

A WIP location is a stockroom that has been logically associated with one or more work stations as the stockroom to hold WIP inventory balances produced at count point operations.

Work Centre

A collection of work stations that have been grouped together for capacity requirements analysis purposes. Work centres are not used in planning or work station scheduling.

Work Station

The standard production unit or facility for which capacity requirements are measured.

Work Station Schedule

A daily work plan for a work station, containing item and order quantities and duration of set up and operating hours.

Work-In-Progress

The value of work currently underway in the factory in terms of the material issued, and the operations performed. For a given order or schedule, it is calculated as the value of material and work input less the value of receipts made into stock. Work-in-progress (WIP) can be valued at standard or current cost. Also known as work-in-progress.

Yield Item

An item that is sensitive to yield either as an input or an output. Yield is the ratio of total quantity of outputs compared to the total quantity of inputs.

