BIAR AD 2.1 STAÐARAUÐKENNI OG HEITI FLUGVALLAR
BIAR AD 2.1 AERODROME LOCATION INDICATOR AND NAME

BIAR - AKUREYRI / AKUREYRI

BIAR AD 2.2 LANDFRÆÐILEGAR OG STJÓRNUNARUPPLÝSINGAR FLUGVALLAR
BIAR AD 2.2 AERODROME GEOGRAPHICAL AND ADMINISTRATIVE DATA

1	Hnattstaða flugvallar ARP coordinates and site at AD	653924N 0180419W Miðja flugbrautar / Centre of RWY
2	Stefna og fjarlægð frá (borg) Direction and distance from (city)	Akureyri: 160° GEO, 2.8 KM (1.5 NM)
3	Landhæð / viðmiðunarhitastig Elevation / Reference temperature	7 FT / 14° C
4	Bylgjulögun jarðsporvölu (frá WGS-84 viðmiðunarsporvölu) í hæðarviðmiðunarpunkti flugvallar Geoid undulation at AD ELEV PSN	217 FT
5	Misvísun / árleg breyting MAG VAR / Annual change	10° W (2025) / - 0.27°
6	Rekstraraðili flugvallar Heimilisfang, sími, símbréf, netfang, AFS AD Administration Address, telephone, telefax, telex, AFS	Umdæmi 3 / District 3: Isavia Innanlandsflugvellir ehf. Akureyrarflugvelli 600 Akureyri Iceland Tel: +354 424 4030 Flugturn / Control tower email: biar@isavia.is AFS: —
7	Leyfð flugumferð Types of traffic permitted (IFR/VFR)	IFR/VFR
8	Athugasemdir Remarks	NIL

BIAR AD 2.3 ÞJÓNUSTUTÍMAR
BIAR AD 2.3 OPERATIONAL HOURS

1	Rekstraraðili flugvallar AD Administration	Á skrifstofutíma During office hours
2	Tollur og útlendingaeftirlit Customs and immigration	Skv. beiðni O/R
3	Heilsugæsla Health and sanitation	NIL
4	Kynningarstofa upplýsingaþjónustu AIS Briefing Office	NIL
5	Flugvarðstofa ATS Reporting Office (ARO)	NIL
6	Kynningastofa veðurþjónustu MET Briefing Office	H24 Sími Veðurstofu Íslands + 354 522 6310 IMO telephone + 354 522 6310
7	Flugumferðarþjónusta ATS	Flugstjórnarþjónusta daglega: 07:00 - 23:00. Aðfangadagur og gamlársdagur flugstjórnarþjónusta: 07:00 – 16:00. Ekki er þjónusta á nýársdag, páskadag og jóladag. ATC er veitt utan þjónustutíma. Nánari upplýsingar sjá AD 2.3.12 athugasemdir. (1) Emergency: H24 / Daily 07:00 - 23:00. Christmas Eve and New Year's Eve 07:00 – 16:00. No service New Year's Day, Easter Sunday and Christmas Day. ATC available outside operational hours. Further information see AD 2.3.12 remarks. (1) Emergency: H24
8	Eldsneyti Fuelling	Alla daga: 0900 - 1800 (Þjónusta skv. beiðni takmörkuð) Ekki er þjónusta á nýársdag, páskadag og jóladag. / All days: 0900 - 1800 (O/R Limited) No service New Year's Day, Easter Sunday and Christmas Day.
9	Afgreiðsla Handling	Mán.-fös: 07:40 - 18:40 Lau., sun.: 08:30 - 18:30 (Þjónusta skv. beiðni takmörkuð) Ekki er þjónusta á nýársdag, páskadag og jóladag. / Mon.,- Fri.: 07:40 - 18:40 Sat., Sun.: 08:30 - 18:30 (O/R Limited) No service New Year's Day, Easter Sunday and Christmas Day.
10	Flugvernd Security	H24

11	Afísing De-icing	Mán.-fös.: 07:40 - 18:40 Lau., sun.: 08:30 - 18:30 (Þjónusta skv. beiðni takmörkuð) Ekki er þjónusta á nýársdag, páskadag og jóladag. / Mon.,- Fri.: 07:40 - 18:40 Sat., Sun.: 08:30 - 18:30 (O/R Limited / Þjónusta skv. beiðni takmörkuð) No service New Year's Day, Easter Sunday and Christmas Day.
12	Athugasemdir Remarks	Flugstjórnarþjónusta er veitt samkvæmt beiðni utan þjónustutíma gegn gjaldi samkvæmt gjaldskrá. Óskið þjónustu, 1. maí til 30. september með að lágmarki 30 mínútna fyrirvara og 1. október til 30. apríl með að lágmarki 45 mínútna fyrirvara, í síma +354 896 1270. Gjaldskrá Isavia: Sjá GEN 4.1 FLUGVALLAGJÖLD. ATC is available on request outside operational hours, surcharge applies. Request service, 1st of May to 30th of September with a minimum of 30 minutes notice and 1st of October to 30th of April with a minimum of 45 minutes notice, via tel. +354 896 1270. Isavia user charges: See GEN 4.1 AERODROME CHARGES. Isavia tekur aðeins við greiðslum gegnum umboðsaðila / Isavia only accepts payments via Ground handling Agent

BIAR AD 2.4 AFGREIÐSLA OG TÆKI
BIAR AD 2.4 HANDLING SERVICES AND FACILITIES

1	Fraktmeðhöndlun Cargo-handling facilities	Venjulegur búnaður fyrir hendi skv. beiðni Normal facilities available O/R
2	Eldsneytistegundir / olíur Fuel / oil types	Fuel: AVGAS 100LL Fuel: Jet A-1 Oil: NIL
3	Eldsneytisbúnaður / magn Fuelling facilities / capacity	Afköst 150 lítrar á mínútu AVGAS / Afköst 650 lítrar á mínútu JET A1 Delivery rate 150 liters per minute AVGAS / Delivery rate 650 liters per minute JET A1
4	Afísingarbúnaður De-icing facilities	Samkvæmt beiðni O/R
5	Flugskýlispláss fyrir aðkomuvélar Hangar space for visiting aircraft	NIL
6	Viðhaldsmöguleikar fyrir aðkomuvélar Repair facilities for visiting aircraft	Góðir fyrir minni vélar. Takmarkaðir fyrir stærri vélar Major, light aircraft. Minor, large aircraft
7	Athugasemdir Remarks	Ekkert súrefni eða hliðstæð þjónusta / No oxygen or related service **Umboðsaðilar á Akureyrarflugvelli eru: /** **The authorized handling agent at Akureyri Airport are:** Icelandair Akureyri 102 Reykjavíkurflugvelli / 102 Reykjavik Airport, Iceland BIAR Sími / Phone: +354 570 3823 / +354 5050 100 Handling Sími / Phone: +354 425 0933 Netfang / Email: aeyap@icelandair.is / jetcenter@icelandair.is Tíðni/Frequency: 131.400 MHZ Akureyri FBO Skýli 13, 600 Akureyrarflugvelli / Hangar 13, 600 Akureyri Airport, Iceland Sími/Phone: +354 551 1022 Netfang/Email: ops@akureyrifbo.is, ops@iaa.is AFS: BIRKXHAR Veffang/Web: www.akureyrifbo.is, www.iaa.is Tíðni/Frequency: 132.900 MHZ

BIAR AD 2.5 AÐSTAÐA FARÞEGA
BIAR AD 2.5 PASSENGER FACILITIES

1	Hótel Hotels	Í bænum / In town
2	Veitingastaðir á flugvelli Restaurants	Léttar veitingar á flugvelli, veitingahús í bænum / Light refreshments at the aerodrome, restaurants in town
3	Fólksflutningar Transportation	Leigubílar/rútur samkvæmt beiðni / Taxi/bus available on-request
4	Hjúkrunaraðstaða Medical facilities	Sjúkrahús og sjúkrabílar í bænum / Hospital and ambulances in town
5	Banki og pósthús Bank and Post Office	Banki / Bank: Í bænum / In Town Póstur / Post: Í bænum / In town
6	Ferðaskrifstofa Tourist Office	Í bænum / In Town
7	Athugasemdir Remarks	NIL

BIAR AD 2.6 BJÖRGUN OG ELDVARNIR
BIAR AD 2.6 RESCUE AND FIRE FIGHTING SERVICES

1	Flokkur slökkviþjónustu AD category for fire fighting	CAT VI CAT VII samkvæmt beiðni með 30 mínútna fyrirvara. Utan þjónustutíma (AD 2.3.7) CAT III CAT IV-VII samkvæmt beiðni með 30 mínútna fyrirvara. Upplýsingar í síma: +354 424 4030 / +354 896 1270 Netfang: biar@isavia.is / CAT VI. CAT VII O/R with 30 min notice. Outside operational hours (AD 2.3.7) CAT III. CAT IV-VII O/R with 30 min notice. Information tel: +354 424 4030 / +354 896 1270 Email: biar@isavia.is
2	Björgunartæki Rescue equipment	Tveir slökkvibílar - Vatn (15.000L), léttvatn (1.000L) og duft (270 kg). / Two fire trucks - water (15.000L), Foam B (1.000L) and powder (270kg).
3	Möguleiki á að fjarlægja bilaðar flugvélar Capability for removal of disabled aircraft	Krani, allt að 60 tonn og tengivagn / Crane, up to 60 tons and trailer
4	Athugasemdir Remarks	Þjónustutímar, sjá Flugumferðarþjónusta (ATS) í AD-2.3 For hours of operation, see ATS in AD 2.3

BIAR AD 2.7 ÁRSTÍÐARBUNDNAR HREINSANIR
BIAR AD 2.7 SEASONAL AVAILABILITY

1	Tegund tækja Types of clearing equipment	Snjóplógar og kústar / Snow ploughs and sweepers
2	Forgangsröð hreinsunar Clearance priorities	Sjá AD 1.2.2.1 Aðgerðir til að tryggja notkun á athafnasvæðum / See AD 1.2.2.1 Actions taken to maintain the usability of movement areas
3	Efni notuð við hálkuvarnir athafnasvæða Use of material for movement area surface treatment	Flugbrautir, akbrautir og flughlöð geta verið hálkuvarin með sandi þegar þess gerist þörf / When needed, SAND is applied on the runway, taxiway and apron for friction improvement
4	Vottun vegna þekjulýsingar (Specially Prepared Winter Runway) Certification to use contamination descriptor (Specially Prepared Winter Runway)	Ekki í gildi / Not valid
5	Athugasemdir Remarks	NIL

BIAR AD 2.8 HLAÐ, AKBRAUTIR OG STAÐSETNING GÁTSTAÐA
BIAR AD 2.8 APRONS, TAXIWAYS AND CHECK LOCATIONS/POSITIONS DATA

1	Yfirborð hlaðs og styrkur Designation, surface and strength of apron	NORTH APRON: Malbik/ASPH 246x79 M / PCN 45/F/A/X/T SOUTH APRON: Malbik/ASPH 88.5x147 M / PCN 45/F/A/X/T STAND 5 and 6: Concrete/CONCRETE / PCN 45/R/A/X/T
2	Breidd akbrautar, yfirborð og styrkur Designation, width, surface and strength of taxiways	ALPHA: Malbik/ASPH 78 M breitt/wide / PCN 45/F/A/X/T BRAVO: Malbik/ASPH 23 M breitt/wide / PCN 45/F/A/X/T
3	Staðsetning og landhæð gátunarstaðar fyrir hæðarmælisathugun Altimeter checkpoint location and elevation	Flughlað hæð 6 FT Apron elev. 6 FT
4	VOR-gátunarstaðir VOR checkpoints	NIL
5	INS-gátunarstaðir INS checkpoints	Sjá Hnit loftfarastæða, AD 2.8.6 See Coordinates for aircraft stands, AD 2.8.6
6	Athugasemdir Remarks	**Hnit loftfarastæða / Coordinates for aircraft stands:** CAT B: 653914.67N 0180429.29W 653917.66N 0180429.86W 653916.16N 0180429.57W CAT C / D: 653916.99N 0180428.76W Stæði/Stand 5 CAT C / D: 653920.11N 0180434.65W Stæði/Stand 6 CAT C: 653922.94N 0180435.73W Akstur flugvéla á milli norður- og suðurflughlaða er bannaður / Taxiing aircrafts between North and South terminal aprons is forbidden

BIAR AD 2.9 LEIÐSAGA OG STJÓRNKERFI FYRIR HREYFINGAR Á JÖRÐU NIÐRI OG MERKINGAR
BIAR AD 2.9 SURFACE MOVEMENT GUIDANCE AND CONTROL SYSTEM AND MARKINGS

1	Notkun kenniskilta loftfarastæða, akbrautamerkinga og sjónrænnar stæðisleiðsögu	Til staðar Provided
	Use of aircraft stand ID signs, TWY guide lines and visual docking/parking guidance system of aircraft stands	
2	Flugbrautar- og akbrautarmerkingar og ljós	Brautarmerkingar: Brautarheiti, þröskulds, miðlínu og miðunarpunktur. Brautarljós: Þröskulds-, enda- og kantljós Akbrautarmerkingar: Miðlína og biðlína Akbrautarljós: Kantljós / RWY Markings: Designation, THR, aiming point and centreline RWY Lights: THR, END and EDGE TWY Markings: Centreline and taxihold TWY Lights: EDGE
	RWY and TWY markings and LGT	
3	Stöðvunarljós	NIL
	Stop bars	
4	Athugasemdir	Hindranir á flugvelli eru lýstar allan sólarhringinn / Obstacles on aerodrome are lit day and night
	Remarks	

BIAR AD 2.10 FLUGVALLARHINDRANIR
BIAR AD 2.10 AERODROME OBSTACLES

In Area 2					
OBST ID / Designation	**OBST type**	**OBST position**	**ELEV / HGT**	**Markings / Type, colour**	**Remarks**
a	**b**	**c**	**d**	**e**	**f**
Athugasemdir/Notes: See Electronic aerodrome terrain and obstacle chart http://www.map.is/area2/biar					

In Area 3					
OBST ID / Designation	**OBST type**	**OBST position**	**ELEV / HGT**	**Markings / Type, colour**	**Remarks**
a	**b**	**c**	**d**	**e**	**f**
Athugasemdir/Notes: See information in GEN 3.1.6.3					

BIAR AD 2.11 VEITTAR VEÐURUPPLÝSINGAR
BIAR AD 2.11 METEOROLOGICAL INFORMATION PROVIDED

1	Aðalveðurstofa Associated MET Office	Veðurstofa Íslands / Icelandic Met Office
2	Þjónustutími Veðurstofa utan þjónustutíma Hours of service MET Office outside hours	Allan sólarhringinn / H24
3	Skrifstofa ábyrg fyrir TAF Gildistími Office responsible for TAF preparation Period of validity	Veðurstofa Íslands / Icelandic Met Office Sjá GEN 3.5.4.1 See GEN 3.5.4.1
4	Leitnispá Tímalengd milli spáa Trend forecast Interval of issuance	NIL
5	Veðurkynning/ráðfærsla veitt Briefing/consultation provided	Icelandic Met Office/ Veðurstofa Íslands Telephone / sími: + 354 522 6000
6	Fluggögn Tungumál Flight documentation Language(s) used	METAR, TAF, SIGMET, Flugveðurskilyrði yfir Íslandi / Flight condition over Iceland, Low Level Wind/SIGWX forecasts charts, NAT Wind/Temp/ SIGWX forecasts charts. Enska og íslenska / English and Icelandic
7	Kort og aðrar upplýsingar tiltækar fyrir veðurkynningu eða ráðfærslu Charts and other information available for briefing or consultation	Tilv./Ref.: GEN 3.1, GEN 3.5 http://en.vedur.is/weather/aviation/ http://www.vedur.is/vedur/flugvedur/
8	Önnur tæki til upplýsingaöflunar Supplementary equipment available for providing information	Flugvallarútvarp sími: 424 4039 eða 136.200 MHz ATIS info tel: 424 4039 or 136.200 MHz
9	Flugumferðarþjónusta sem fær upplýsingarnar ATS units provided with information	Akureyri APP / Aðflug Akureyri TWR / Turn ACC/ Flugstjórnarmiðstöð
10	Viðbótarupplýsingar (takmörkun þjónustu o.s.frv.) Additional information (limitation of service, etc.)	NIL

BIAR AD 2.12 SÉRKENNI FLUGBRAUTA
BIAR AD 2.12 RUNWAY PHYSICAL CHARACTERISTICS

RWY Designator	TRUE BRG	Dimension of RWY (M)	Strength (PCN) and surface of RWY and SWY	THR coordinates RWY end coordinates THR geoid undulation	THR elevation and highest elevation of TDZ of precision APP RWY
1	2	3	4	5	6
01	355.55	2400 x 45	RWY PCN: 45/F/A/X/T RWY: ASPH SWY PCN: — SWY: —	653845.03N 0180411.81W 654002.29N 0180426.40W GUND: 217.0 FT	THR 7.0 FT TDZ 7.0 FT
19	175.54	2400 x 45	RWY PCN: 45/F/A/X/T RWY: ASPH SWY PCN: — SWY: —	654002.29N 0180426.40W 653845.03N 0180411.81W GUND: 217.0 FT	THR 5.0 FT —

RWY Designator	Slope of RWY and SWY	SWY dimensions (M)	CWY dimensions (M)	Strip dimensions (M)	RESA dimensions (M)	Location/ description of arresting system	OFZ
1	7	8	9	10	11	12	13
01	0%	—	—	2520 x 300	90 x 90	—	The strip, approximately 1200m along western side and 1000m eastern side of RWY 01 is under water. The water is outside the graded area and is 10-40 cm deep. The transition between the grassy strip area and the water is smooth with no sharp rocks.
19	0%	—	—	2520 x 300	90 x 90	—	—

RWY Designator	Remarks
1	14
01	61 m wide 58 m long asphalt turning area on each end inside RESA.
19	61 m wide 58 m long asphalt turning area on each end inside RESA.

BIAR AD 2.13 TILGREINDAR VIÐMIÐUNARVEGALENGDIR
BIAR AD 2.13 DECLARED DISTANCES

RWY Designator	TORA (M)	TODA (M)	ASDA (M)	LDA (M)	Remarks
1	2	3	4	5	6
01	2550	2550	2550	2400	The paved area in front of THR (150 M) is available for take-off and the length is included in the declared distances for take-off on RWY 01
19	2550	2550	2550	2400	The paved area in front of THR (150 M) is available for take-off and the length is included in the declared distances for take-off on RWY 19

BIAR AD 2.14 AÐFLUGS- OG FLUGBRAUTARLJÓS
BIAR AD 2.14 APPROACH AND RUNWAY LIGHTING

RWY Designator	APCH LGT type LEN INTST	THR LGT colour WBAR	VASIS (MEHT) PAPI	TDZ, LGT LEN	RWY Centre Line LGT Length, spacing, colour, INTST
1	2	3	4	5	6
01	LDIN 9 Flashing Lights with 700 m interval Lights start at 7196 m south of RWY 01 OTHER 900 m LIH Crossbar 300 M Seq. FLG CL	GRN	PAPI 3.50° (53.4 FT) PAPI 5.30° (80.6 FT)	NIL	NIL
19	NIL	GRN	PAPI 3.50° (59.1 FT)	NIL	NIL

RWY Designator	RWY edge LGT LEN, spacing, colour INTST	RWY End LGT colour WBAR	SWY LGT LEN (M) colour	Remarks
1	7	8	9	10
01	1800 M, 60 M WHI 600 m, 60 m, Y LIH	RED	NIL	PAPI lights 3,5° left side of RWY. PAPI lights 5.3° right side of RWY. Papi lights are not to be used beyond 4 NM from threshold and more than 10° either side of centerline due to obstacles. THR ID LGT RWY 01/19 FLG WHITE
19	1800 M, 60 M WHI 600m, 60 m, Y LIH	RED	NIL	Papi lights are not to be used beyond 4 NM from threshold due to obstacles. THR ID LGT RWY 01/19 FLG WHITE

BIAR AD 2.15 ÖNNUR LÝSING OG VARARAFMAGN
BIAR AD 2.15 OTHER LIGHTING, SECONDARY POWER SUPPLY

1	Flugvallarviti - staðsetning ABN/IBN location, characteristics and hours of operation	NIL
2	Vindpoki staðsetning og lýsing Vindmælir staðsetning og lýsing LDI location and LGT Anemometer location and LGT	Vindpoki/LDI: Sjá Flugvallarkort "AD 2 BIAR 2-1"/ See Aerodrome Chart "AD 2 BIAR 2-1" Vindmælir/Anemometer: Sjá Flugvallarkort "AD 2 BIAR 2-1"/ See Aerodrome Chart "AD 2 BIAR 2-1"
3	Akbrautarhliðarljós og miðlínuljós TWY edge and centre line lighting	Hliðar / Edge: ALPHA - Blár/BLUE; (LIL) Miðlína / Centre line: NIL
4	Vararafmagn / skiptitími Secondary power supply / switch-over time	Skiptitími 1 sek. ef RVR er lægra en 800 m. Annars hámark 10 sek. Switch-over time 1 sec at RVR below 800 M. Otherwise Max 10 sec
5	Athugasemdir Remarks	NIL

BIAR AD 2.16 LENDINGARSVÆÐI FYRIR ÞYRLUR
BIAR AD 2.16 HELICOPTER LANDING AREA

1	Staðsetning lendingarsvæðis Bylgjulögun jarðsporvölu Coordinates TLOF or THR of FATO Geoid undulation	Sjá/See AD 2.16.7 —
2	Hæð á lendingarstað FT TLOF and/or FATO elevation FT	6 FT
3	Stærð, yfirborð, styrkleiki, merking TLOF and FATO area dimensions, surface, strength, marking	Flugbraut - Malbik PCN 45 / ÓMERKT RWY - ASPH PCN 45 / NONE
4	Réttstefna á FATO True BRG of FATO	NIL
5	Skilgreind lengd Declared distance available	—
6	Aðflugs og lendingarljós APP and FATO lighting	NIL
7	Athugasemdir Remarks	Flugtök og lendingar loftfara fara einungis fram á flugbrautum Aircraft take off and landing only on runways

BIAR AD 2.17 LOFTRÝMI FLUGUMFERÐARÞJÓNUSTU
BIAR AD 2.17 ATS AIRSPACE

1	Heiti og útlínur Designation and lateral limits	AKUREYRI CTR 655257N 0175633W 653858N 0174833W 652522N 0175556W 652756N 0182620W 653923N 0181956W 654927N 0182638W 655257N 0175633W
2	Hæðarmörk Vertical limits	Efri mörk / Upper Limit: 3000 FT AMSL Neðri mörk: Jörð / Lower Limit: SFC að undanskildu Melgerðismelar ATZ / excluding Melgerðismelar ATZ
3	Flokkun loftrýmis Airspace classification	Flokkur D - Flokkur G utan þjónustutíma Class D - Class G outside hours of operations
4	Kallmerki flugumferðarþjónustu og tungumál ATS unit call sign Language(s)	Akureyri turn / Akureyri Tower - Enska/English, Íslenska/Icelandic
5	Skiptihæð Transition altitude	7000 FT MSL
6	Gildistími Hours of applicability	H24
7	Athugasemdir Remarks	BIAR TMA: Sjá nánar í kafla ENR 2.1 / For details see ENR 2.1

BIAR AD 2.18 ATS FJARSKIPTABÚNAÐUR
BIAR AD 2.18 ATS COMMUNICATION FACILITIES

Service designation	Call sign	Frequency and Channel(s)	SATVOICE	Logon address	Hours of operation	Remarks
1	2	3	4	5	6	7
Akureyri TWR	Akureyri turn / Akureyri Tower	118.200 MHZ 121.500 MHZ (1)	NIL	NIL	Daily 07:00 - 23:00. Christmas Eve and New Year's Eve 07:00 – 16:00. No service New Year's Day, Easter Sunday and Christmas Day. ATC available outside operational hours. Further information see AD 2.3.12 remarks. (1) Emergency: H24	NIL (1) Emergency
ATIS	Akureyri ATIS	136.200 MHZ	NIL	NIL	0700-2300	Also outside published hours when operationaly desireble. Telephone: +354 424 4039

BIAR AD 2.19 FLUGLEIÐSÖGU- OG AÐFLUGSBÚNAÐUR
BIAR AD 2.19 RADIO NAVIGATION AND LANDING AIDS

Type of aid, CAT of ILS/MLS (For VOR/ILS/MLS, give VAR)	ID	Frequency	Hours of operation	Site of transmitting antenna coordinates	Elevation of DME transmitting antenna	Service volume radius from GBAS reference Point	Remarks
1	2	3	4	5	6	7	8
VOR/DME (decl.: 10°W)	AKI	113.600 MHZ (CH83X)	H24	654535.3N 0180014.8W	2100 FT	NIL	Not usable below 5500 FT Not usable below 7000 FT outside 15 NM Not usable below 10000 FT outside 25 NM Monitored during airports opening hours
NDB	AR	334 KHZ	H24	654521.4N 0180522.6W	—	NIL	Range 25 NM Approx less in S & W Monitored during airports opening hours
L	HJ	319 KHZ	During ATC service hours	655106.0N 0181129.8W	—	NIL	Range 15 NM approx. Monitored during airports opening hours.
LOC 01 ILS CAT I (10° W 2025)	IAL	108.900 MHZ	H24	654010.9N 0180416.5W	—	NIL	LOC usable only within ±10°of course line. Monitored during airports opening hours.
GP 01 ILS CAT I		329.300 MHZ	H24	653854.4N 0180405.0W	—	NIL	The glide path angle is 5.3° Monitored during airports opening hours.
DME 01 ILS CAT I	IAL	108.900 MHZ (CH26X)	H24	653854.4N 0180405.0W	0 FT	NIL	Monitored during airports opening hours
LOC 19 ILS CAT I (10° W 2025)	IAR	110.500 MHZ	H24	653840.6N 0180354.2W	—	NIL	LOC offset 3°
GP 19 ILS CAT I		329.600 MHZ	H24	653953.6N 0180434.2W	—	NIL	GP angle 3.45°
DME 19 ILS CAT I	IAR	110.500 MHZ (CH42X)	H24	653953.6N 0180434.2W	58 FT	NIL	Freq paired with LOC. Offset 3°
MARKER		75 MHZ	H24	653602.7N 0180238.6W	—	NIL	Cont. 3000 Hz tone. Monitored during airports opening hours
LOC 01 (10° W 2025)	IEY	111.900 MHZ	H24	653753.2N 0180040.3W	—	NIL	LOC usable only within ±10°of course line. Monitored during airports opening hours
DME	IEY	111.900 MHZ (CH56X)	H24	653854.6N 0180404.1W	0 FT	NIL	Freq paired with LOC Monitored during airports opening hours
L	KN	364 KHZ	During ATC service hours	653513.0N 0180331.8W	—	NIL	Range 15 NM approx Monitored during airports opening hours
TACAN (decl.: 13°W)	MOB	(CH95X)	H24	653808.0N 0180404.0W	—	NIL	MILITARY USE ONLY

Type of aid, CAT of ILS/MLS (For VOR/ILS/MLS, give VAR)	ID	Frequency	Hours of operation	Site of transmitting antenna coordinates	Elevation of DME transmitting antenna	Service volume radius from GBAS reference Point	Remarks
1	2	3	4	5	6	7	8
NDB	NB	387 KHZ	H24	651934.0N 0181736.9W	—	NIL	Range 50 NM approx Monitored during airports opening hours
L	OE	415 KHZ	During ATC service hours	654111.3N 0180439.5W	—	NIL	Range 15 NM approx Monitored during airports opening hours
L	TO	324 KHZ	During ATC service hours	653001.5N 0180903.4W	—	NIL	Range 15 NM approx Monitored during airports opening hours

BIAR AD 2.20 SVÆÐISBUNDNAR UMFERÐARREGLUR FLUGVALLAR

BIAR AD 2.20 LOCAL AERODROME REGULATIONS

2.20.1 Kröfur um fjarskiptabúnað

Sendir og móttakari

2.20.2 Flug fisa í flugstjórnarsviði BIAR

Allt flug fisa í flugstjórnarsviði BIAR og Akureyri TMA er háð undanþágu. Sækja skal skriflega um slíka undanþágu með netpósti til ats.airports@isavia.is. Afgreiðsla beiðna getur tekið allt að þrjá virka daga. Mögulega verður gefin undanþága bundin skilyrðum.
Gerð er krafa um talstöð og að flugmenn hafi hlotið þjálfun í talstöðvaviðskiptum við flugumferðarstjórn.

2.20.3 Takmarkanir kennslu- og æfingaflugs

Til að viðhalda öryggi getur flugumferðarstjórn þurft að draga úr álagi án fyrirvara með því að takmarka þjálfunarflug.

2.20.4 Umferð á jörðu og stæði

Hafið samband við turn
Bannað er að loftaka þyrlum meðfram skýlum.

2.20.5 Flugvöllur með afgreiðslutíma eftir samráði

Akureyrarflugvöllur er með skammtaðan afgreiðslutíma eftir samráði (Level 2).
Beiðni um afgreiðslutíma skal senda á stöðluðu SSIM formi á póstfangið: scr@airportcoordination.com
SCRs verða að vera paraðar (komu- og brottfarartími í einni línu).
Flugvélar með ICAO flokkun A & B sem eru með Akureyrarflugvöll sem heimahöfn geta notað óparað SCR.

Skrifstofutími, mánud. til föstud.
Vetrartími: 0800 - 1400 UTC
Sumartími: 0700 - 1300 UTC
Skrifstofan er lokuð um helgar og alm. frídaga.

Airport Coordinator, Facilitator and Data Collector for Iceland
Vilhelm Lauritzens Alle 3
DK - 2770 Kastrup
Denmark
Sími DK + 45 53 787 757 / +45 53 787 747
Fyrir beiðni í sjálfsafgreiðslu, sjá www.online-coordination.com

2.20.1 Requirement for communication equipment

Two way radio

2.20.2 Microlight operations within BIAR CTR

Microlights planning to operate within BIAR CTR and TMA require an authorization. Applications for such authorization shall be sent in writing by e-mail to ats.airports@isavia.is. Response time is three business days. The authorizations may be given with restrictions. Carriage of two way radio is mandatory and pilots shall have received training in communications with ATC.

2.20.3 Training flights restrictions

ATC may without prior notice need to restrict training flights in order to decrease workload and maintain safety.

2.20.4 Ground manoeuvring and parking

Contact TWR for instructions.
Helicopters are not allowed to air-taxi at hanger area.

2.20.5 Airport schedules facilitated

Akureyri airport is designated as shedules facilitated airport (Level 2).
A slot request must be sent in standard SSIM format to the following address: scr@airportcoordination.com
SCRs must be paired (arrival and departure in one line).
ICAO Group A & B Aircrafts with homebase in Akureyri can use unpaired SCRs.

Office Hours Monday to Friday.
Winter: 0800 – 1400 UTC
Summer: 0700 – 1300 UTC
Office is closed weekends and national holidays.

Airport Coordinator, Facilitator and Data Collector for Iceland
Vilhelm Lauritzens Alle 3
DK - 2770 Kastrup
Denmark
Phone DK + 45 53 787 757 / +45 53 787 747
For self-service slot request, please enter www.online-coordination.com

2.20.6 Minnkaður brautaraðskilnaður

Minnkaður brautaraðskilnaður er notaður að degi til, 30 mínútum eftir sólarupprás þar til 30 mínútum fyrir sólsetur.

Minnkaðan brautaraðskilnað má ekki nota ef fyrra loftfar er að lenda og seinni loftfar er að taka á loft.

2.20.6.1 Flokkun loftfara

Við notkun á minnkuðum brautaraðskilnaði gildir eftirfarandi skilgreining loftfara:

1. Flokkur 1: Einshreyfils skrúfuloftfar með hámarksflugtaksmassa 2000 kg eða minna;
2. Flokkur 2: Einshreyfils skrúfuloftfar með hámarksflugtaksmassa meiri en 2000 kg en minni en 7000 kg og tveggja hreyfla skrúfuloftfar með hámark flugtaksmassa undir 7000 kg;
3. Flokkur 3: Öll önnur loftför.

2.20.6.2 Skilyrði

Notkun á minnkuðum brautaraðskilnaði er háð eftirfarandi skilyrðum:

1. Hvirfilsflokks aðskilnaður skal vera til staðar;
2. Skyggni skal vera að lágmarki 5 km og skýjahæð ekki undir 300 m (1000ft);
3. Meðvindsþáttur skal ekki vera meiri en 5 kt;
4. Til staðar skulu vera sjónræn kennileiti fyrir flugumferðarstjóra til að meta fjarlægð milli loftfara t.d. þekkt auðkenni á flugvellinum.
   Ef flugvöllur er útbúinn eftirlitskerfi sem sýnir stöðu loftfara á flugvellinum er hægt að nota slíkt kerfi að undangengnu öryggismati;
5. Lágmarksaðskilnaður sé til staðar milli tveggja brottflugs loftfara um leið og seinna loftfarið er komið á loft;
6. Umferðarupplýsingar skulu gefnar seinna loftfarinu;
7. Ástandskóði flugbrautar er nota á skal hvergi vera lægri en 5.

2.20.6 Reduced runway separation

Reduced runway separation minima is only applied during the hours of daylight from 30 minutes after local sunrise to 30 minutes before local sunset.

Reduced runway separation minima shall not apply between a departing aircraft and a preceding landing aircraft.

2.20.6.1 Aircraft Category

For the purpose of reduced runway separation, aircraft shall be classified as follows:

1. Category 1 aircraft: Single-engine propeller aircraft with a maximum certificated take-off mass of 2 000 kg or less;
2. Category 2 aircraft: Single-engine propeller aircraft with a maximum certificated take-off mass of more than 2 000 kg but less than 7 000 kg; and twin-engine propeller aircraft with a maximum certificated take-off mass of less than 7 000 kg;
3. Category 3 aircraft: All other aircraft.

2.20.6.2 Conditions

Reduced runway separation minima shall be subject to the following conditions:

1. Wake turbulence separation minima shall be applied;
2. Visibility shall be at least 5 km and ceiling shall not be lower than 300 m (1 000 ft);
3. Tailwind component shall not exceed 5 kt;
4. There shall be available means, such as suitable landmarks, to assist the controller in assessing the distances between aircraft. A surface surveillance system that provides the air traffic controller with position information on aircraft may be utilized, provided that approval for operational use of such equipment includes a safety risk assessment to ensure that all requisite operational and performance requirements are met;
5. Minimum separation continues to exist between two departing aircraft immediately after take-off of the second aircraft;
6. Traffic information shall be provided to the flight crew of the succeeding aircraft concerned; and
7. The Runway Condition Code shall not be lower than 5 on any part of the runway.

2.20.6.3 Aðskilnaður

Minnkaður brautaraðskilnaður sem nota á skal vera skilgreindur fyrir hverja flugbraut fyrir sig. Sá aðskilnaður skal ekki vera minni en neðangreind lágmörk:

1. Loftför í lendingu:
   a. Seinna loftfar í flokki 1 má fara yfir þröskuld flugbrautar ef fyrra loftfar í flokki 1 eða 2 hefur annaðhvort:
      i. Lent og komin að lágmarki 600m frá þröskuldi flugbrautar, er á hreyfingu og mun rýma flugbraut án þess að aka til baka; eða
      ii. er komin á loft og komin að lágmarki 600 m frá þröskuldi flugbrautar.
   b. Seinna loftfar í flokki 2 má fara yfir þröskuld flugbrautar ef fyrra loftfar úr flokki 1 eða 2 hefur annaðhvort:
      i. Lent og komin að lágmarki 1500 m að lágmarki frá þröskuldi flugbrautar, er á hreyfingu og mun rýma flugbraut án þess að aka til baka; eða
      ii. er komin á loft og komin að lágmarki 1500 m frá þröskuldi flugbrautar.
   c. Seinna loftfar má fara yfir þröskuld flugbrautar ef fyrra loftfar úr flokki 3 er:
      i. Lent og komin að lágmarki 2400 m að lágmarki frá þröskuldi flugbrautar, er á hreyfingu og mun rýma flugbraut án þess að bakaka; eða
      ii. er komin á loft og komin að lágmarki 2400 m frá þröskuldi flugbrautar.
2. Loftför í brottflugi:
   a. Loftfar í flokki 1 má fá flugtaksheimild þegar loftfar á undan í flokki 1 eða 2 er komið á loft og komið að minnsta kosti 600 m frá staðsetningu seinna loftfars;
   b. Loftfar í flokki 2 má fá flugtaksheimild þegar loftfar á undan í flokki 1 eða 2 er komið á loft og komið að minnsta kosti 1500 m frá staðsetningu seinna loftfars; og
   c. Loftfar má fá flugtaksheimild þegar loftfar á undan í flokki 3 er komið á loft og komið að minnsta kosti 2400 m frá staðsetningu seinna loftfars.

Huga skal að auknum aðskilnaði ef seinna loftfar er afkastameira en fyrra loftfar í flokki 1 eða 2.

2.20.6.3 Separation

Reduced runway separation minima which may be applied at an aerodrome shall be determined for each separate runway. The separation to be applied shall in no case be less than the following minima:

1. Landing aircraft:
   a. A succeeding landing Category 1 aircraft may cross the runway threshold when the preceding aircraft is a Category 1 or 2 aircraft which either:
      i. Has landed and has passed a point at least 600 m from the threshold of the runway, is in motion and will vacate the runway without backtracking; or
      ii. Is airborne and has passed a point at least 600 m from the threshold of the runway;
   b. A succeeding landing Category 2 aircraft may cross the runway threshold when the preceding aircraft is a Category 1 or 2 aircraft which either:
      i. Has landed and has passed a point at least 1 500 m from the threshold of the runway, is in motion and will vacate the runway without backtracking; or
      ii. is airborne and has passed a point at least 1 500 m from the threshold of the runway;
   c. A succeeding landing aircraft may cross the runway threshold when a preceding Category 3 aircraft:
      i. Has landed and has passed a point at least 2 400 m from the threshold of the runway, is in motion and will vacate the runway without backtracking; or
      ii. is airborne and has passed a point at least 2 400 m from the threshold of the runway;
2. Departing aircraft:
   a. A Category 1 aircraft may be cleared for take-off when the preceding departing aircraft is a Category 1 or 2 aircraft which is airborne and has passed a point at least 600 m from the position of the succeeding aircraft;
   b. A Category 2 aircraft may be cleared for take-off when the preceding departing aircraft is a Category 1 or 2 aircraft which is airborne and has passed a point at least 1 500 m from the position of the succeeding aircraft; and
   c. An aircraft may be cleared for take-off when a preceding departing Category 3 aircraft is airborne and has passed a point at least 2 400 m from the position of the succeeding aircraft.

Consideration should be given to increased separation between high performance single-engine aircraft and preceding Category 1 or 2 aircraft.

2.20.7 Skráning einka- og kennsluflugvéla

Allar einka- og kennsluflugvélar sem koma inn á þjónustusvæði Akureyrarflugvallar skulu skráðar í gagnagrunn flugvallarins (Veovo).

Flugmaður/flugrekandi skal í samræmi við reglu þessa hafa samráð við afgreiðsluaðila á Akureyrarflugvelli sem síðan sér um að skrá flugvélina í gagnagrunn flugvallarins (Veovo).

Til að forðast misskilning skal tekið fram að reglur þessar eiga ekki við um einka- og kennsluflugvélar sem æfa snertilendingar eða aðflug og koma ekki inn á ofangreint þjónustusvæði.

2.20.7 Registration of private and trainer aircraft

All private and trainer aircraft arriving at the service area of Akureyri airport shall be registered into the Airports Operational Database (Veovo).

The pilot/operator shall in accordance with this rule be in contact with a handling agent at Akureyri Airport who will register the aircraft into the Airports Operational Database (Veovo).

To avoid misunderstanding please note that these rules do not apply to private and/or trainer aircraft which practice touch and go landings and/or approaches and do not come into the above mentioned service area.

BIAR AD 2.21 FLUGAÐFERÐIR TIL HÁVAÐAMILDUNAR
BIAR AD 2.21 NOISE ABATEMENT PROCEDURES

Eftirfarandi flugaðferðir hafa verið þróaðar til að minnka líkur á að hávaði frá flugi hafi áhrif á íbúa í nágrenni flugvallarins.

1. Uppkeyrslur á fullu afli verða ekki samþykktar milli klukkan 22:00 og 07:00 mánudaga til sunnudaga og til klukkan 12:00 á sunnudögum nema í undantekningartilfellum.

2. Orrustuflugvélar skulu, eftir flugtaksbrun, klifra með 5 gráðu halla (á HUD) þar til sýndur flughraði er 300 kts. Draga úr afli og halda áfram klifri á 300 kts. með 5 gráðu halla að 5 DME AKI.

The following noise abatement operating procedures have been developed in order to reduce aircraft noise affecting communities in the vicinity of the aerodrome.

1. High power run-ups will not be approved from 22:00 to 07:00 Mondays through Saturdays and to 12:00 on Sundays, unless in unconventional cases.

2. Military fighter aircraft shall, after rotation, climb with 5 degrees (on HUD) until indicated airspeed is 300 kts. Reduce power and continue climb out with 300 kts. and 5 degrees climb angle until crossing DME 5 AKI.

BIAR AD 2.22 FLUGAÐFERÐIR
BIAR AD 2.22 FLIGHT PROCEDURES

2.22.1 Almennt

2.22.1.1 Hægri handar umferðarhringur fyrir braut 01. Staðlaður vinstri handar umferðarhringur fyrir braut 19.

2.22.1.2 Leitast skal við að koma í og fara úr umferðarhring með 45 °horni.

2.22.1.3 Hringflug á lokastefnu er ekki leyft nema í neyðartilfellum. Fara skal annan umferðarhring verði aðskilnaður milli loftfara of lítill til lendingar.

2.22.1.4 Veðurlágmörk til sjónflugs í CTR eru samkvæmt flugreglum (Reg. 770/2010) en til lendingaræfinga þarf skýjahæð að vera 2000 fet.

2.22.1.5 Kennsluflug skal hafa forgang til lendingaræfinga.

2.22.1.6 Upplýsingar um kögunarþjónustu eru í ENR 1.6.

2.22.1.7 Upphafskall á tíðni BIAR TWR/APP 118.200 MHz skal einungis innihalda, kallmerki, staðsetningu, fyrirætlanir og að auki ATIS auðkenni ef á leið til lendingar.

2.22.1.8 Upphafskall á tíðni BIAR TWR/APP 118.200 MHz skal einungis innihalda, kallmerki, staðsetningu, fyrirætlanir og að auki ATIS auðkenni, sé brottflug fyrirhugað.

2.22.1 General

2.22.1.1 Traffic Circuit is right hand circuit for RWY 01. Traffic Circuit is standard left hand circuit for RWY 19.

2.22.1.2 Pilots shall endeavour to enter and leave the traffic circuit at a 45°angle.

2.22.1.3 Circling on final is not authorized, unless in an emergency situation. If spacing between aircraft is insufficient, another circuit shall be made.

2.22.1.4 The weather minima for VFR flights within CTR, as outlined in Reg. 770/2010, applies but the ceiling shall be at least 2000 feet for landing practices.

2.22.1.5 Training flights shall have priority over other flights requesting landing practices.

2.22.1.6 For information regarding ATS Surveillance service see ENR 1.6.

2.22.1.7 Initial call to BIAR TWR on 118.200 MHz state call sign, present position, intentions and in addition ATIS information received if coming in for landing.

2.22.1.8 Initial call to BIAR TWR 118.200 MHz state callsign, present position, intentions and in addition ATIS information received if planning departure.

BIAR AD 2.23 VIÐBÓTARUPPLÝSINGAR
BIAR AD 2.23 ADDITIONAL INFORMATION

2.23.1 Land nær upp í hindranaflöt

Land nær upp í hindranaflöt austan og vestan við flugbraut 01/19, sjá hindranakort tegund B.

2.23.2 Fuglar á og við flugvöllinn

Gæsir koma um miðjan apríl og fara í lok september, þær verpa austan brautar og í kjarrlendi austan við braut. Álft heldur til á vatni norðvestur af braut en verpir ekki á flugvallarsvæði, er að koma í lok apríl og fer í byrjun sept. Svolítið er af máf frá byrjun mars fram í lok september sem heldur sig á norðurenda brautar. Endur eru vestan við braut og verpa ekki í kringum flugvöllinn, eru að koma frá miðjum apríl og til lok september.

2.23.3 Rekstur í lélegu skyggni

BIAR er ekki vottaður fyrir rekstur í lágskyggnisástandi. Lágmörk skyggnis vegna flughreyfinga (flugtaka og lendinga) eru eftirfarandi: Flugtök og lendingar braut 01, 550 m flugbrautaskyggni (RVR). Flugtök og lendingar braut 19, 800 m skyggni.

2.23.1 Terrain in the obstacle limitation surfaces

Terrain is penetrating the Obstacle Limitation Surfaces east and west of runway 01/19, see obstacle chart type B.

2.23.2 Birds on and around the airport

Graylag geese arrive around mid-April and leave at the end of September, they nest east of the runway. Swans reside from end April until early September on a lake northwest of the runway but are not known to nest within the area. A few seagulls stay close to the northern end of runway from the beginning March until end of September. Ducks are from mid-April to the end of September west of the runway and are not known to nest.

2.23.2 Operation when visibility is poor

BIAR is not certified for low visibility operations. The minimum visibility regarding flight movements (departure and landing) is the following: Departure and landing for runway 01, 550 m runway visibility range (RVR). Departure and landing for runway 19, 800 m visibility.

2.23.4 Hindranir í Akureyrarhöfn norðan við flugvöllinn

Stór skip koma reglulega í Akureyrarhöfn.
Höfnin er staðsett um 1900 metra norðan við þröskuld brautar 19 við framlengda miðlínu brautar 01/19 (654103.43N 0180438.10W).
Öryggisradíus er 150 m.
Skipin eru **EKKI** lýst með hindranaljósum.

Meðfylgjandi uppdráttur sýnir hvar búast má við skipum við Akureyrarhöfn sem fara upp í hindranafleti flugvallar.

Gefið verður út NOTAM ef skip eru yfir 50 m á hæð á gulmerktu svæði og yfir 60 m á hæð á blámerktu svæði.

Vegna skipa undir þessum viðmiðunarhæðum verður **EKKI** gefið út NOTAM.
Upplýsingar um skip sem ná upp í hindranafleti koma út í ATIS.

2.23.4 Obstacles in Akureyri harbour, north of the airport

Large ships come to Akureyri harbour on a regular basis.
The harbour is around 1900 meters north of THR RWY 19 and on extended centreline RWY 01/19 (654103.43N 0180438.10W).
Safety radius is 150 M.
The ships are **NOT** lit with obstruction lights.

The following map shows where ships, at Akureyri harbor, can be expected to penetrade the obstacle surfaces of the airport.

A NOTAM will be issued if vessels are over 50 m high in the yellow-marked area and over 60 m high in the blue-marked area.

For vessels below these reference heights, NOTAM will **NOT** be issued.
Information about vessels which reach the obstacle surfaces will be included in ATIS.

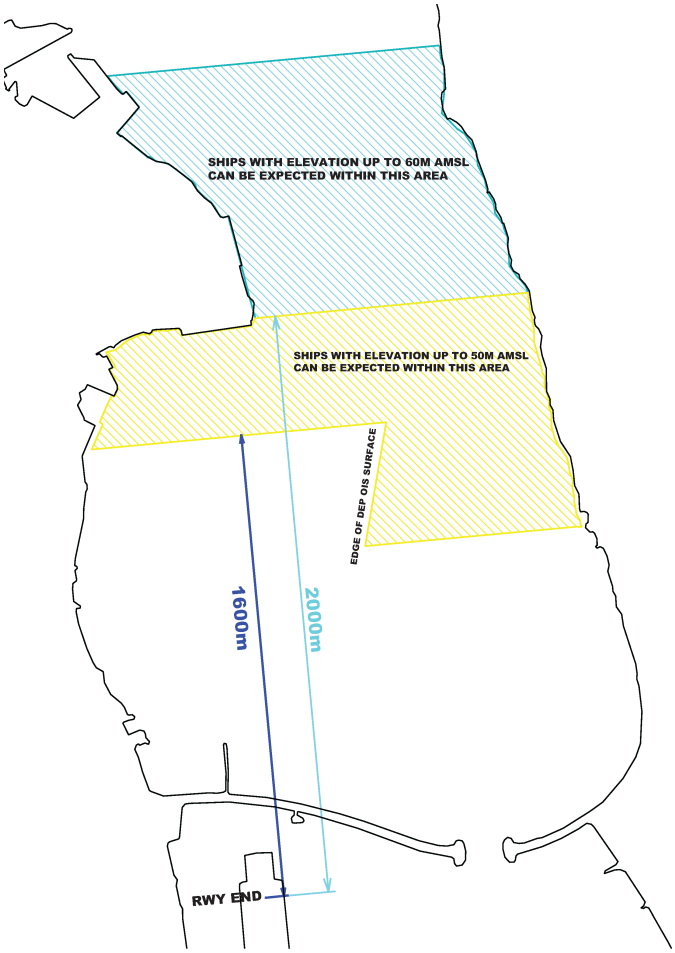

BIAR AD 2.24 KORT SEM TILHEYRA FLUGVELLI
BIAR AD 2.24 CHARTS RELATED TO AERODROME

Kort / Charts	Blaðsíðunúmer / Page Number
BIAR Aerodrome Chart - ICAO	AD 2 BIAR 2 - 1
BIAR WAYPOINT COORDINATES	AD 2 BIAR 4 - 1
BIAR Standard Arrival Chart - Instrument (STAR) ICAO - RNP STAR RWY 19 M	AD 2 BIAR 5 - 1
BIAR Standard Arrival Chart - Instrument (STAR) ICAO - RNP STAR RWY 19 N	AD 2 BIAR 5 - 3
BIAR RNP STAR RWY 19 - Recommended Coding Tables	AD 2 BIAR 5 - 5
BIAR Instrument Approach Chart - ICAO ILS RWY 01	AD 2 BIAR 6 - 1
BIAR Instrument Approach Chart - ICAO LOC/ASR RWY 01 INITIAL and FINAL	AD 2 BIAR 6 - 3
BIAR Instrument Approach Chart - ICAO LOC RWY 01 CAT A and CAT B	AD 2 BIAR 6 - 5
BIAR Instrument Approach Chart - ICAO LOC A RWY 01 CAT C and CAT D	AD 2 BIAR 6 - 7
BIAR Instrument Approach Chart - ICAO ILS or LOC RWY 19	AD 2 BIAR 6 - 9
BIAR Instrument Approach Chart - RNP X RWY 19	AD 2 BIAR 6 - 11
BIAR Instrument Approach Chart - RNP Y RWY 19	AD 2 BIAR 6 - 13
BIAR Instrument Approach Chart - ICAO NDB RWY 19	AD 2 BIAR 6 - 15
BIAR Standard Departure Chart - Instrument (SID) - ICAO RNP SID RWY 01 PERUR A ASKUR A	AD 2 BIAR 7 - 1
BIAR Standard Departure Chart - Instrument (SID) - ICAO RNP SID RWY 01 PERUR B ASKUR B	AD 2 BIAR 7 - 3
BIAR Standard Departure Chart - Instrument (SID) - ICAO RNP SID RWY 01 MAMEP A UTISU A	AD 2 BIAR 7 - 5
BIAR Standard Departure Chart - Instrument (SID) - ICAO RNP SID RWY 01 CUBAS F DORFA F JARRI F MAMEP F PERUR F	AD 2 BIAR 7 - 7
BIAR Standard Departure Chart - Instrument (SID) - ICAO SID RWY 01 AKI F	AD 2 BIAR 7 - 9
BIAR Standard Departure Chart - Instrument (SID) - ICAO RNP SID RWY 19 ASKUR C JARRI C	AD 2 BIAR 7 - 11
BIAR Standard Departure Chart - Instrument (SID) - ICAO RNP SID RWY 19 PERUR D ASKUR D JARRI D RETUR D	AD 2 BIAR 7 - 13
BIAR Standard Departure Chart - Instrument (SID) - ICAO SID RWY 19 ASKUR E JARRI E	AD 2 BIAR 7 - 15
BIAR RNP SID RWY 01 - Recommended Coding Tables	AD 2 BIAR 7 - 17
BIAR RNP SID RWY 19 - Recommended Coding Tables	AD 2 BIAR 7 - 19
BIAR Lead-in lights RWY 01	AD 2 BIAR 8 - 1
Akureyri MILITARY TACAN RWY 01	AD 2 BIAR 8 - 3
Akureyri MILITARY TACAN RWY 19	AD 2 BIAR 8 - 5

BIAR AD 2.25 HINDRANIR SEM SKERA HINDRANAFLÖT FYRIR SJÓNFLUGSHLUTA AÐFLUGS
BIAR AD 2.25 VISUAL SEGMENT SURFACE (VSS) PENETRATION

NIL