

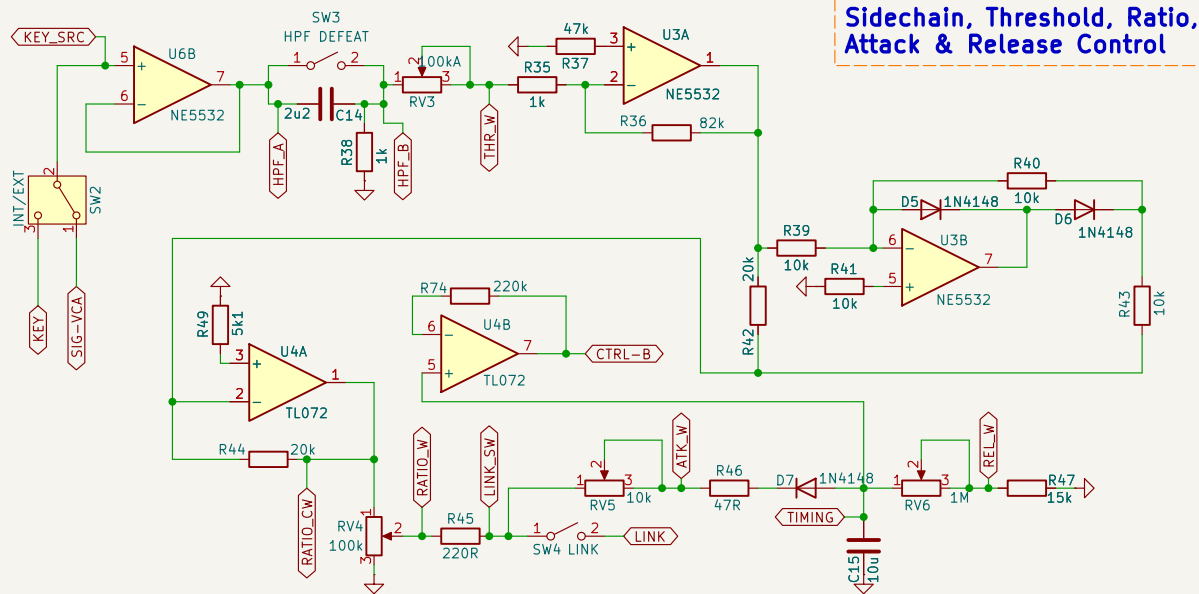



The Gain Cell
Nine Transistors & an Op-Amp to act as a Voltage Controlled Amplifier

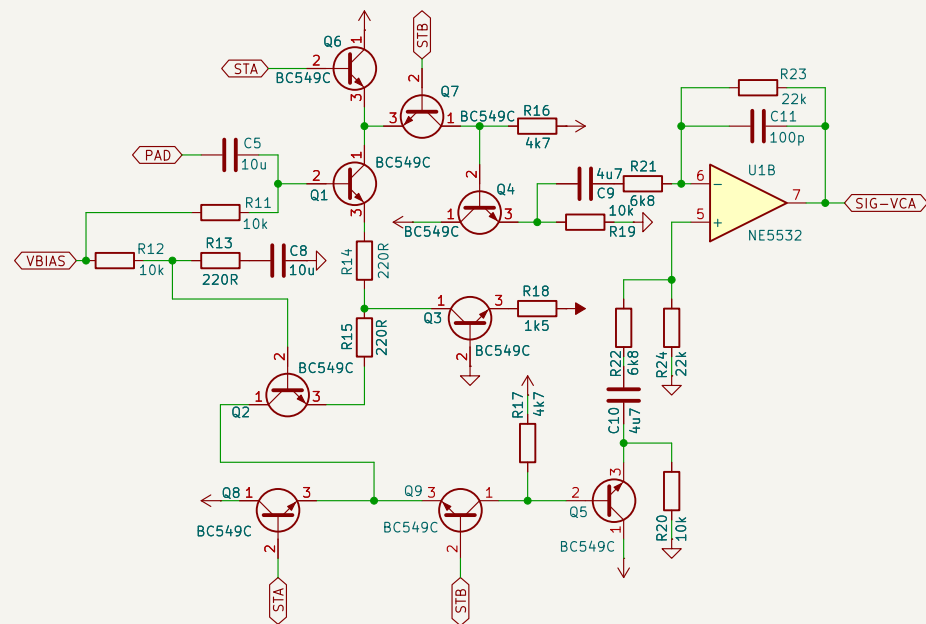


Input Section
Buffer and Unbalance the Input Before Sending it to the Pad

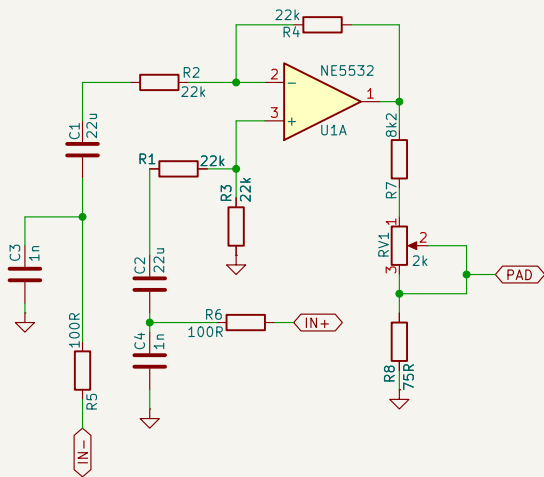


Input Level Meter & Gain Reduction Meter

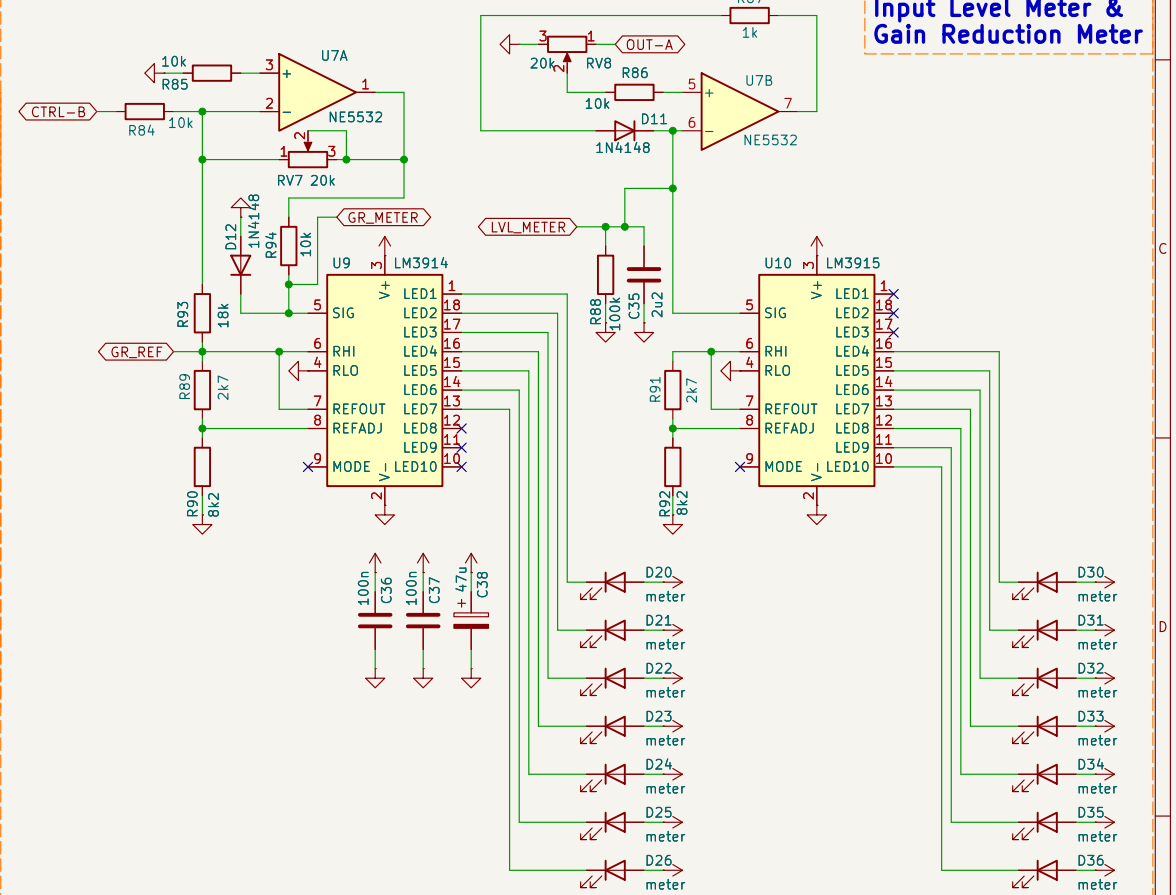


STEERING REFERENCE

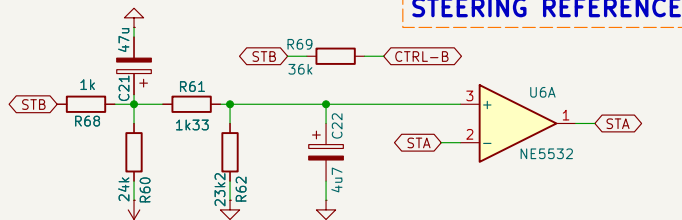


CELL BIAS

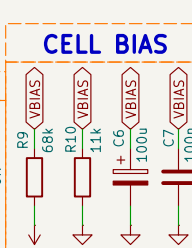


-5V1 CREATION

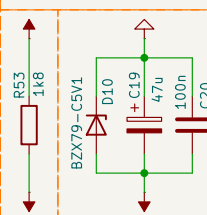


+16 V RAIL

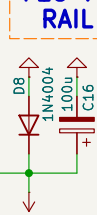


-16 V RAIL

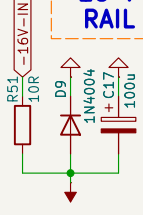


GROUNDING

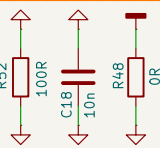


PWR FLAGS

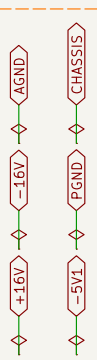


OP-AMP POWER DECOUPLING

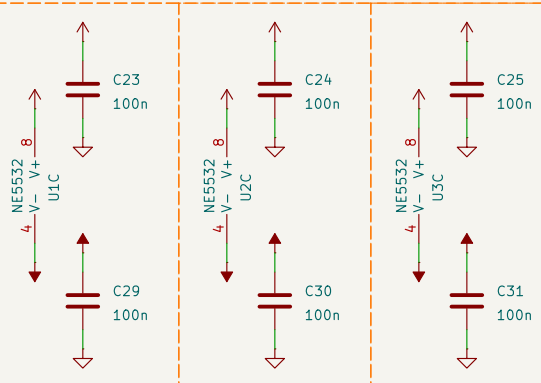

GAIN RED. METER

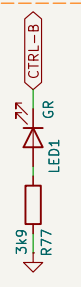

Output Chain, Buffer Op-Amps and Signal Balancing

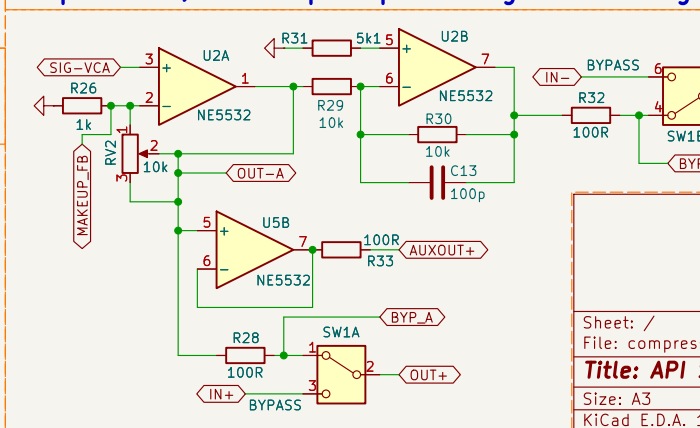

Aux Output & Input Setup

