

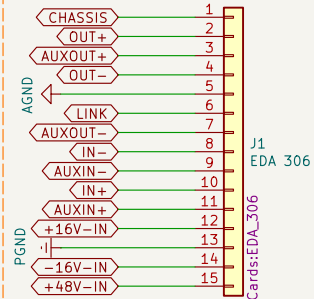


The Gain Cell
Nine Transistors & an Op-Amp to act as a Voltage Controlled Amplifier

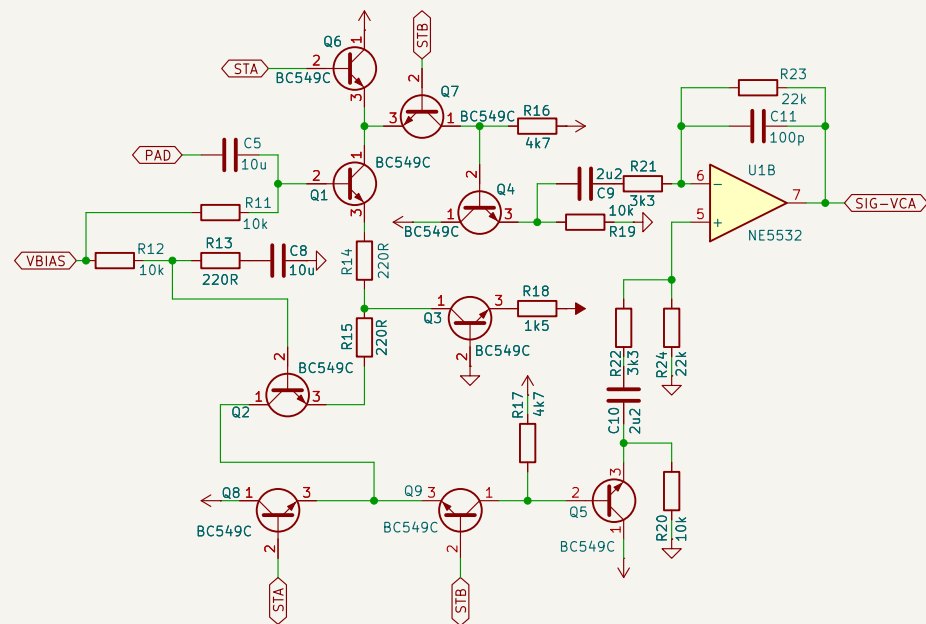


On board copper female connector.
15 Poles. Labeling from Midas.


Front board connector
Pots, switches and both meters
(U9, U10, D20-D36)

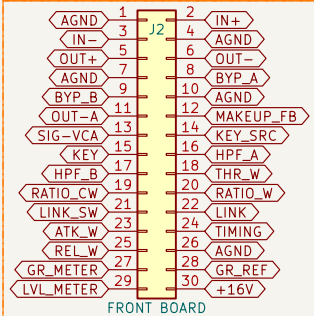


Sidechain, Threshold, Ratio, Attack & Release Control

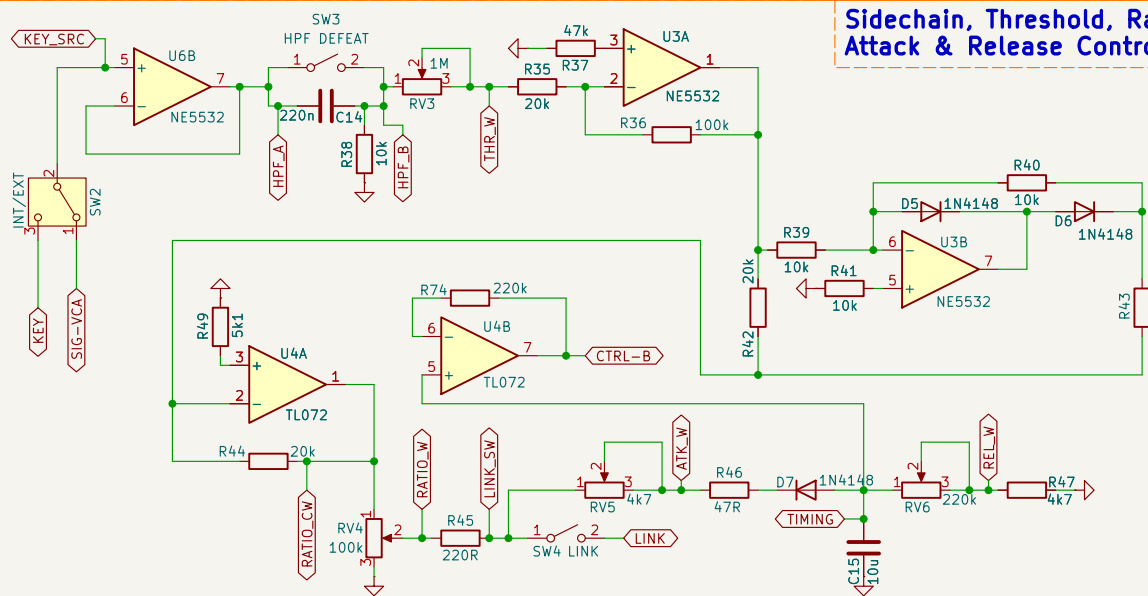


Input Section
Buffer and Unbalance the Input Before Sending it to the Pad

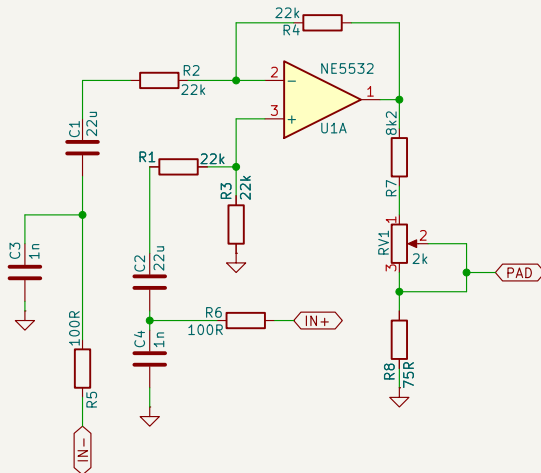

Input Level Meter & Gain Reduction Meter

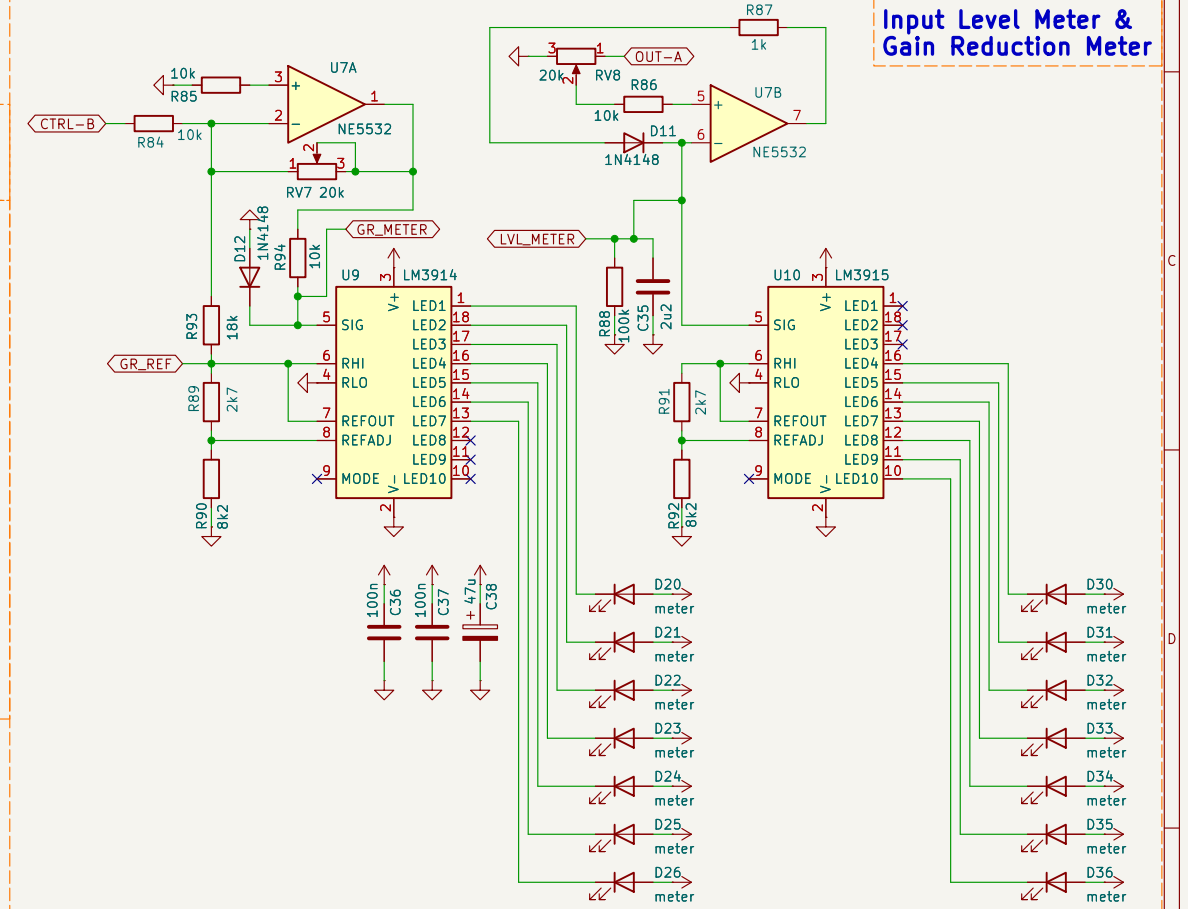


STEERING REFERENCE

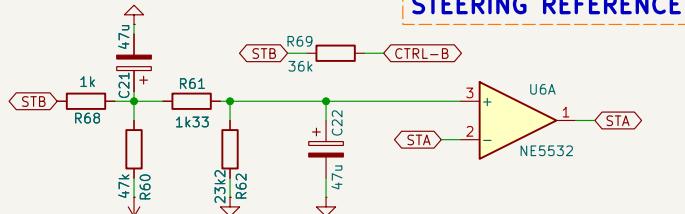


GROUNDING




CELL BIAS

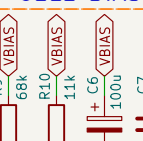


-5V1 CREATION

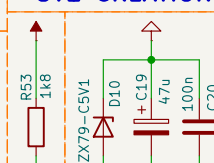


+16 V RAIL




-16 V RAIL



PWR FLAGS




OP-AMP POWER DECOUPLING

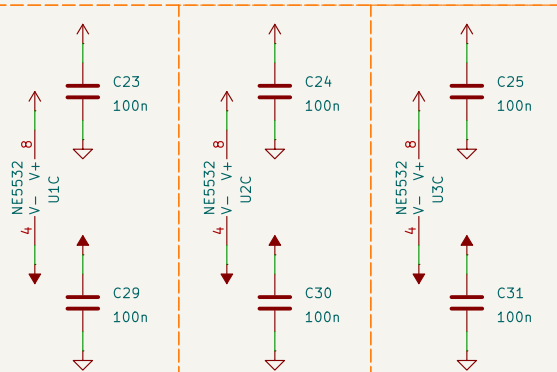

GAIN RED. METER



Output Chain, Buffer Op-Amps and Signal Balancing

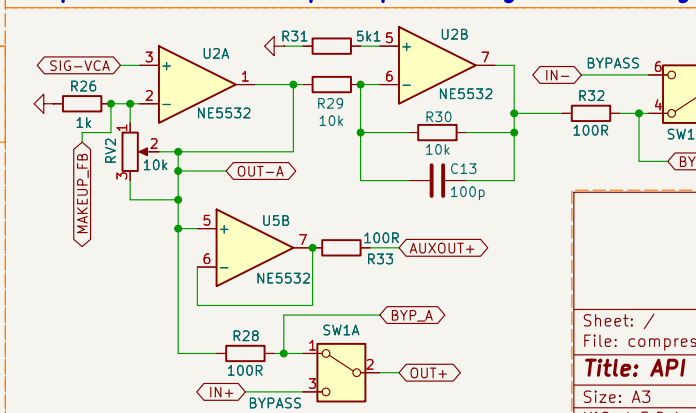

Aux Output & Input Setup

