


STALLION

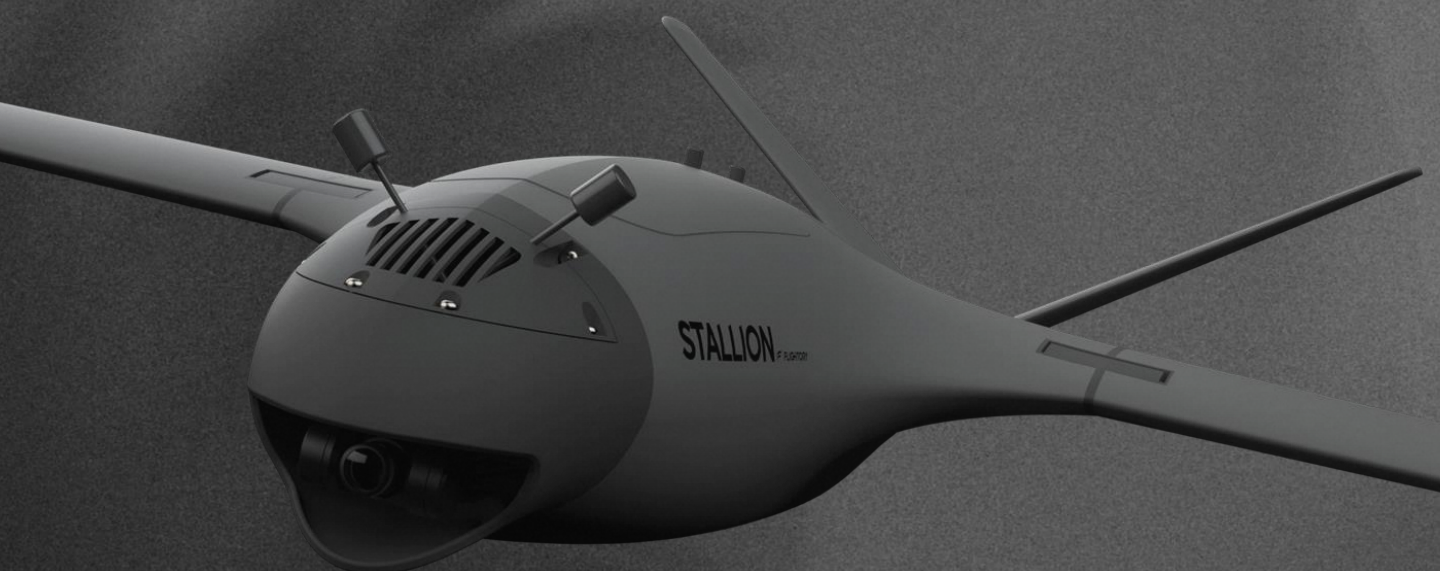

USER MANUAL

V.2

© 2025 Flightory by Szymon Wójcik All rights reserved.

Socials



Join Flightory Tech group on Facebook and create community with us. Share progress of your builds. Any suggestions or questions welcome.

www.facebook.com/groups/flightory




Join our Discord server as well, where the discussions are organized by topics, and the interaction between users is lively.

<https://discord.gg/GPMgDZ3C xv>




Follow us on Instagram for regular updates and fresh content

www.instagram.com/flightory

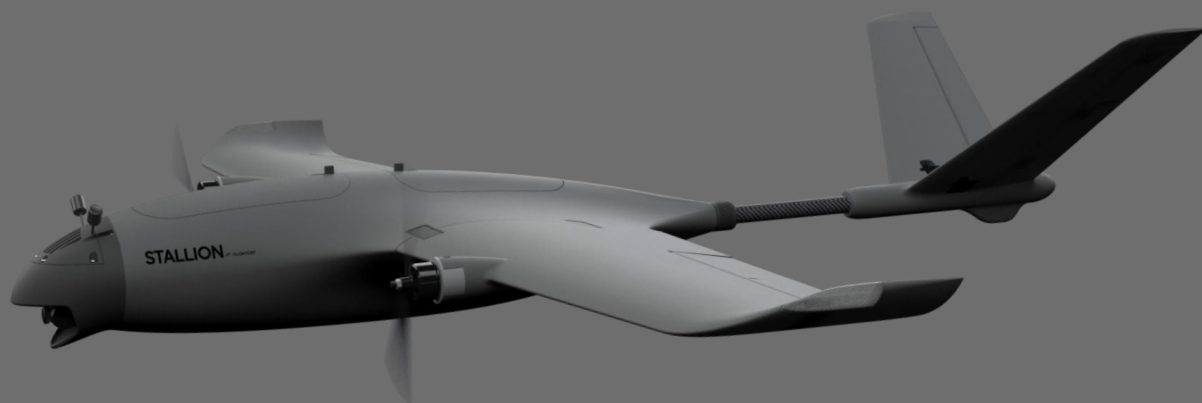

General Aircraft Data

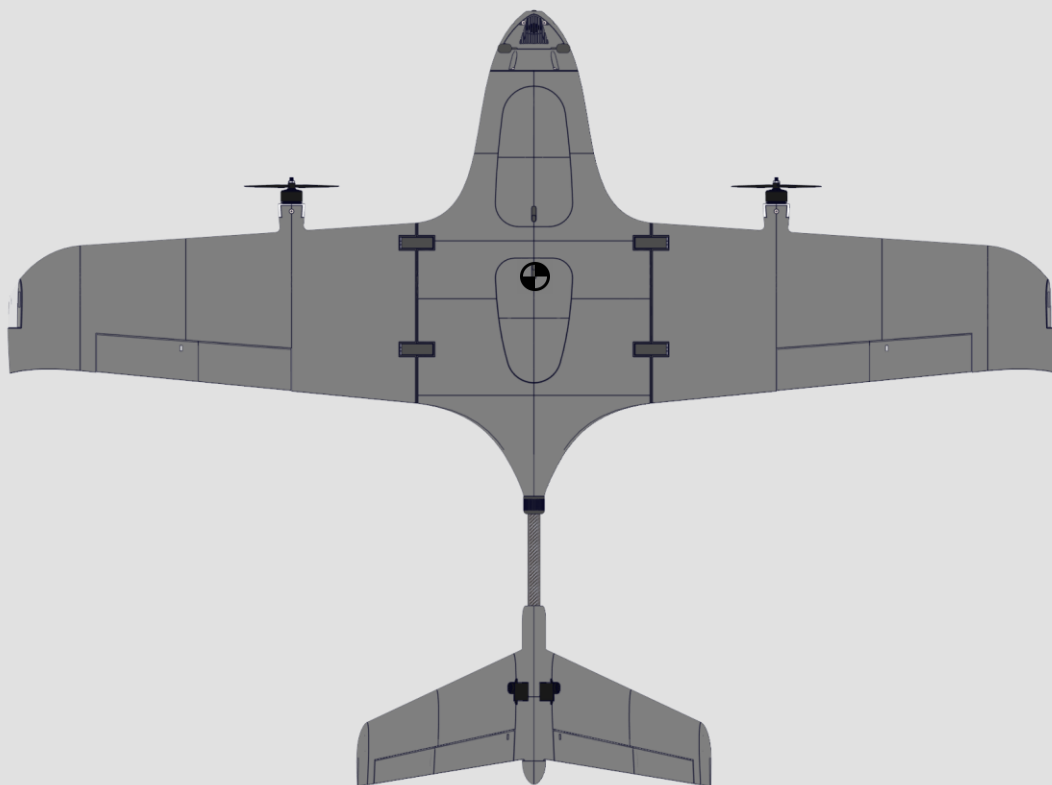

General data	
Wingspan	1340mm
Wing area	26.5 dm ²
Lenght	990mm
Center of Gravity	60mm from leading edge (at wing root)
AUW	1500-3000g
Optimal Cruise Speed	60-70 km/h
Airfoil	Eppler E205
Root Chord	255mm
MAC	211mm
Aspect Ratio	5.6
Wing load	55 - 115 g / dm ²

Changes in V2

The Stallion has been updated. Files for both V1 and the latest V2 are included in the package. While the overall geometry and dimensions remain unchanged, several technical improvements have been made.

Wing Mounting Change – Replaced M3 screws with a snap-fit joints with torsion springs.

Alignment Pins – 2mm holes between fuselage segments allow for filament pieces to aid in gluing.

Tailboom Mounting Redesign – Instead of drilling the tube and using M3 screws, the boom is now secured with a 3D-printed knob from the fuselage side. The tail section is permanently glued, with a slight cosmetic modification to its shape.

Servo Orientation Change in Tail – Now positioned within the stabilizer structure.

Hatch Lock– Fully 3D-printed without pen spring.


New Servo Cover in Wings – Allows direct servo screwing.

New Nose Variant – Designed specifically for the GM3 Caddx gimbal and twin products.

Wingtip Shape Modification – Aesthetic rounding added.





Addition of More STEP Files – A full list is available later in this document.

General Aircraft Data

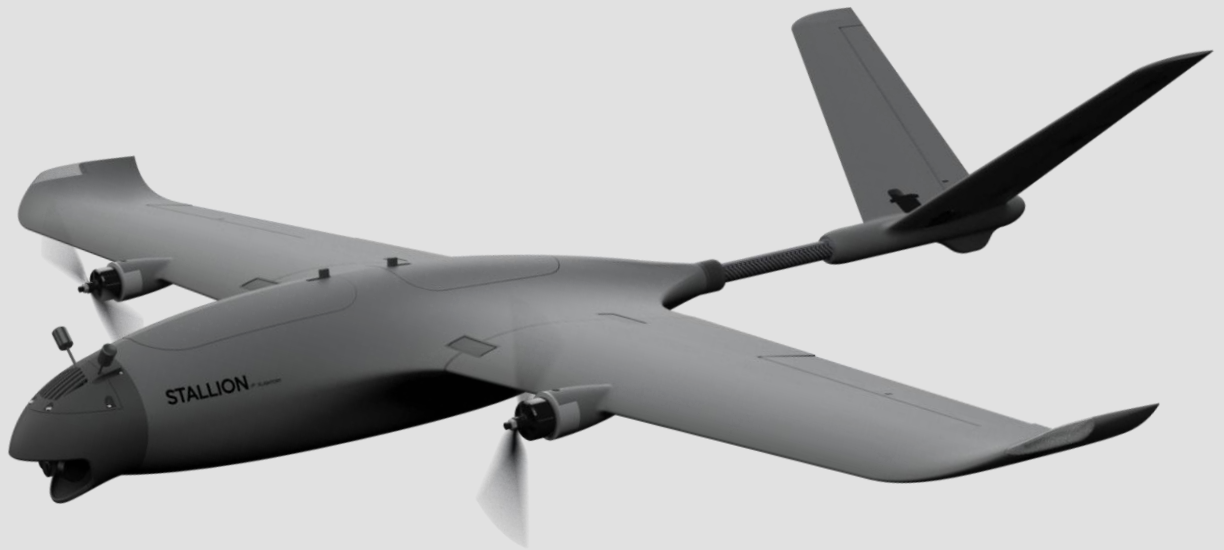



The aircraft is configured with 2 tractor motors, a single tail boom, and a V-Tail configuration. It is designed for optimal performance and compactness. Geometry has been carefully designed and optimized using CFD and real test flights. The airframe is designed with modularity in mind. The nose of the aircraft is fully detachable, allowing for adaptation to various types of payloads. By default, it is prepared for a standard 19x19mm FPV camera. All files are available in STL format, and some are also available in STEP for easy customization of parts such as custom mounts, antenna outputs, sensors, etc. With the recommended motors and battery, the aircraft achieves excellent performance and low power consumption. Stable flight is possible at just under 40% throttle, and with a large 21Ah 4S6P Li-Ion battery, the flight time exceeds 4 hours. In a lightweight configuration, it can even be used with 3S batteries. The choice of motors and battery voltage depends on the user and is crucial in determining the aircraft's performance for specific purposes.

CFD Analysis

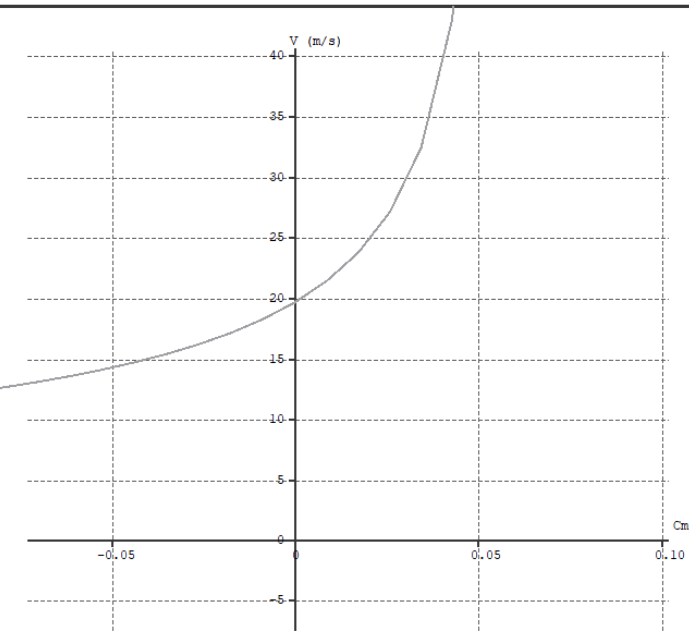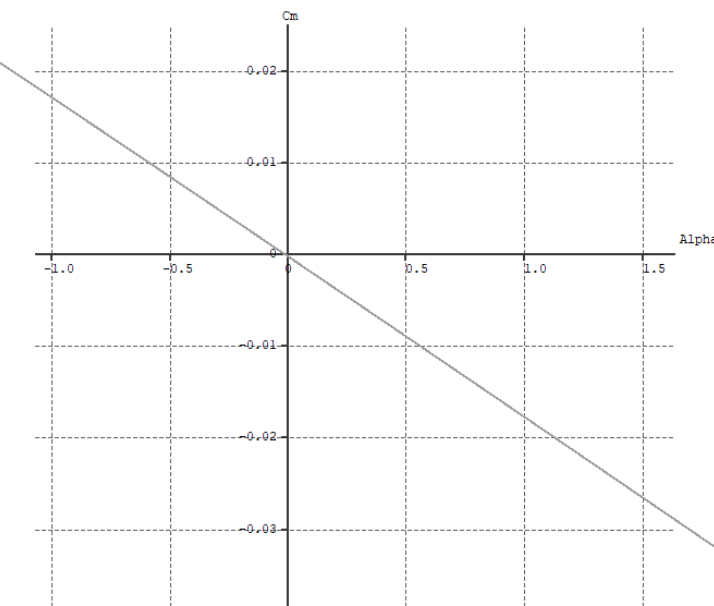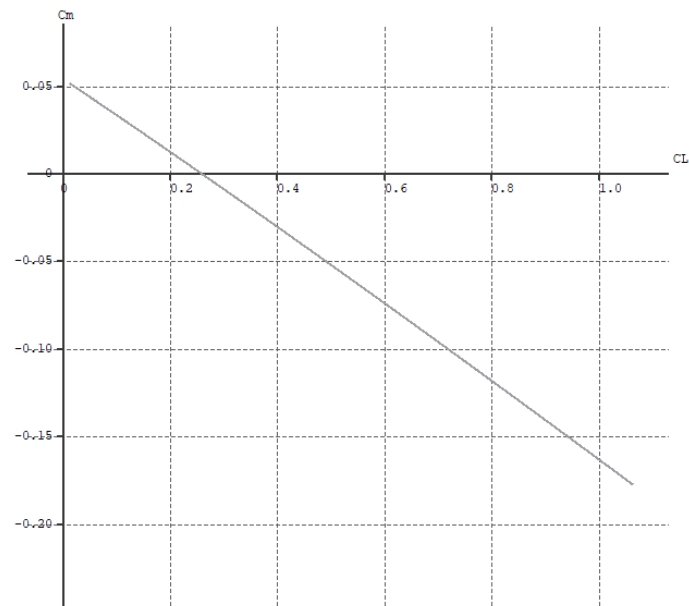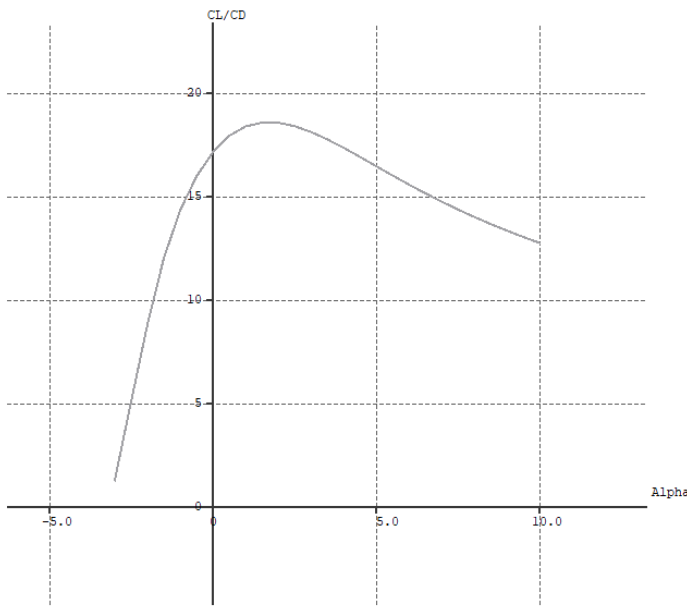

The geometry has been designed and optimized to achieve maximum efficiency while maintaining the stability of the aircraft. The airfoil used is Eppler E205. With the correct center of gravity set at a distance of 60mm from the leading edge (measured at the wing root), the aircraft maintains a longitudinal stability margin and zero pitching moment at zero angle of attack. The highest aerodynamic efficiency occurs between 0 and 2 degrees of AoA at a cruising speed between 60-70 km/h. With the recommended motor and propeller and 4S battery, the aircraft flies steadily in level flight at approximately 40% power, resulting in an average current draw of 4A and providing over 4 hours of flight time. The power reserve is significant, allowing for the use of a 3S battery with lower voltage. There is considerable flexibility in the choice of motor and battery, depending on user preferences. When properly configured, the aircraft does not require a flight controller and can be flown in both manual and automatic modes.

Exploded View

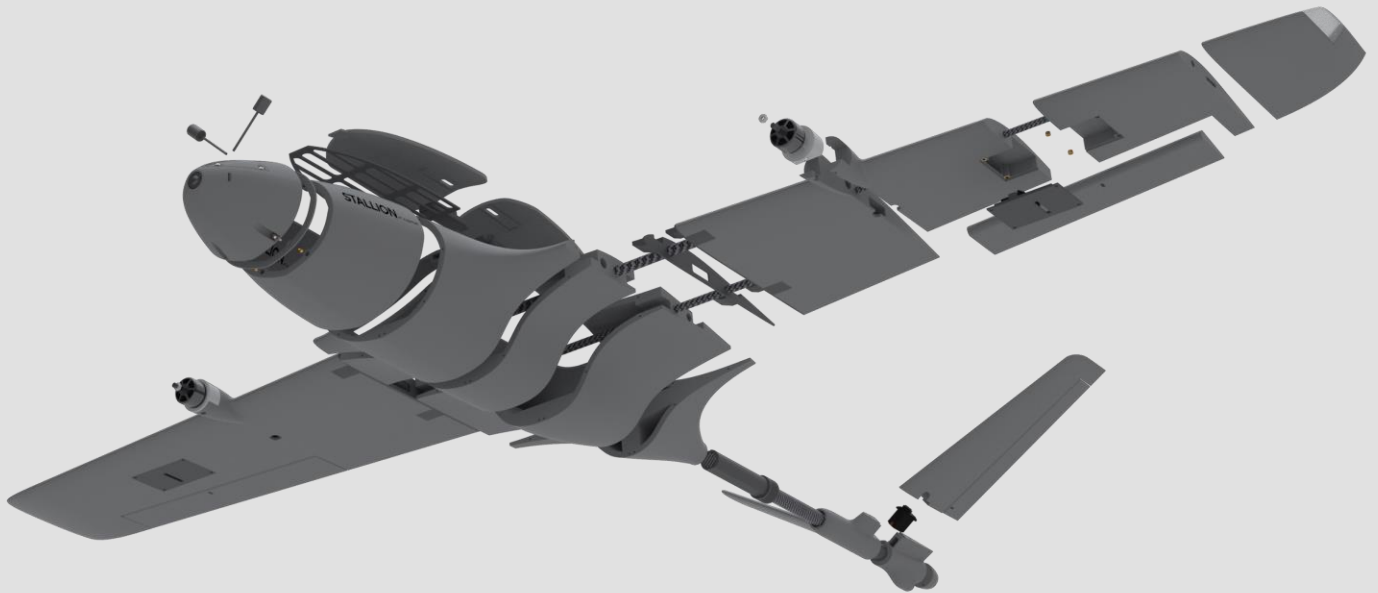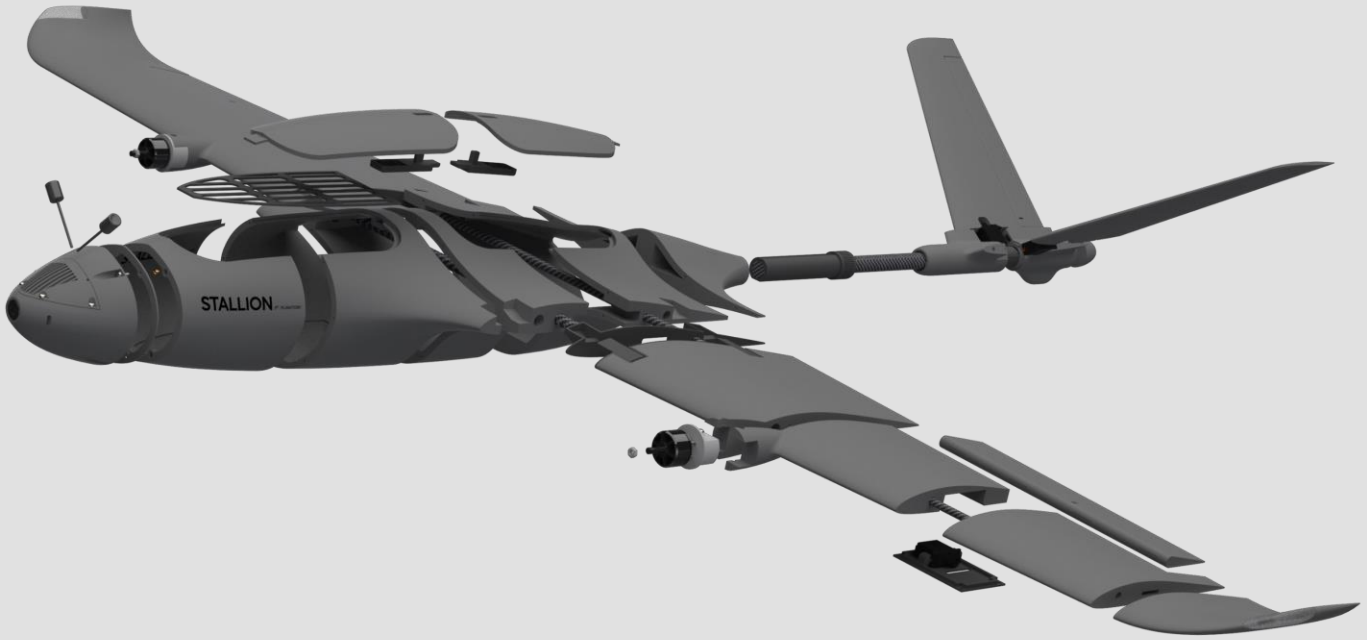

Reccomended RC Equipment

Reccomended electronics	
Motors	T- Motor F60 1750KV / T- Motor F90 1300KV
Propellers	7x4 / 7x5 / 7x6 (one CW, one CCW)
Flight Controller	Speedybee F405 Wing or any other Mavlink FC
GPS	Matek M10Q or similar GPS with compass
Servos	4x EMAX ES08 MAII Metal Gear or similar
ESC	2x BIHeliS 30-40A
Battery	4S (max 4S6P 21Ah Li-Ion) or smaller pack / 3S battery also possible
Receiver	Matek R24-D ELRS or similar
VTX	Digital or analog VTX

This list, along with links, can also be found on the product page.

Required Accessories

ITEM	QUANTITY
10x800mm Carbon Tube (MAIN SPAR)	1
8x600mm Carbon Tube (SECONDARY SPAR)	1
6x435mm Carbon Tube (WING SPAR)	2
16x430mm Carbon Tube (TAIL BOOM)	1
4x260mm Carbon Tube (V TAIL SPAR)	2
4x250mm Carbon Tube (V TAIL SPAR)	2
Thick + Thin CA Glue	20g tube
CA Activator	1 (optional but useful)
M3 Threaded Insert (Outer Ø5mm, height 5mm)	12
M3 screw	12
LW-PLA	1 roll
PETG / PC / other hard material	Small amount
Polyester CA hinge 25x20mm	14
Small Torsion Spring with Pin	4
Velcro strap	2
Servo extension cable	4
2812 ARM LED (NAV LIGHTS)	3 (optional)
Epoxy Glue	1

This list, along with links, can also be found on the product page.

Parts List - Fuselage

PART	MATERIAL
FUS 1 L/R	LW-PLA
FUS 2 L/R	LW-PLA
FUS 3 L/R	LW-PLA
FUS 4 L/R	LW-PLA
FUS 5 L/R	LW-PLA
HATCH FRONT 1	LW-PLA
HATCH FRONT 2	LW-PLA
HATCH REAR 1	LW-PLA
HATCH REAR 2	LW-PLA
NOSE CLEAN	LW-PLA
NOSE / NOSE TOP	LW-PLA
NOSE GIMBAL / NOSE TOP GIMBAL	PETG
FRONT REINFORCEMENT	PETG
BATTERY PAD	PETG
BOOM FUS MOUNT	PETG
LOCK 1	PETG
LOCK 2	PETG
LOCK SPRING	PETG
FUS ROOT R/L	PETG

Parts List - Wings

PART	MATERIAL
WING 1 L/R	LW-PLA
WING 2 L/R	LW-PLA
WING 3 / WING 3 NO LED L/R	LW-PLA
WINGTIP LED / WINGTIP NO LED L/R	LW-PLA
WING LED COVER L/R	LW-PLA
AILERON 1 / AILERON 2 L/R	LW-PLA
WING LOCK BASE	PETG
WING LOCK FRONT / REAR L/R	PETG
SERVO COVER L/R	PETG
WING ROOT L/R	PETG
MOTOR MOUNT F90	PETG
MOTOR MOUNT F60	PETG


Parts List - Tail

PART	MATERIAL
TAIL 1	LW-PLA
TAIL 2	LW-PLA
TAIL 3	LW-PLA
V TAIL 1 L/R	LW-PLA
V TAIL 2 L/R	LW-PLA
V TAIL TIP L/R	LW-PLA
RUDDER 1 L/R	LW-PLA
RUDDER 2 L/R	LW-PLA
BOOM FUS INSERT	PETG
BOOM KNOB	PETG
BOOM TAIL MOUNT	PETG

STEP Files List

PART
AILERON
FRONT HATCH
REAR HATCH
NOSE
NOSE GIMBAL
NOSE SOLID
FUS 4
FUS 5
RUDDER
SERVO COVER
TAIL 1
TAIL 2
TAIL 3
V TAIL 1
MOTOR MOUNT F60
MOTOR MOUNT F90
WING LED COVER SOLID

Print Setting

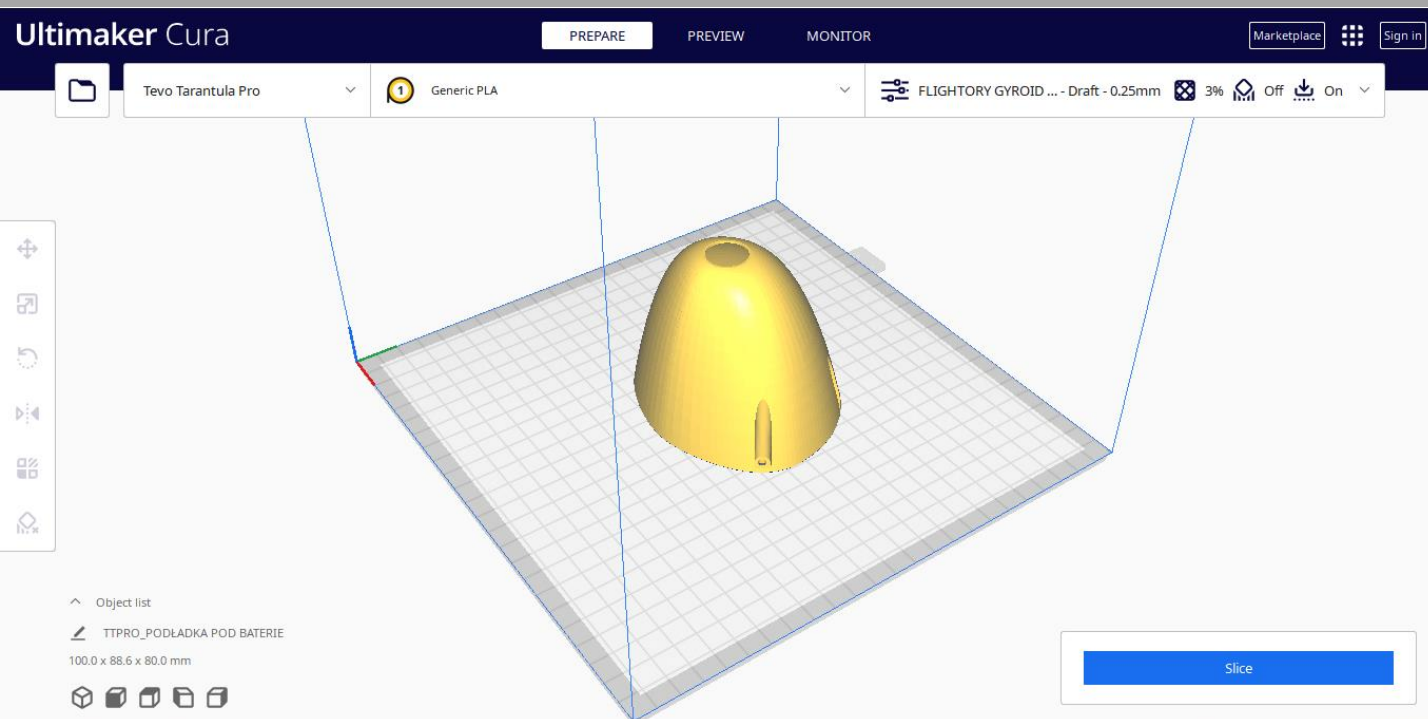


The recommended slicer to use is Ultimaker Cura. All LW-PLA parts, print using the recommended settings detailed on the Flightory website under the **Print Settings** tab. Whether you are using prefoamed or active foaming LW-PLA, you will find settings for both of these filaments there.

For printing parts with hard materials such as PET-G, ABS, or PLA, use the default CURA profile called DRAFT with 20% infill and a grid pattern.

Recommended settings provide a good compromise between weight and the strength of the printed parts, but feel free to modify the settings according to your needs. Also, take into account the fact that print results may vary depending on the type of filament, its manufacturer, humidity, or the type of printer. The provided settings serve as a solid foundation for further tuning to achieve optimal prints.

Print Setting

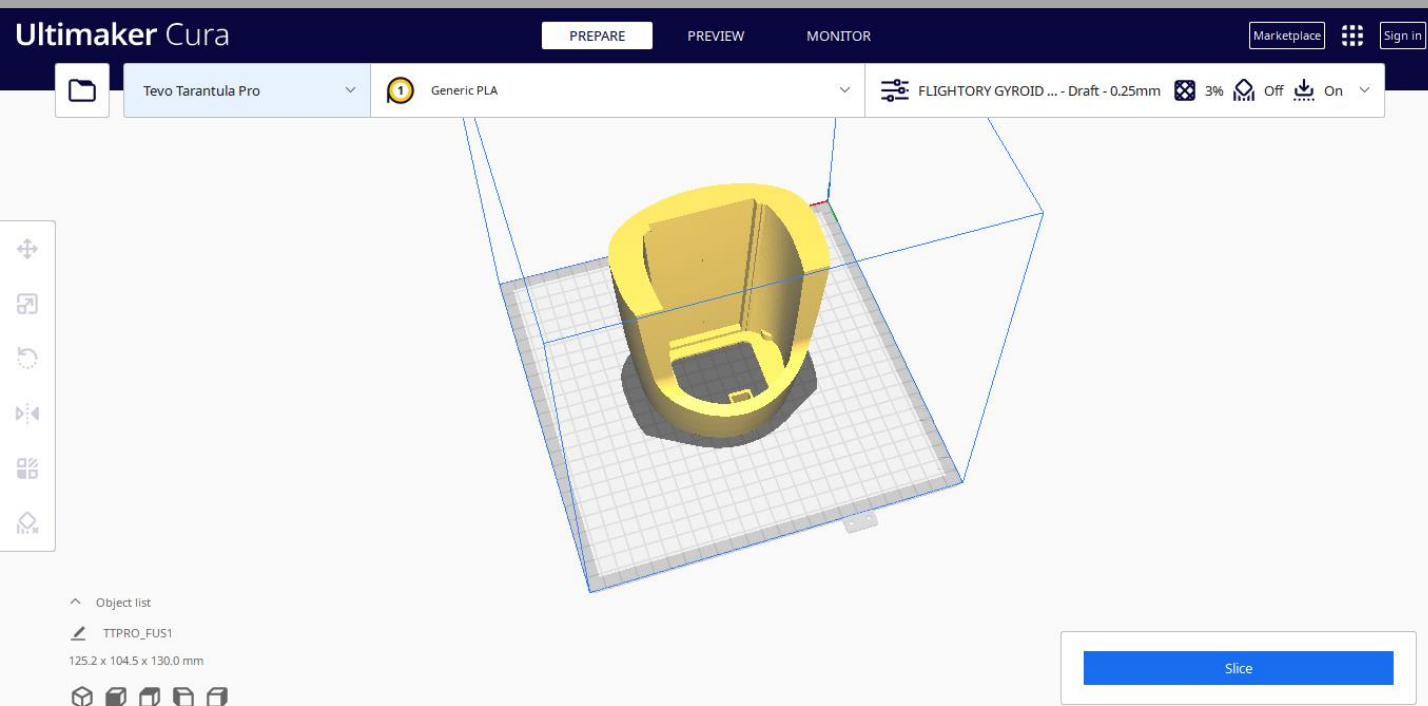


All parts are suitable for printing on any standard printer with a small working area. Printing was done on a 220 x 220 mm area. The settings provided serve as a base and can be modified and adjusted as needed. The following pages contain recommended infill settings for each part.

Important: In the file package, you will find fuselage segments divided into left and right sides, as well as assembled into a single piece. For printers with the mentioned print area of 220x220mm, use the components divided into left and right sides. If you have a larger printer, you can print the fuselage segments as a whole if they fit.


All elements can be printed without supports, but your printer may have a problem with some horizontal surfaces in some places. Depending on the effects, you may then consider turning on supports for these elements and cleaning the printed elements afterwards.

Parts Orientation

Important thing is the correct orientation of the printed parts to avoid overhangs. Below is the recommended orientation of parts and infill settings.

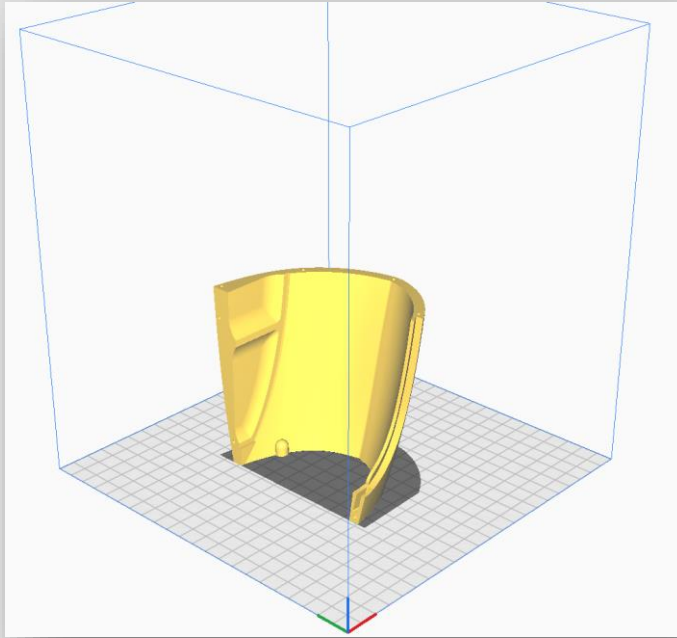


FUS 1 - 3% gyroid infill

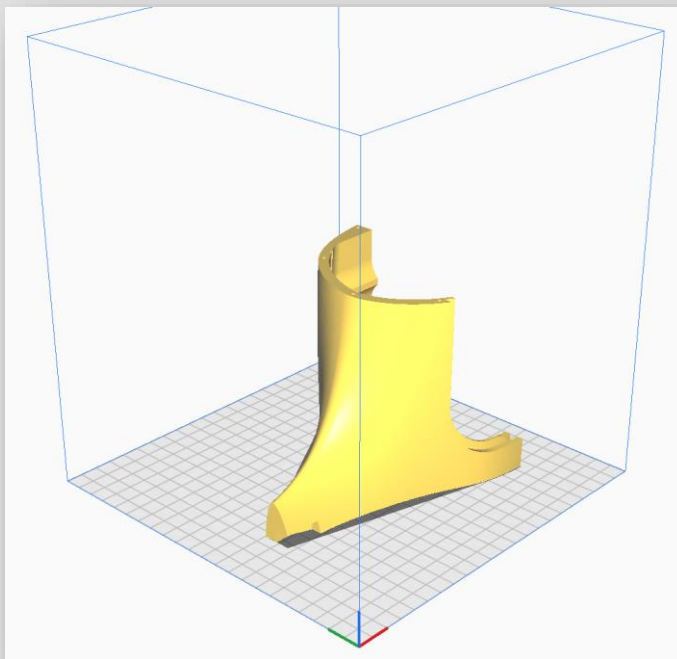


FUS 2 - 3% gyroid infill

Parts Orientation

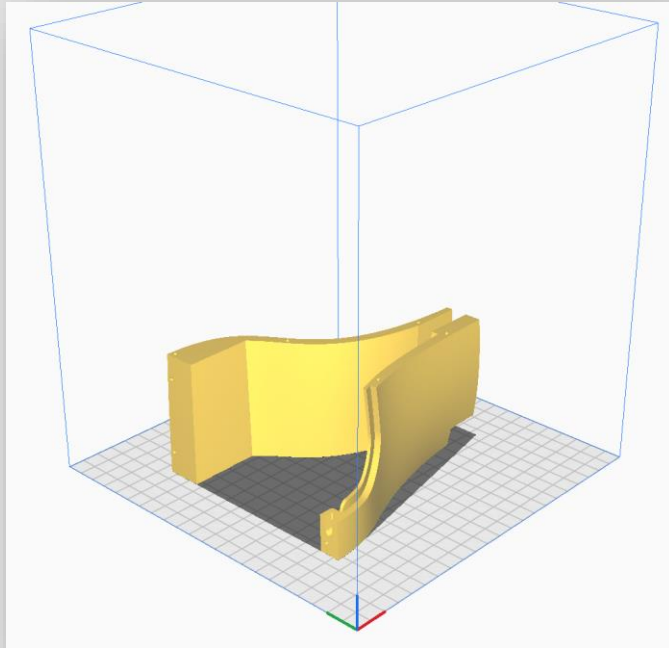


FUS 3 - 3% gyroid infill

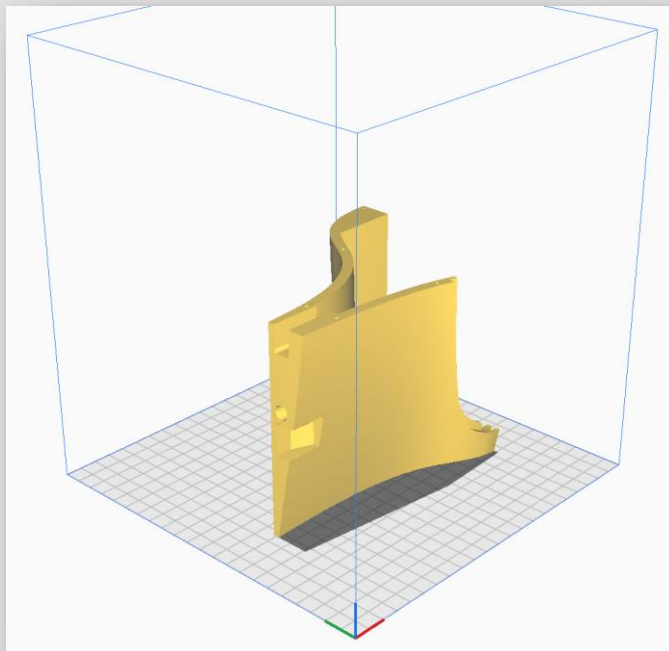


FUS 4 - 3% gyroid infill

Parts Orientation

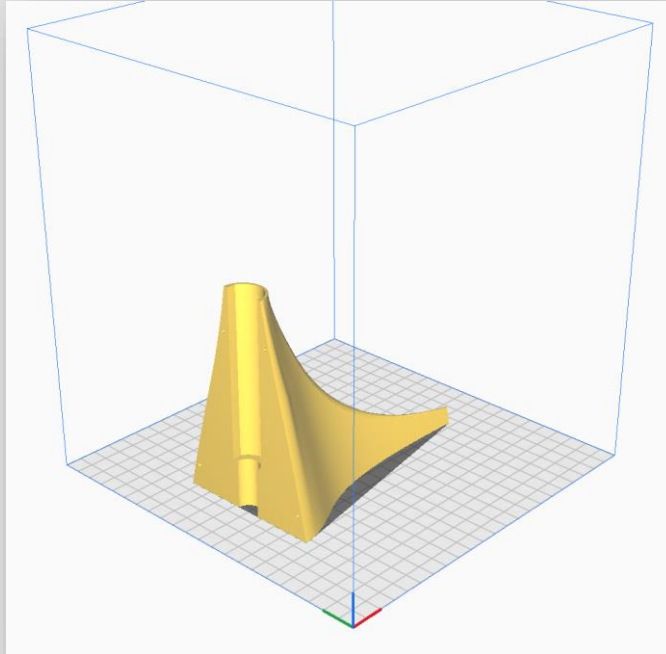


FUS 5 - 3% gyroid infill

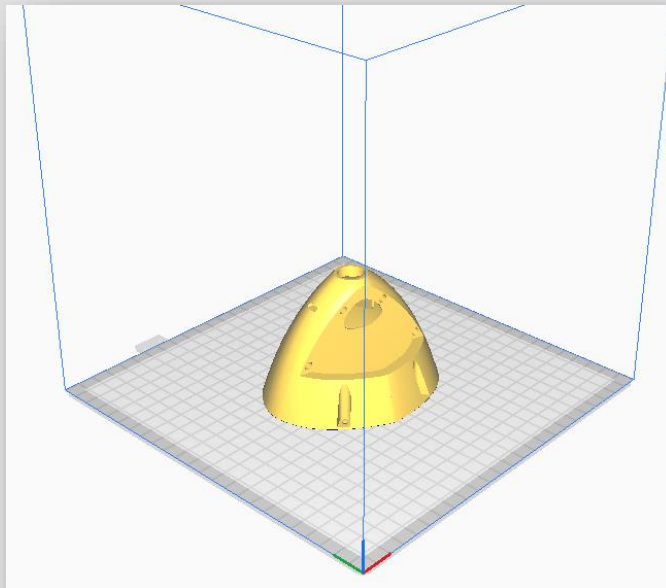


NOSE - 3% gyroid infill + 2 walls

Parts Orientation

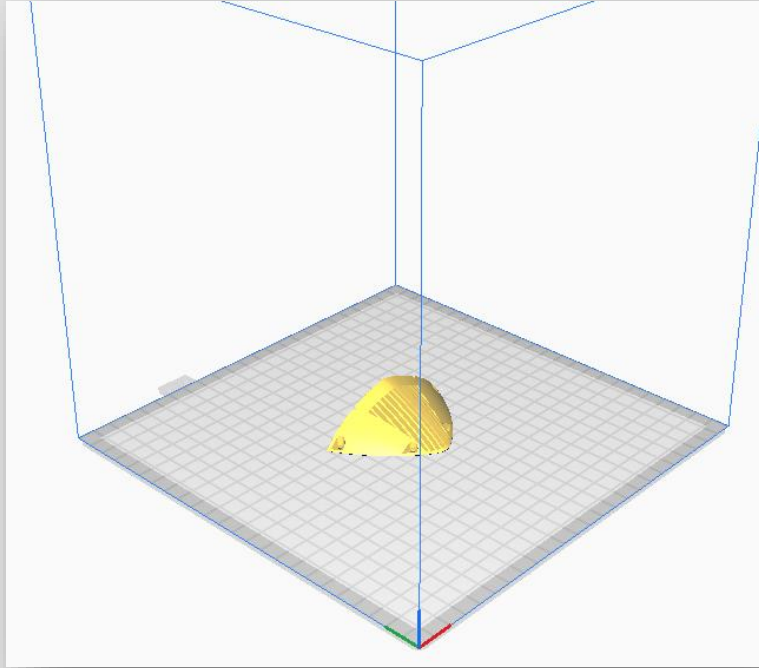


NOSE TOP - 3% gyroid infill + 2 walls

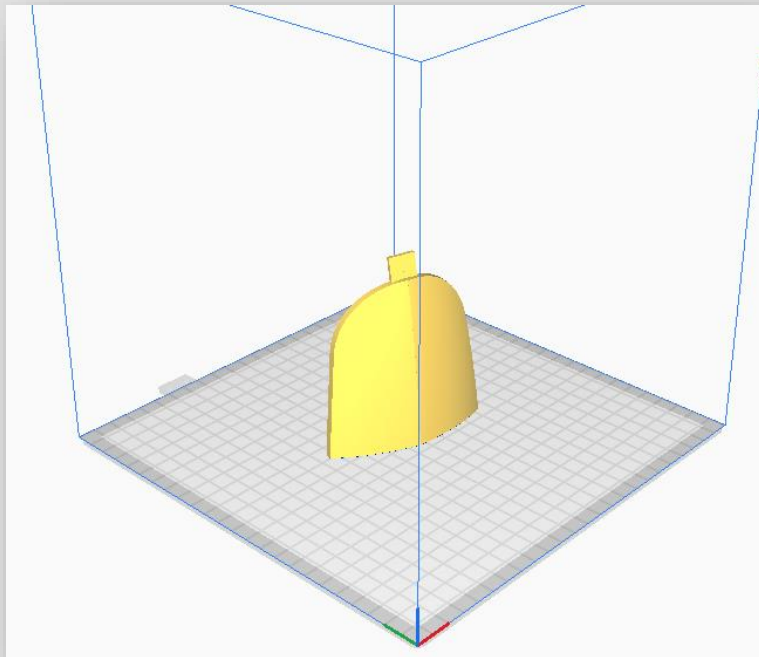


HATCH FRONT 1 - 3% gyroid infill

Parts Orientation

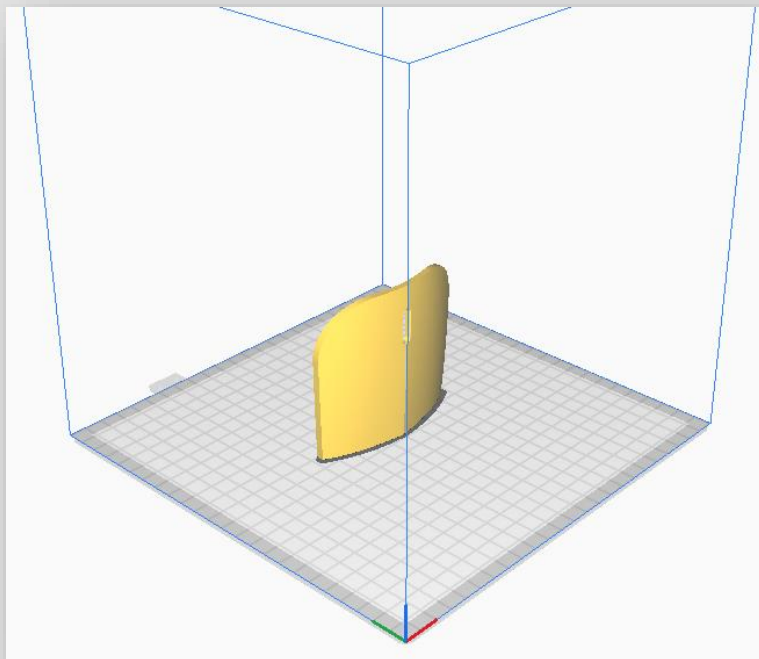


HATCH FRONT 2 - 3% gyroid infill

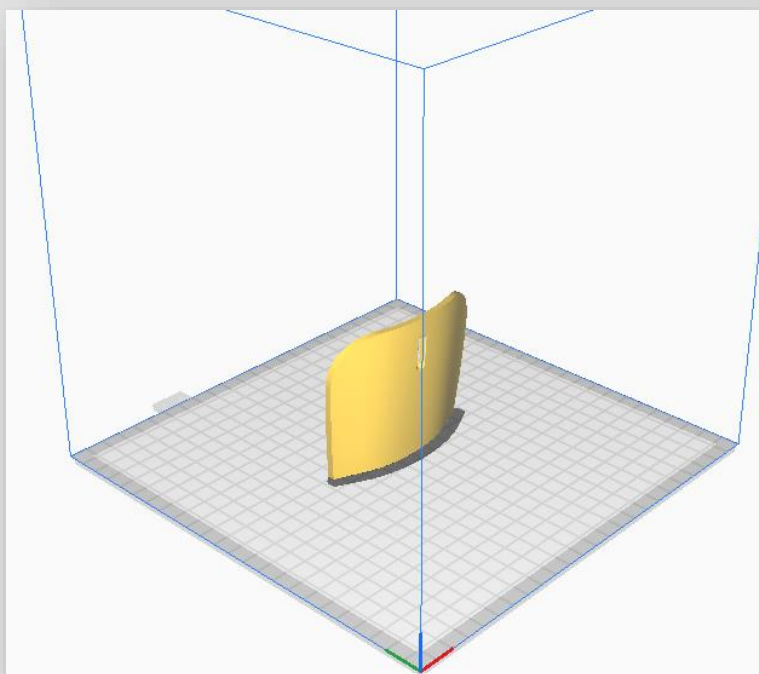


HATCH REAR 1 - 3% gyroid infill

Parts Orientation

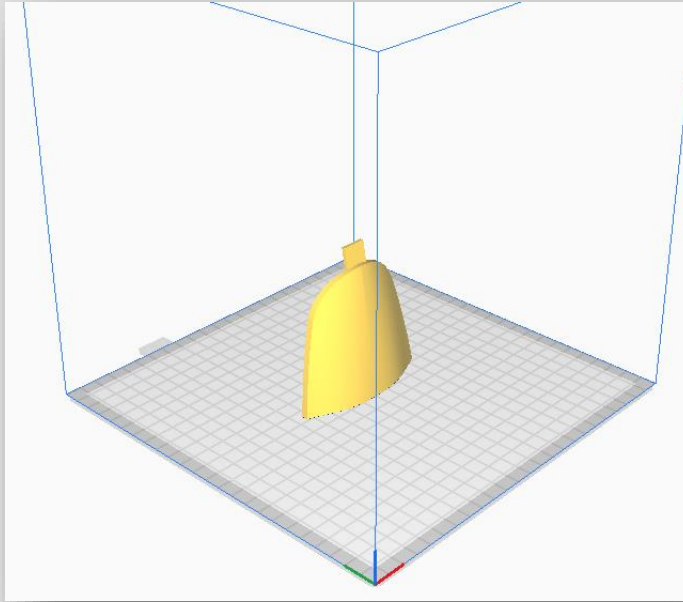


HATCH REAR 2 - 3% gyroid infill

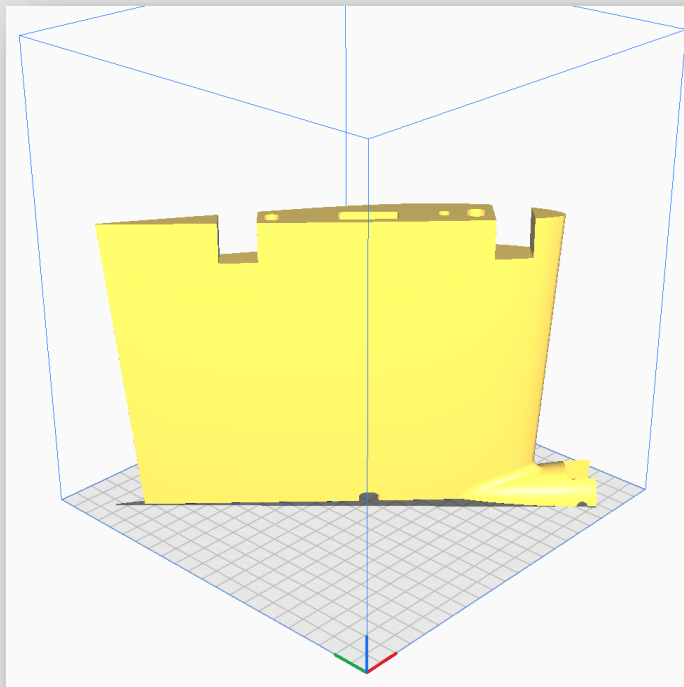


WING 1 - 3% cubic subdivision infill

Parts Orientation

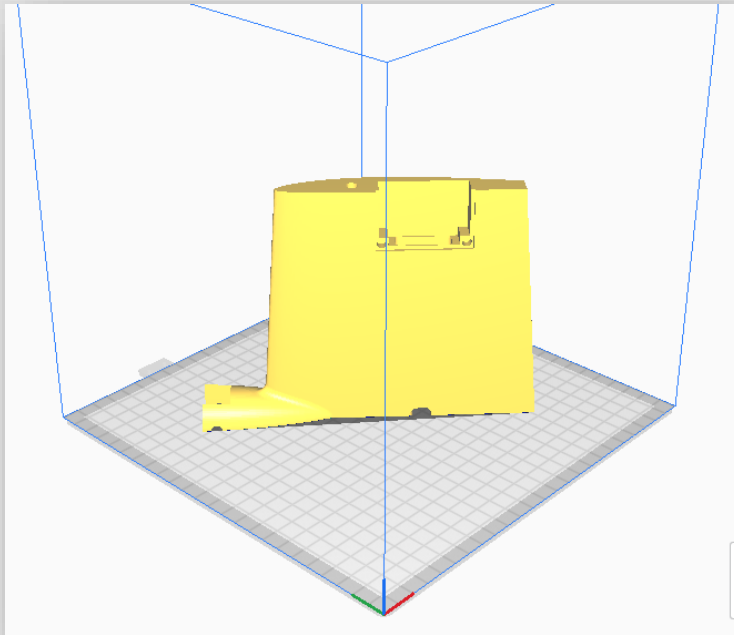


WING 2 - 3% cubic subdivision infill


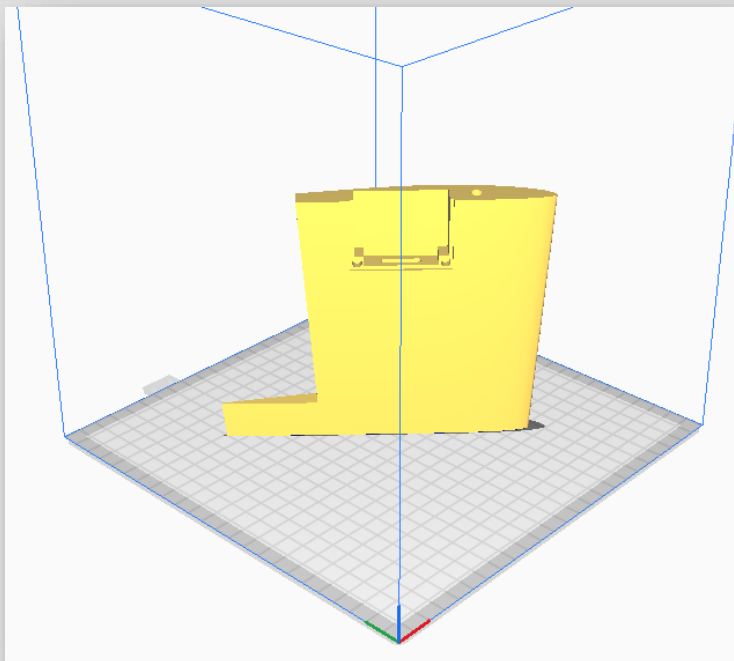


WING 3 - 3% cubic subdivision infill

Parts Orientation



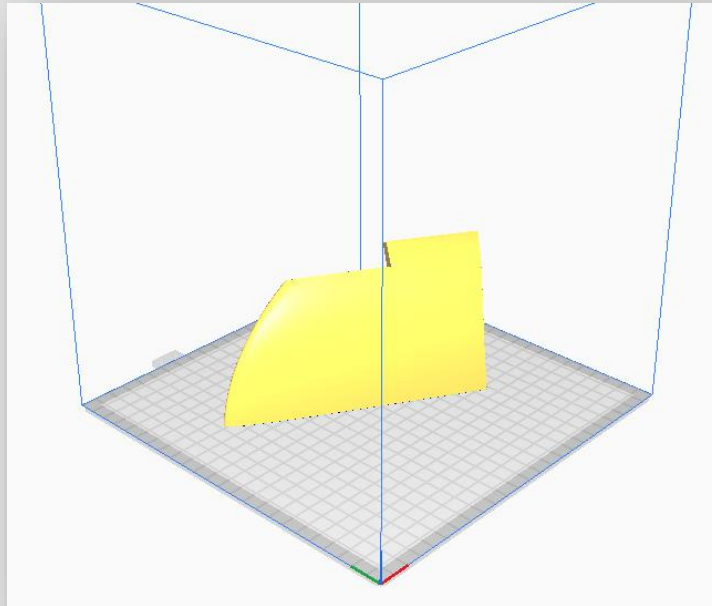


WINGTIP- 3% cubic subdivision infill

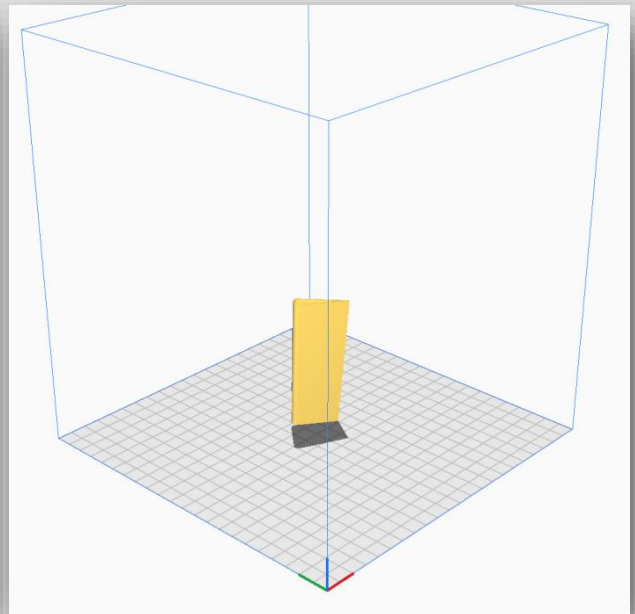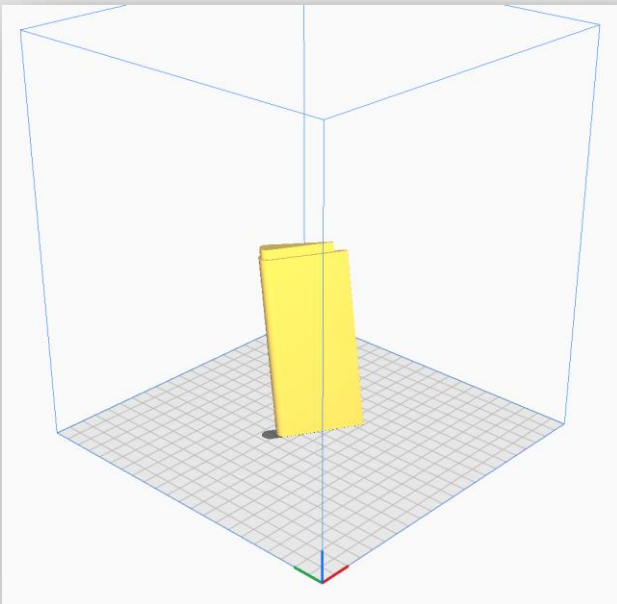




AIL 1 / 2- 4% gyroid infill

Parts Orientation

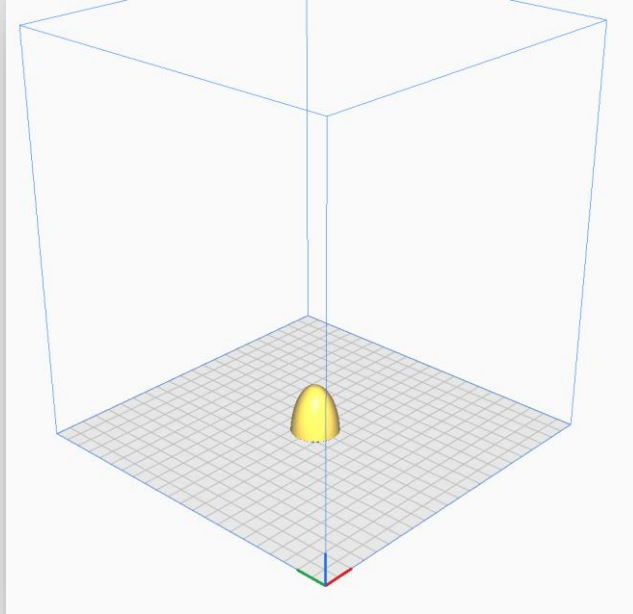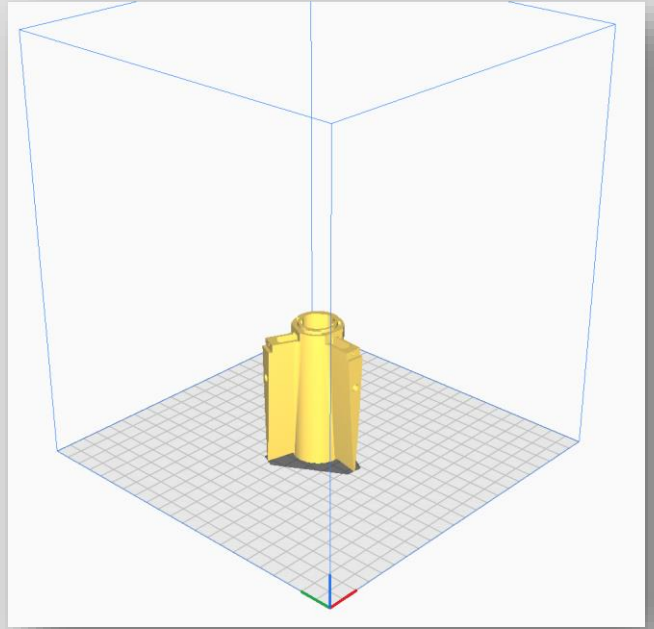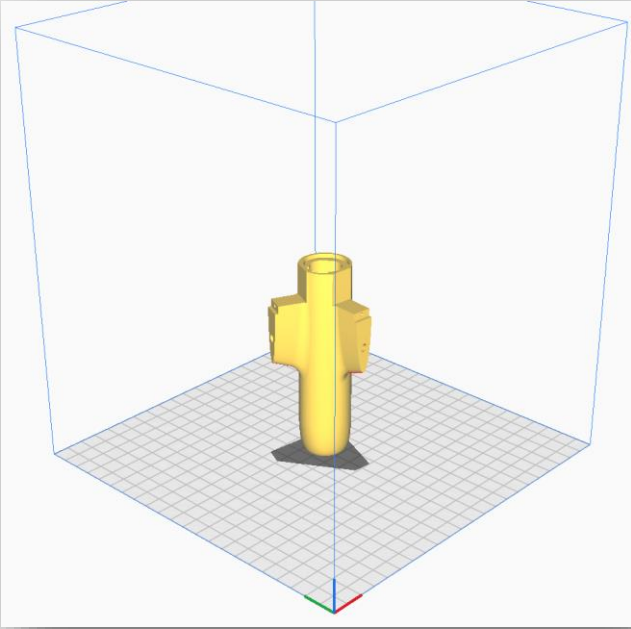


TAIL 1 / 2 / 3 - 3% gyroid infill + 2 walls

Parts Orientation

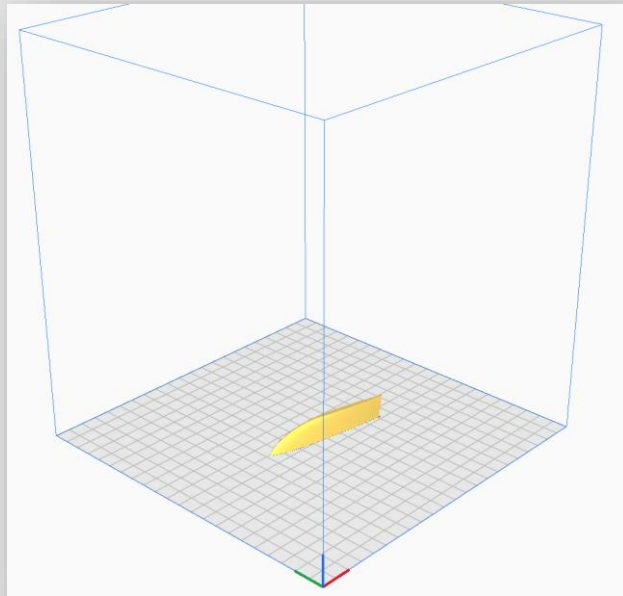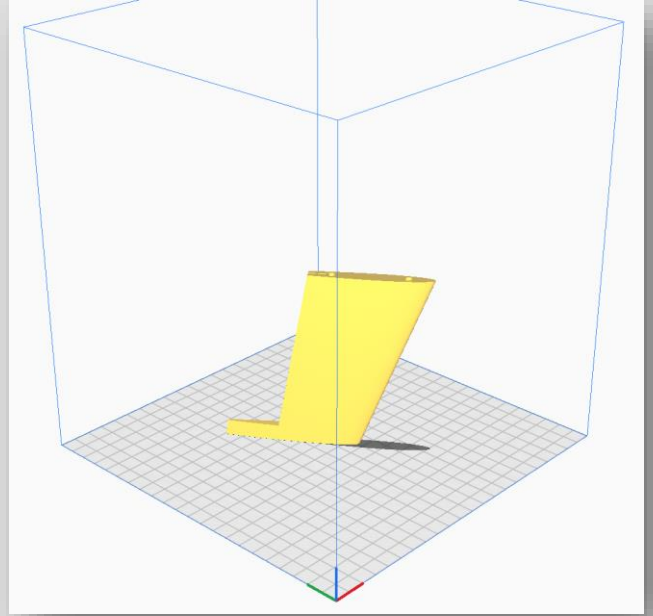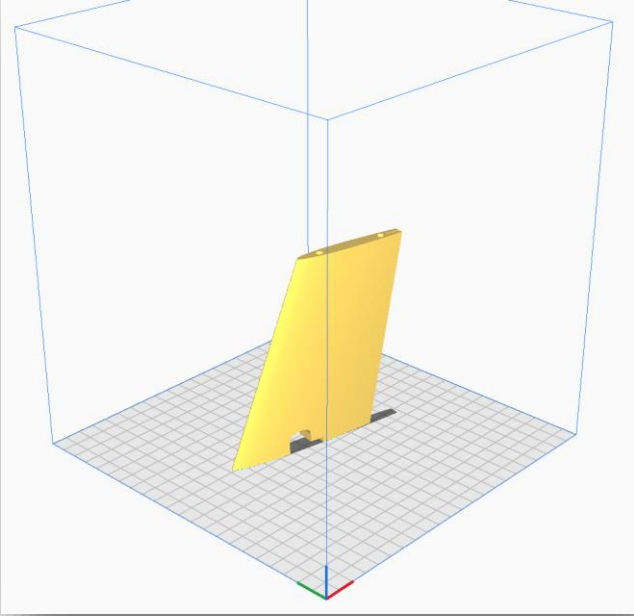


VTAIL 1 / 2 / TIP - 4% gyroid infill

Parts Orientation



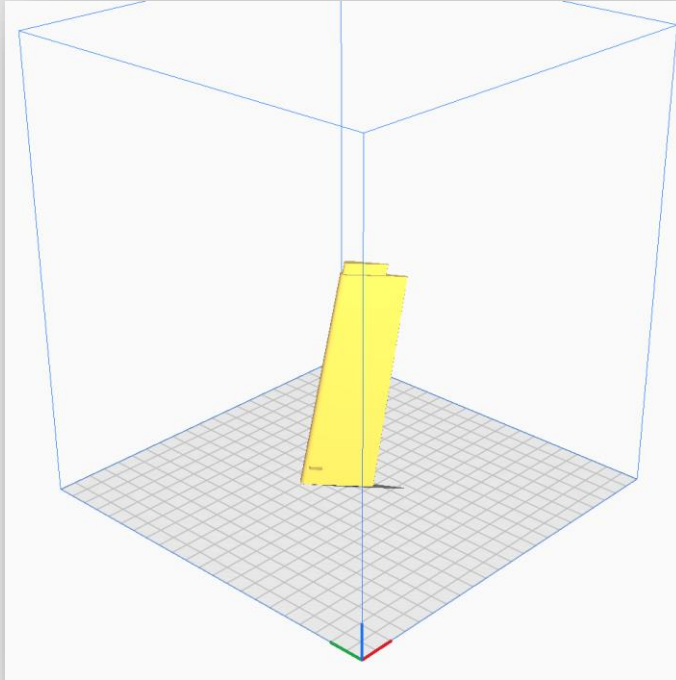


RUDDER 1- 4% gyroid infill

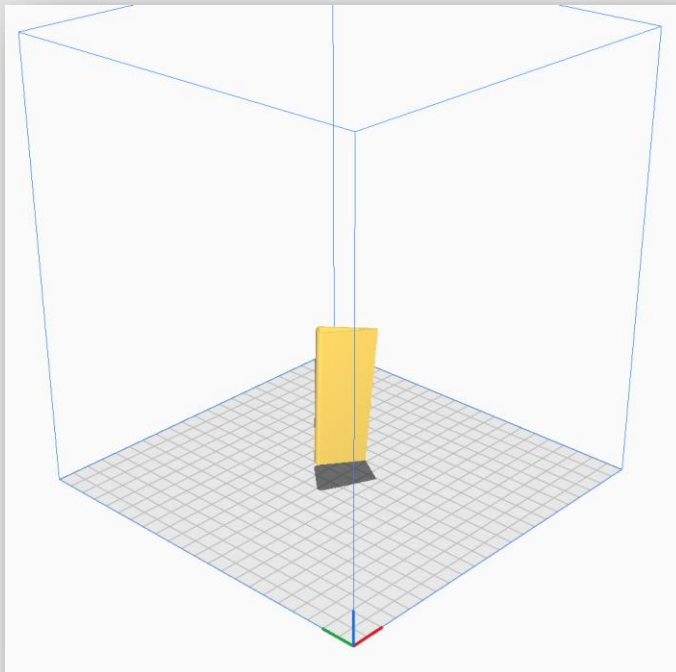



RUDDER 2- 4% gyroid infill

Parts Orientation

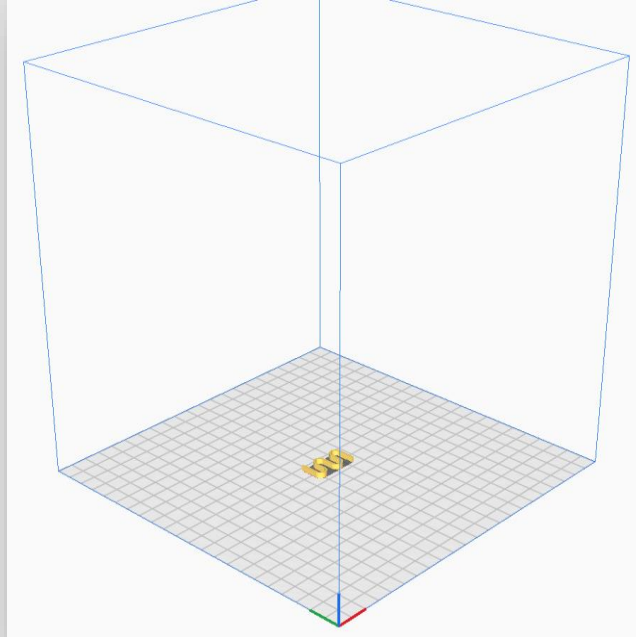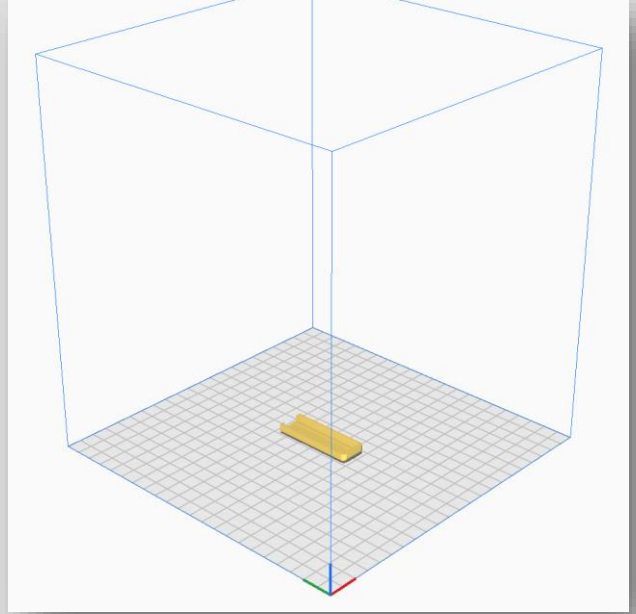
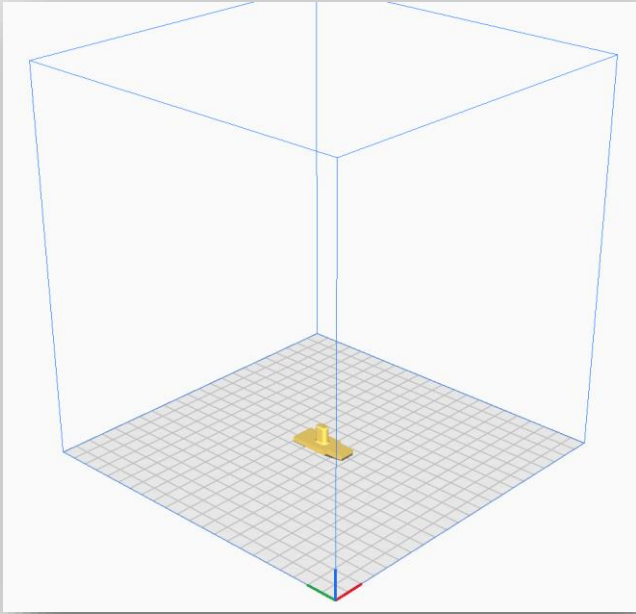


LOCK 1 / 2 / SPRING - 20% grid infill + 3 walls

Parts Orientation

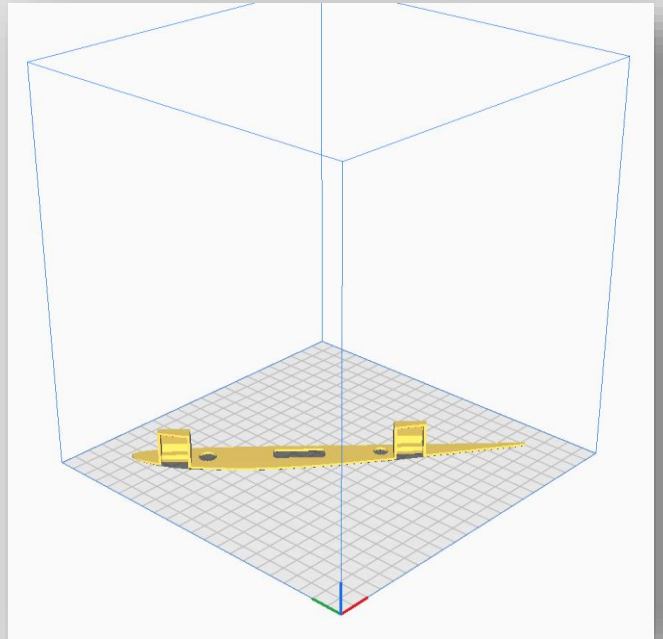
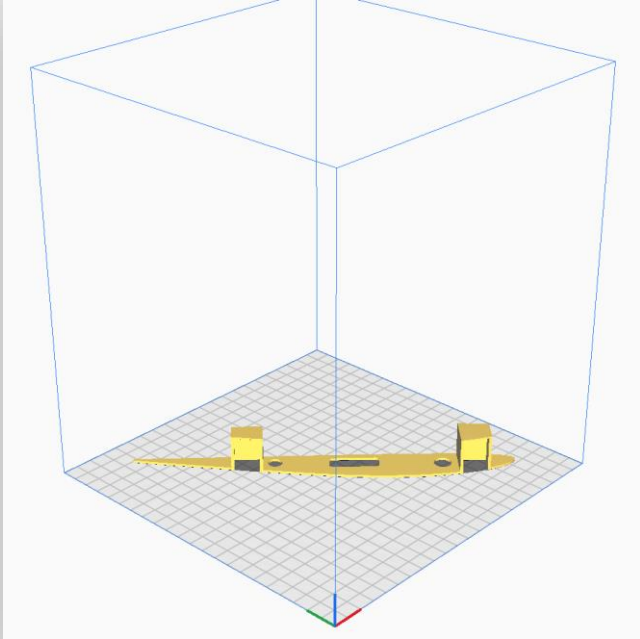


WING / FUS ROOT - 20% grid infill + 3 walls

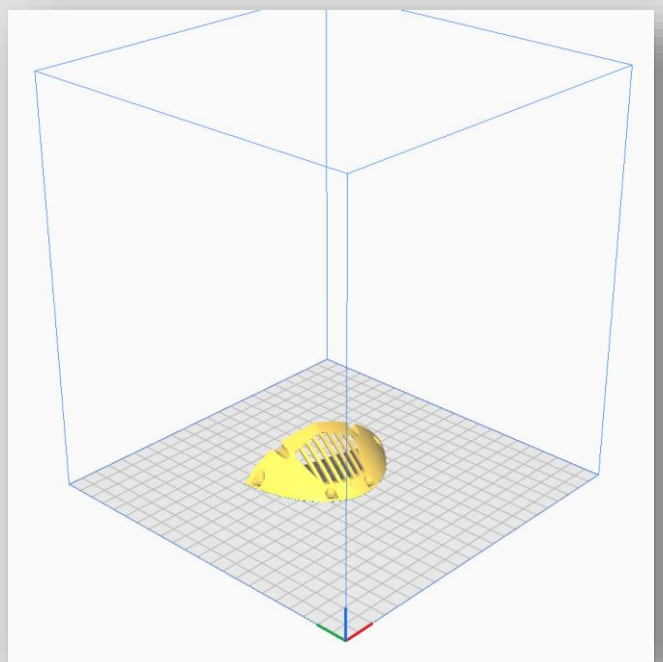
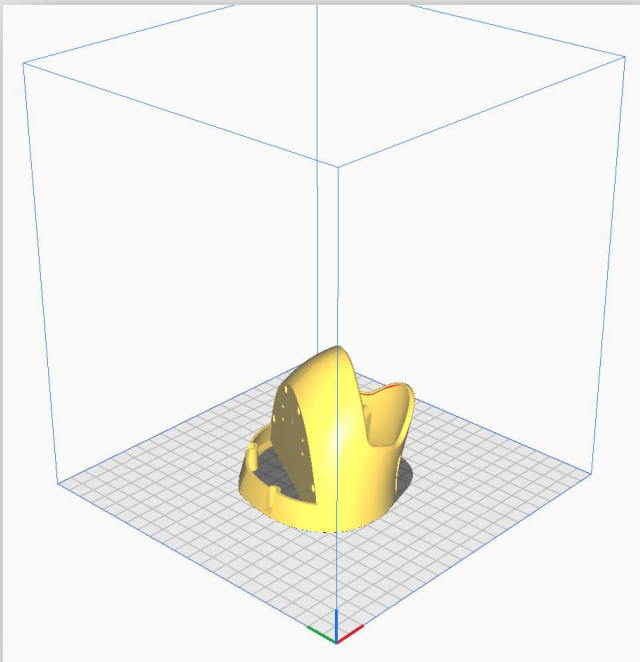


NOSE / NOSE TOP GIMBAL - 20% grid infill + 3 walls

Parts Orientation

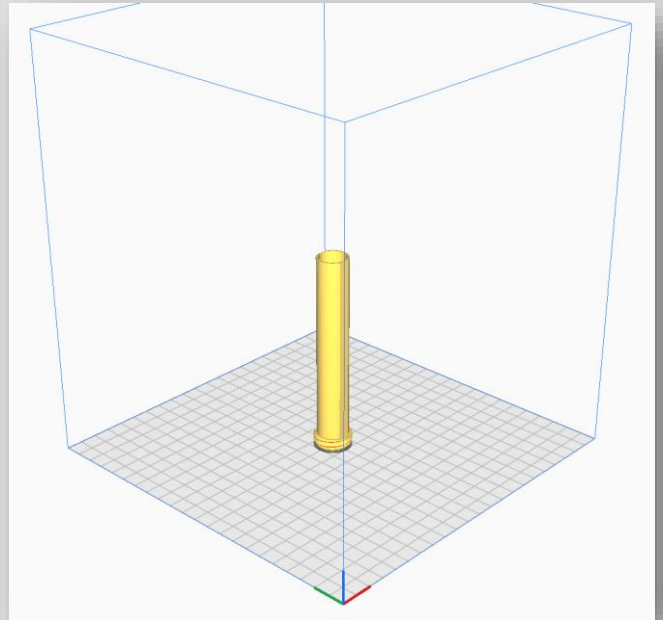
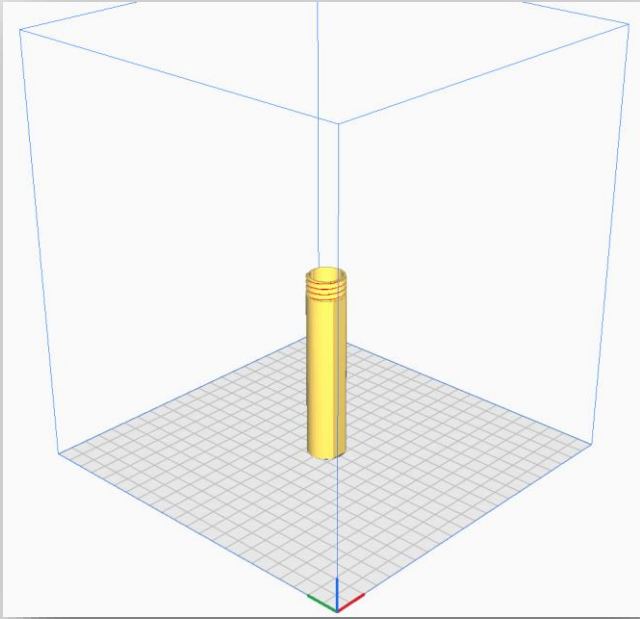


BOOM FUS MOUNT / INSERT- 20% grid infill + 3 walls

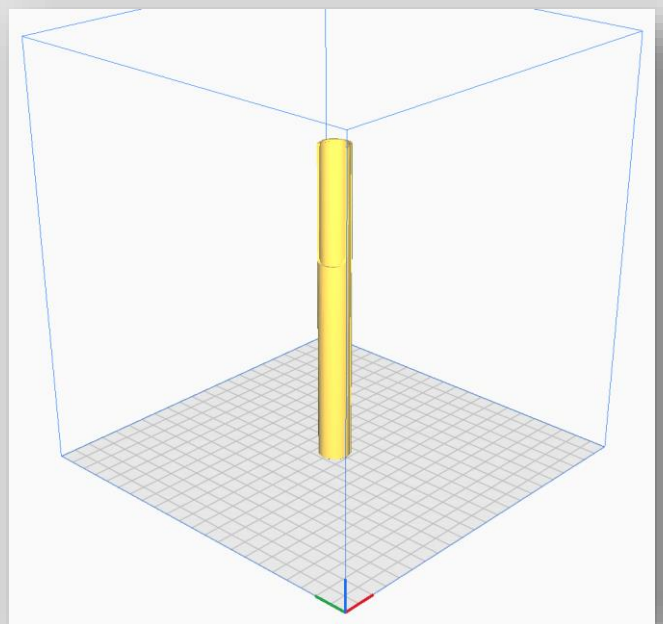
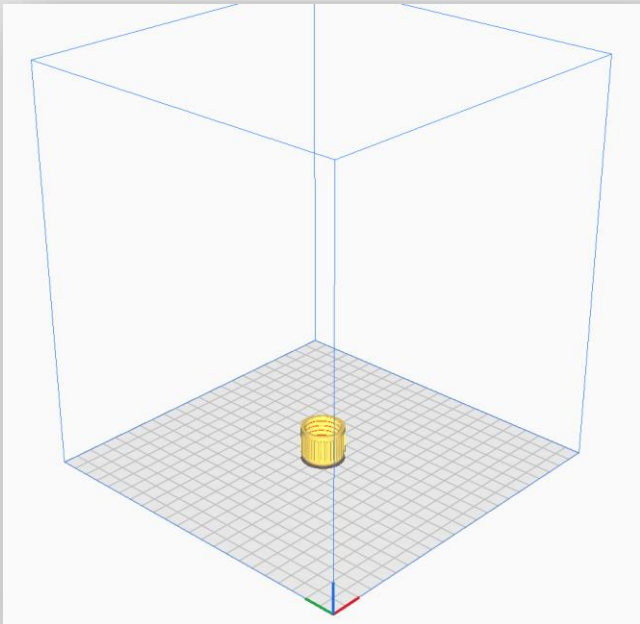


BOOM KNOB / TAIL MOUNT - 20% grid infill + 3 walls

Parts Orientation

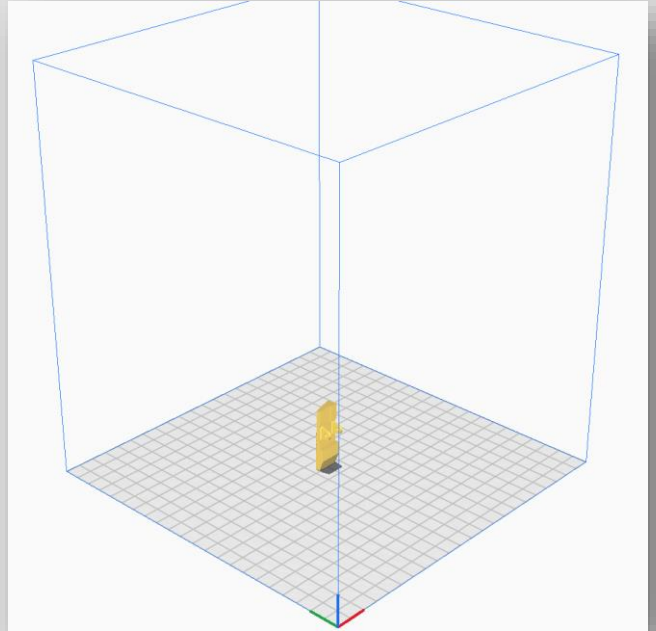
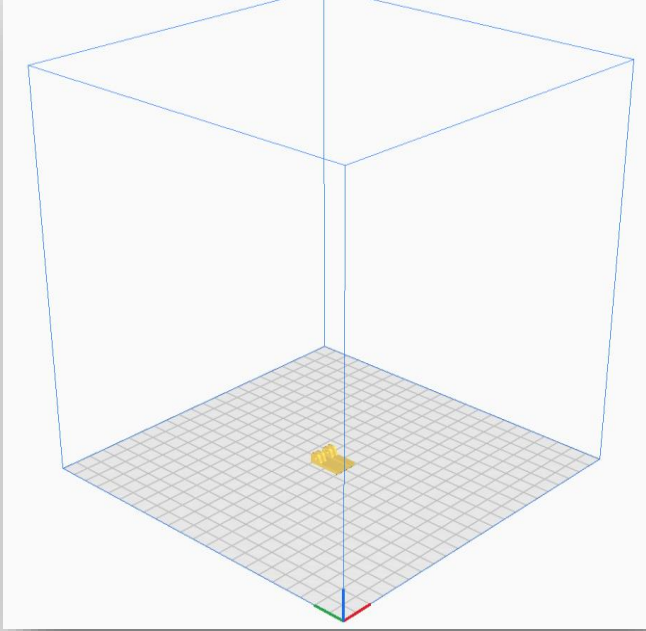


WING LOCK BASE / FRONT / REAR - 20% grid infill + 3 walls

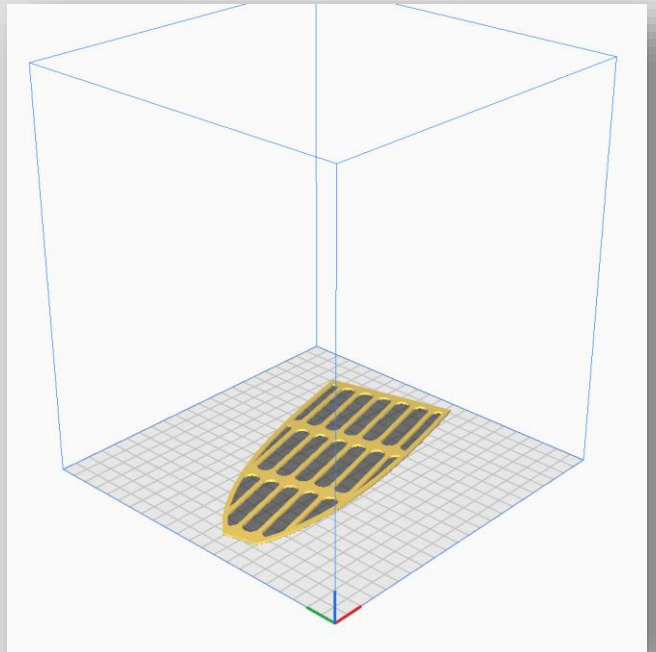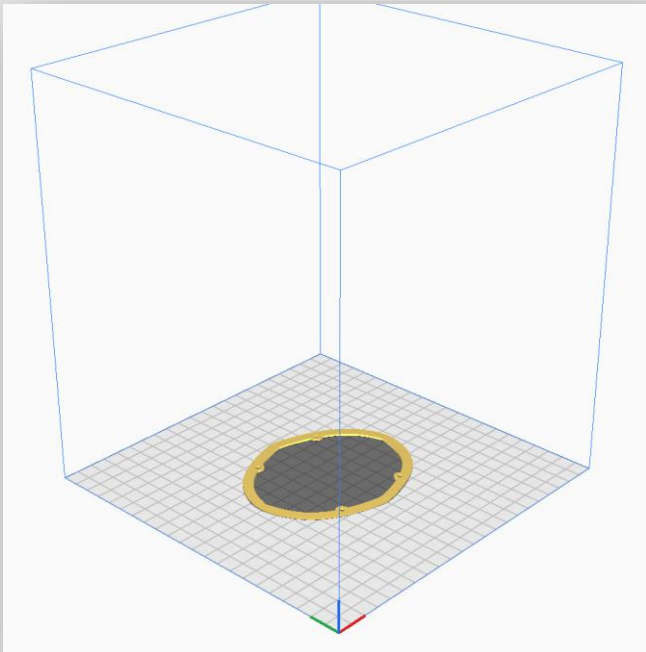


FRONT REINFORCEMENT / BAT PAD - 20% grid infill + 3 walls

Parts Orientation

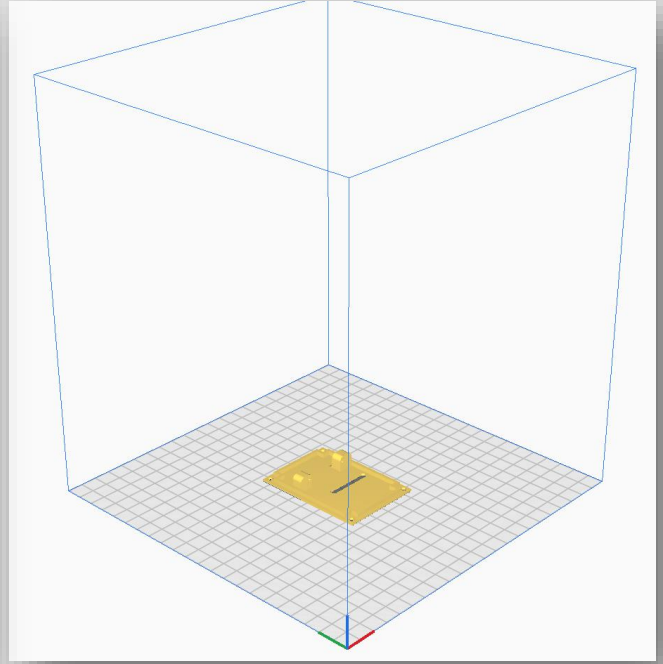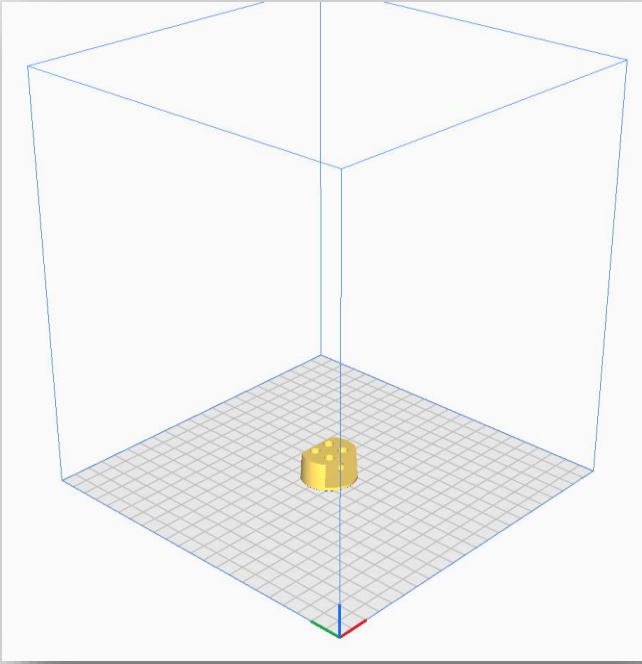


MOTOR MOUNT / SERVO COVER - 20% grid infill + 3 walls

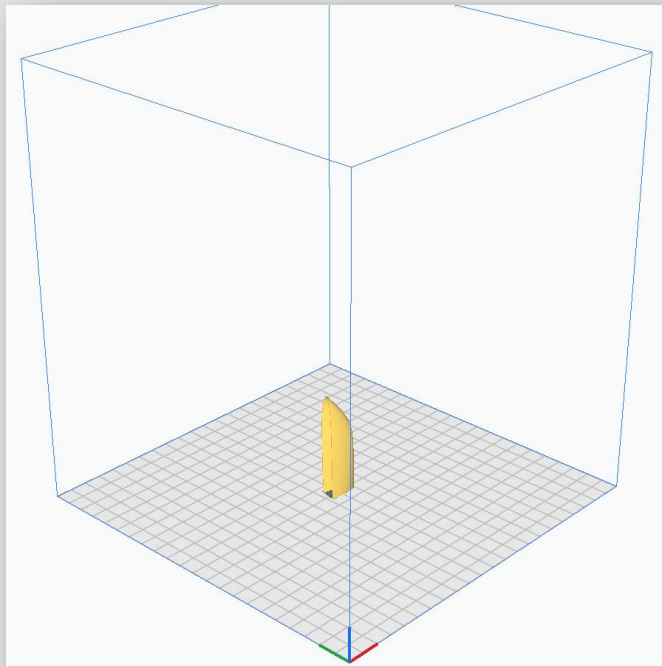

WING LED COVER – thin single wall print + transparent filament

Nose Variants

There are 2 variants of the nose. You can choose version with a VTX mounted inside and a 19x19mm FPV camera, or the version adapted for the GM3 Walksnail gimbal (or others with a similar design). The VTX mounts on a "shelf" and the available space is sufficient to accommodate any VTX. The nose is fully removable, mounted on four M3 screws. It is also available in STEP format for easy editing. You can edit this part and adapt it to your own more individual needs and to mount different payload. You can also have several versions of the nose and change them according to the needs of a particular flight.

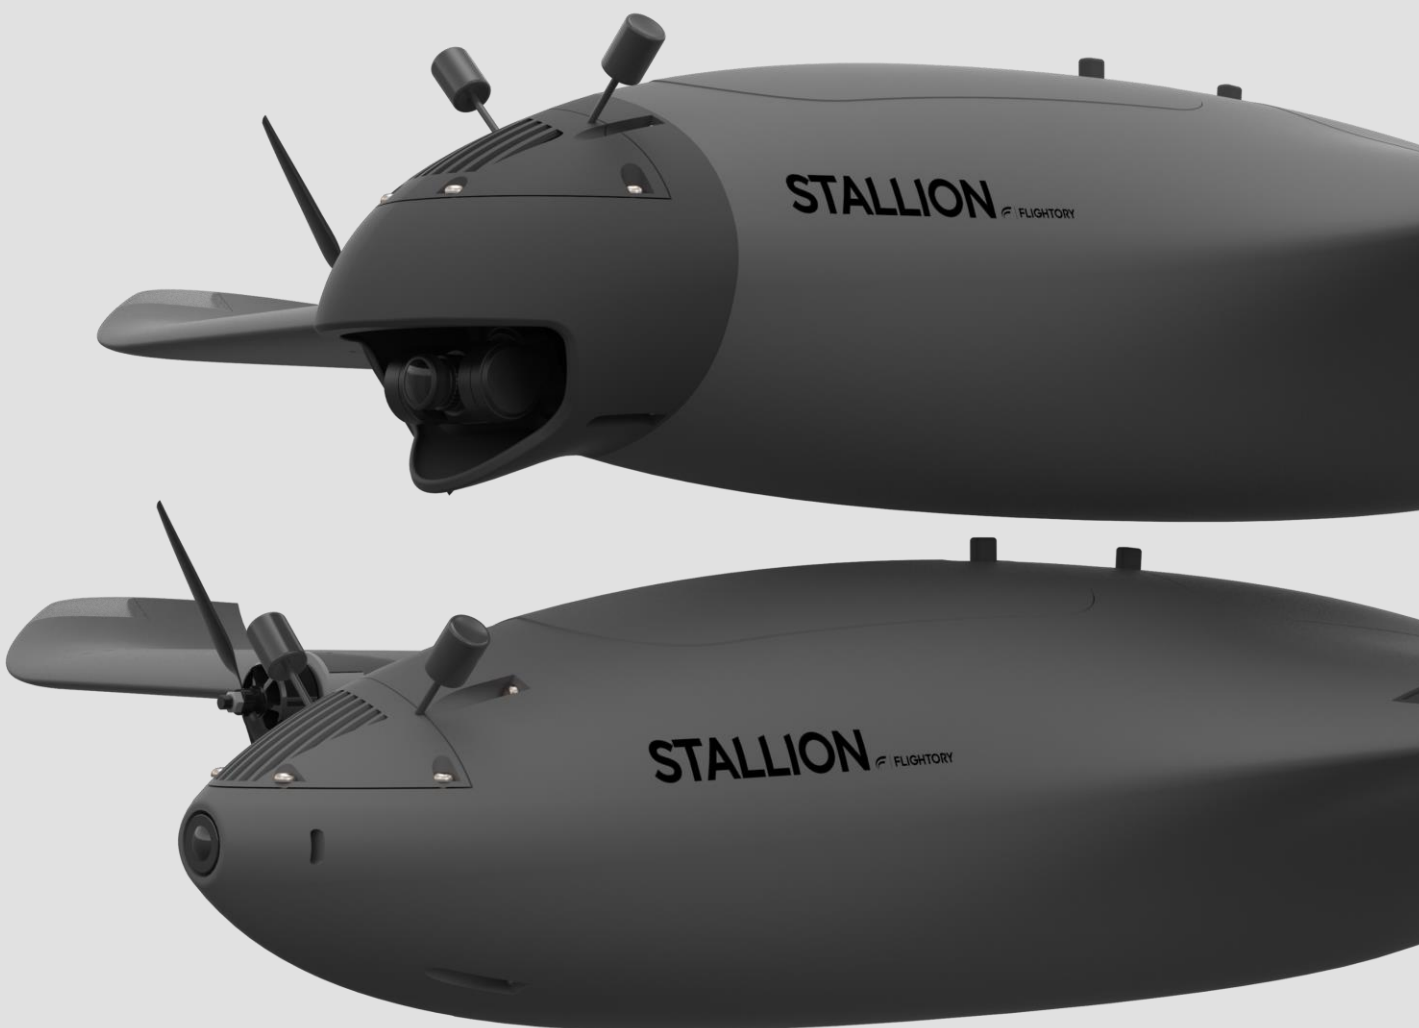


Wingtip Variant

There are also 2 versions of wingtips. One with a space for 2812 ARM LED and a cover printed from transparent material, or a regular version without a navigation light.




Nose Variants

In addition to the ready-made nose versions described earlier, there is also a CLEAN version of the nose available. This is a solid model in STEP format, ready for any modifications to accommodate a custom payload.

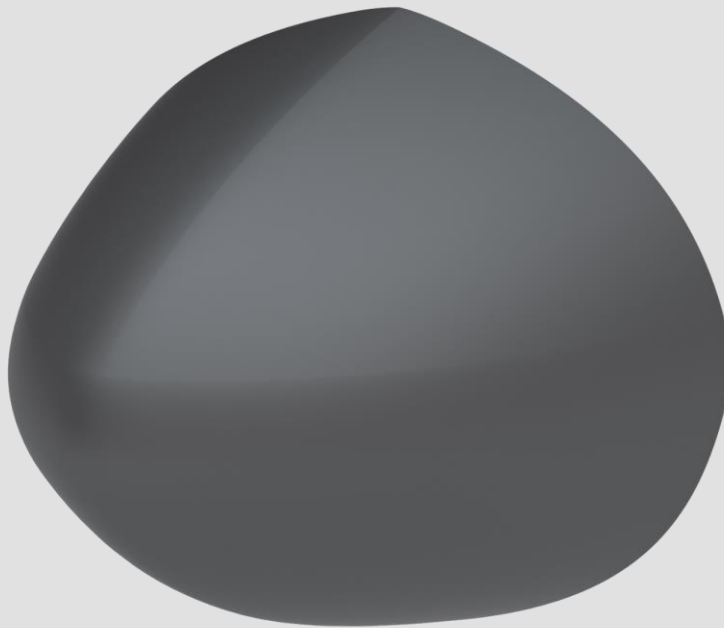


STEP Files

All files are available in STL format. In addition, some important elements are available in STEP format, which allows easier editing and customization. Check the full list of STEP files in the [STEP FILES LIST](#) section.

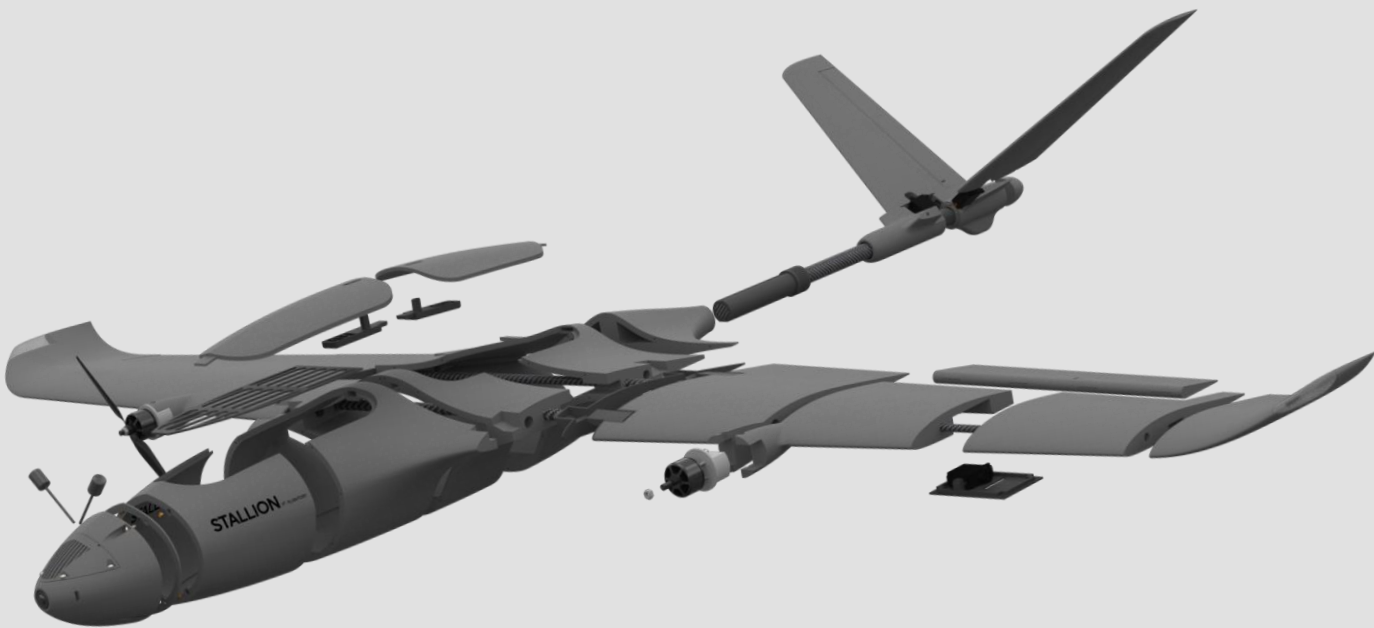

You can find these files in folders labeled STEP

Fuselage Assembly

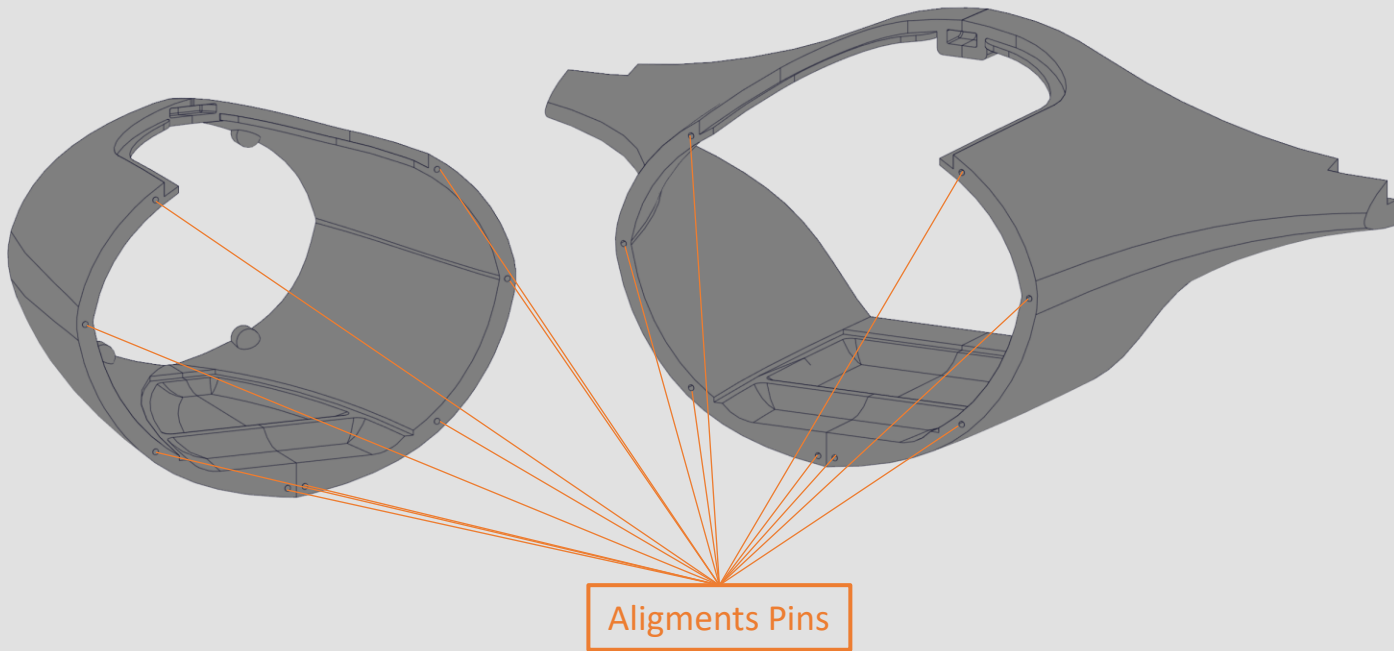


Fuselage segments are available in both a split version (left and right halves) and a single-piece version, allowing for selection based on preference. Each segment includes small 2mm alignment holes to facilitate precise positioning during assembly. Short fragments of filament can be inserted into these holes to aid in alignment and bonding. Before gluing, it is recommended to clean the parts, especially if stringing occurred during printing or if supports were used, as they must be removed.


Fuselage Assembly

Prepare all fuselage segments. Before gluing, you can gently sand the surface of all elements, especially the gluing surfaces.

It's best to use **thick CA glue**.

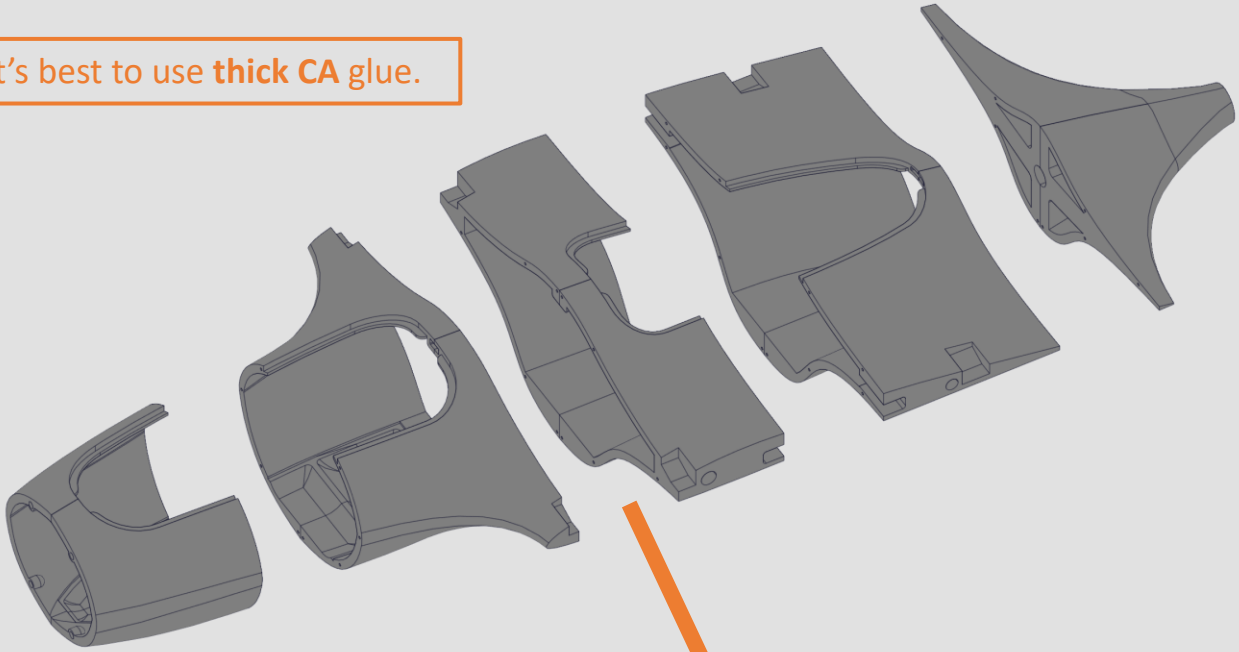


If you printed the fuselage segments divided to left and right side, simply glue them together also.

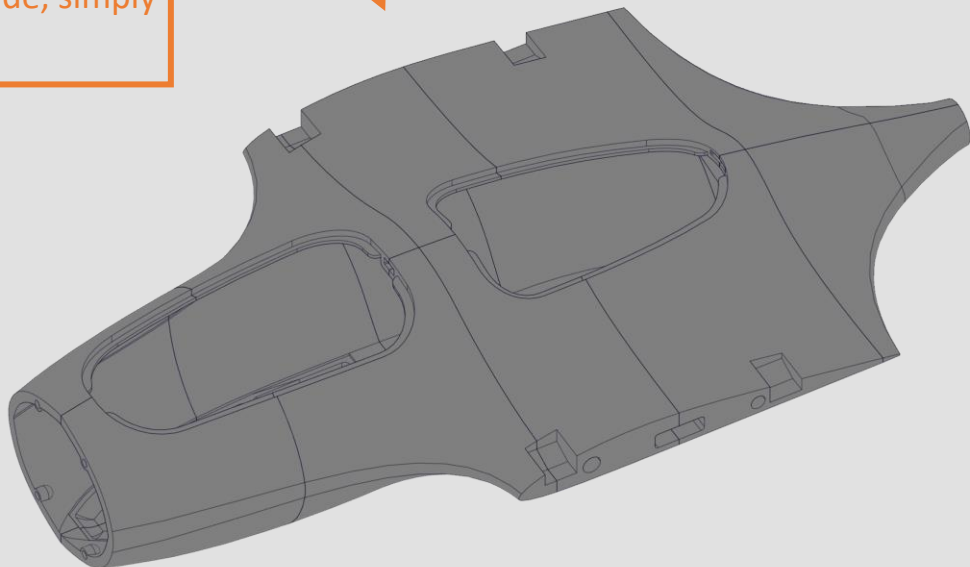


Fuselage Assembly

Prepare parts printed with PET-G or other hard material. Take the **BATTERY PAD** and paste it in the designated place in the front of the fuselage.

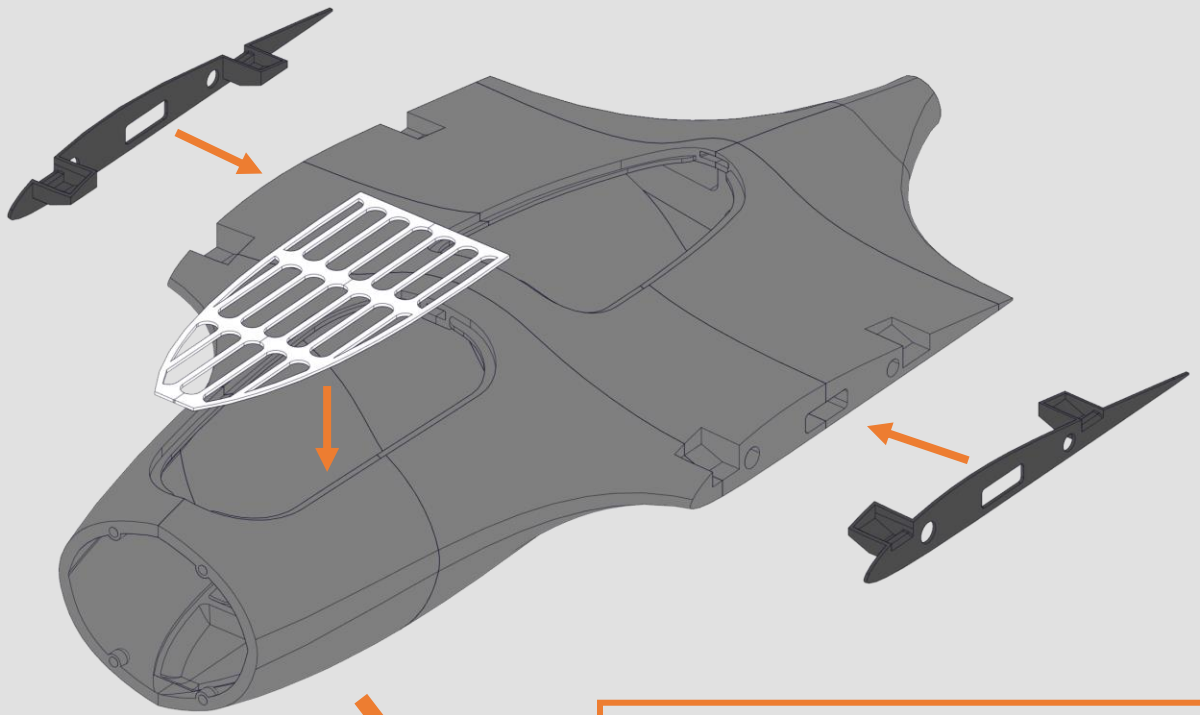


Take **FUS ROOT** and glue with CA to the fuselage in the corresponding places.

It's best to use **thick CA glue**.

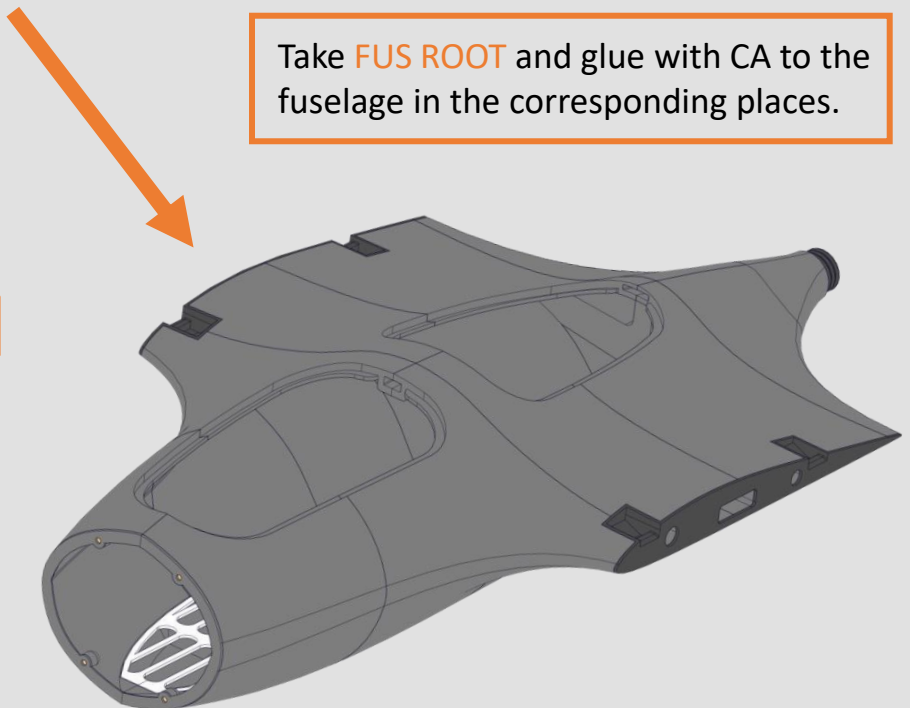


Fuselage Assembly

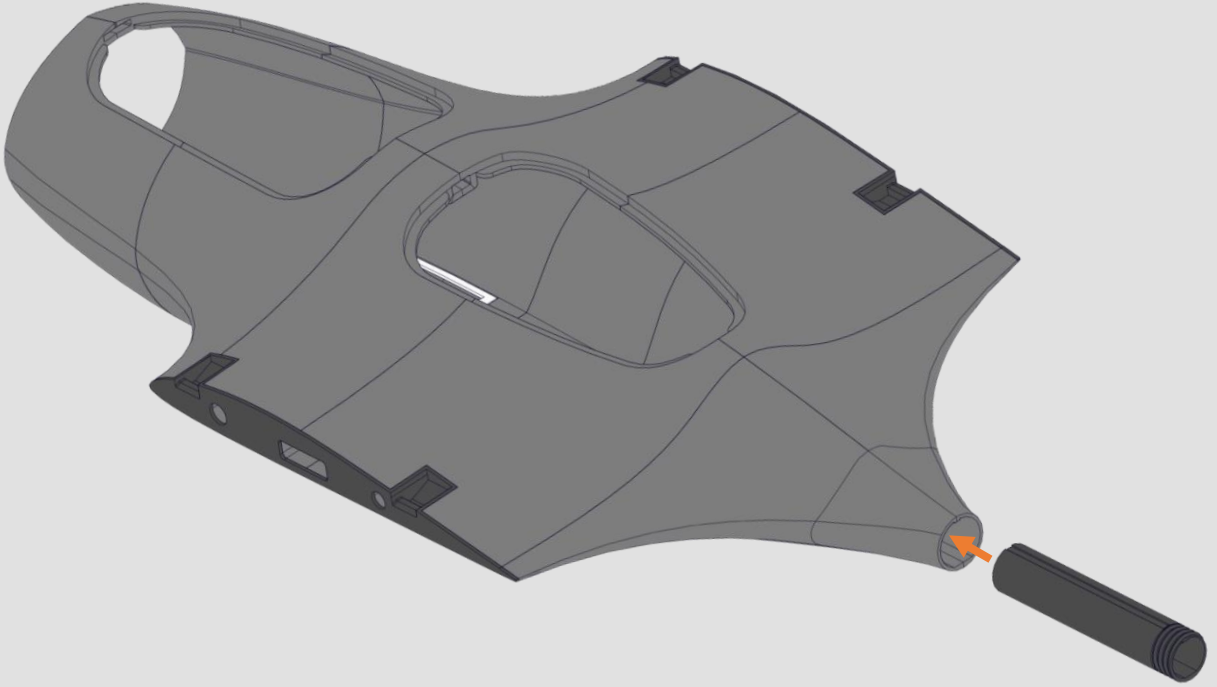

Take the **TAIL BOOM MOUNT** printed with PETG or another rigid material and paste it into the designated slot. This component features a designed "guide" that ensures the correct orientation within the fuselage, allowing for smooth and precise tail assembly.

Fuselage Assembly


Now take M3 threaded inserts with an outer diameter of 5mm. Insert them into the designated places in the front part of the fuselage. You can use a slightly heated soldering iron for this. Then glue **NOSE REINFORCEMENT** printed with PETG or other hard material. This noticeably increases the strength of the nose when it is frequently unscrewed and prevents the threaded inserts from being torn out.

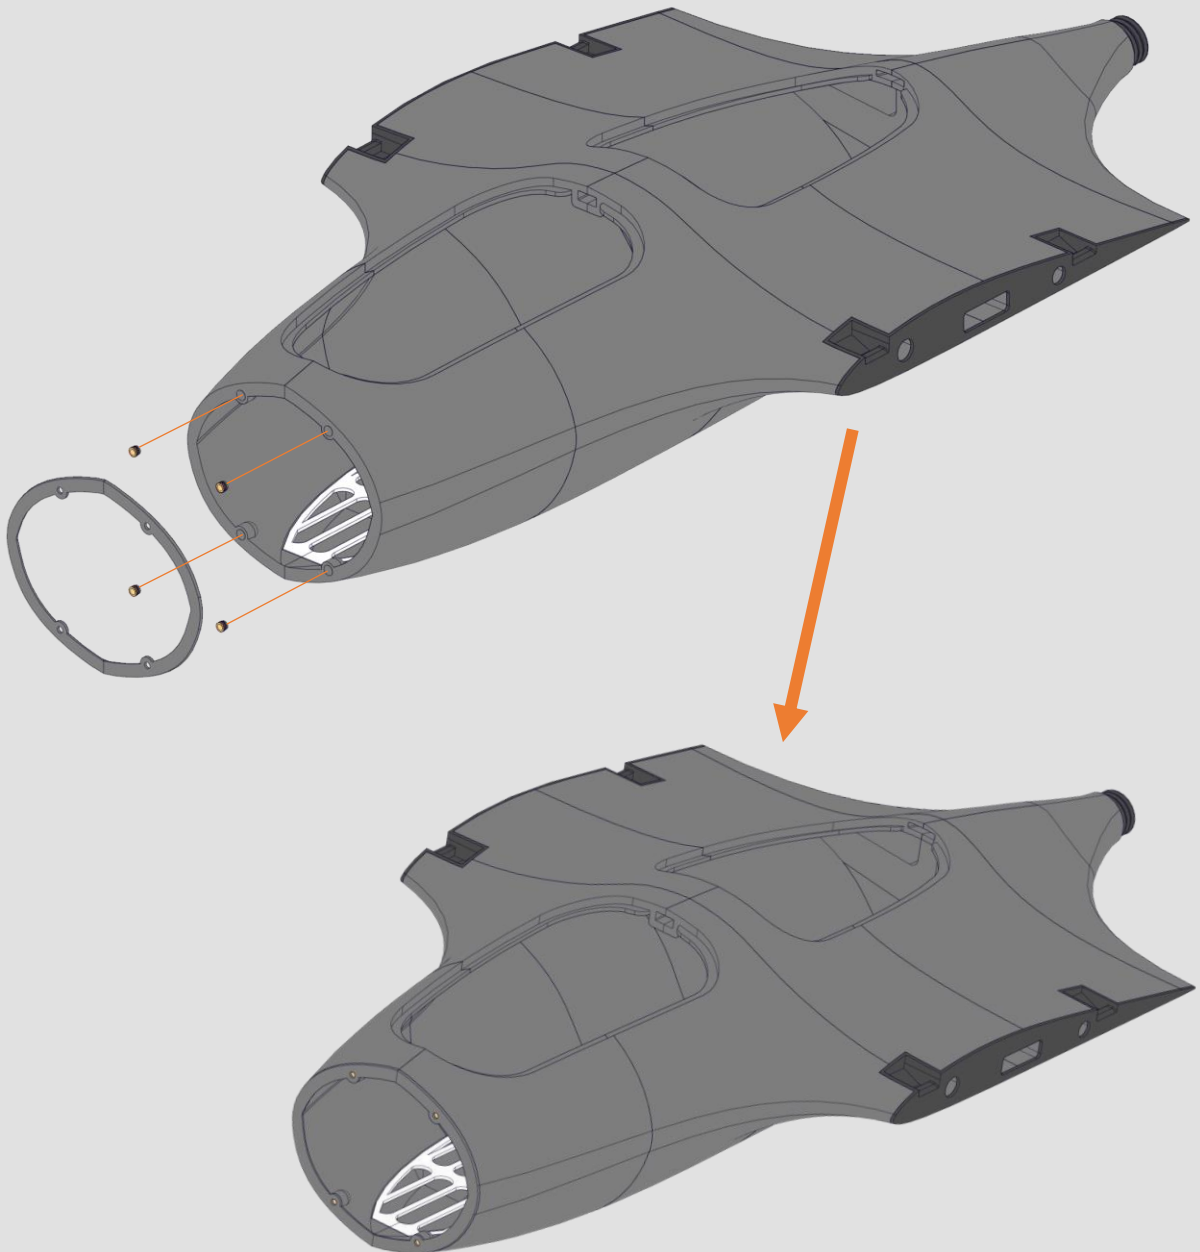

Tail Assembly


Take the tail components in order: **TAIL 1, 2, 3** and glue them together into a single piece.

It's best to use **thick CA glue**.

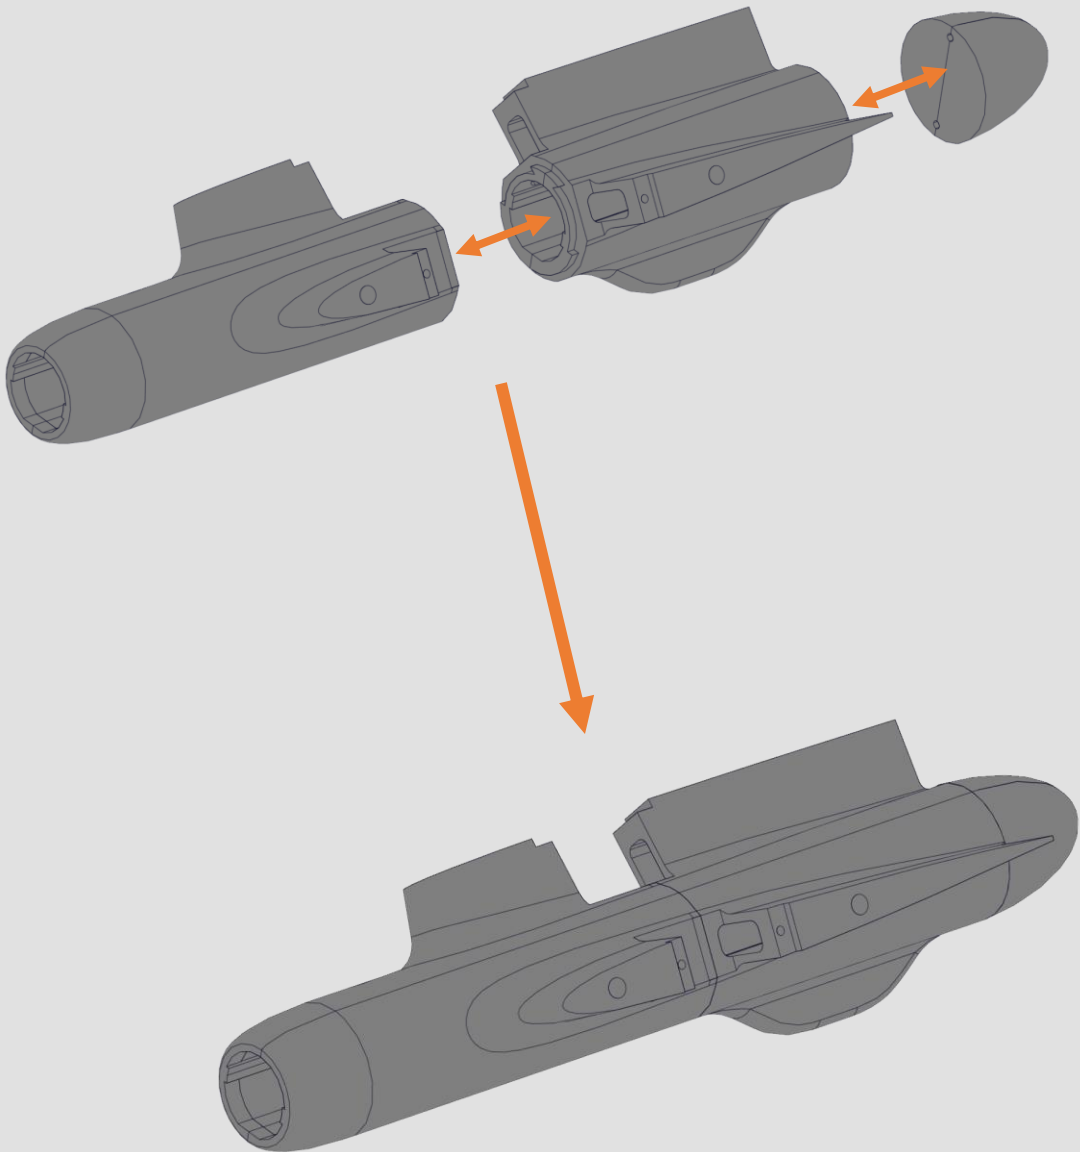


Tail Assembly

Prepare the Tailboom components printed from PETG or another rigid material. Take the Tailboom, which is a **16mm diameter carbon tube** cut to a **length of 430mm**. Slide the **BOOM FUS INSERT**, **BOOM KNOB**, and **BOOM TAIL INSERT** onto the tube as shown in the diagram. These components have a flattened bottom to allow for parallel alignment. Place the entire assembly on a flat surface and permanently glue the **FUS INSERT** and **TAIL INSERT** into the tube. If you are concerned about the fast curing time of CA glue, you can use epoxy glue with a longer setting time instead. Finally, cut a slot at the end of the tube, following the shape defined by the **TAIL INSERT**. This can be easily done using a Dremel or a similar tool with a small composite-cutting disc. This step is necessary to allow the servo cables to pass through the inside of the tube.

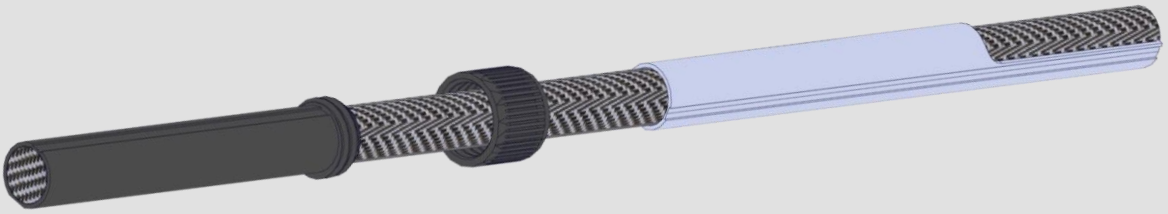


Cut the slot in the carbon tube, as it is necessary to route the servo cables inside the tailboom.




Tail Assembly

Place the servos in the designated mounting points in the tail. Insert the cables through the dedicated opening and route them outside. The servos should be secured with screws, which are always included in the servo set. To further reinforce the mounting, a small amount of hot glue can be applied to the bottom of the servo. At this stage, the cables should be extended using ready-made extension cables or by soldering additional wires to ensure they are long enough to reach the interior of the fuselage.

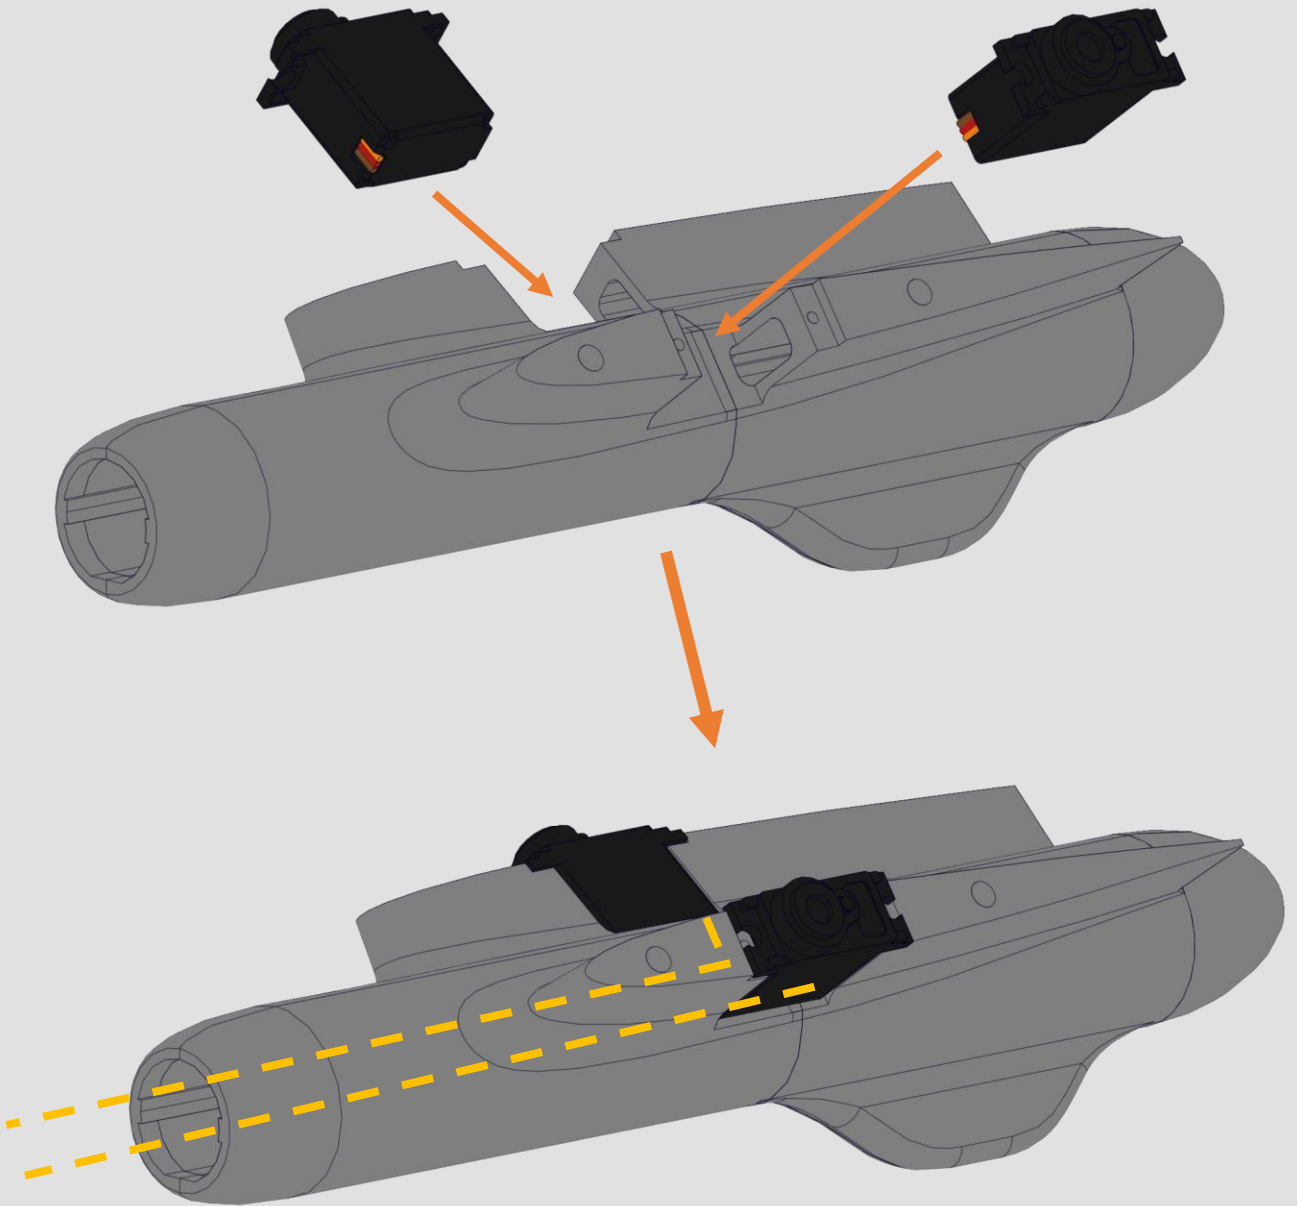

Tail Assembly

At this stage, the previously prepared tailboom should be glued into the tail. Before gluing, insert the cables and route them outside the tube. It is recommended to use epoxy glue with a longer curing time for this process. While inserting the tailboom into the tail, the glue may spill, so it should be applied carefully and in a thin layer. There is no need to cover the entire surface with glue.

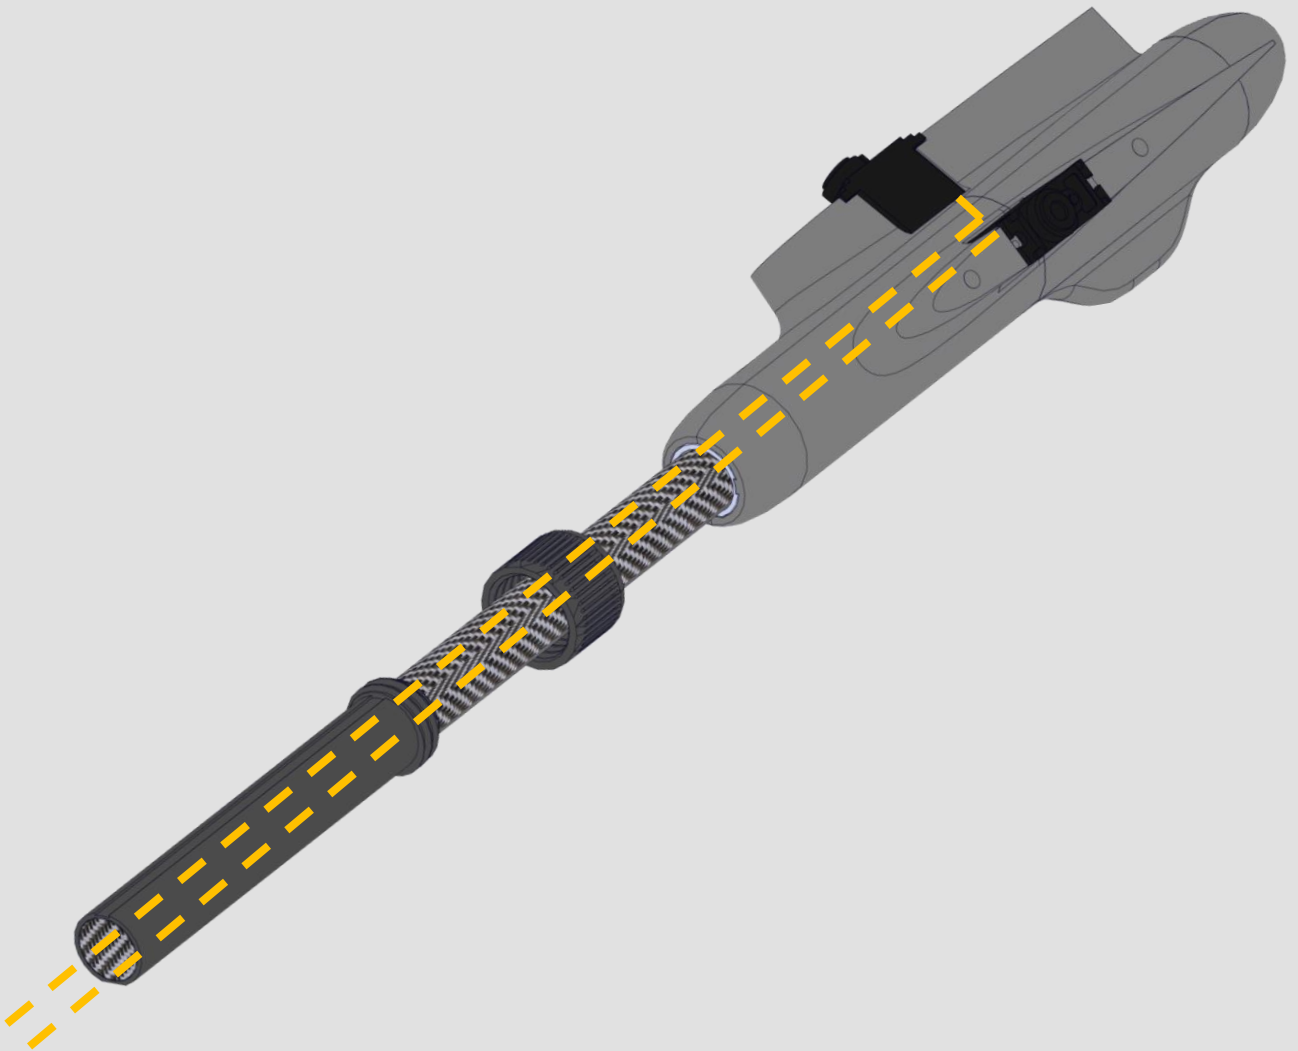


Tail Assembly

Prepare the V-tail components. Take carbon tubes with a diameter of 4mm cut to approximately 260mm. Insert the tubes into the designated slots. Note that the tubes are not parallel to each other. To facilitate easy assembly, insert one tube first, then fit stabilizer, and glue it in place to tail base. Next, insert the second tube, further reinforcing the structure. Finally, glue the tip. The last step is to glue the rudders on CA hinges with thin CA glue. Insert them into the designated slots. At this stage, you can also glue the control horns and connect them to the servos with pushrods.


The front tube is approximately 1 cm longer than the rear one. After inserting the tubes, they can be easily sanded down if necessary.

An additional file, **VTAIL 1 (inverted servo)** is included in the file pack if you want to install servo in reverse, with the servo horn on the opposite side.

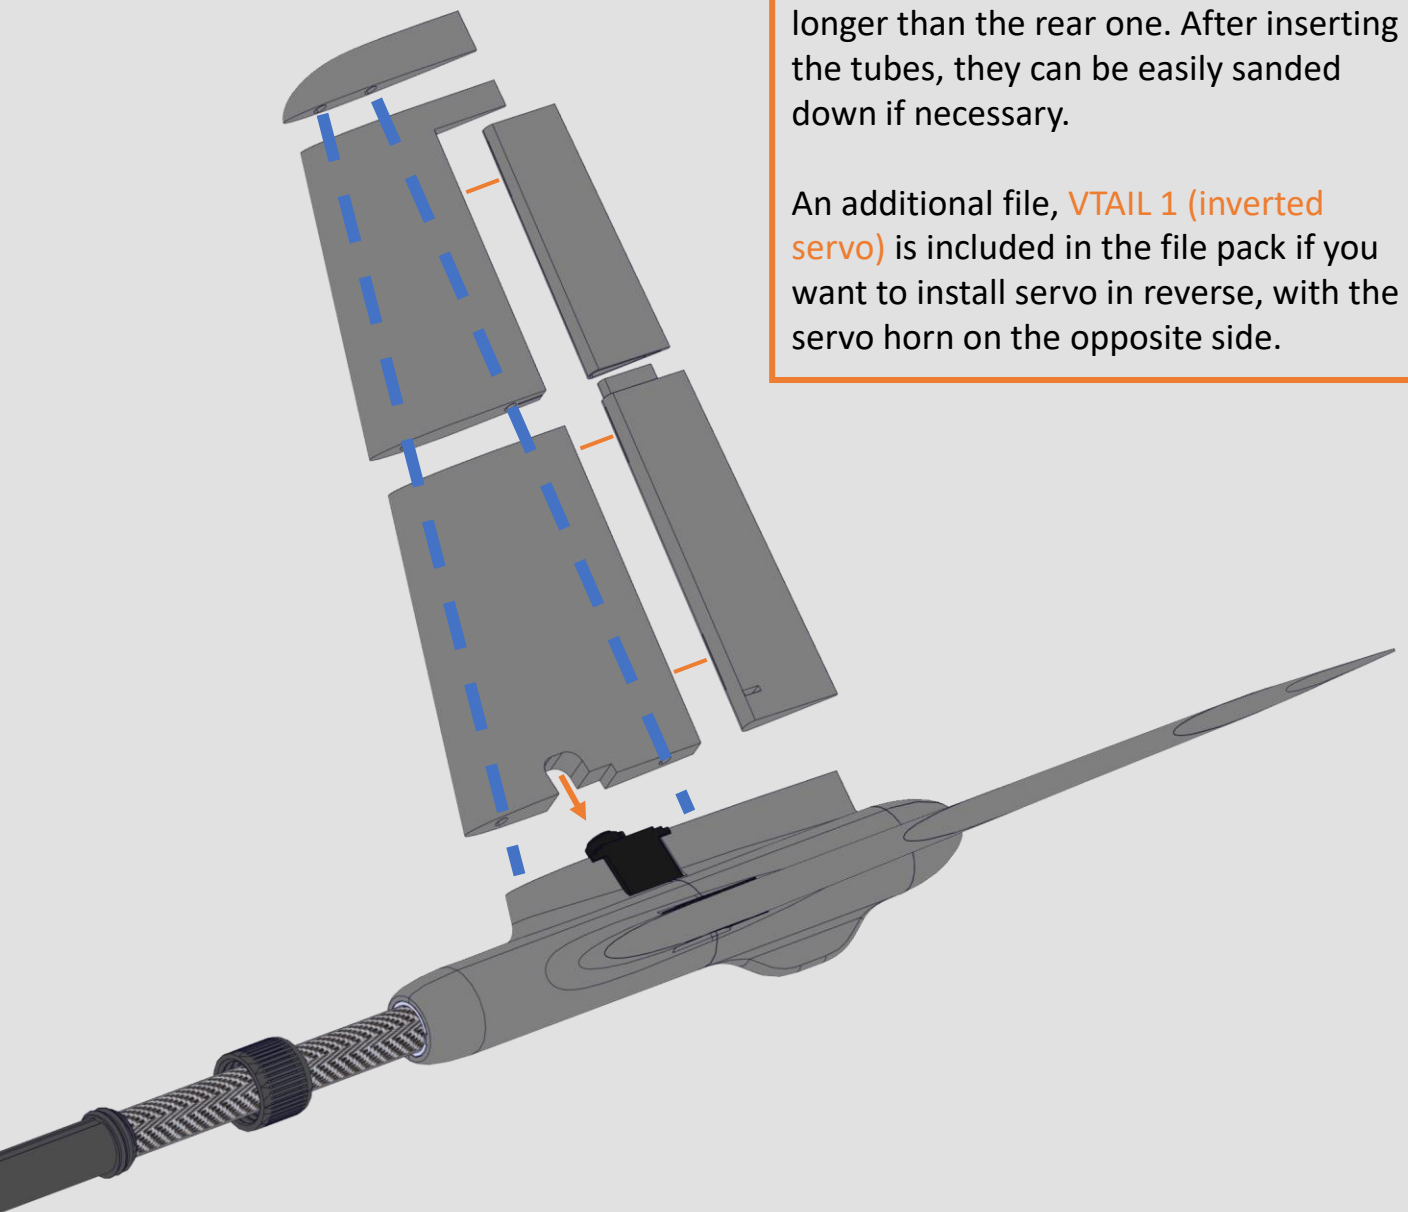


Hatches

Prepare the locks, consisting of 3 elements: **LOCK 1**, **LOCK 2**, and **LOCK SPRING**. Assemble them as shown in the diagram.

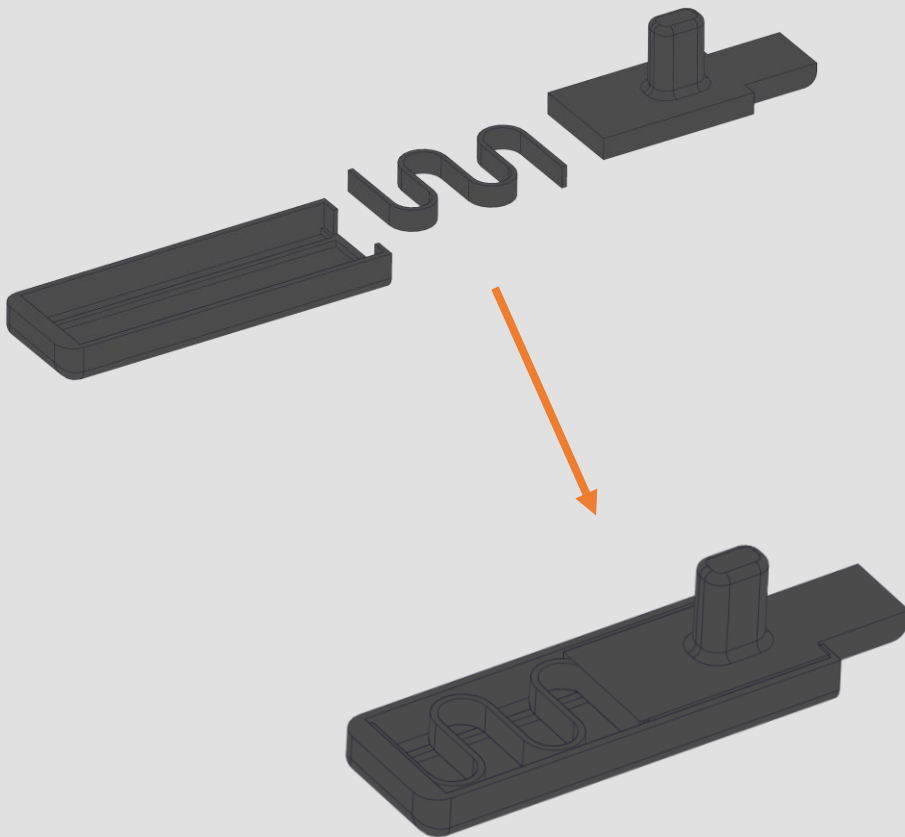


Hatches

Prepare the front and rear hatch. Assembled locks paste into the designated places. Glue locks into the hatches using CA, but carefully so that the glue does not spill and block the lock.

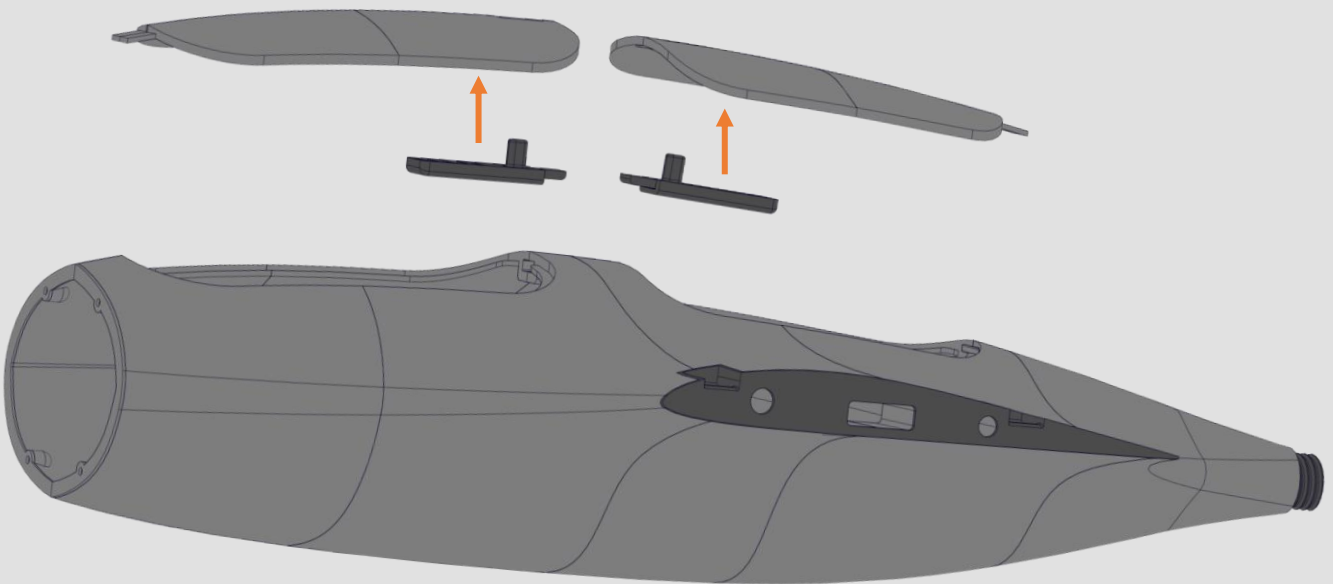


Nose Mount

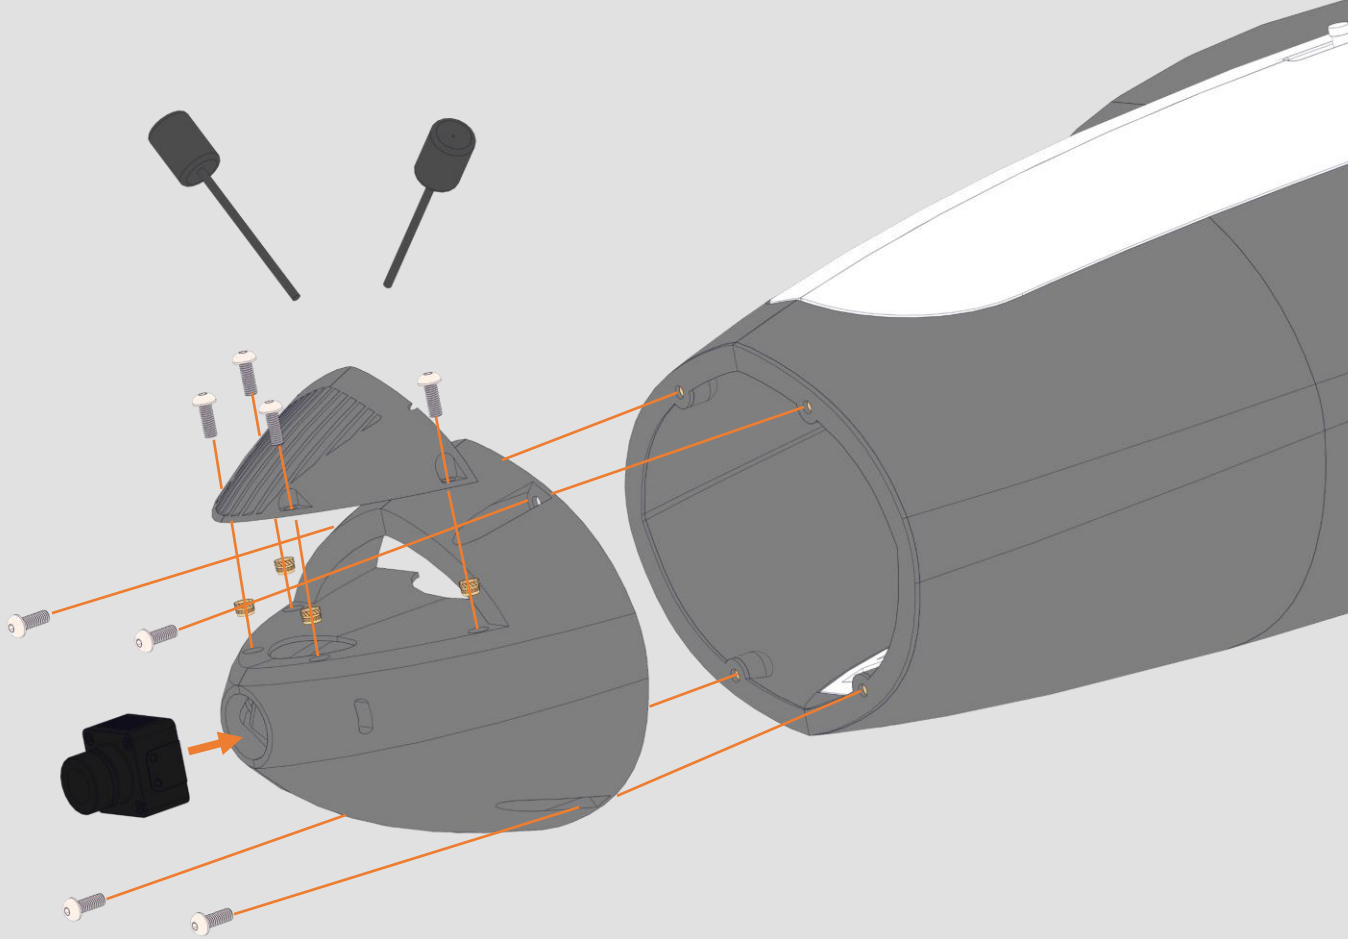


Now you can mount the nose with short M3 screws. If you are using version with VTX, you can put your VTX on the "shelf" and cover it with **NOSE TOP** and secure the antennas.

Nose Mount

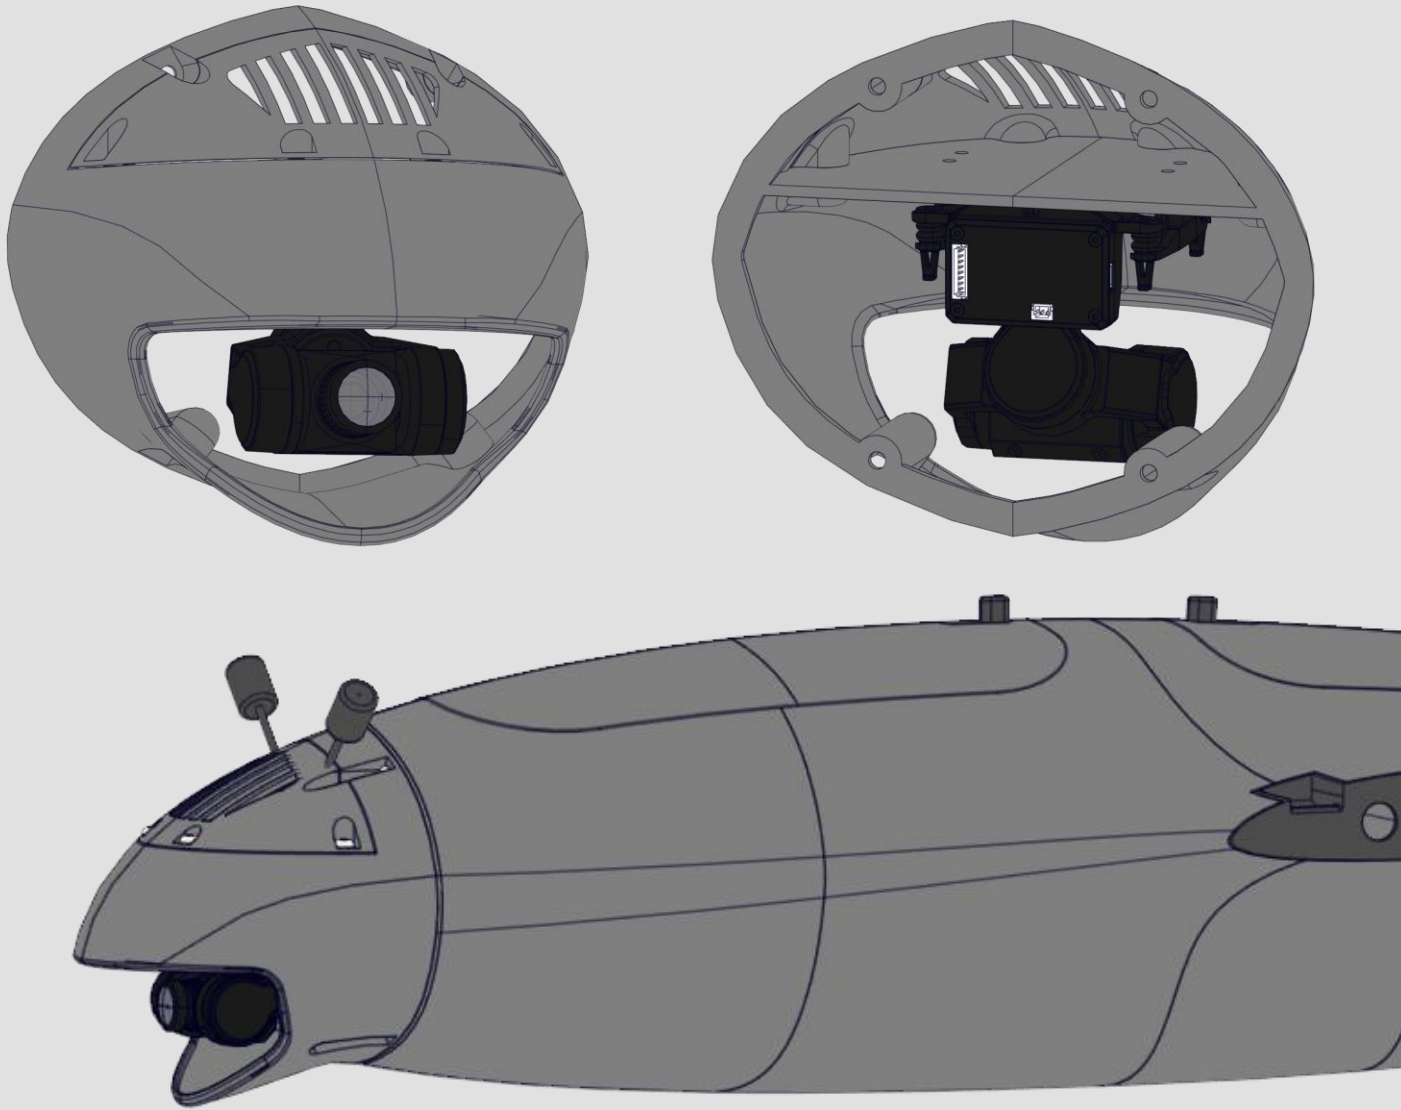


The assembly of the nose with the gimbal is similar. The GM3 gimbal is mounted to the shelf from below using 4 M2 screws included with the gimbal set. Gimbals from other manufacturers with a similar design, also compatible with the DJI system, follow the same structure. References to specific gimbals can be found in the "Recommended Electronics" section.

Tail Assembly

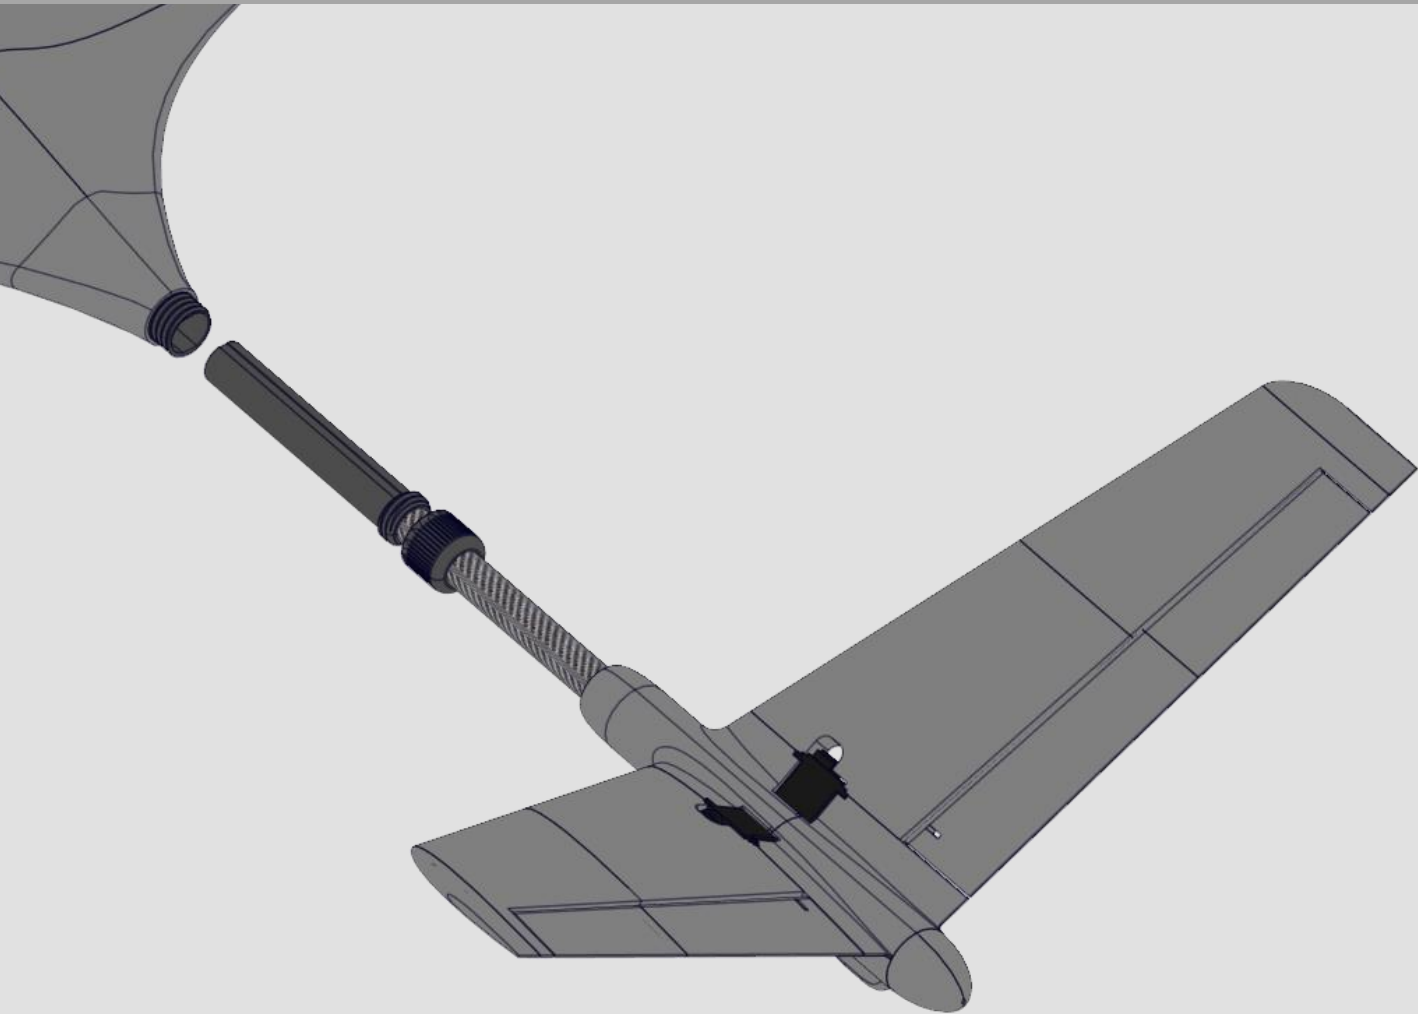


At this stage, the tail can be mounted to the fuselage. Slide the tailboom into the fuselage, ensuring the servo cables are routed inside. Once this is done, the threads will align and connect. Finally, tighten the knob, which will fully secure the tail. The threads can be lubricated with a small amount of silicone grease or a similar lubricant to reduce any resistance when tightening.

Wings Assembly

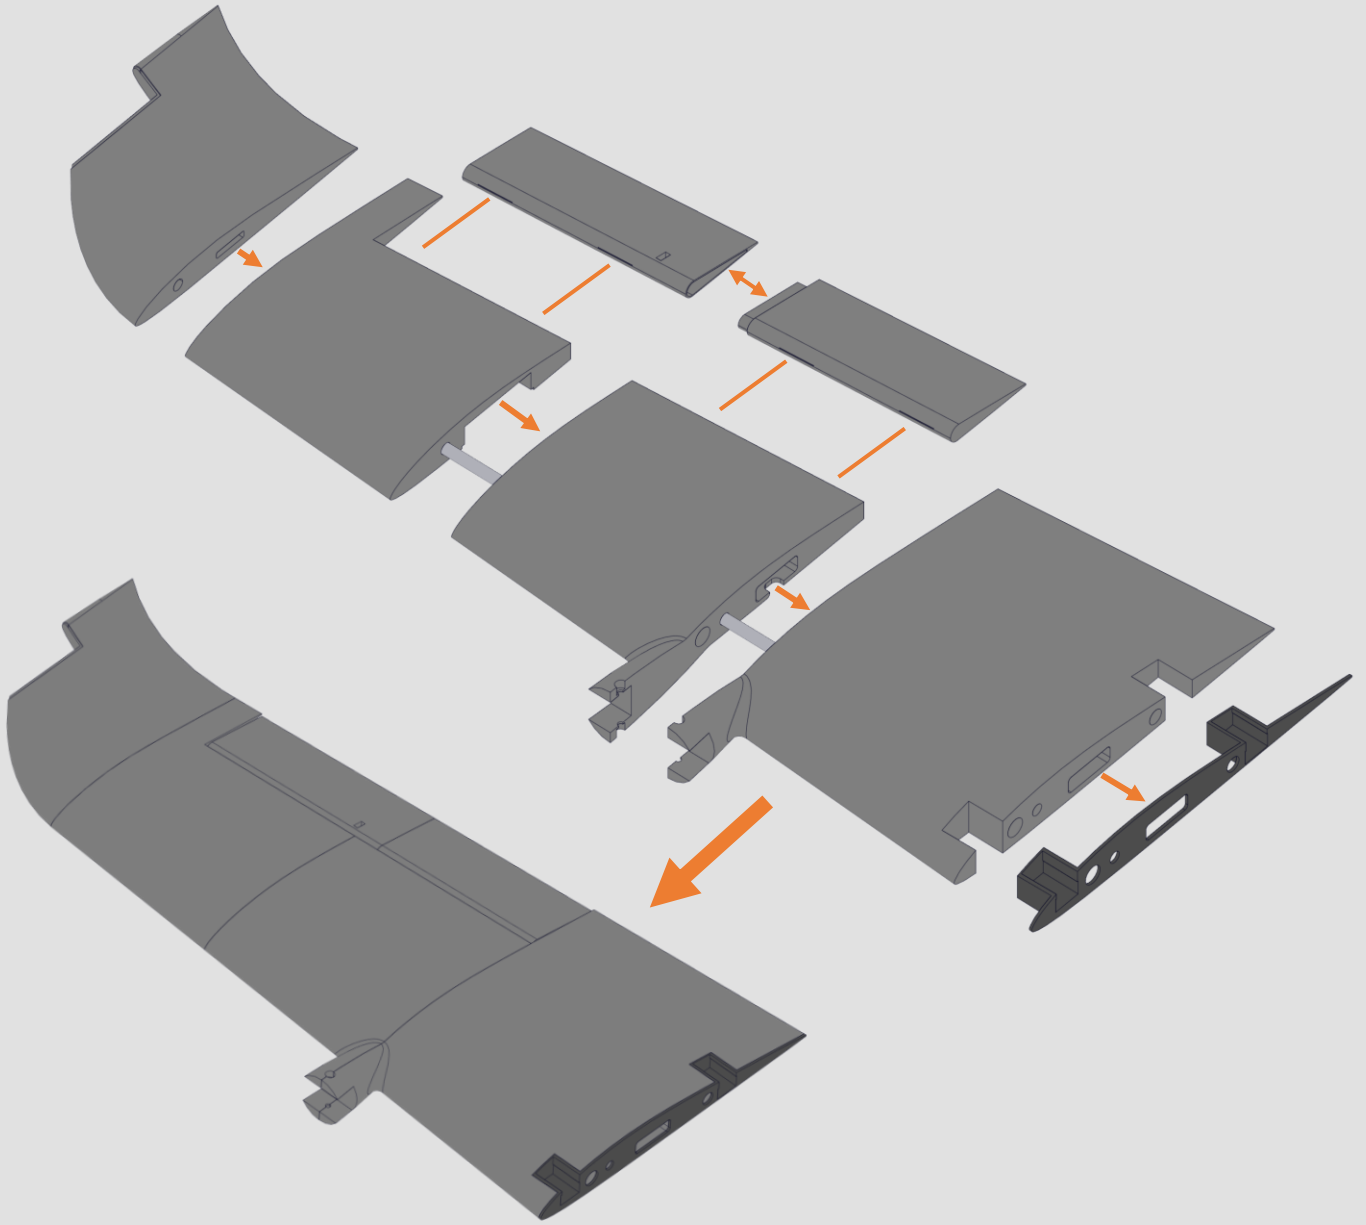


Glue all the wing segments together into a single piece. Decide which wingtip you want to use, with or without navigation lights. Insert the 6mm carbon tube, cut to a length of 435mm, into the designated slot. The tube does not need to be glued. Finally, insert the aileron using four 20x25mm CA hinges, or hinges made from another thin material. The aileron can be printed in two pieces or as a single piece, depending on your preferences and the capabilities of your printer.

Wings Assembly

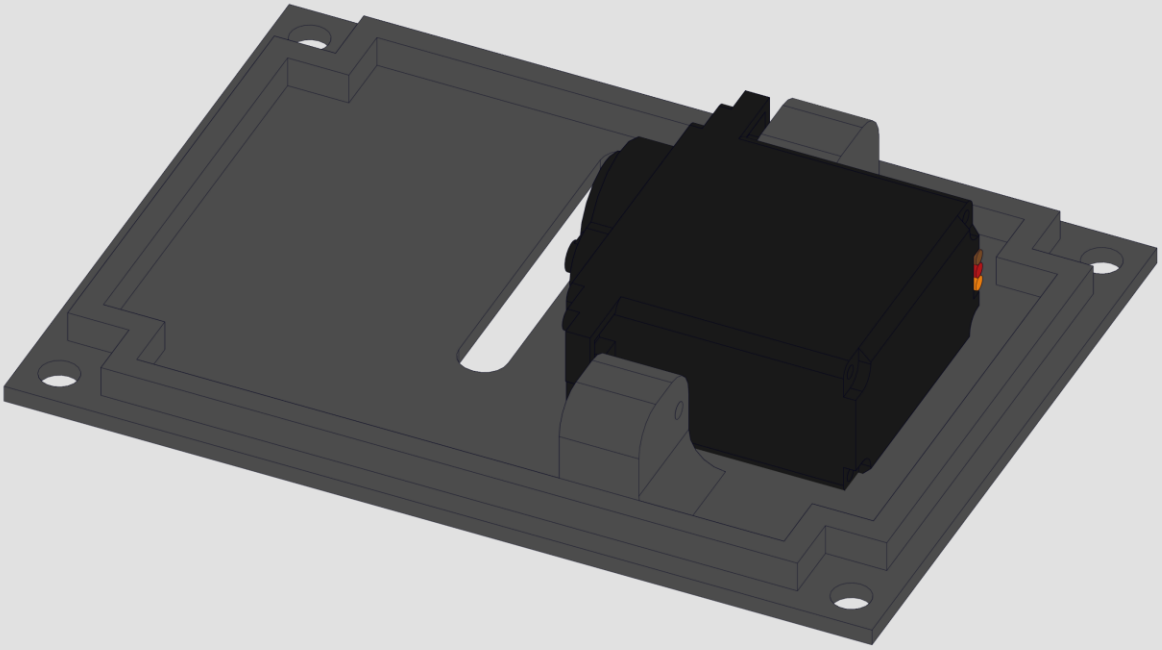


Prepare the servo cover along with the servo. The design is adapted for securing the servo with screws in the designated spot. Optionally, a small amount of hot glue can be added to further strengthen the mounting. Center the servo and route servo horn outside.

Wings Assembly

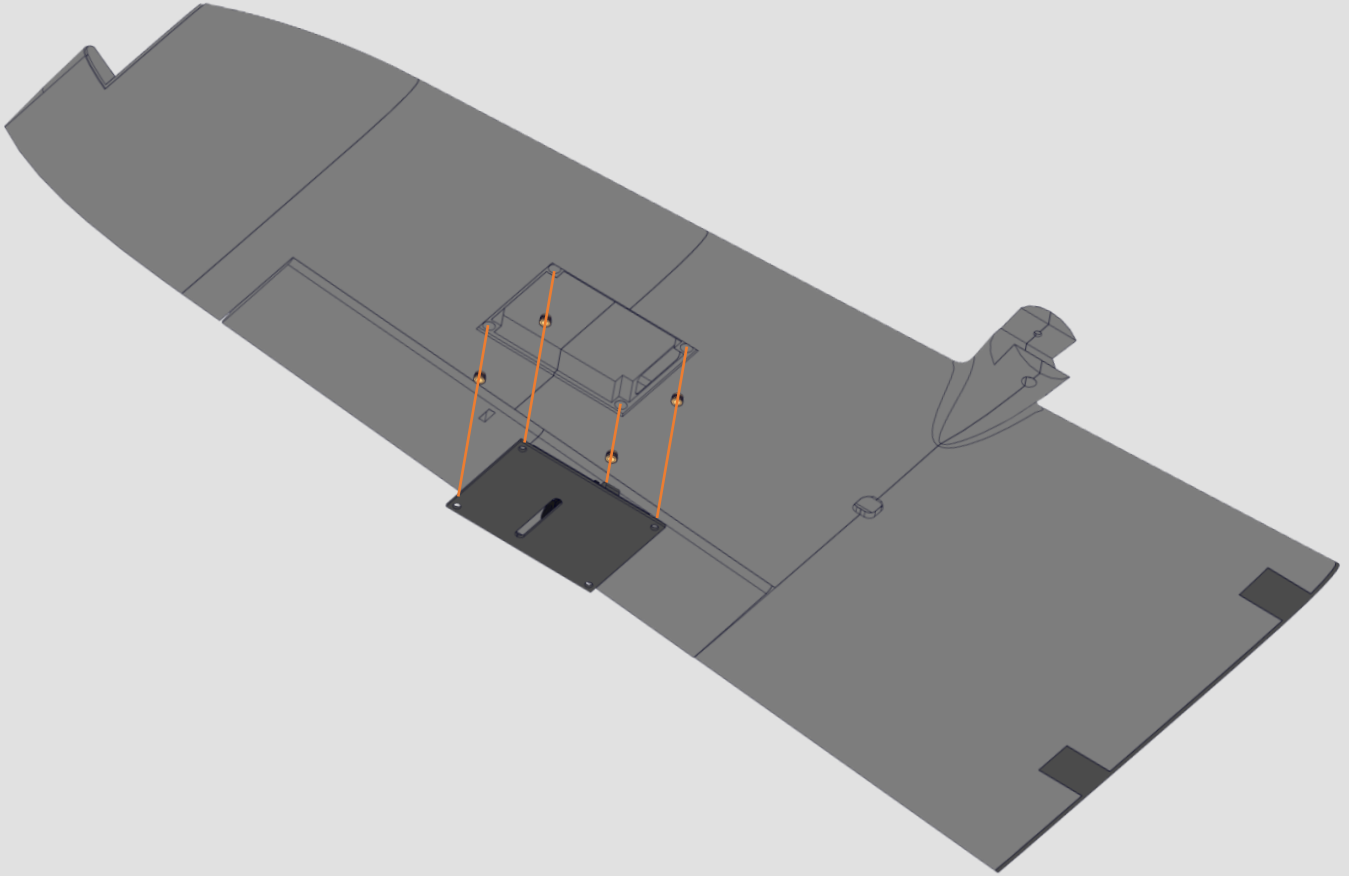


Install the M3 threaded inserts in the designated spots on the wing and secure the servo cover along with the servo, ensuring the cable is routed through the designed slot leading to the wing root. In this case, servo extensions wires may also be necessary.

Wings Assembly

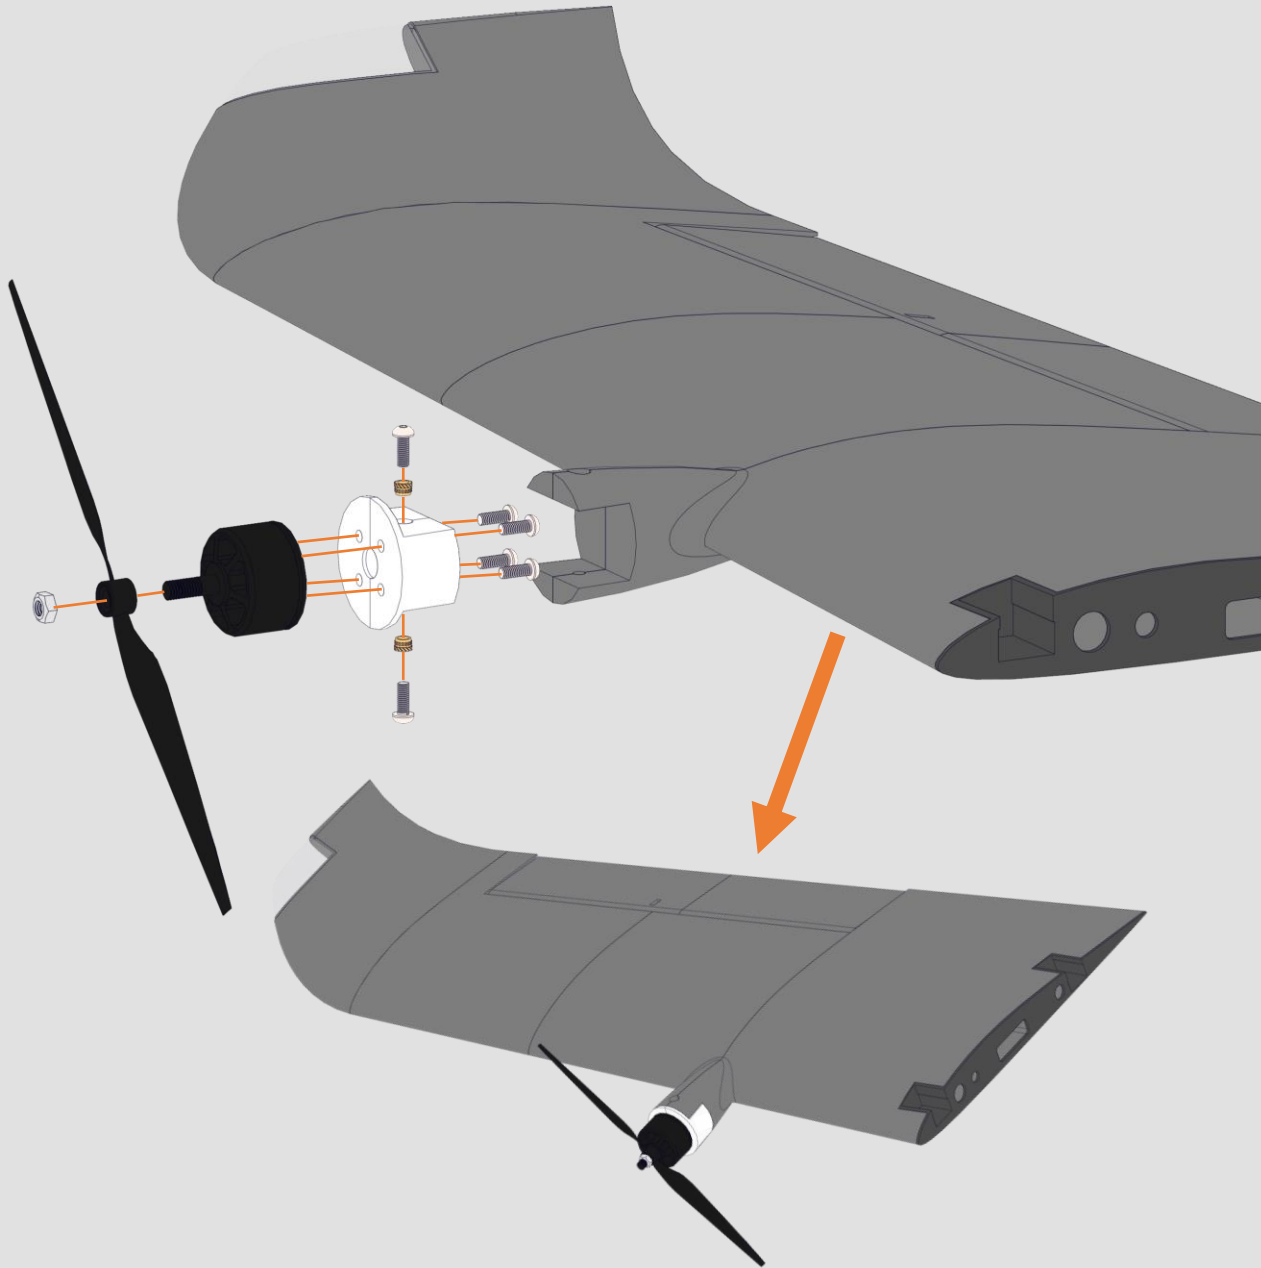





Prepare the motor and the motor mount printed in PETG. There are two versions available for T MOTOR F60 and F90 motors. The assembly is secured to the wing using two M3 screws, one from the top and one from the bottom. To do this, attach M3 threaded inserts to the motor mount. Then, route the motor cables through the hole in the bottom of the wing and slide them through the channel to the outside of the wing.

Wings Assembly

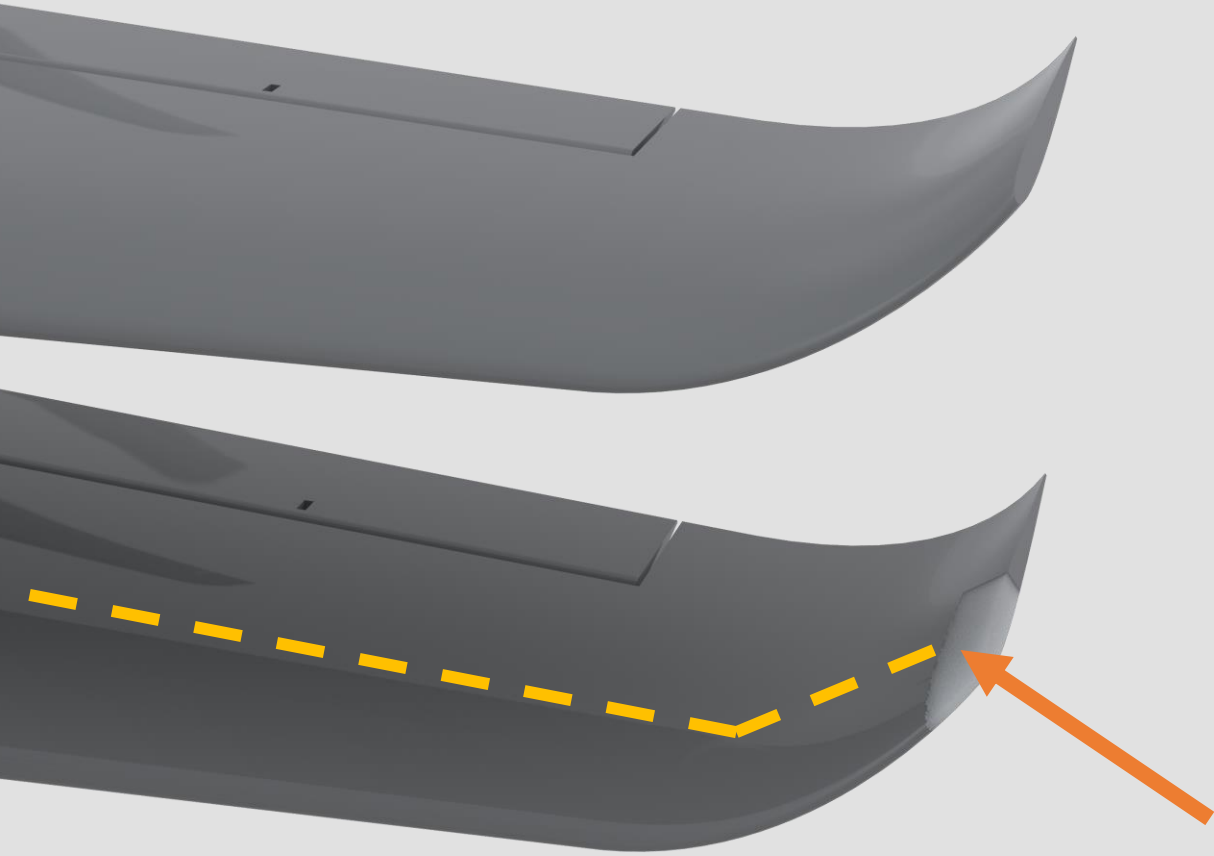


If you have chosen the version of the winglet with an LED, place it in the designated area. LEDs 2812 ARM work well for this purpose, and you can attach them, with strong double-sided foam tape. Inside the winglet, there is a channel through which the wire should be routed. This channel then connects to the servo bay and continues all the way to the wing root where, along with other cables, enters the fuselage. Cover the LED with a cover printed with transparent material. You can attach it normally using CA glue.

Wings Assembly

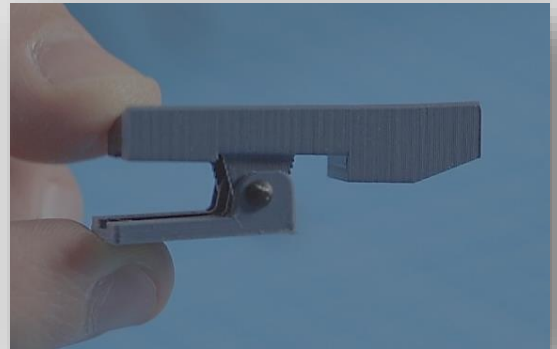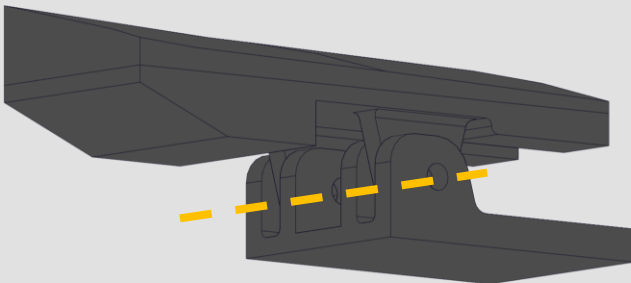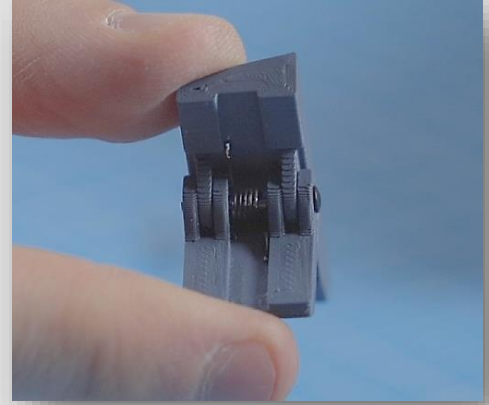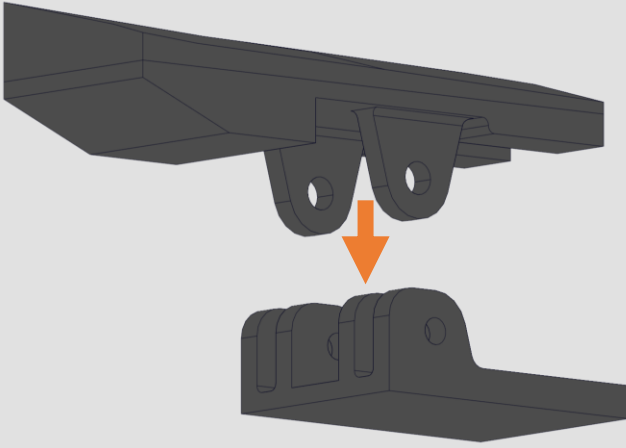


Prepare the wing locks, printed from PETG or another rigid material. The lock consists of a bottom base and top part. The base is identical for all four locks, while the top part differ depending on whether they are for the front or rear. To assemble the lock, a small pin and torsional spring are required. The simplest solution is to use a pin and spring from small hairpins, as they operate on the same principle. These locks provide a quick and secure attachment of the wings to the fuselage.

Wings Assembly

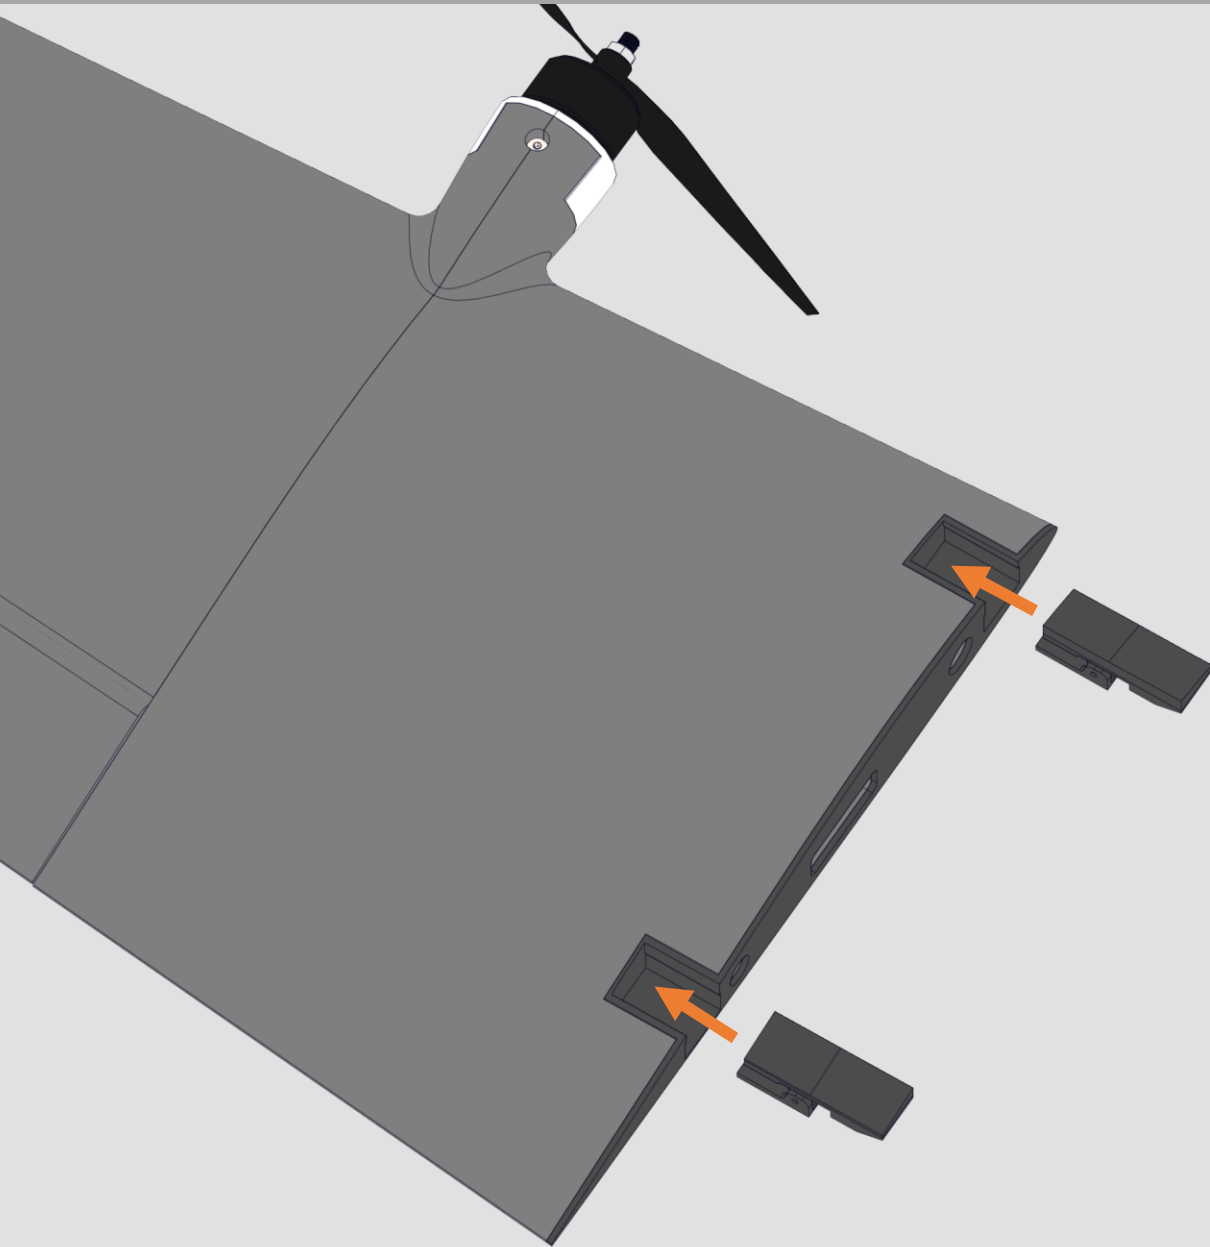


The prepared locks should be glued into the designated spots in the wing roots. Apply the glue carefully and in a small amount to avoid restricting the movement of the locks. Before final gluing, it is recommended to fit the wing to the fuselage and insert the locks without glue to ensure their exact positioning. For this mounting system, maintaining the correct tolerance is important— the wing should have no play, while the locks should still engage smoothly with the fuselage.

Wings Assembly

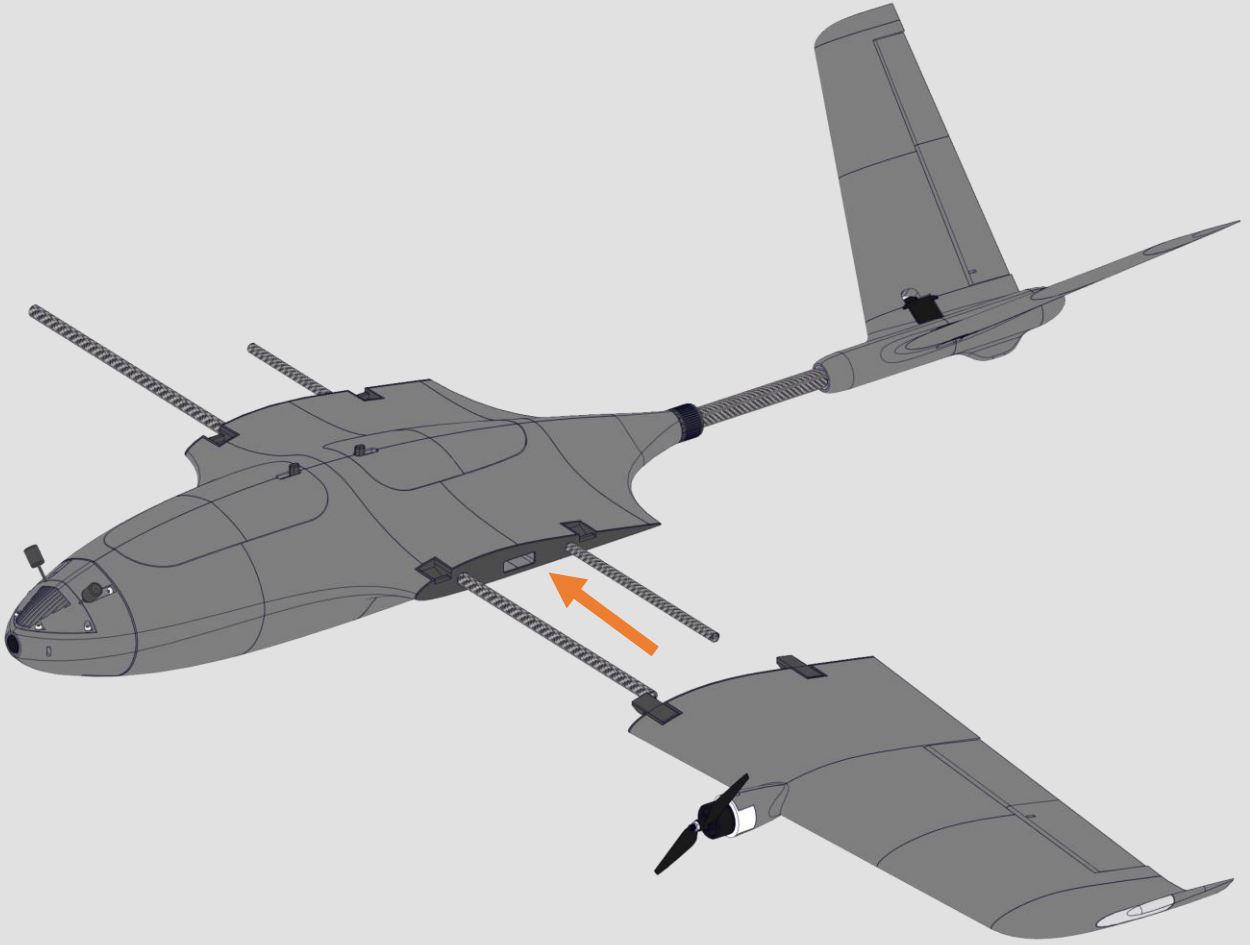

Insert the 10x800mm and 8x600mm carbon tubes, serving as the main spars, into the fuselage. Then, slide the prepared wings into place, guiding the motor and servo cables inside the fuselage.


Equipment layout

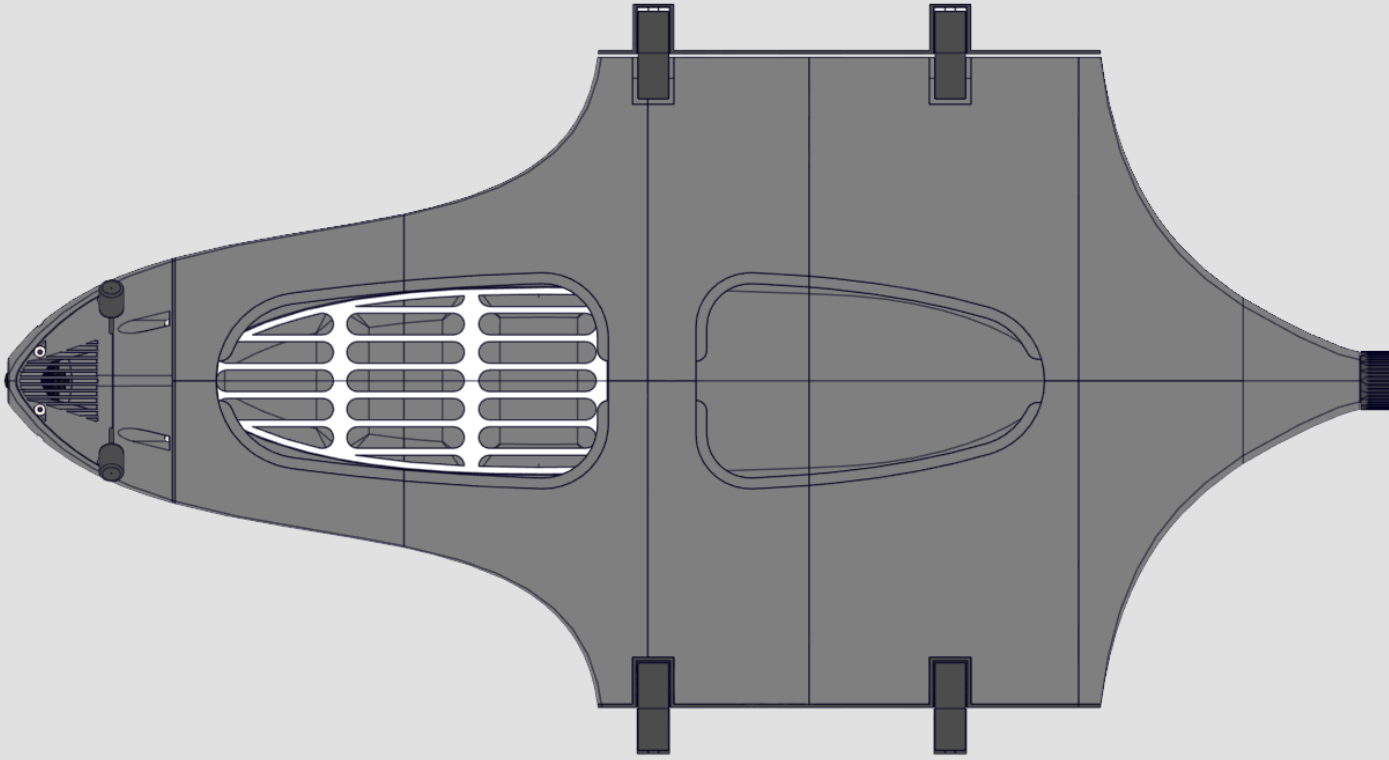

The fuselage interior offers ample space for flexible equipment placement and can accommodate a large battery. The front section is dedicated to the battery, with a battery pad designed to secure it using Velcro straps threaded through designated slots.


Behind the battery, a flat area is accessible through the rear hatch, providing space for additional components. For optimal balance, the flight controller should be placed near the center of gravity, with the ESCs positioned at the rear, the receiver nearby, and the GPS either next to the FC or externally mounted. The interior also provides room for optional accessories.

Finishing Build

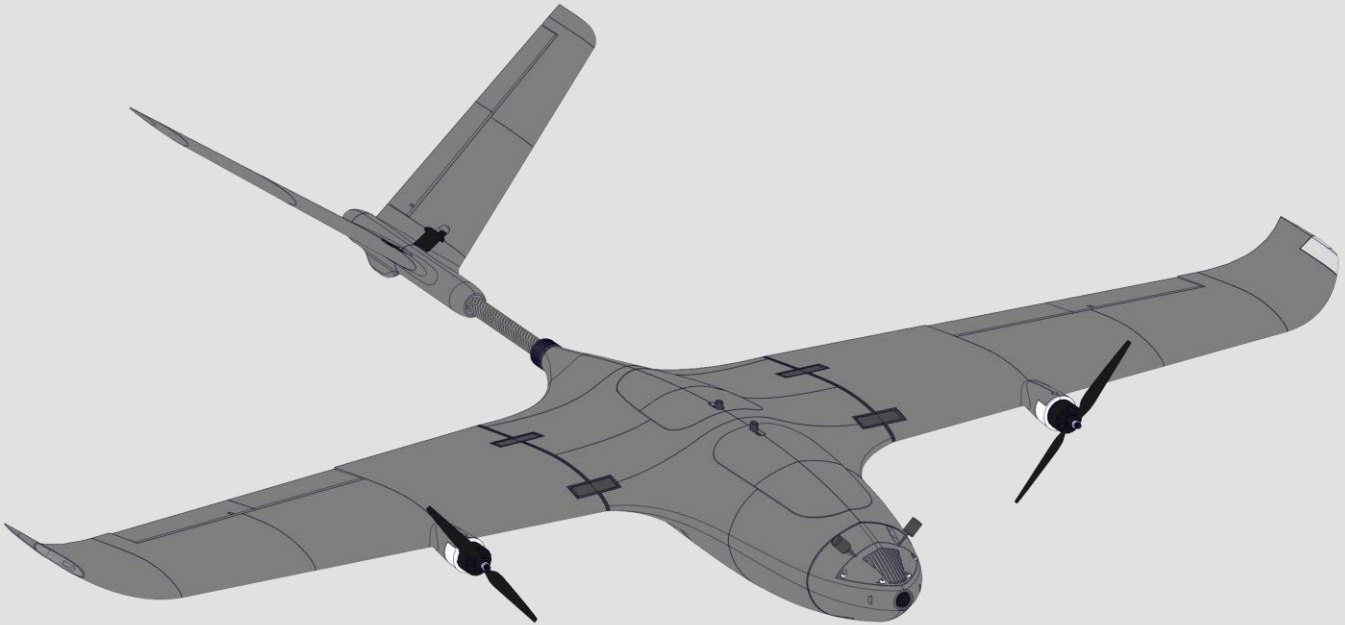

The rest of the equipment should be organized accordingly. The Battery Pad accommodates large batteries, including 4S6P Li-Ion. While this is the largest battery pack that fits, smaller and lighter batteries are advised, especially for the first flights. Using the recommended motors ensures optimal performance and long flight times. T-Motor F-60 motors and 7x5 propellers, paired with a 4S battery, provide stable flight at around 40% throttle. The aircraft can also be used with 3S batteries for this purpose. The choice of motors and battery voltage is flexible and depends on the desired performance. The remaining space in the fuselage is spacious and can easily accommodate all necessary components: FC, ESC, GPS, receiver, and more.

Wiring Diagram

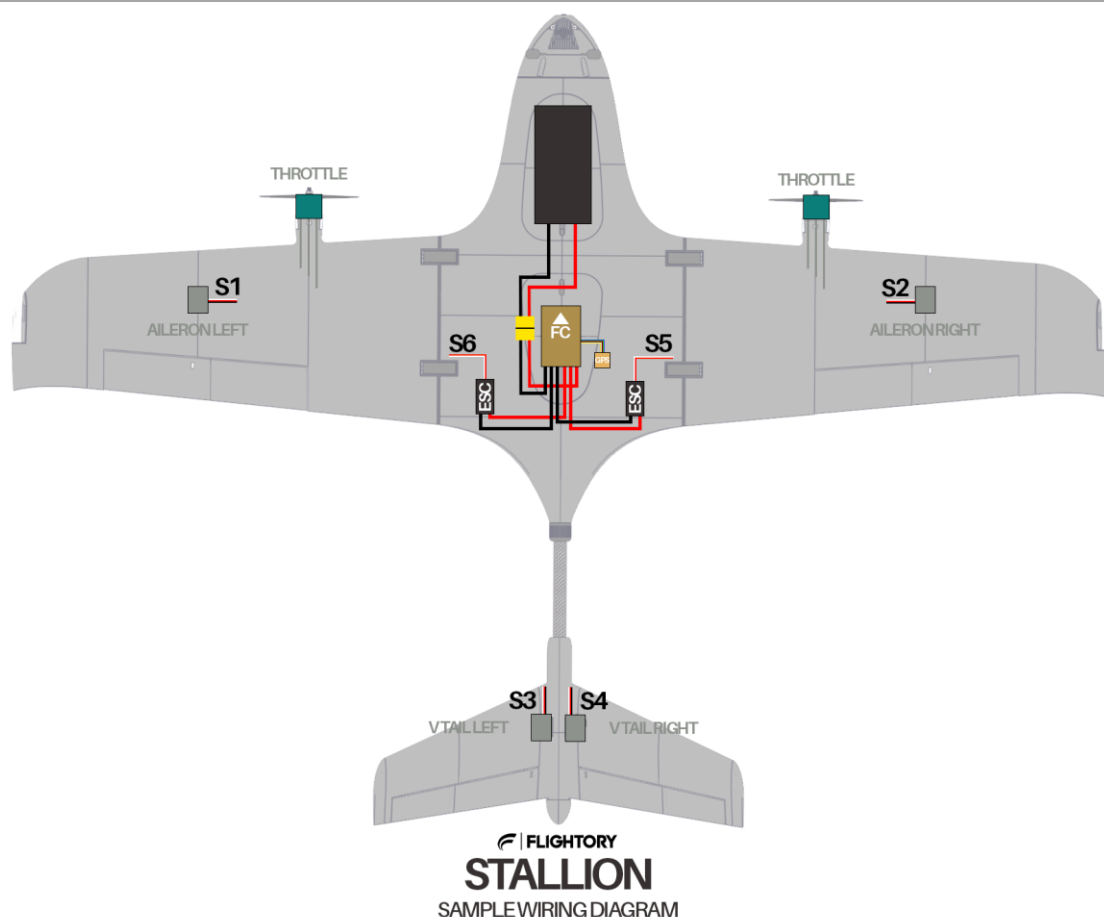

The diagram illustrates an example wiring and equipment layout, including suggested channel assignments for the servos and motors. Only the essential equipment is shown in the schematic. Optional components, such as the FPV camera, VTX, receiver, and additional sensors, are not included, as their implementation can vary depending on the chosen hardware. The presented schematic is not the only solution but is intended to help beginners understand the setup. **This diagram is also available in a larger size in PDF format in the file package**

Ardupilot Configuration



For beginners, a document with a preconfigured **param.** file is also available. The document outlines the key parameter settings of a .param file for ArduPilot, which can serve as guidance and a foundation for further configuration and tuning of a fixed-wing aircraft. The file pertains to the Speedybee F405 Wing flight controller used with an ELRS receiver, GPS, Walksnail FPV, and the Yaapu telemetry script option. This is not a ready-to-use configuration and should not be implemented without proper verification. Before flying, you must configure the appropriate servo outputs for your aircraft's setup and perform the necessary compass and accelerometer calibrations. The following sections will present the main parameters and explain their functionality.

All information, as well as the firmware, is available on the ArduPilot website. It is also recommended to review the user manual of the flight controller for configuration.

<https://ardupilot.org/plane/docs/common-speedybeef405wing.html>

The document is available for free download from the Flightory Discord server in the #free-files channel.

Before Flight



The model is ready to fly. Before flying, take care of the correct balance, which is 60 mm from the leading edge (at wing root). Check the correct operation of the ailerons and rudders and the direction of propeller rotation. Remember to use CW and CCW propellers. The motors should rotate in opposite directions to balance the airflow and stabilize the aircraft. The takeoff is done by hand throw. Grab the fuselage under the wings and throw it in a confident motion at a slight angle of attack. Good luck with your flights!



STALLION

