

QUARTURN

A SHERPA MINI MOD

Modified by Upenatom




Original work By Annex Engineering:

https://github.com/Annex-Engineering/Sherpa_Mini-Extruder


Instructions are meant to be used in conjunction with the sherpa mini- extruder instructions.

https://github.com/Upenatom/Trident_madmax-toolchanger/tree/main/QUARTURN%20SHERPA%20MOD


Add headset inserts to core, front housing, and side hold down.

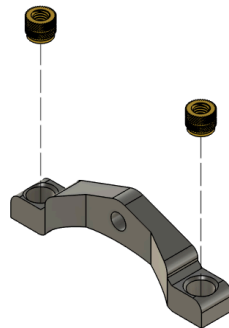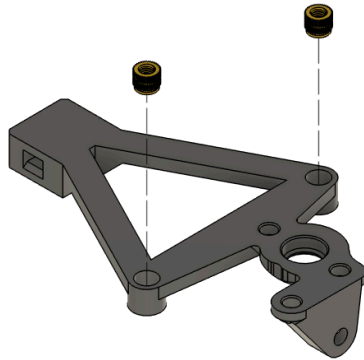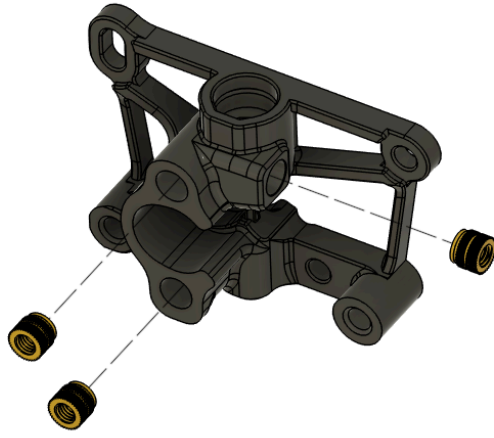


Assemble core, rear housing and side hold down and Drive core with 20mm screws.

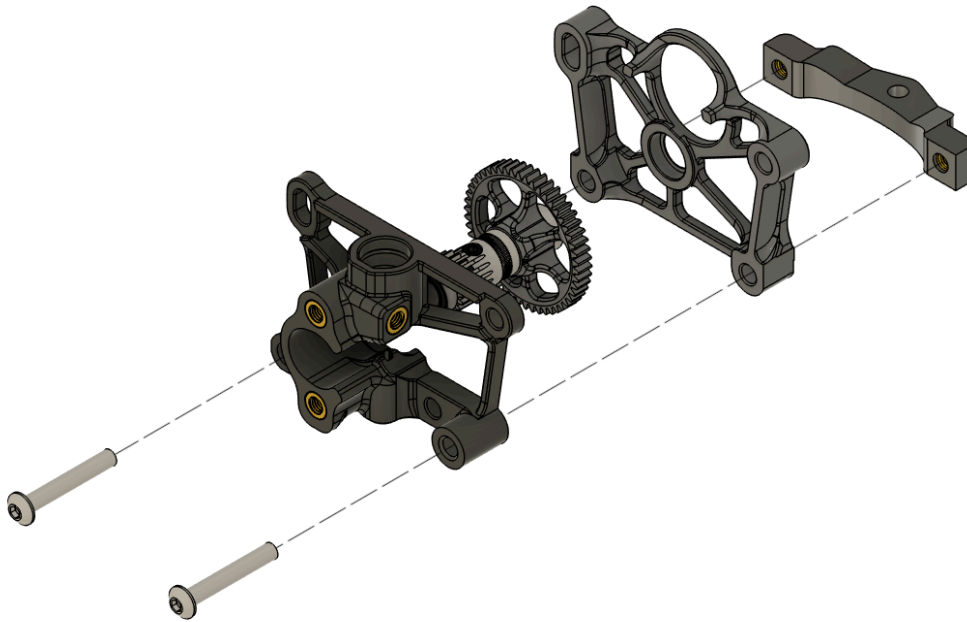


Attach front housing and Idler arm with pin/ screw. Use 6mm screws

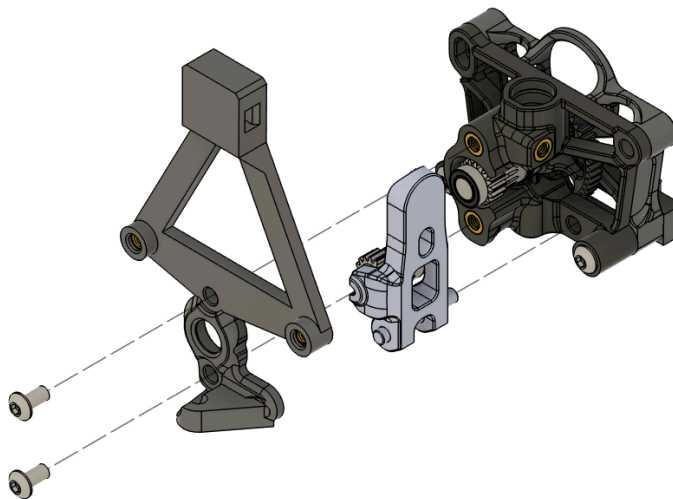

Attach to Dragon burner before adding the extruder motor and the toolhead board. Assembly can be placed in with the motor side facing either left or right

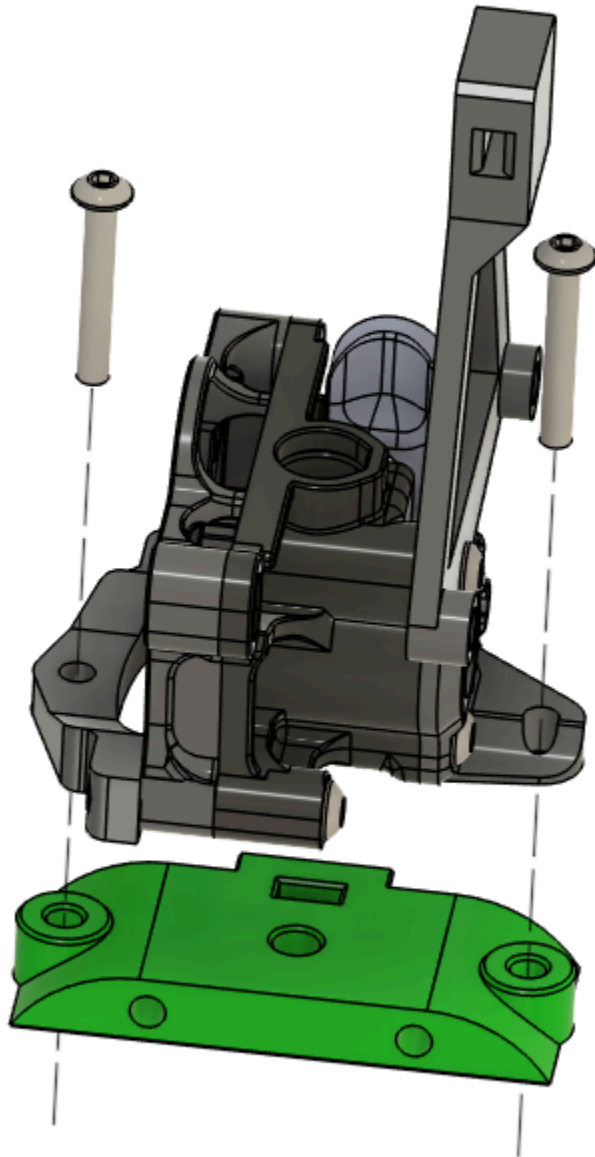

Attach the extruder motor with 12 mm screws you can insert the allen key through the holes meant for mounting the toolhead board if it makes it easier to tighten the extruder mount screws

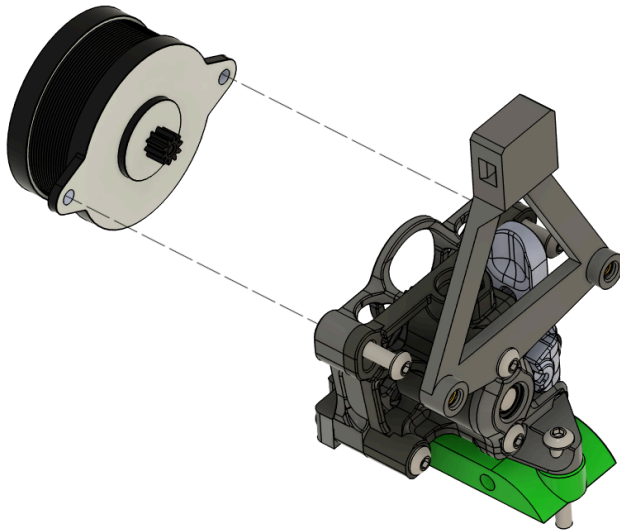

Attach the tool head board to the front housing with 6mm screws.

