


AERIS / CIRCUIT

REV 1.0

ESP32 DevKit V1 + MQ135 + BME280 + SSD1306 + four-terminal push button

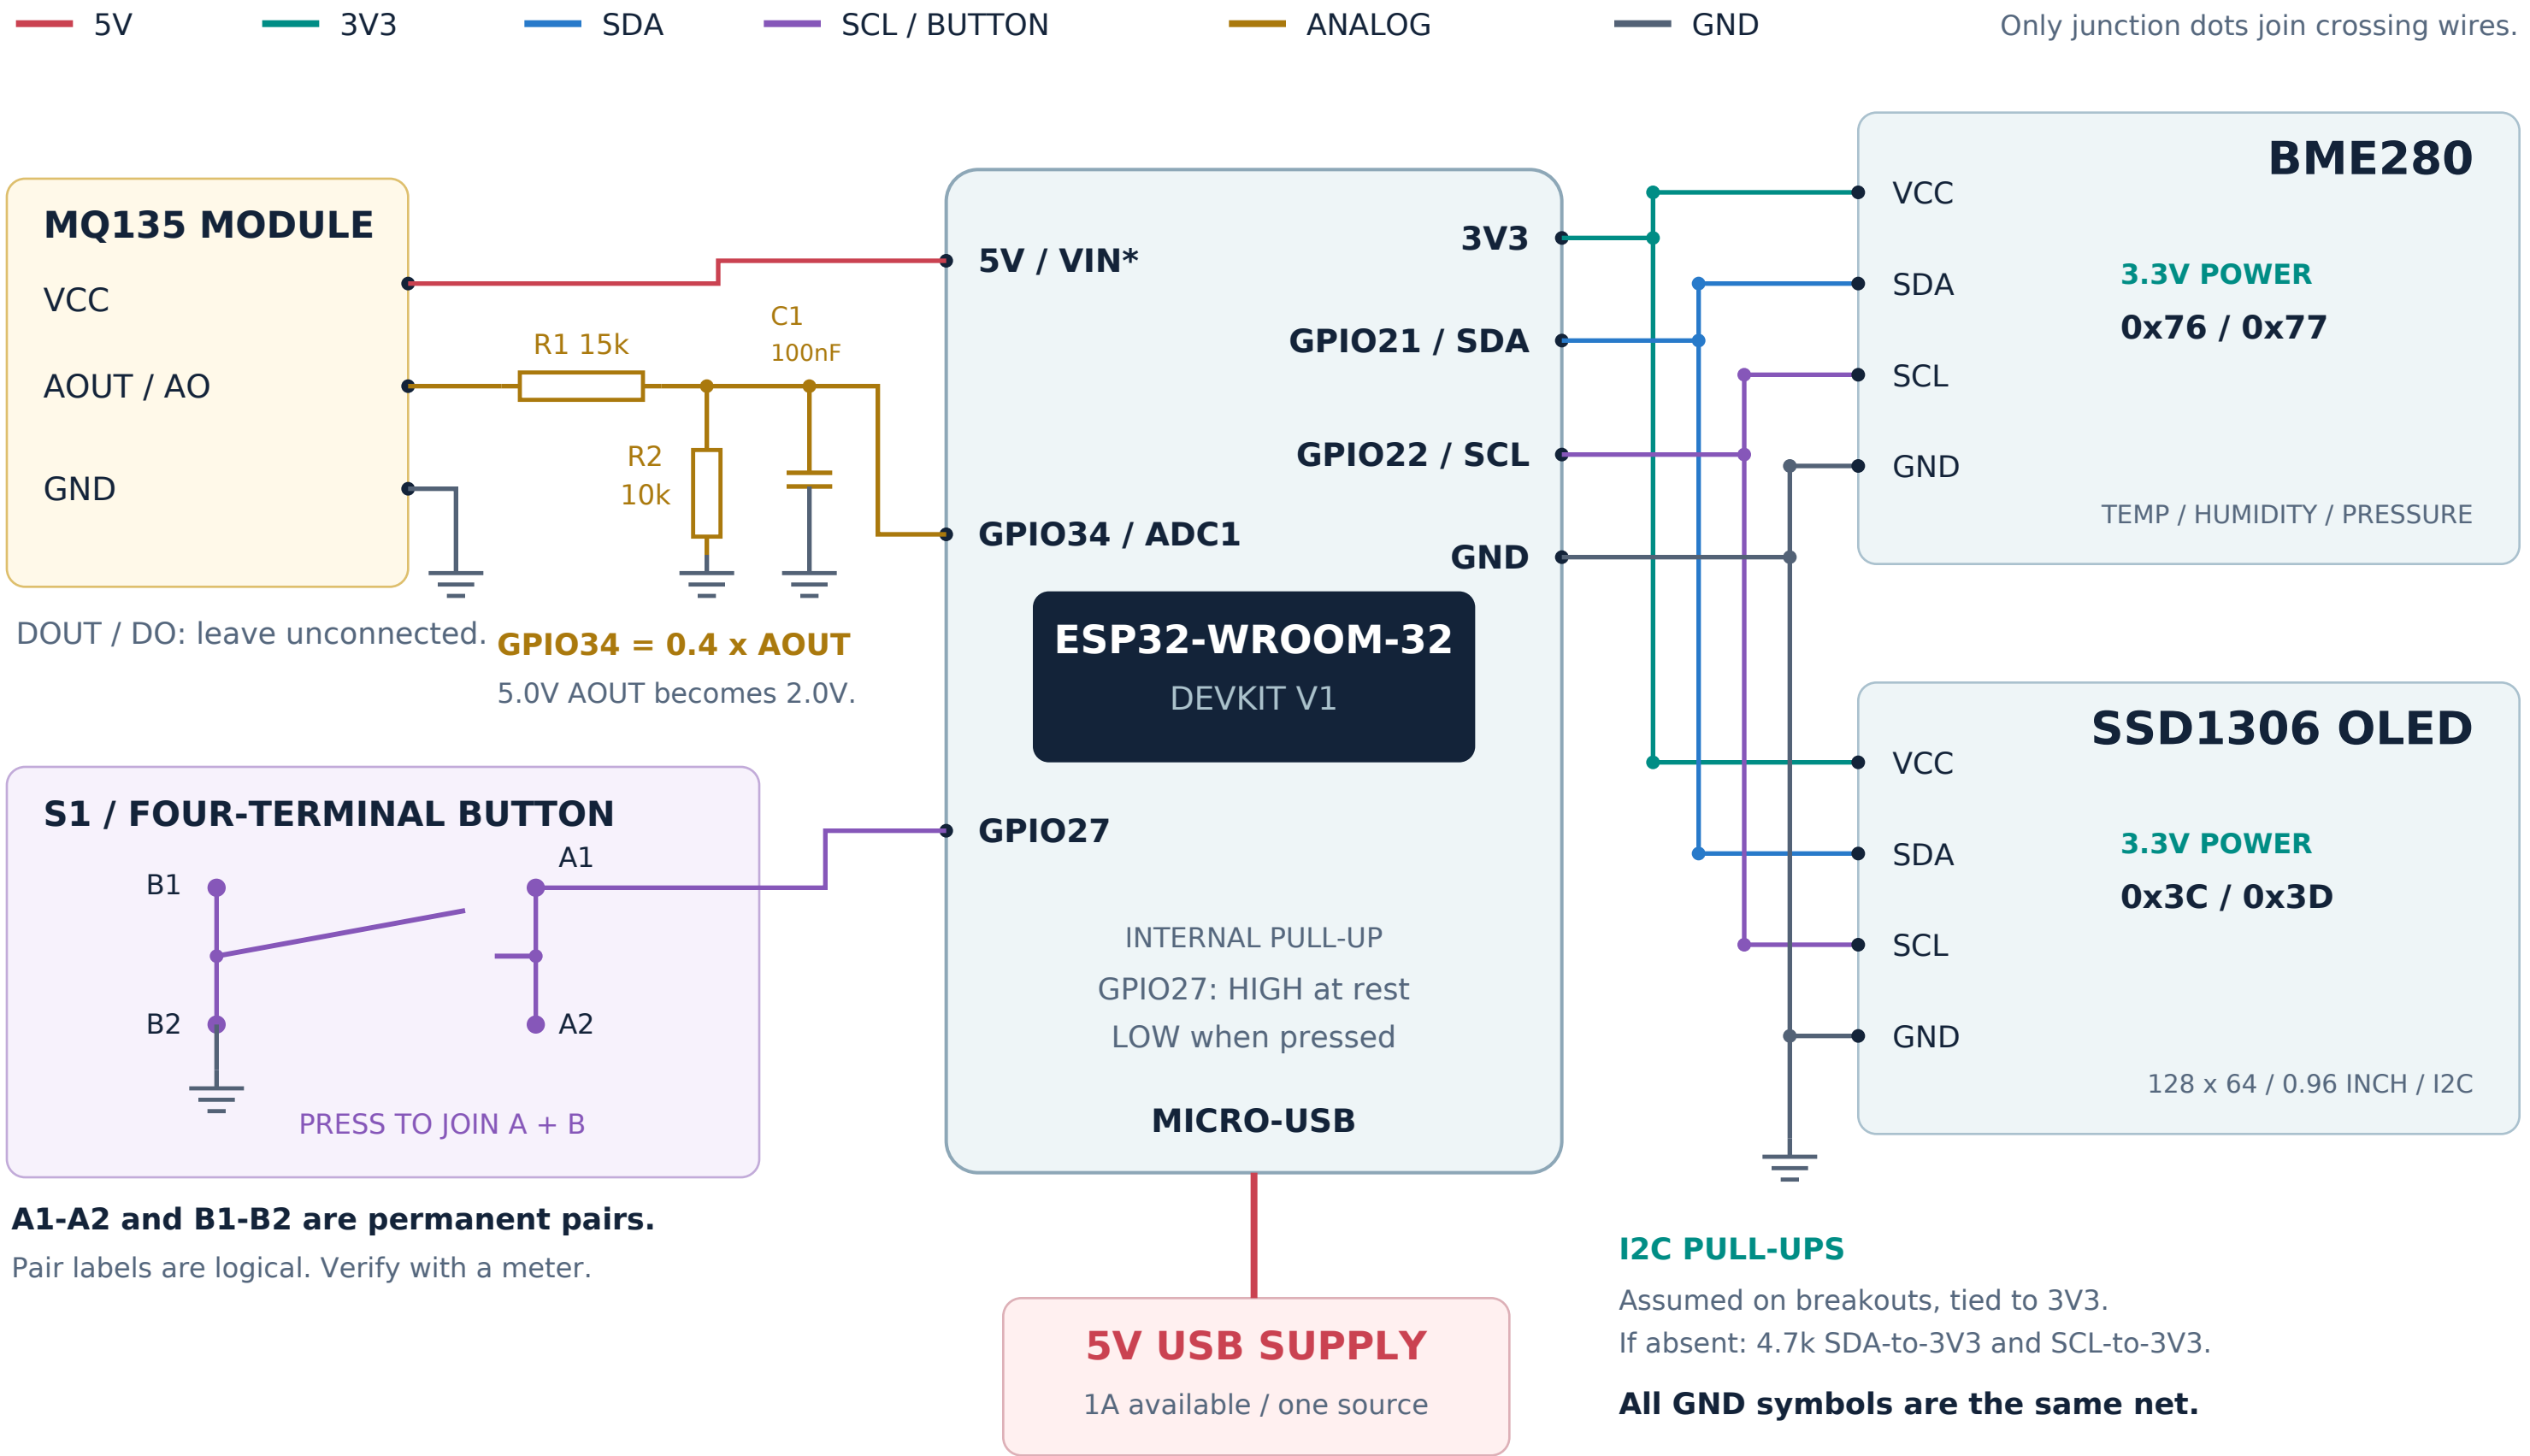

*Verify USB 5V is available on your board pin and its current path is adequate. Never feed MQ135 AOUT directly to a GPIO.

Logical wiring schematic, not PCB layout. Check actual module labels. R1/R2: 1%, 1/4W. C1: near GPIO34. Power off before rewiring.