



EE5110/6110 Special Topics in Automation and Control

Autonomous Systems: Unmanned Aerial Vehicles

EE5062 Autonomous Systems

Dr. WANG Fei (elewf@nus.edu.sg) & Dr. HUANG Sunan (tslhs@nus.edu.sg)

National University of Singapore

Topic Outline...

1. Introduction to UAV systems

- What is an unmanned aerial vehicle (UAV)?
- UAV applications
- UAV system structures
- UAV platform design and construction

2. UAV flight dynamics modeling and control

3. UAV navigation and environmental sensing

- GPS-aided navigation
- GPS-less navigation and SLAM



Topic Outline...

4. Introduction to motion planning of UAVs
5. Optimal motion planning: AI-based A* search algorithm
6. Trajectory generation




Continuous Assessments...

EE5110/6110 CA4


- Students are required to propose the design for a small-size UAV to navigate in a GPS-denied unknown environment, considering its hardware constraints such as footprint, payload, onboard computation resources, power consumption and communication bandwidth. The specification requirements of the UAV and the environment will be provided. A technical report is expected to explain the design decisions among various choices. It should include literature review, conceptual ideas, solution/choice comparisons and discussions.

What is a UAV or Drone?

An unmanned aerial vehicle (UAV), also known as drone, is an aircraft that is equipped with sensors, data processing units, control and navigation software, communications systems and can perform automated flight missions without the intervention of a human pilot.

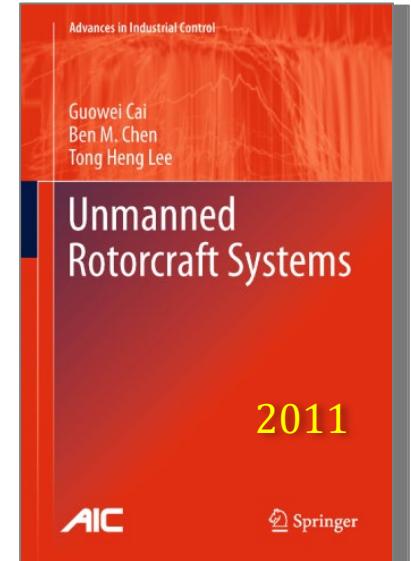

Or simply an aircraft without human on-board.

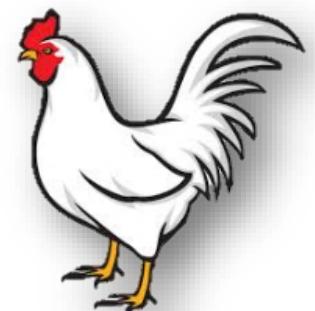

A drone?

Types of UAVs



and Their Applications

Search & rescue



Surveillance & patrolling



Forestation & agriculture



Aerial mapping



Tunnel inspection



Oil & gas industry



Policing



Mining industry



Bridge inspection



Modern UAV Technologies



Light Show with 200 Drones

Modern UAV Technologies

***UAV
Autonomous Control***



***Indoor & Foliage
GPS-less Navigation***




***Platform
Miniaturization***




***Multi-UAV
Collaborative Control***





General Architecture of Unmanned (Aerial) Systems

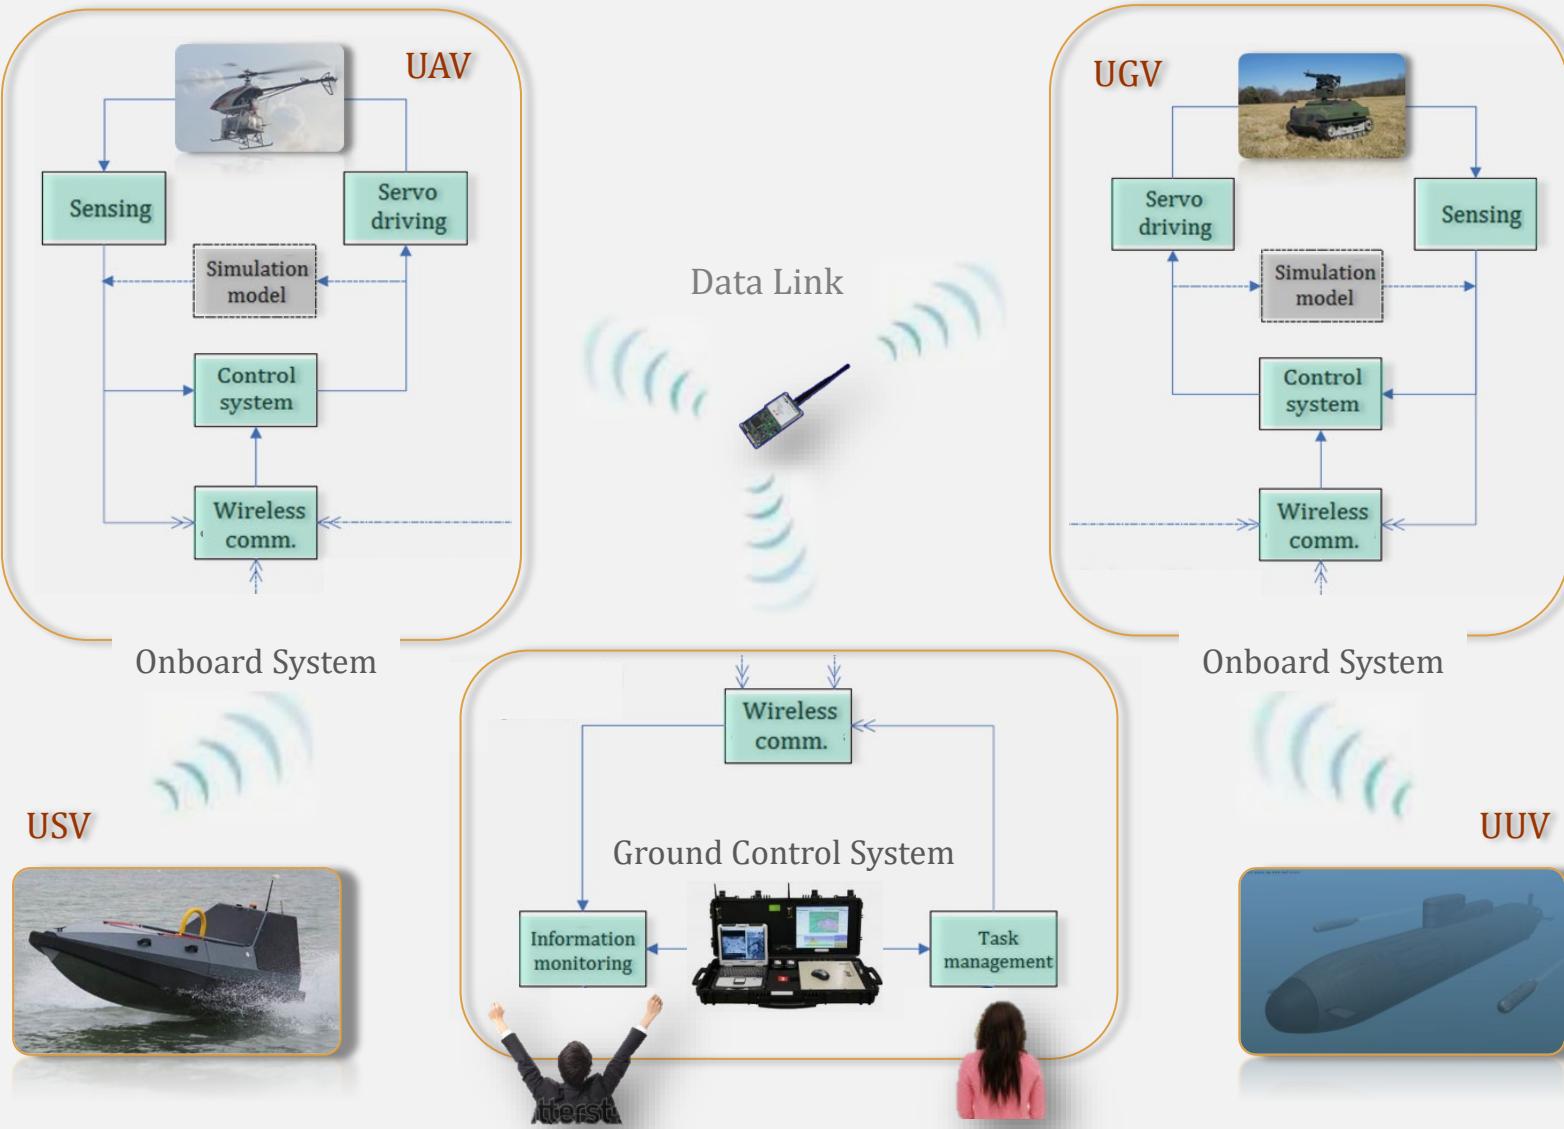

Core Structure of an Unmanned (Aerial) System

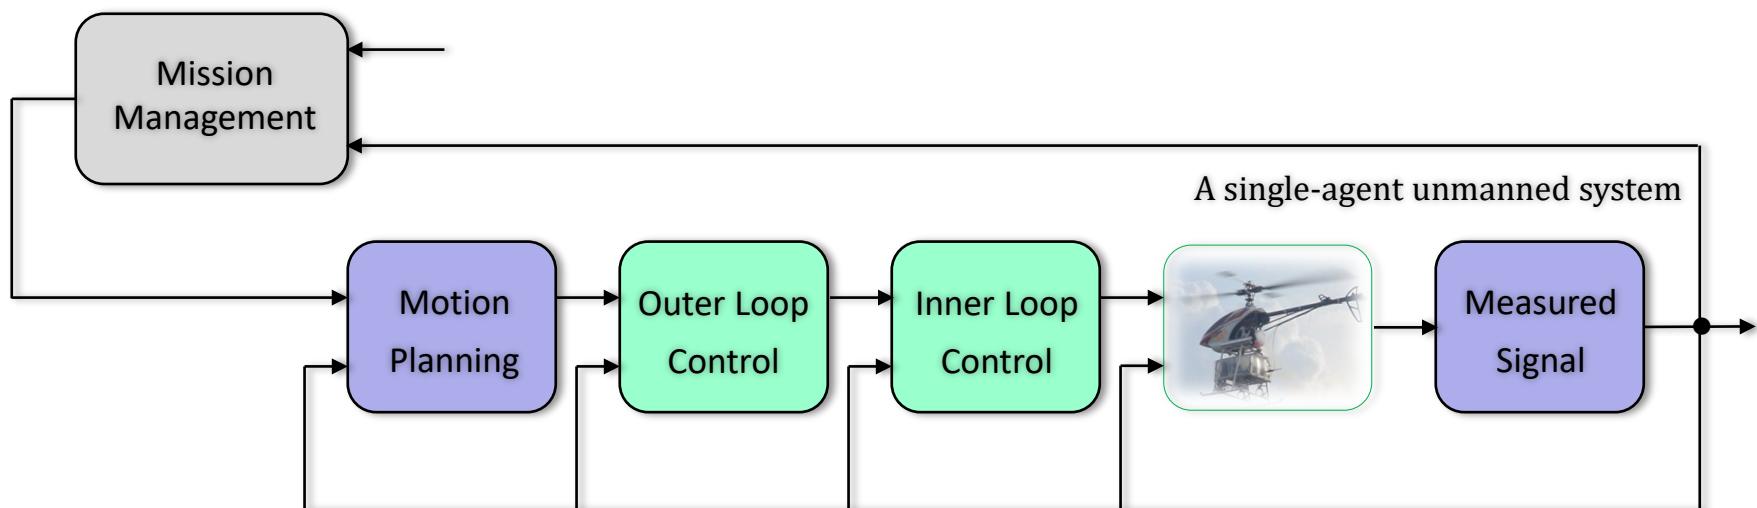

Core Subsystem: Avionic Systems

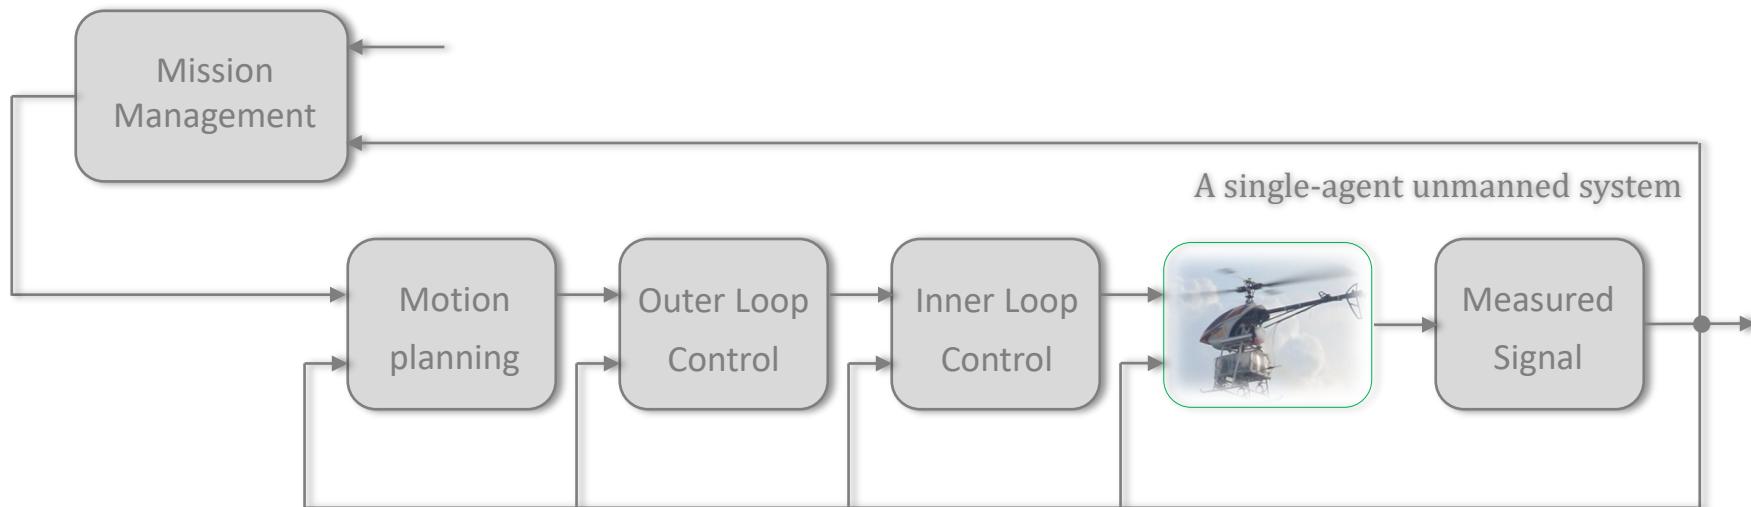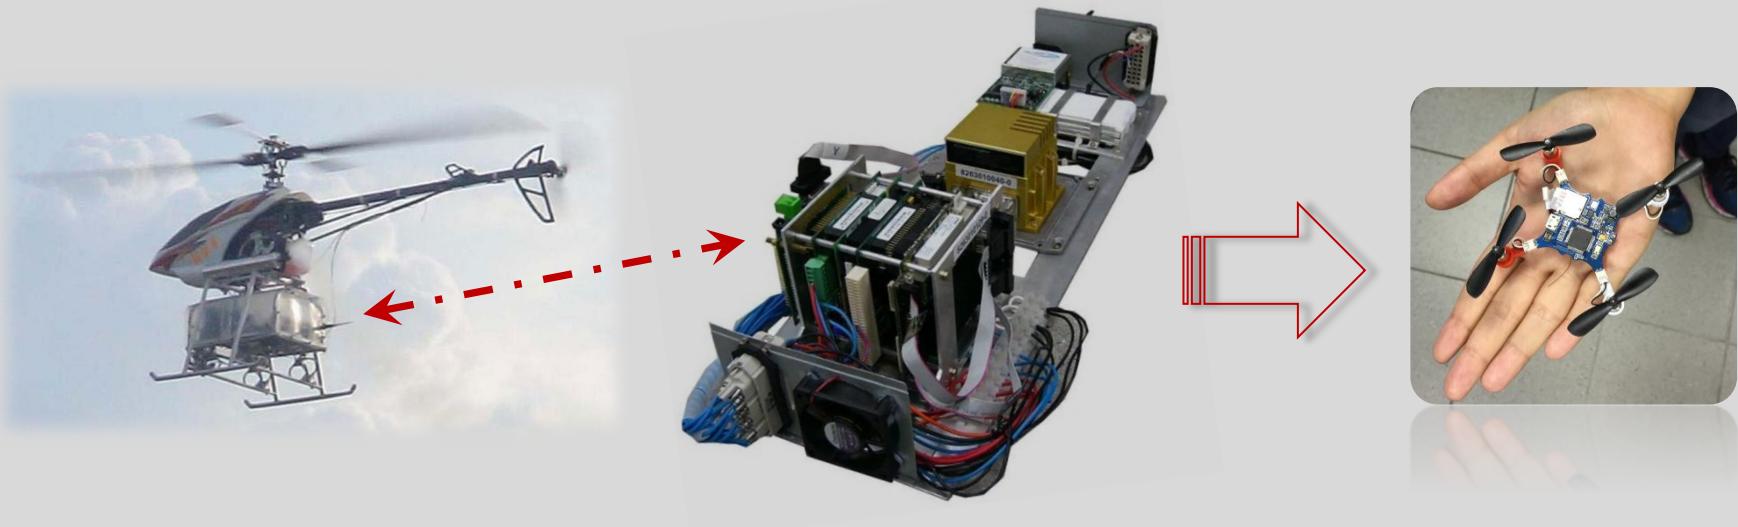

Core Subsystem: Positioning System & Sensors


➤ External Systems

- ❖ GPS
- ❖ Beidou
- ❖ VICON
- ❖ UWB



➤ Internal Systems



- ❖ Vision
- ❖ LiDAR
- ❖ Radar
- ❖ Sonar

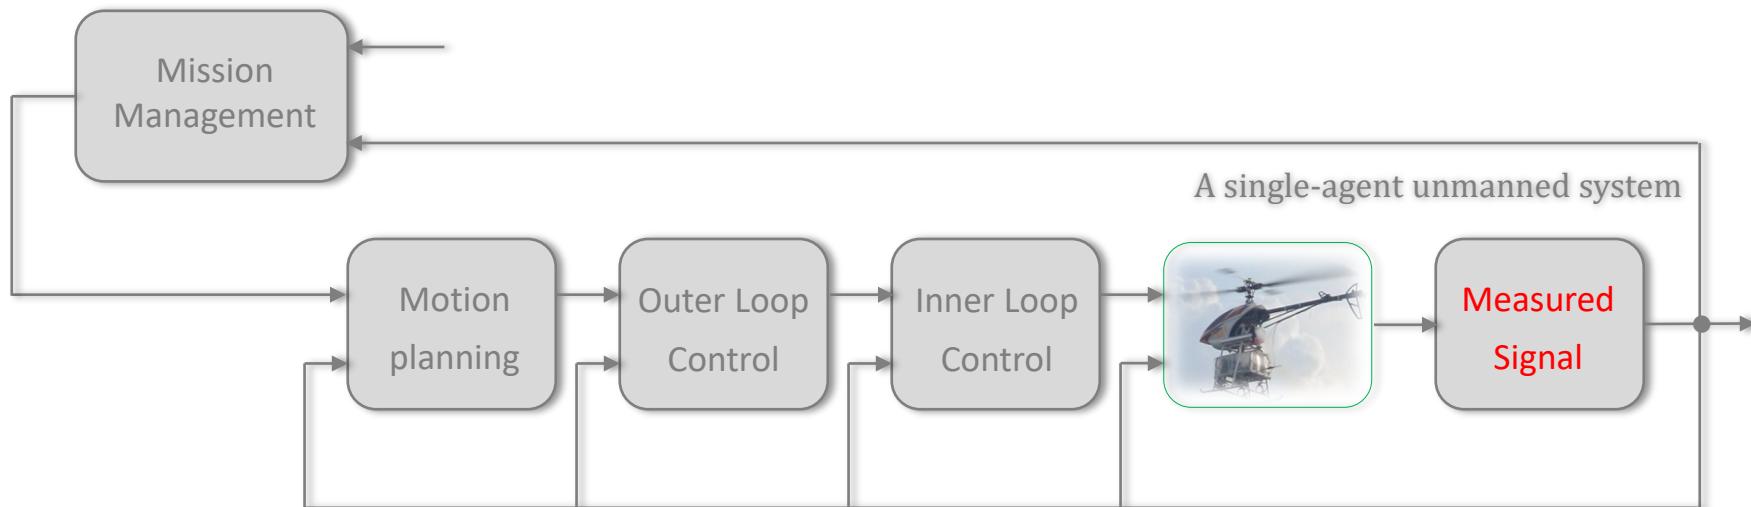


Core Subsystem: Positioning System Algorithms






S
L
A
M

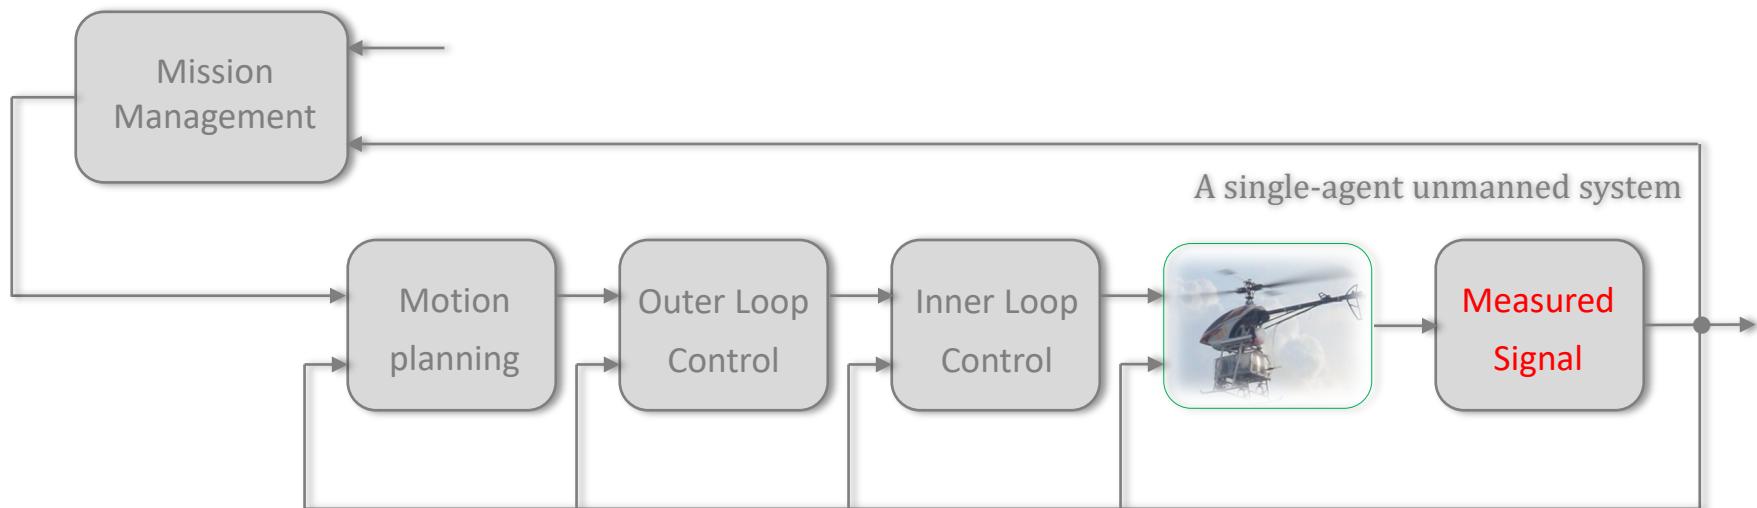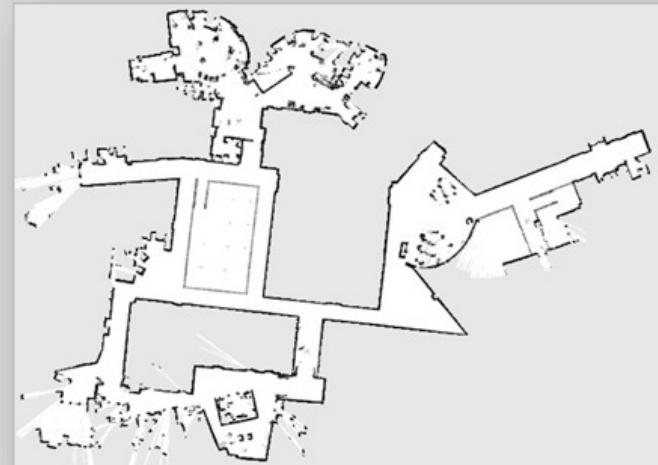



- Inner Loop control
 - ❖ PID Control (commonly used)
 - ❖ Optimal Control
 - ❖ Robust Control
 - ❖ Nonlinear Control
- Outer Loop control
 - ❖ PID Control (commonly used)
 - ❖ Pole placement
 - ❖ RPT Control
 - ❖ Robust Control

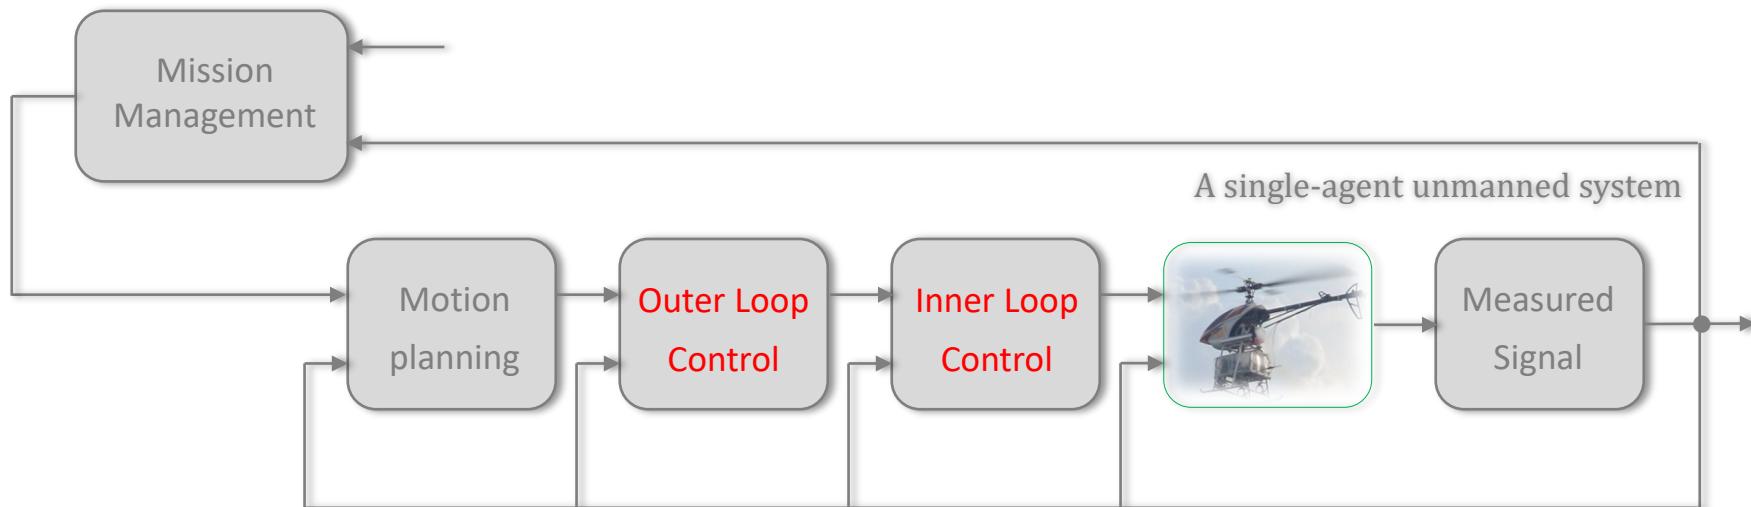

Core Subsystem: Motion Planning

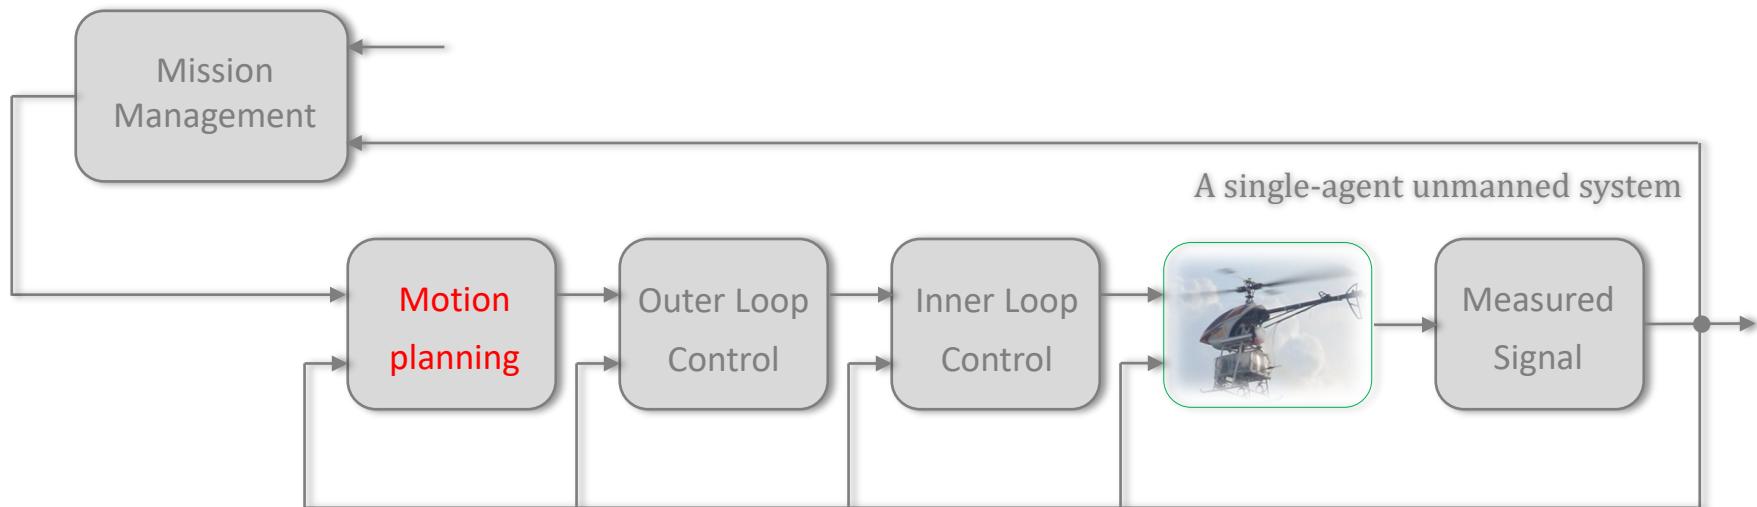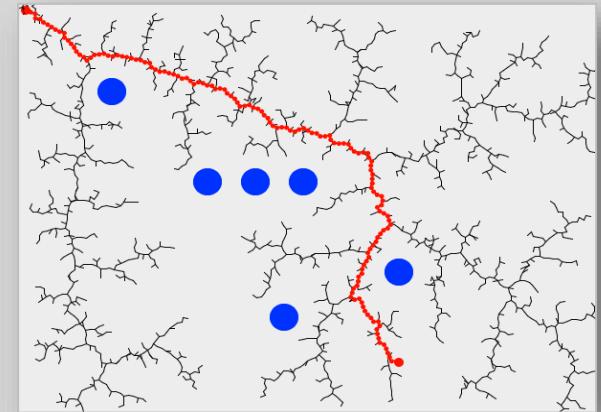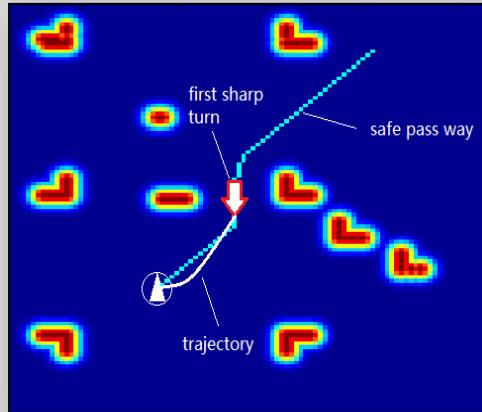

Core Subsystem: Motion Planning

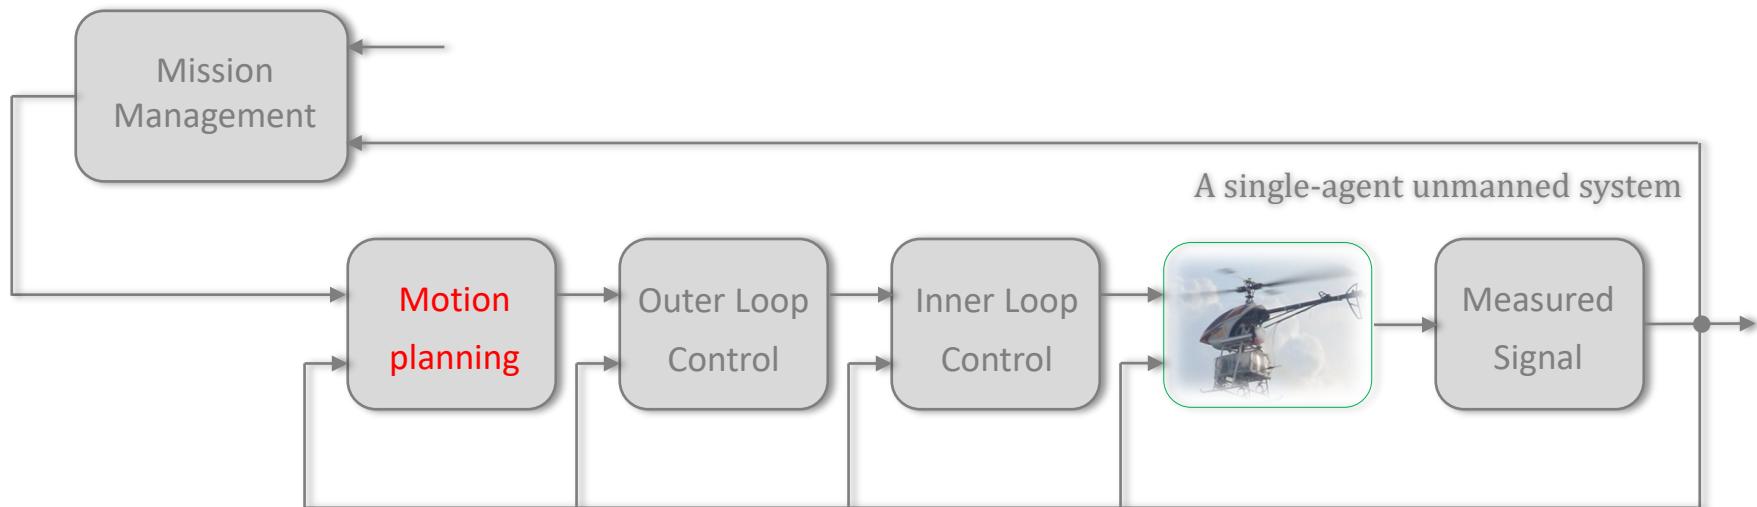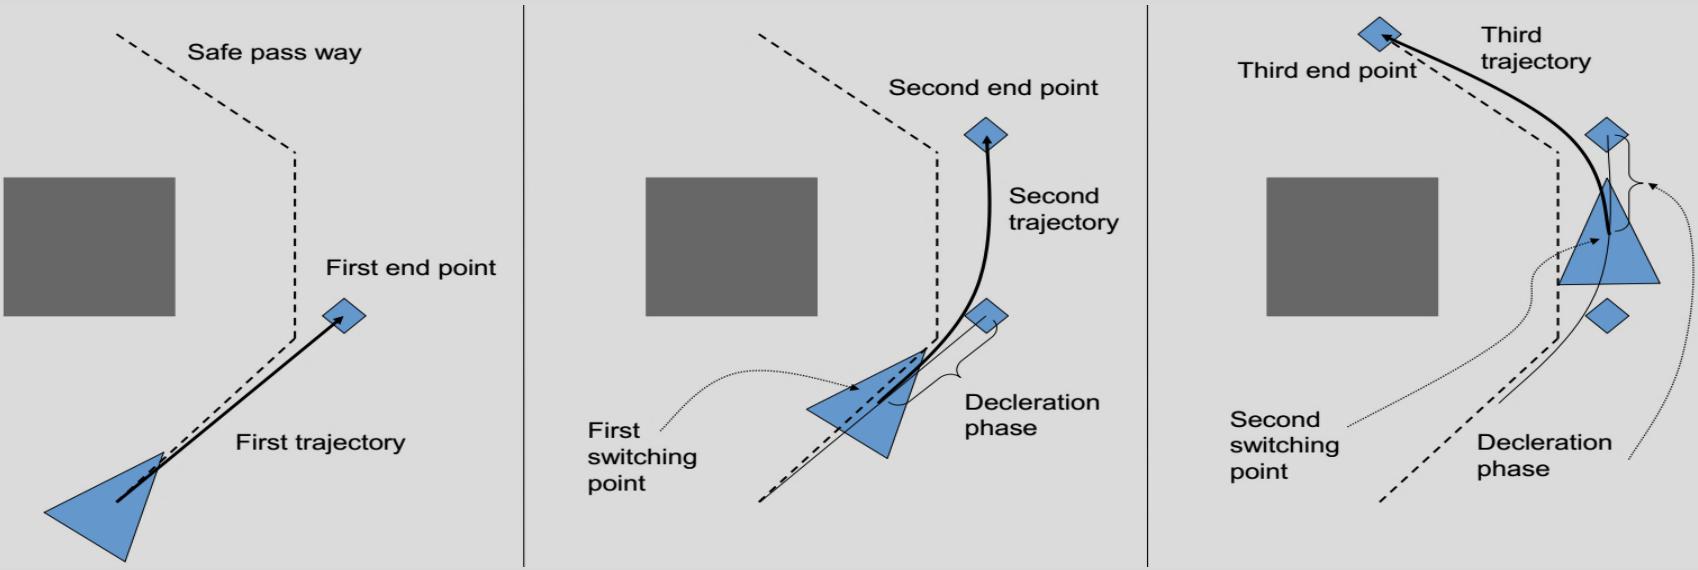


Core Subsystem: Mission Management




➤ State Machine

➤ Automata

➤ Deep learning?

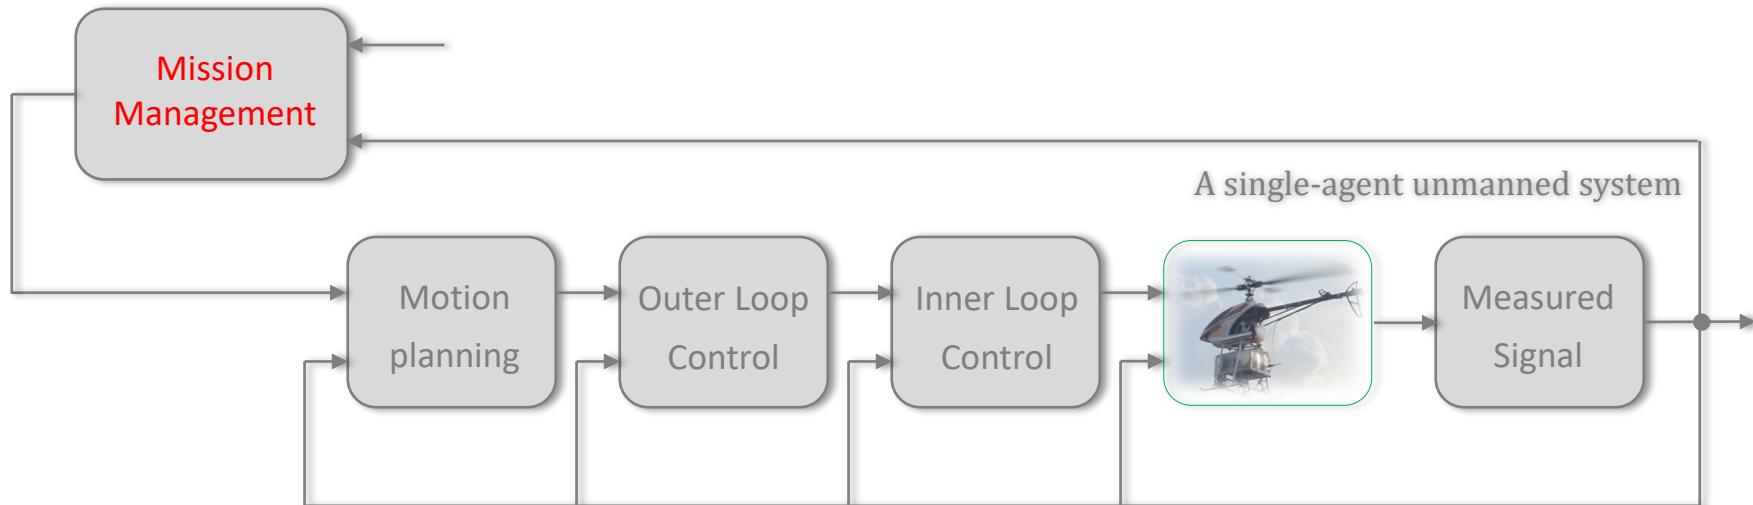


Cooperation of Multi-agent Unmanned Systems

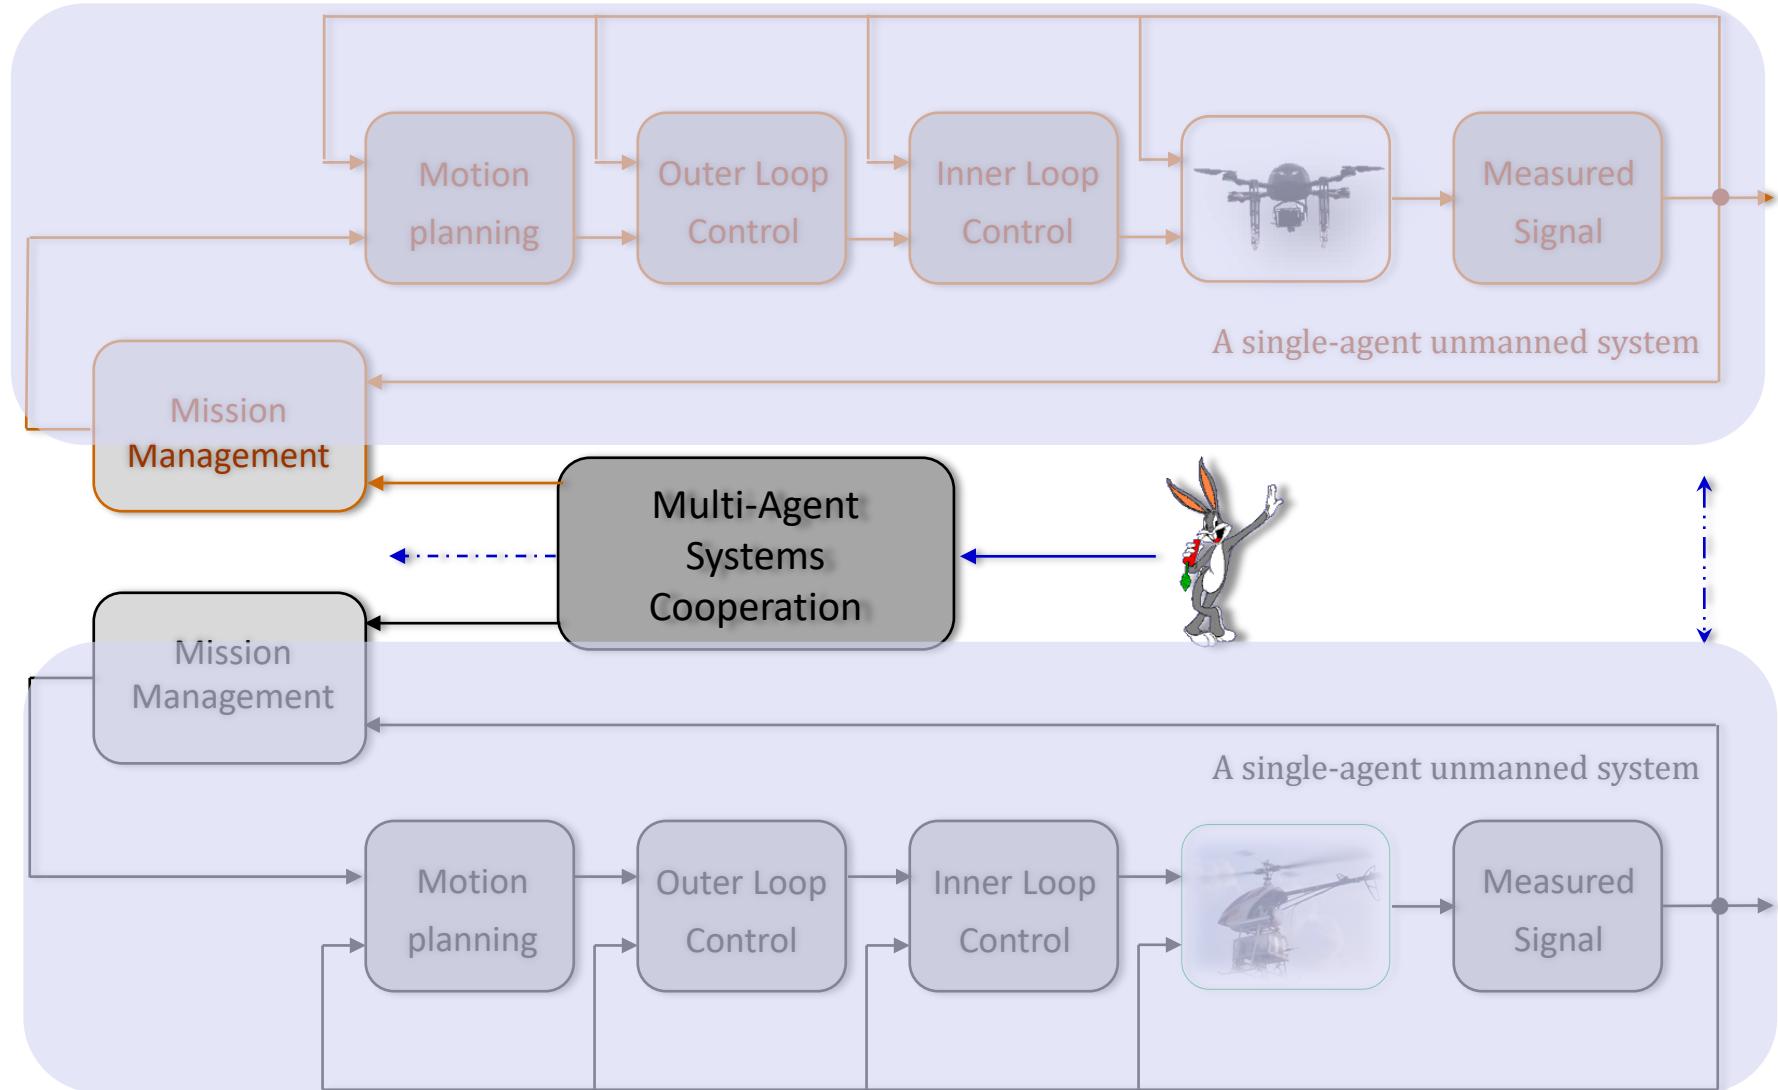

➤ Unconventional platform design and modeling




Hybrid UAVs

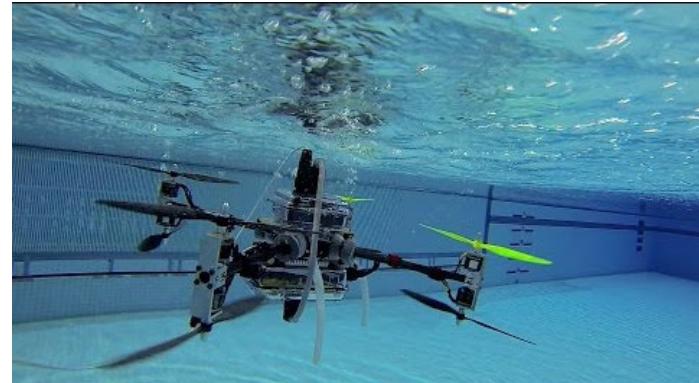

Amphibious UAVs



Bladeless / tough UAVs

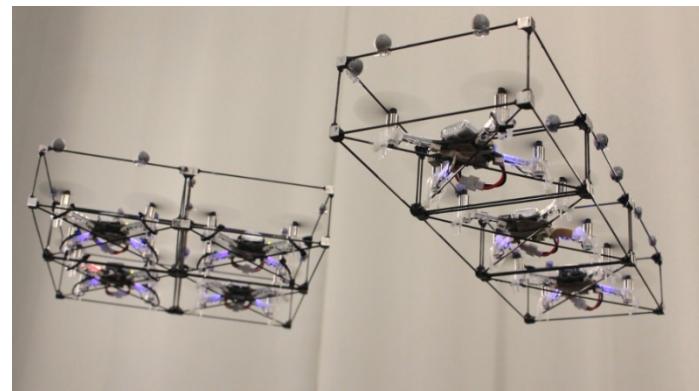

Self-assembled vehicles

➤ Control


- ❖ Model free control
- ❖ Model predictive control with trajectory library

➤ Task & Motion Planning

- ❖ Planning with model uncertainty
- ❖ Sampling based planning in high dimensional space
- ❖ Planning in belief space
- ❖ Integrated task and motion planning

Key Components of Unmanned Rotorcraft System

1. A radio-controlled (RC) rotorcraft
2. An avionic system for collecting inflight data, performing automatic control laws, executing mission-oriented tasks, and communicating with the ground station
3. A manual control system consisting of a pilot and a wireless joystick
4. A ground station system for monitoring the flight states of the UAV and communicating with the avionic system

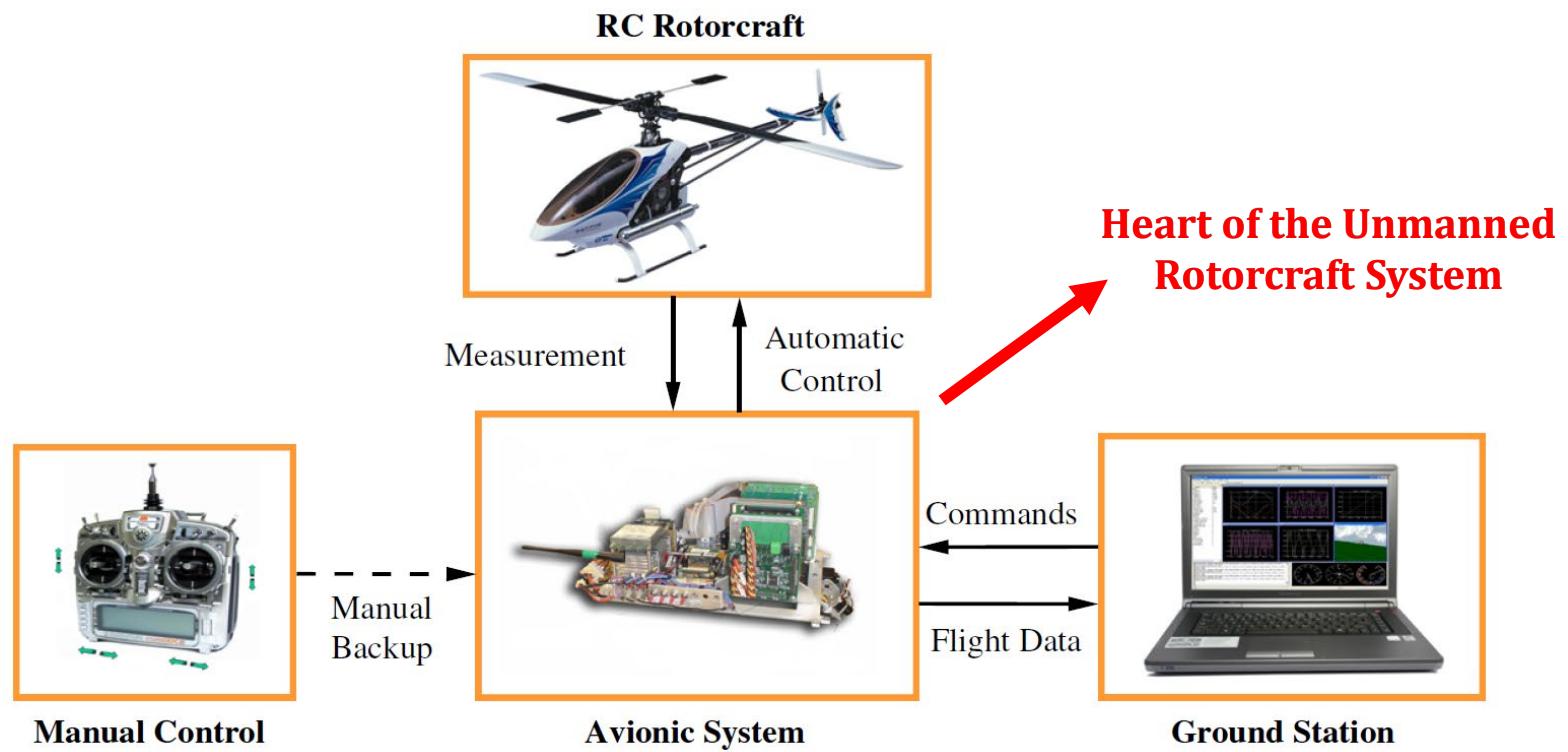

UAV Platform Design and Construction

- A reliable unmanned aerial platform is the foundation of the subsequent work (e.g., flight dynamics modeling, control system design, autonomy)

- Essential questions in platform design and construction:
 - What type of aircraft platform to choose?
 - What avionics components should be included in the design?
 - How to achieve a reliable assembly?
 - How to minimize construction time and unnecessary iterations?
 - How to verify the reliability of a constructed UAV platform?

How to choose a platform?



Multi rotor



Coaxial helicopter




Single-rotor helicopter

- ❖ Size & weight
- ❖ Additional payload
- ❖ Power source
- ❖ Flight time and speed
- ❖ On-board space
- ❖ Cost
 - Complexity
 - Availability
 - Manufacturability
 - Maintainability

Selection and Design of Bare Aircraft Platform

Thunder Tiger Raptor 90 Single-rotor Helicopter



- Length: 1410 mm
- Width: 190 mm
- Height: 465 mm
- Main rotor diameter: 1580 mm
- Tail rotor diameter: 260 mm
- Total weight: 4.8 kg
- Power source: gasoline engine

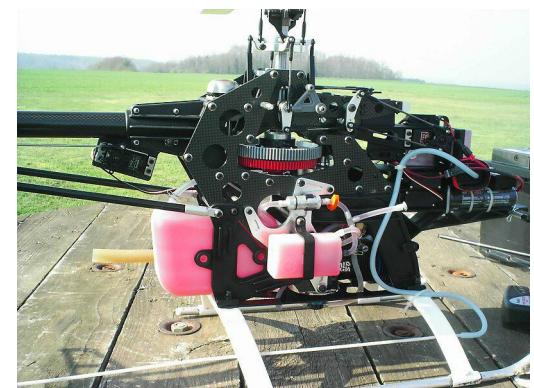

Selection and Design of Bare Aircraft Platform

Micro Aerial Vehicle (MAV)

- 40 grams (including battery)
- 8 minutes flight endurance
- Fully autonomous
- Orientation control 200 Hz
- Position control 50 Hz

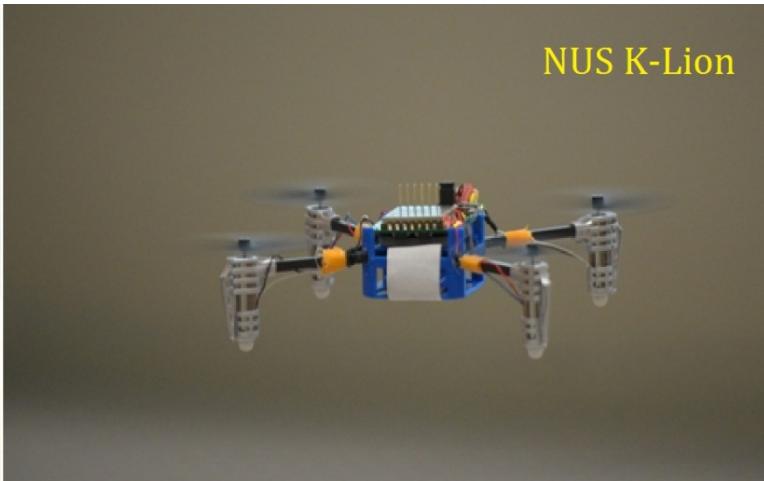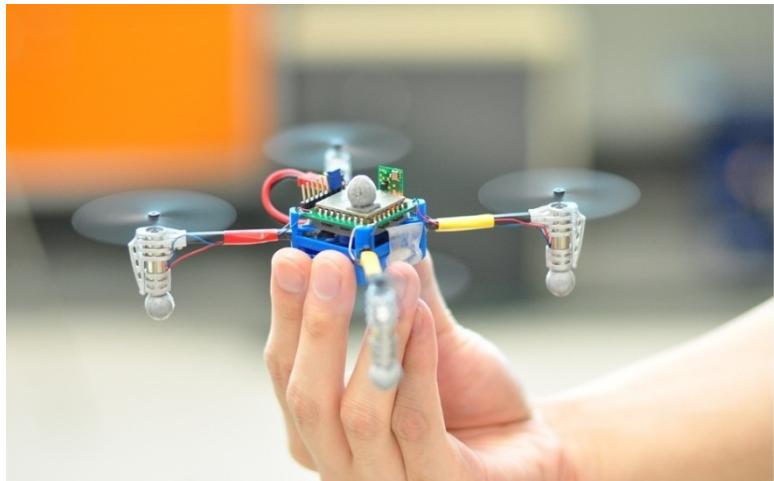

Selection and Design of Bare Aircraft Platform

Hybrid Aircraft

Gimballed Vector Thrust

- Roll and pitch controlled by gimbal system
- Yaw controlled by rotational speed difference

Gyro Stabilizer

- 5 gyros to stabilize 3-axis orientation
- Works on both hovering and cruising modes




Retractable Wings


- 3 control modes available
- Enable VTOL, hovering, cruise flight



Selection of Avionics and Other Components

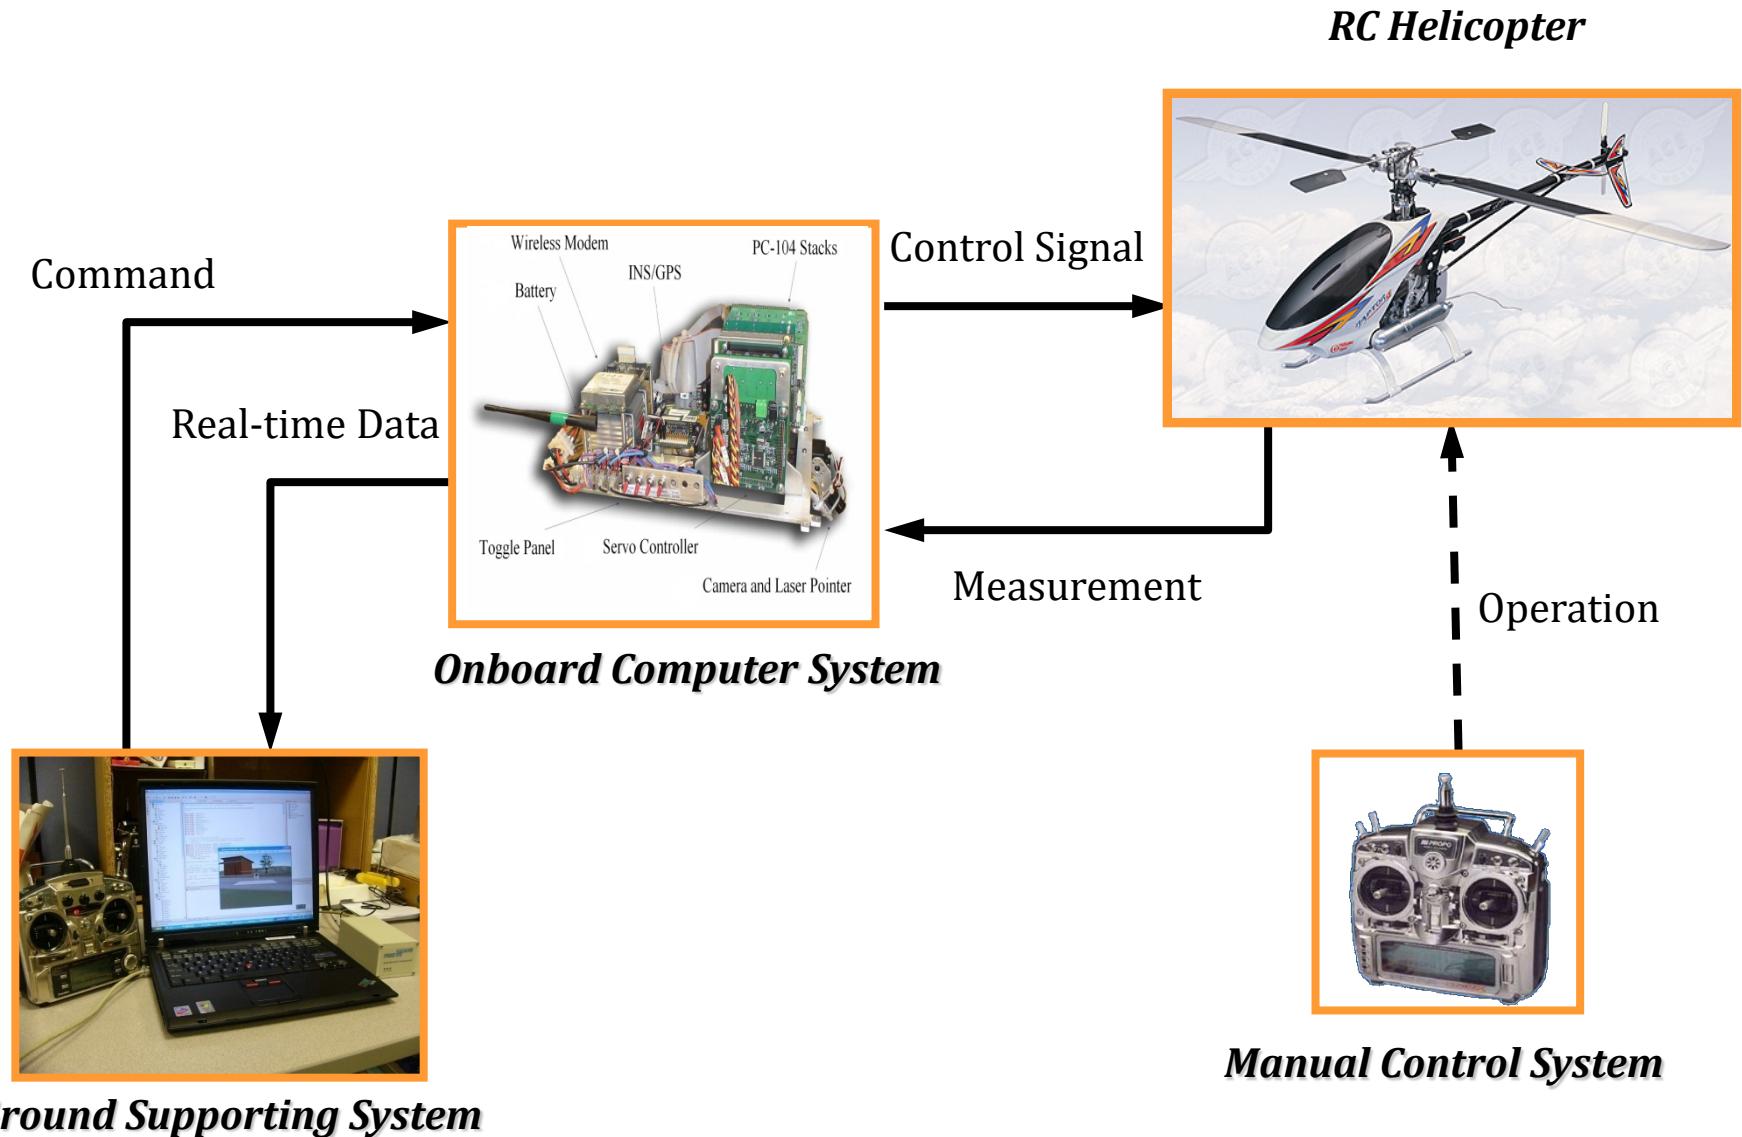

Selection of Avionics and Other Components

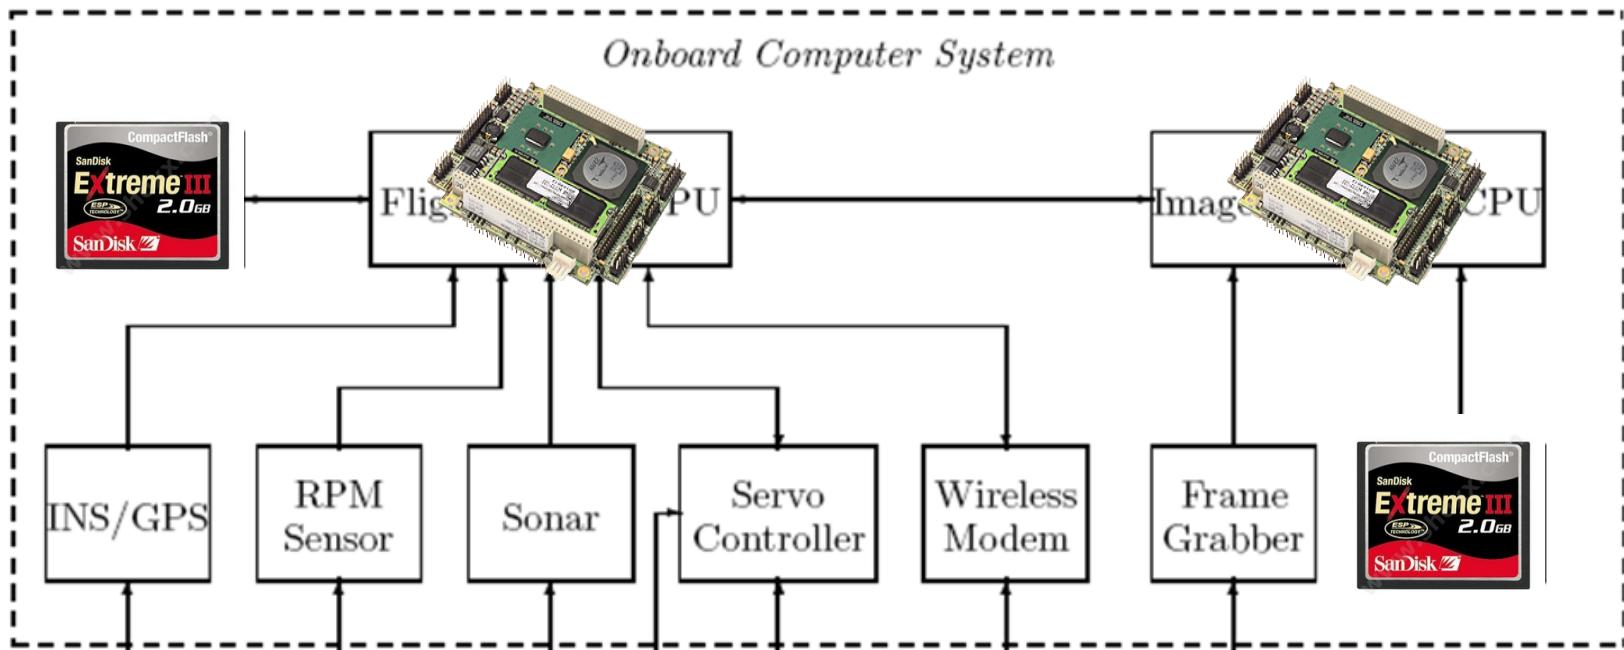


PC/104(-plus) SBC



Reason for selection:

1. Industry/military level reliability
2. Sufficient computational power
3. Small and standard size
4. Good expandability
5. Driver support for real-time OS

Selection of Avionics and Other Components

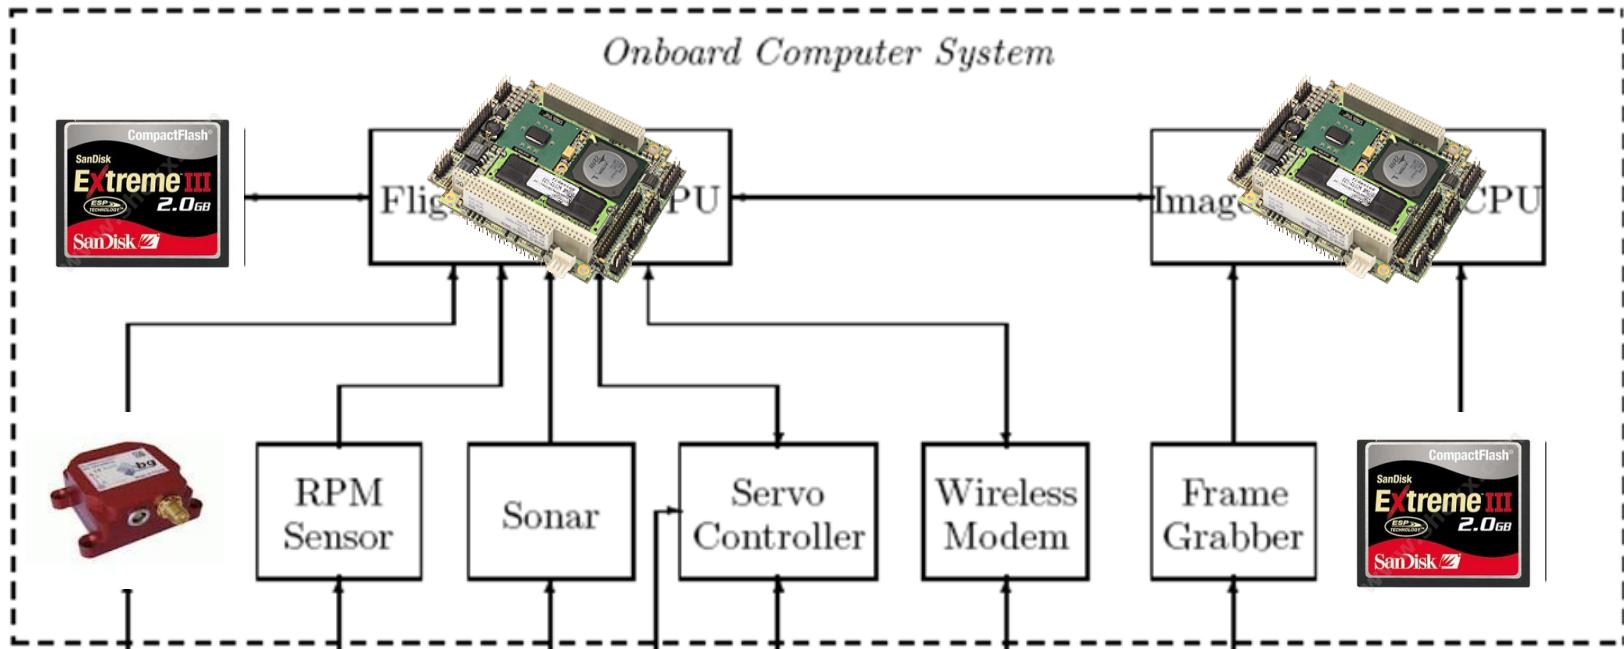


IG-500N INS/GPS




Reason for selection:

1. Complete data package for modeling and control
2. Precise calibration for raw sensors
3. Built-in Extended Kalman Filter
4. Sufficient update rate up to 100 Hz
5. Anti-vibration and EMI design

Selection of Avionics and Other Components

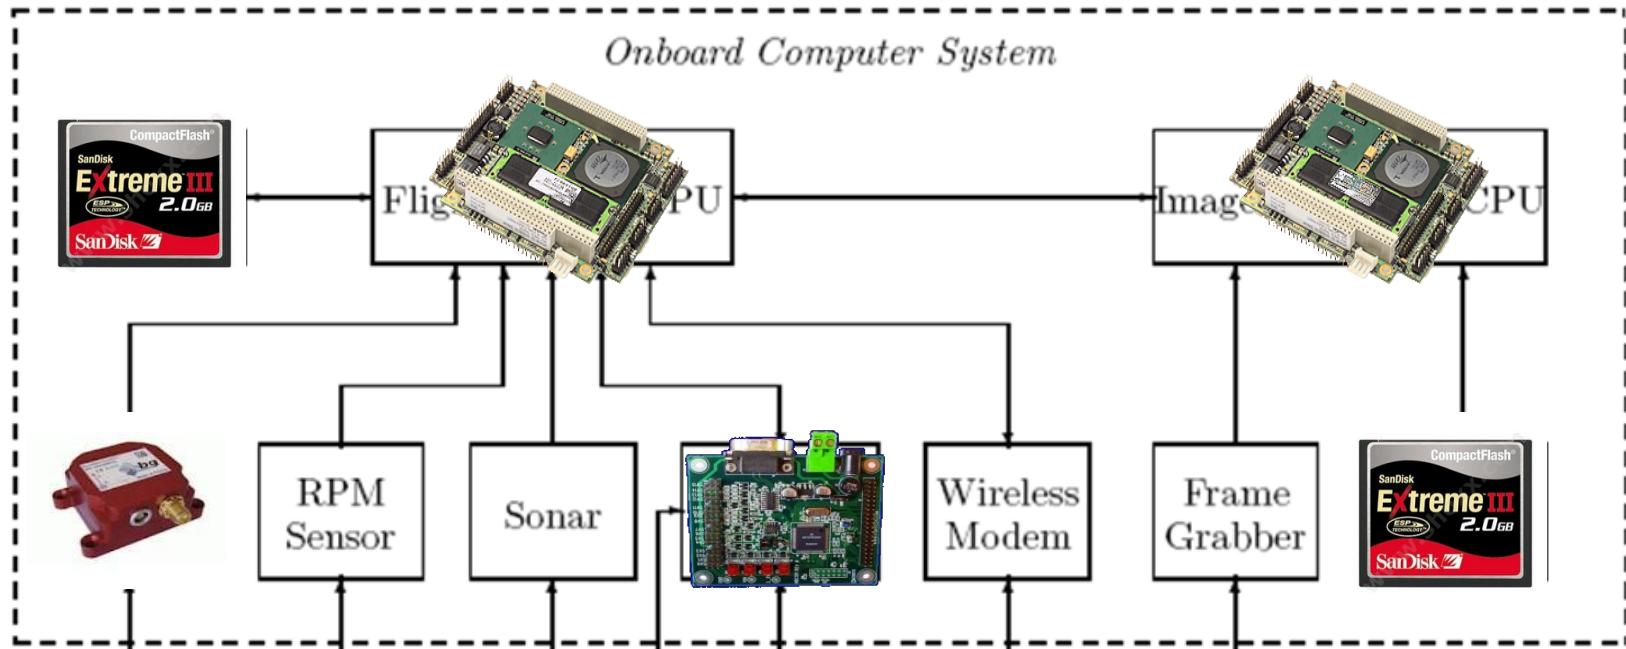


HBC-101 Servo Ctrl Bd

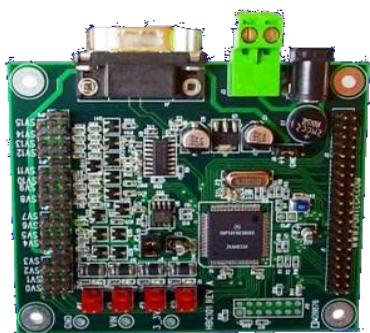


Reason for selection:

1. Input signal recording for modeling and control
2. Reliable manual/auto switching function
3. Sufficient input/output channels for extension
4. High A/D resolution (16-bit)

Selection of Avionics and Other Components

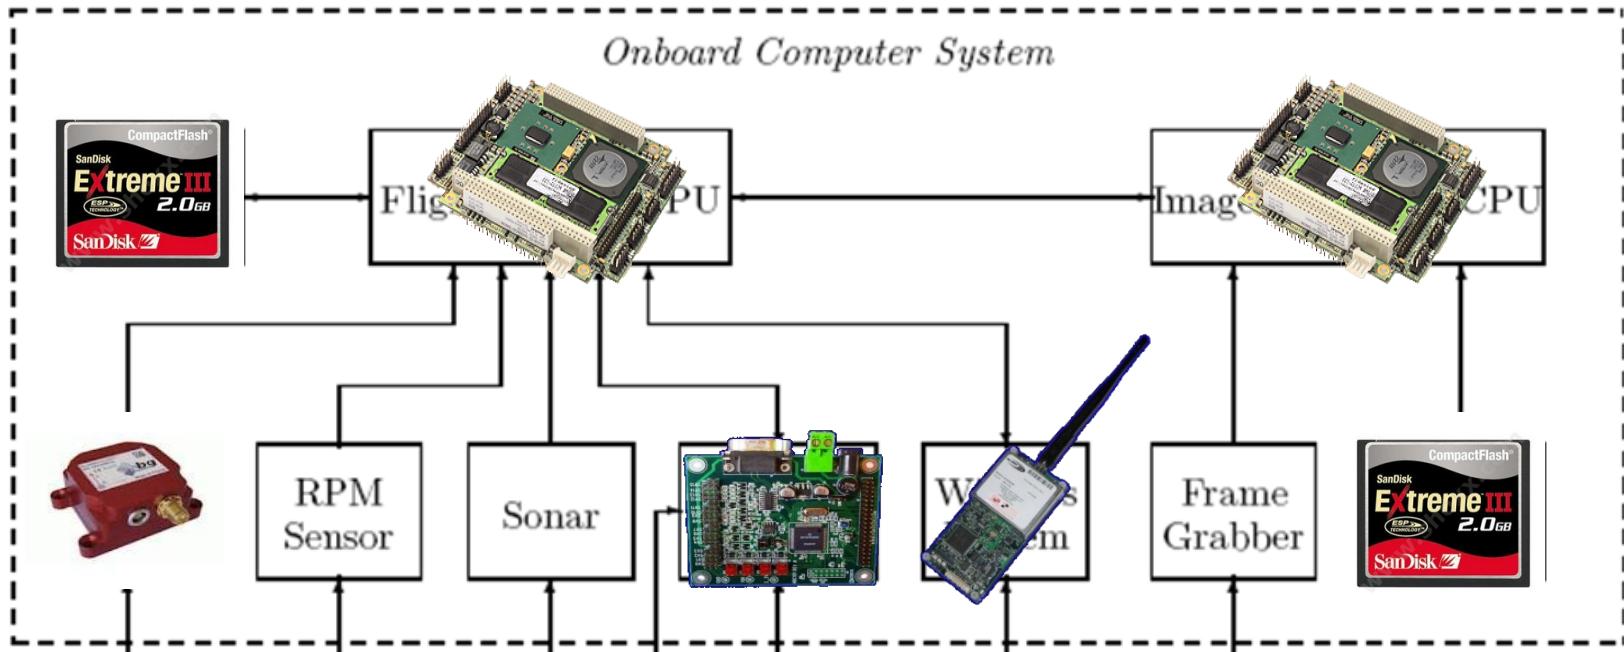

Freewave IM-500 Mdm

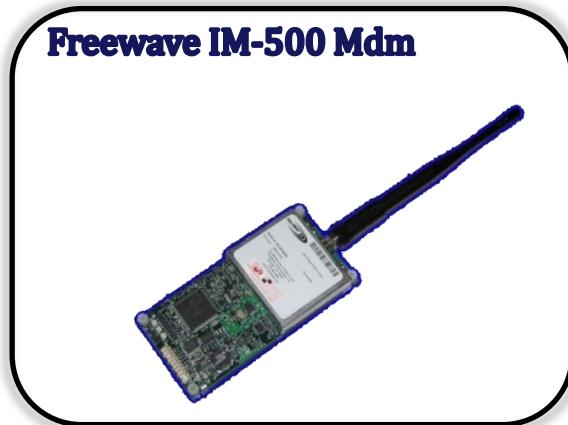


Reason for selection:

1. Extremely long range up to 32 km
2. Small size and ultra light weight
3. Plug-in-and-play configuration
4. Sufficient throughput rate

Selection of Avionics and Other Components


The typical values of data bandwidth and communication range of those communication devices are summarized

Communication module	Data bandwidth	Range	Protocol
UART interface	115200 bps	32 km	UART
802.11g	54 Mbps	250 m	TCP/IP
3G modem	300 kbps	Hundred km	TCP/IP
4G modem	5 Mbps	Hundred km	TCP/IP

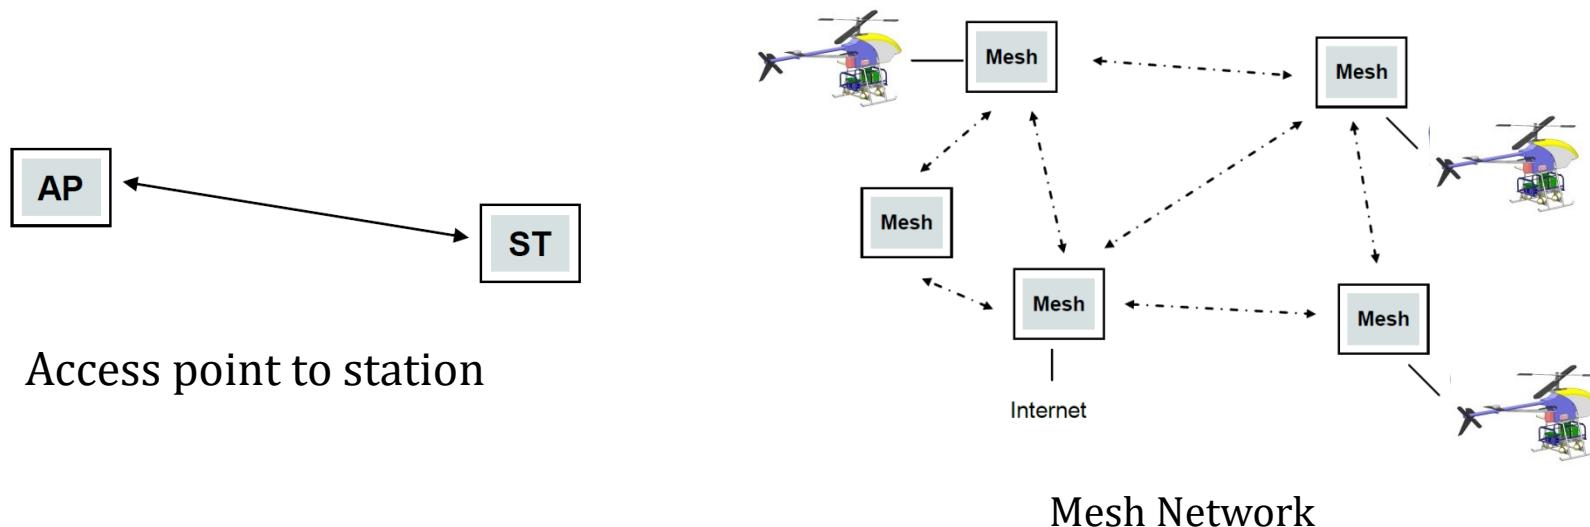


Selection of Avionics and Other Components

The communication units in the UAV system framework are deployed as interfaces between the UAV entity itself and external entities. The external entity can be the GCS for the ground operator, or another UAV entity for information exchange. With UAV to GCS communications, the operator can remotely control and monitor UAVs in operation. With inter-UAV communications, the UAV team can multiply their capability and effectiveness in cooperative tasks.

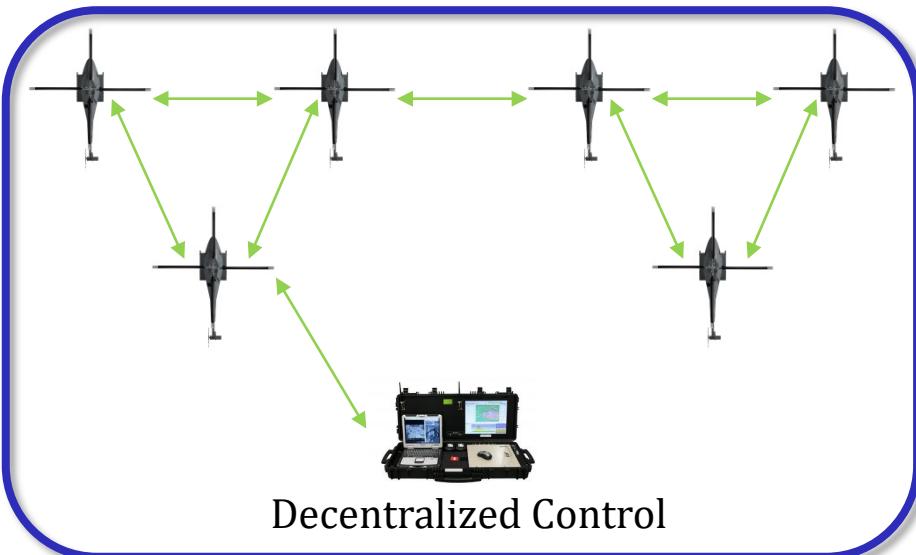


Decentralized Control

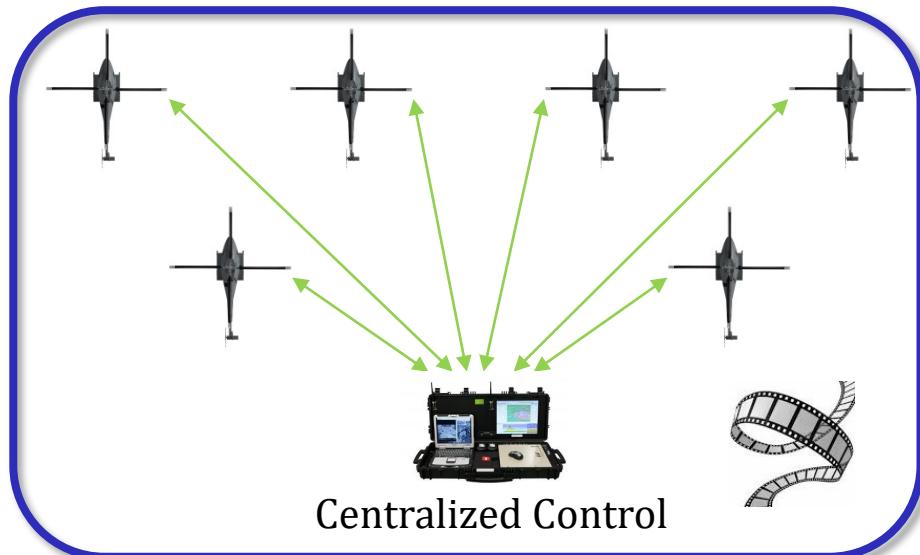

Centralized Control

Selection of Avionics and Other Components

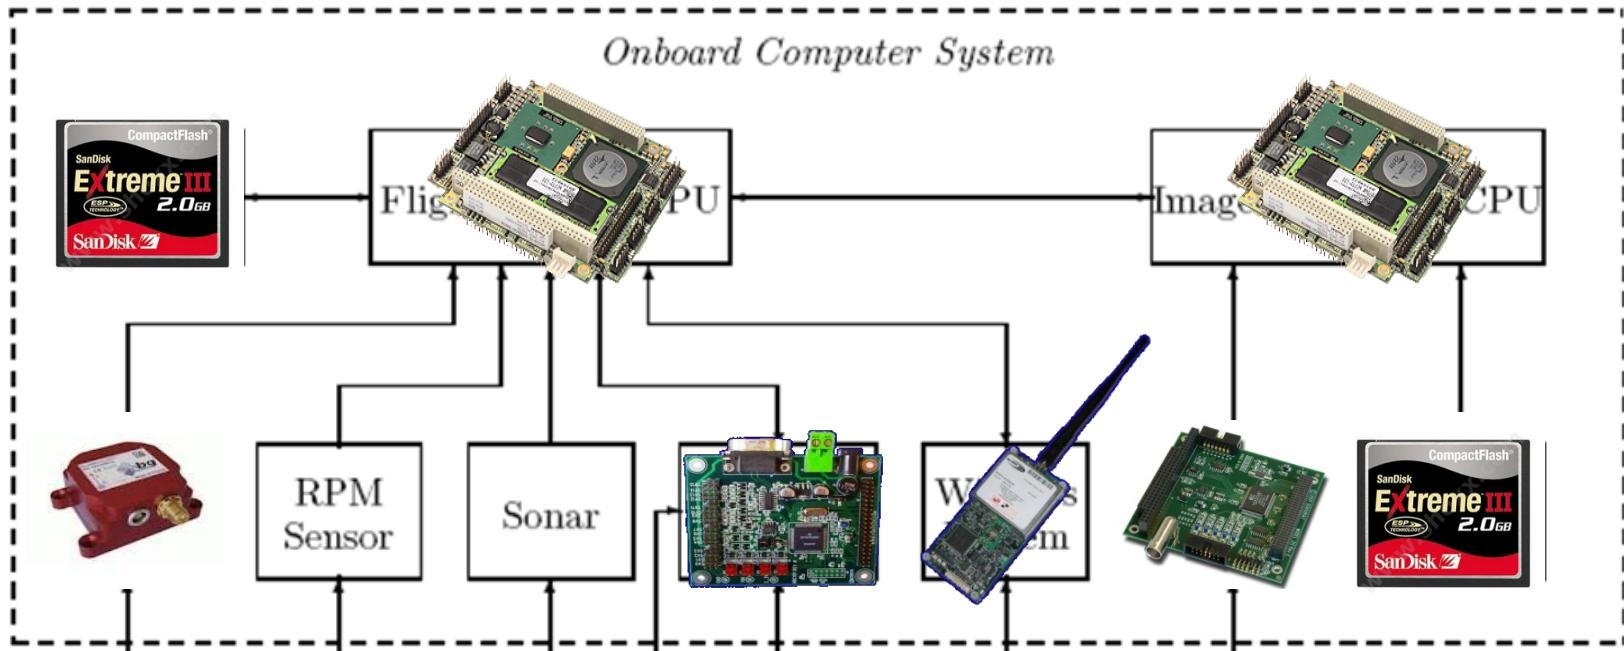


ColorY 104 Frame Grab



Reason for selection:

1. Sufficient resolution up to 720*576 pixels
2. Processing rate up to 30 FPS
3. Plug-in-and-play configuration
4. Parallel image processing to 2 formats

Selection of Avionics and Other Components

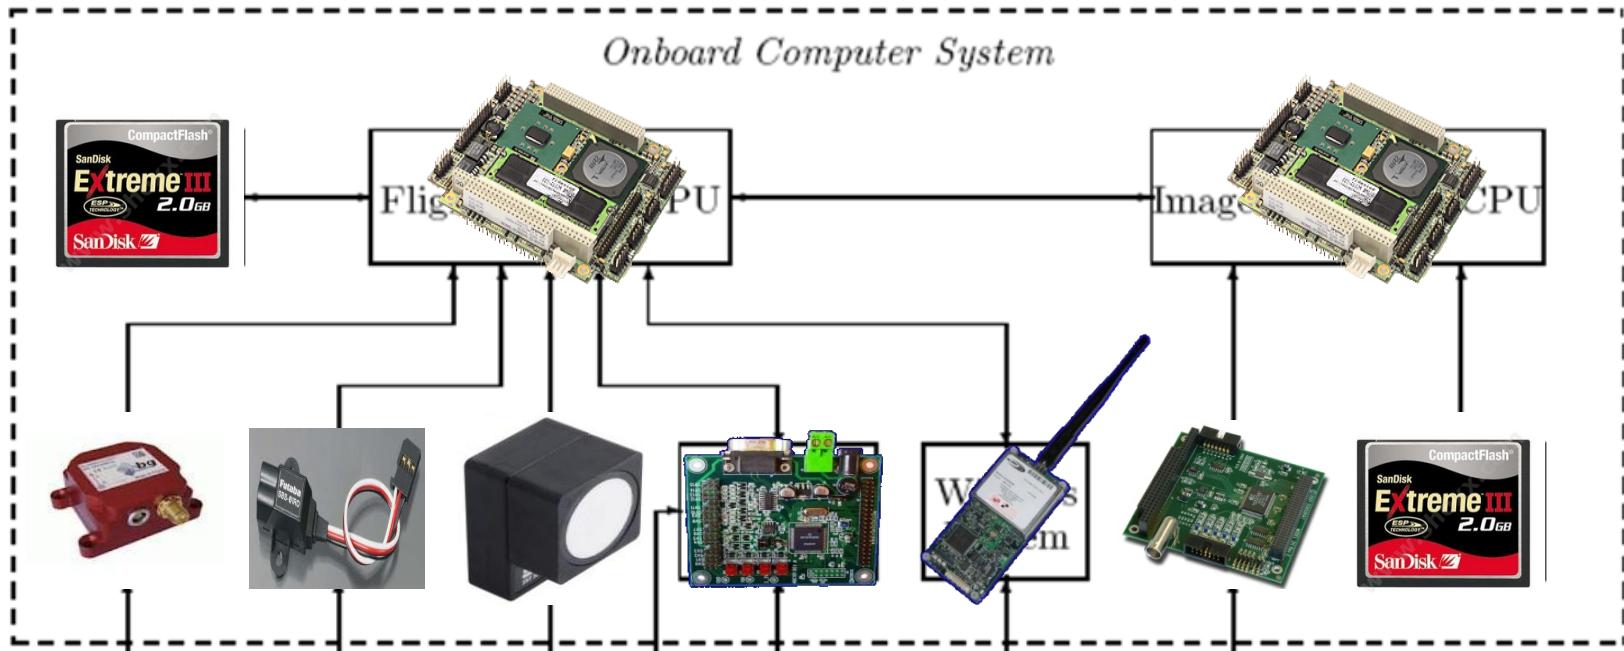


Reason for selection:

1. Light weight and small size
2. Sufficient precision
3. Easy for customization and mounting

Layout Design & Assembly


Use professional virtual design software (e.g., SolidWorks, Autocad, 3Dmax)

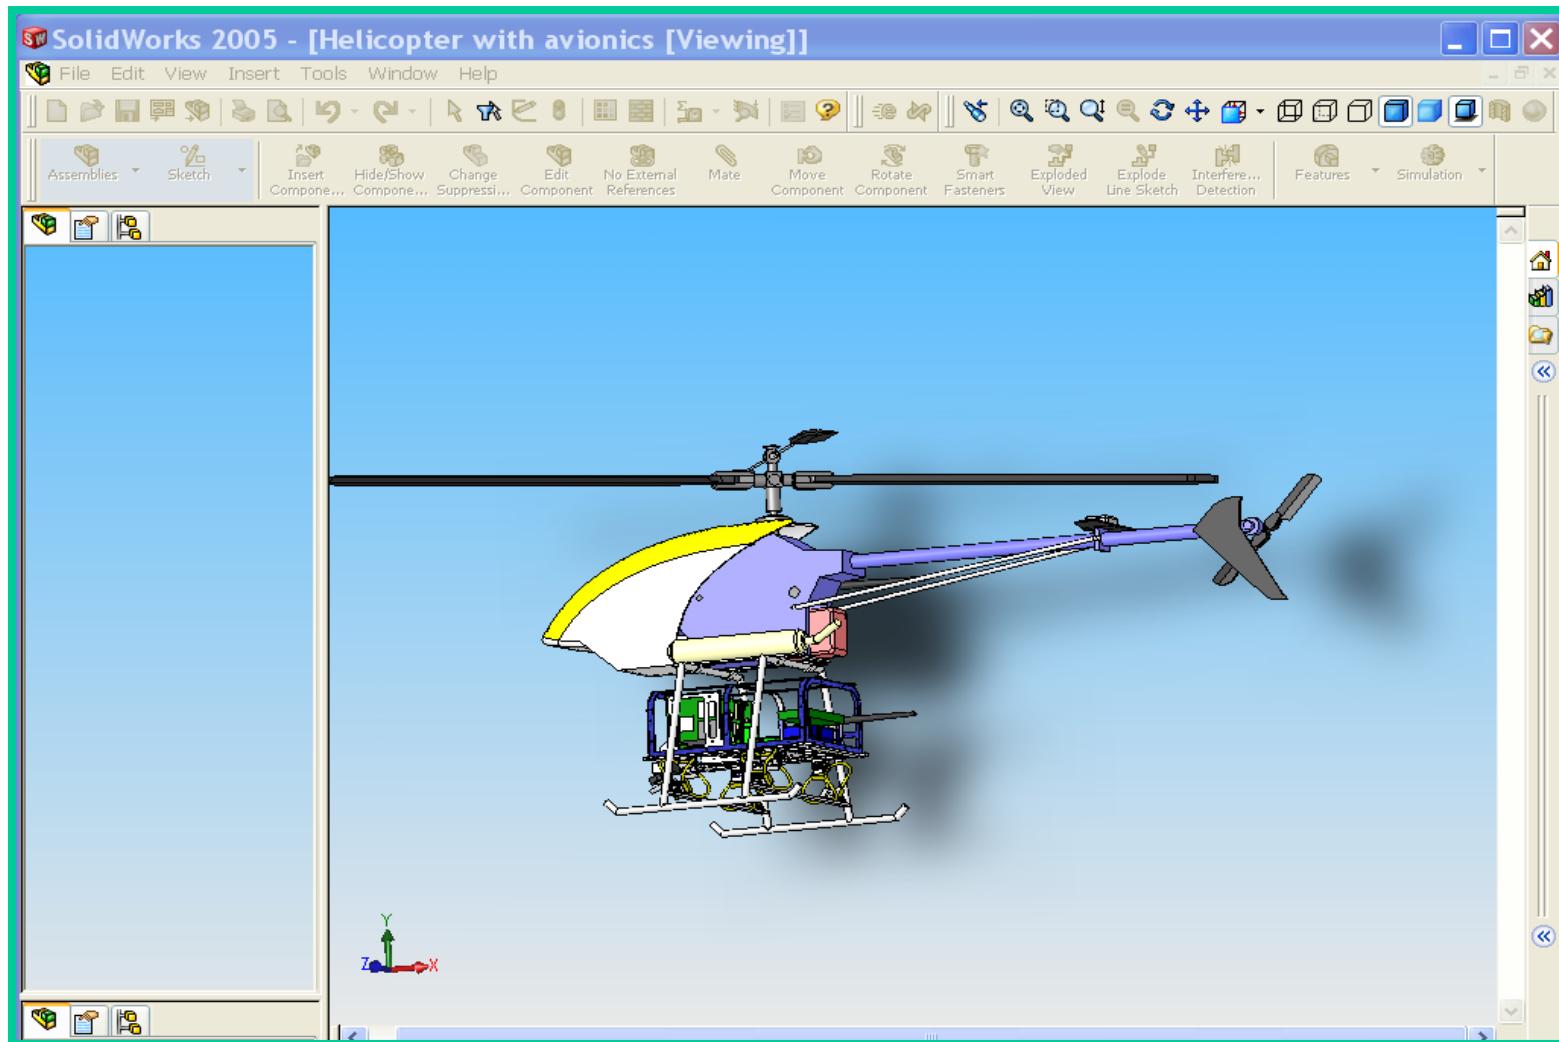


Layout Design & Assembly

Optimal placement of avionics

Determining the location of INS/GPS

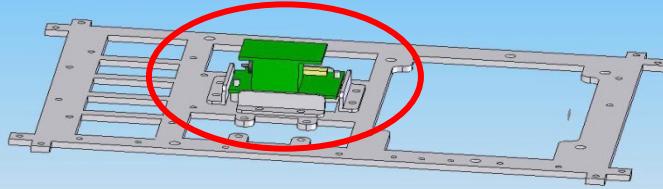


Determining the location of the camera and laser range finder

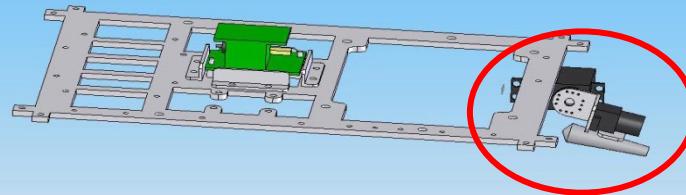

CG balancing




Locating the remaining components

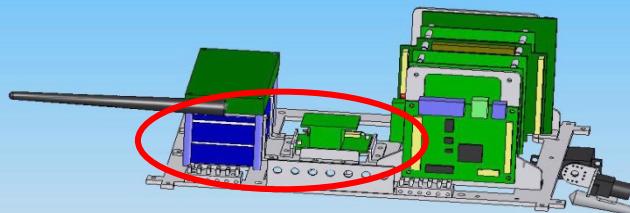





Layout Design & Assembly

Design with consideration of structural properties

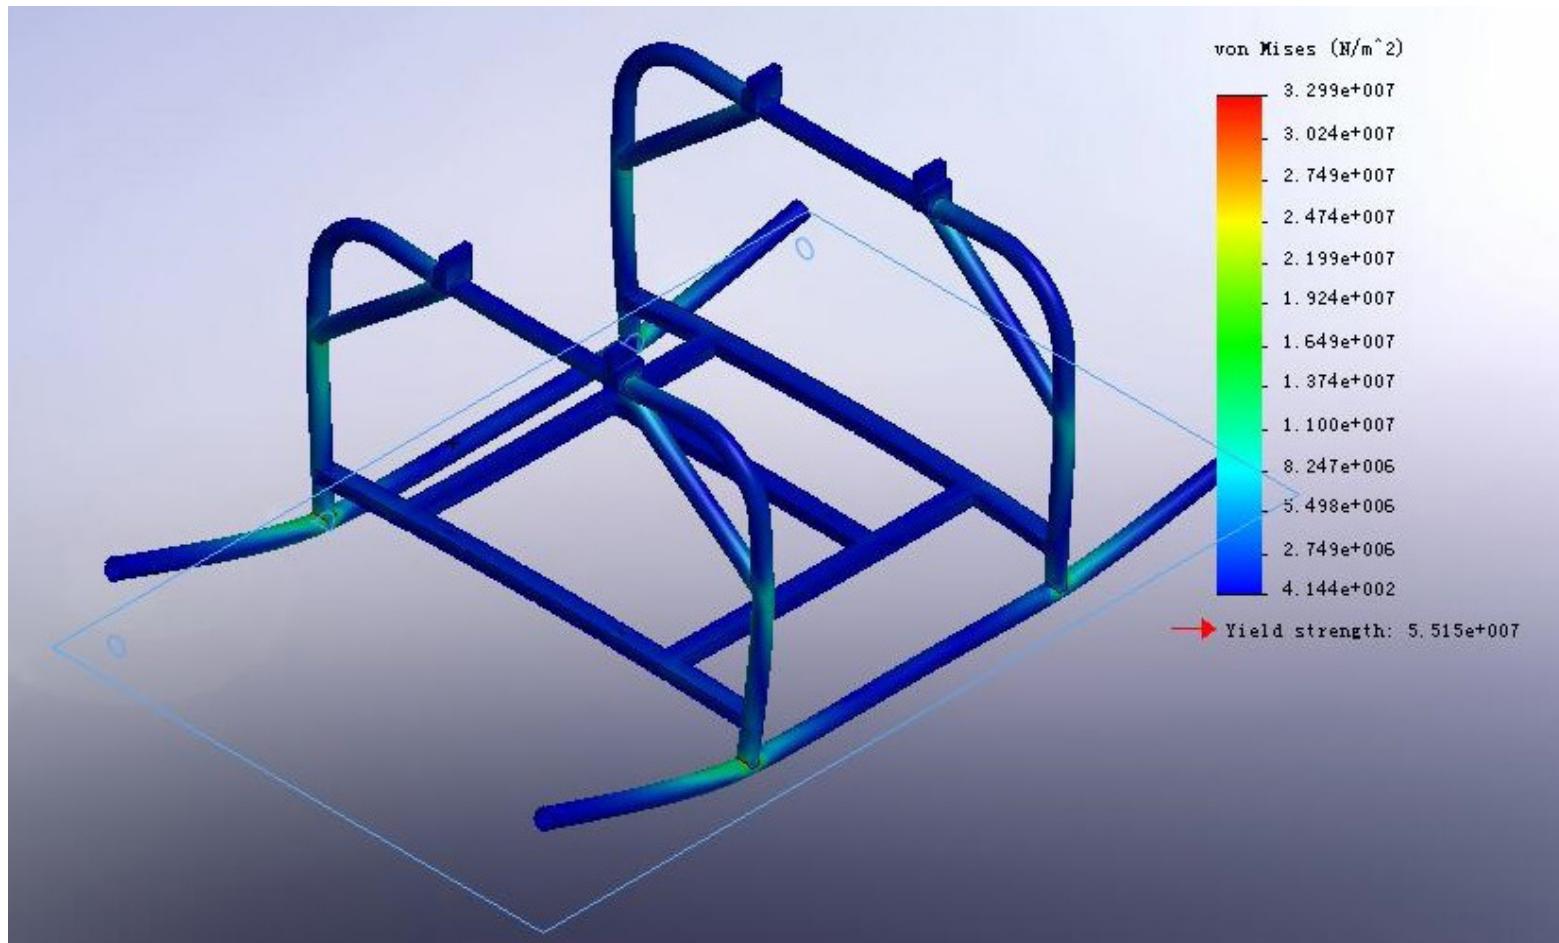


Layout Design & Assembly

Design with consideration of vibration attenuation

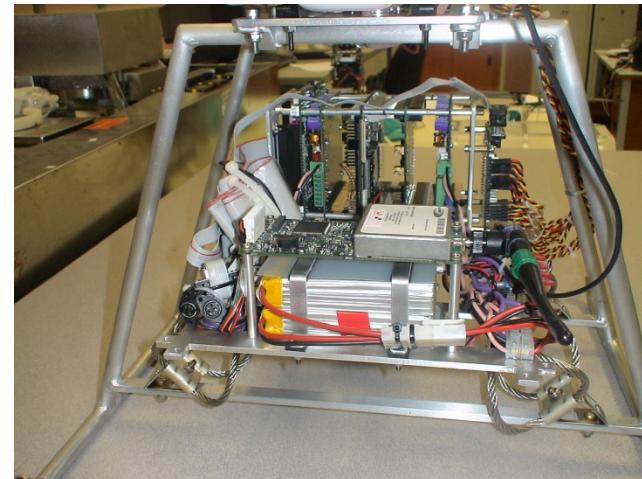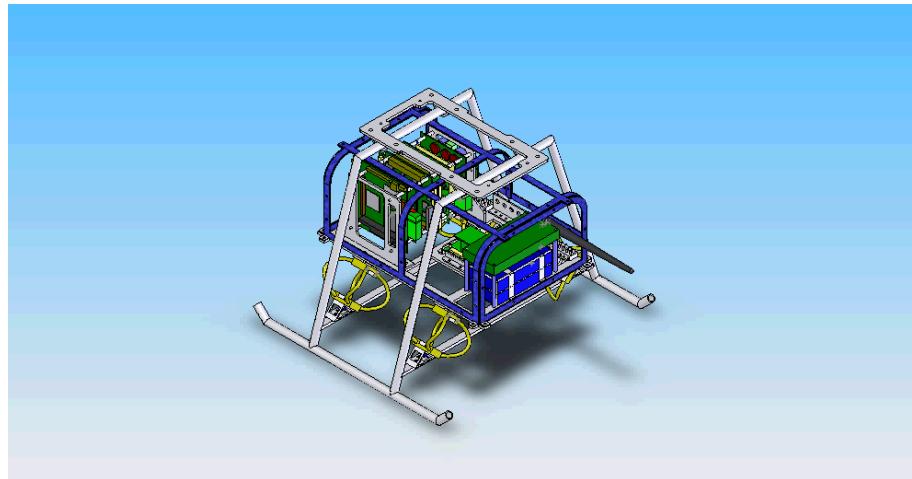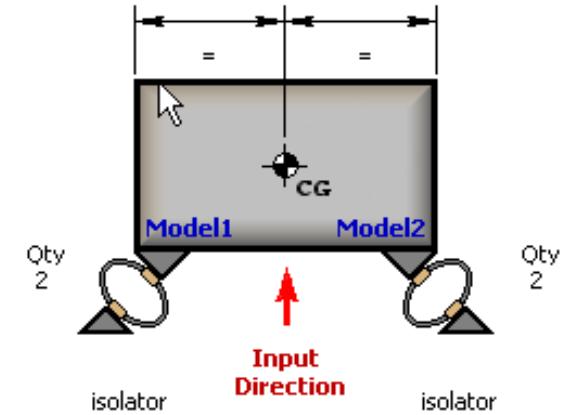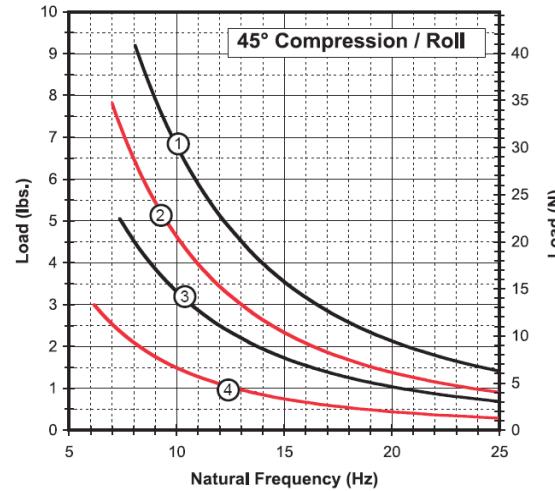


Layout Design & Assembly

Fully Assembled Avionics System

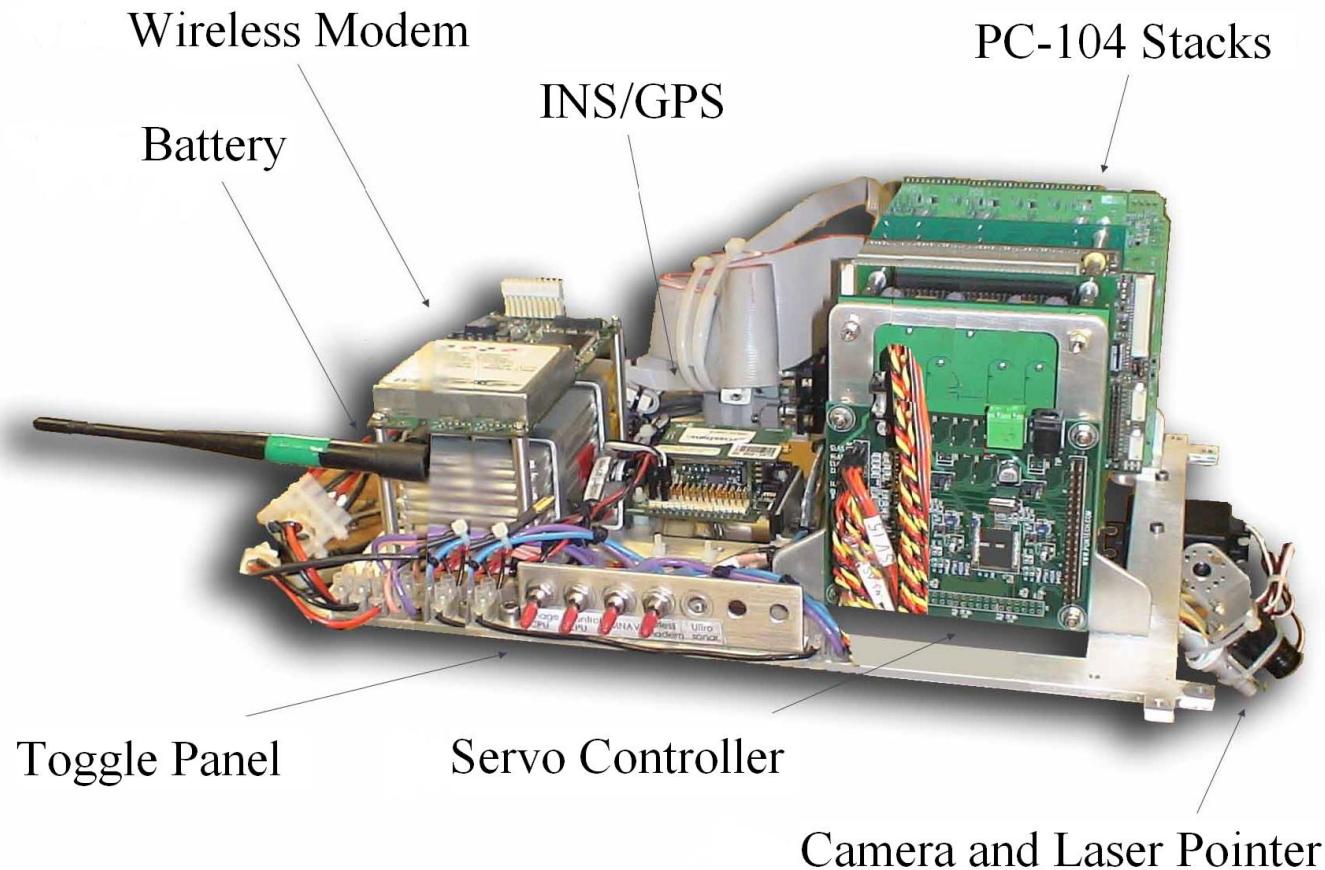





Layout Design & Assembly

Fully Assembled Aircraft System

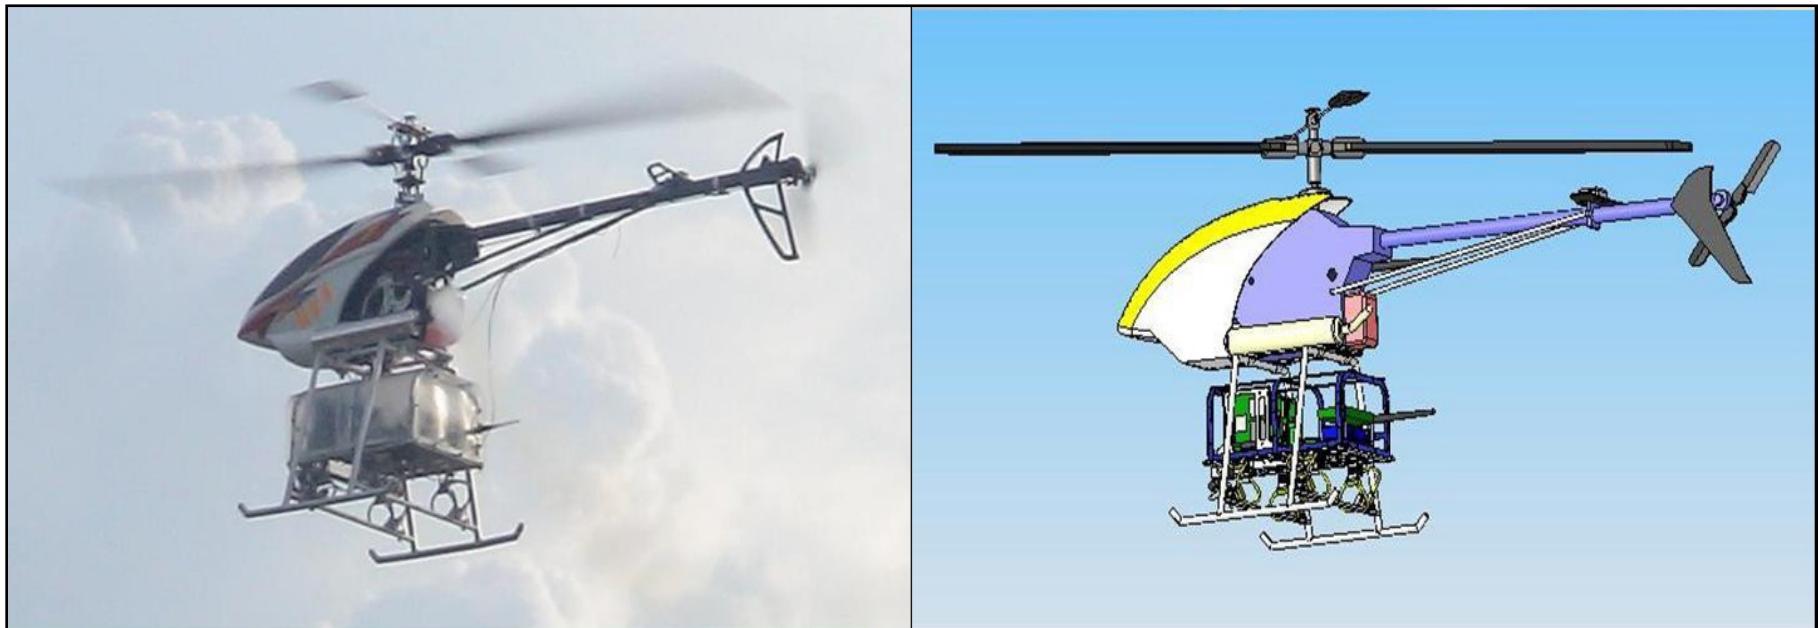


HeLion and its virtual counterpart built in SolidWorks

Reliability Evaluation

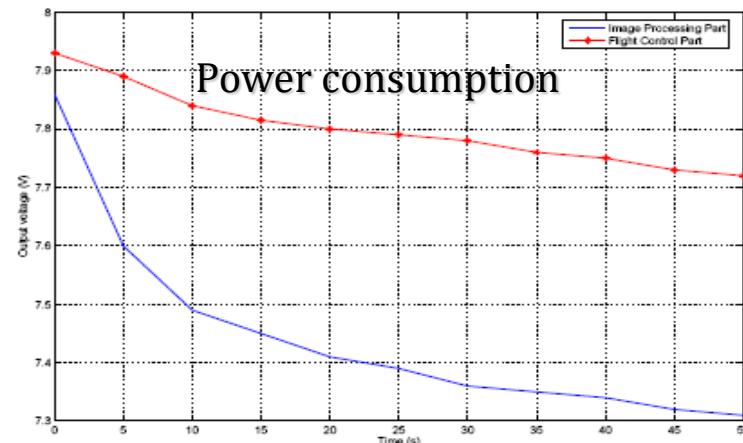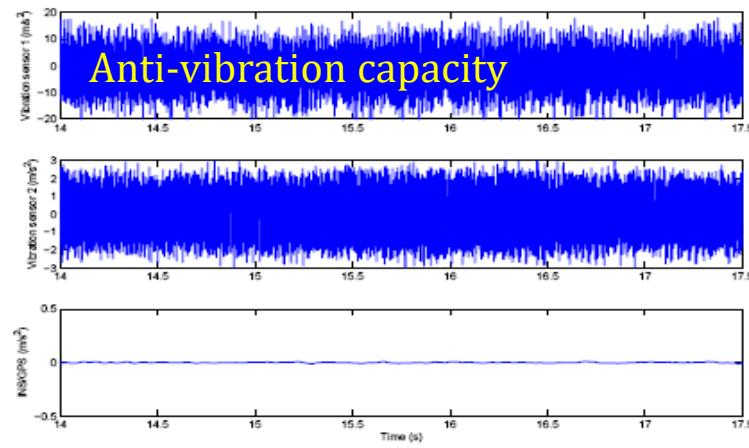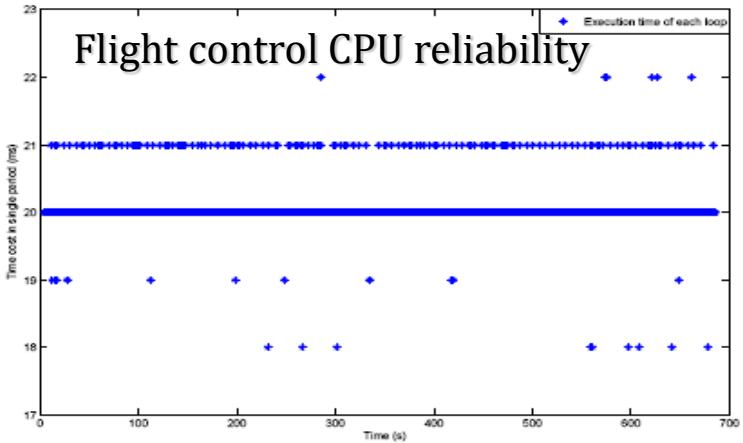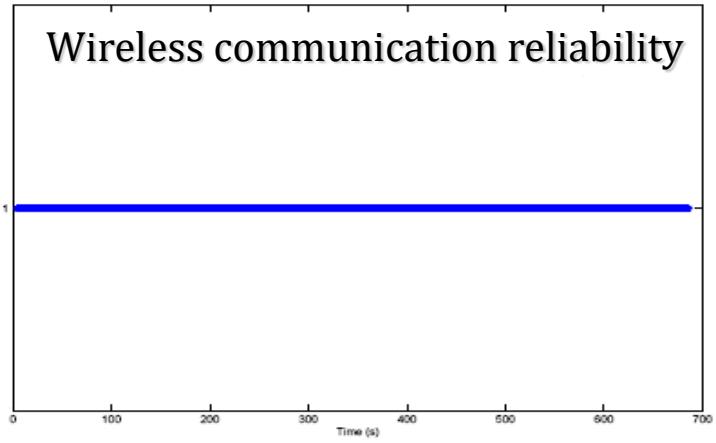


Reliability Evaluation


Anti-vibration test

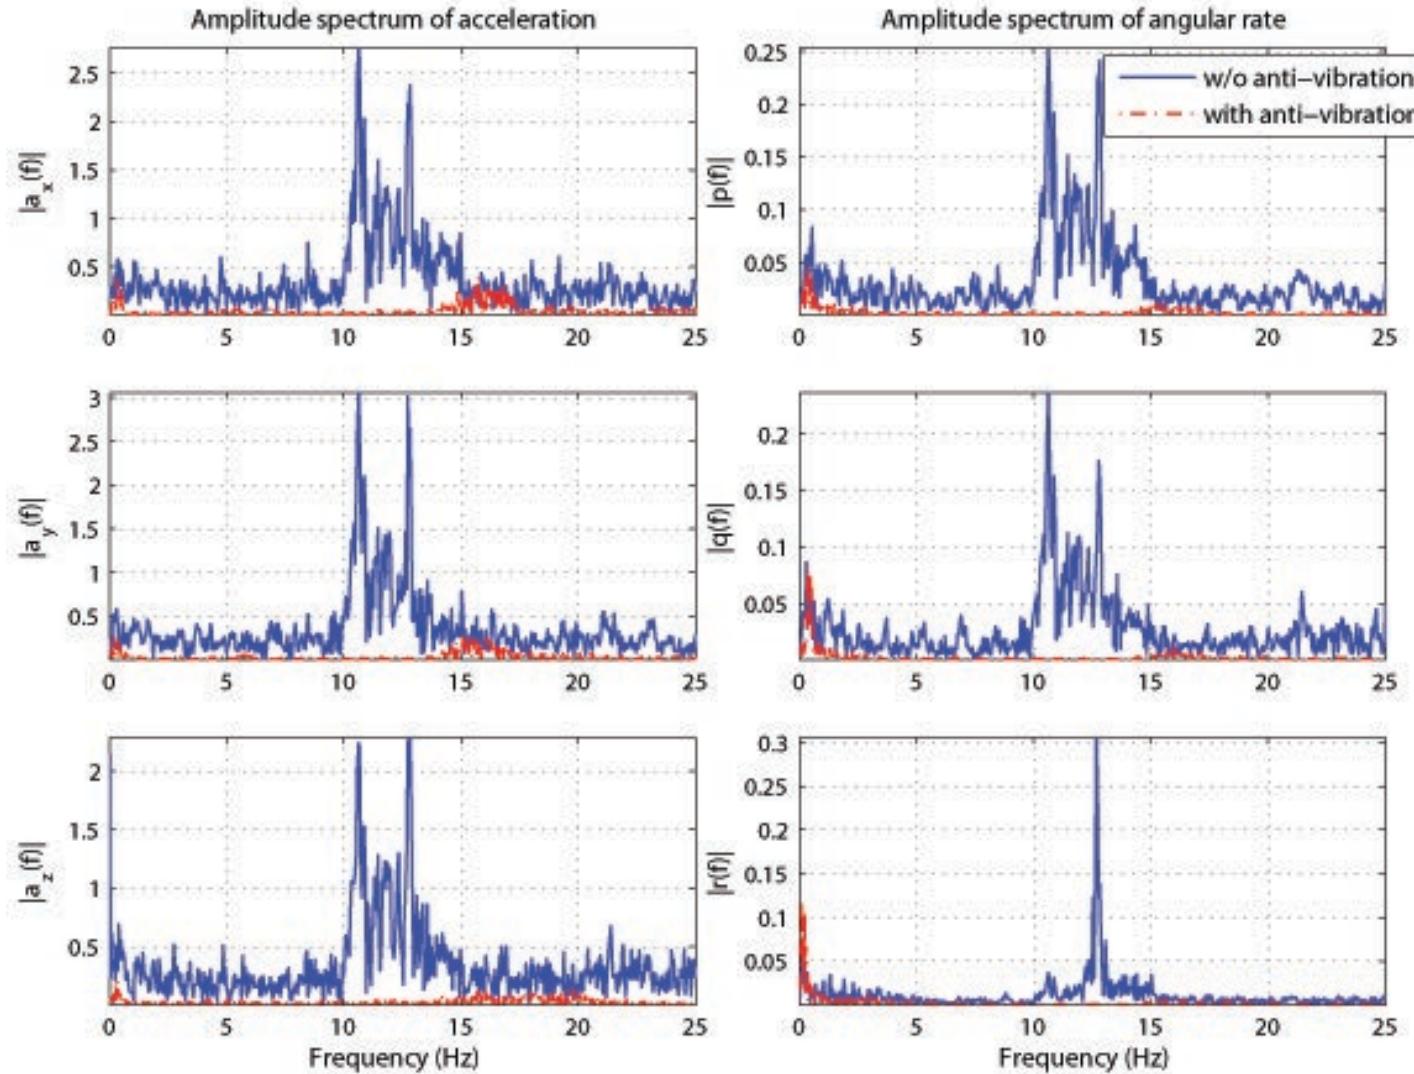

Onboard Software – Modular Design

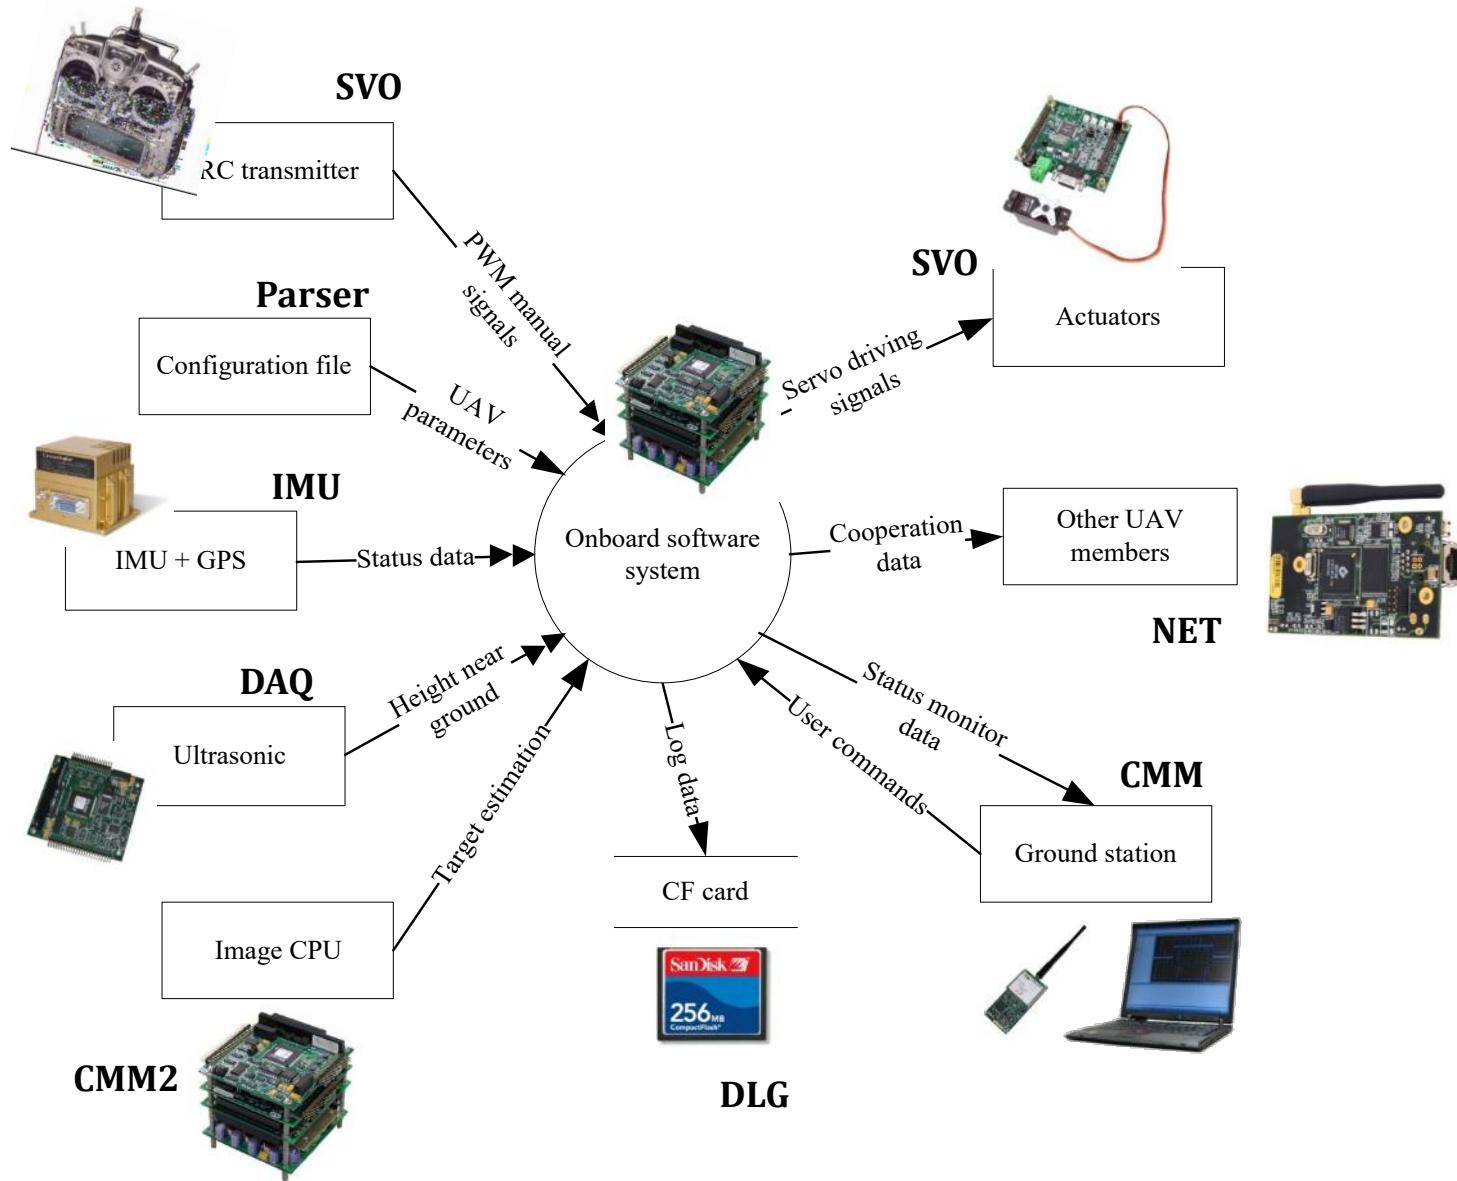

Onboard Software – Task Scheduling

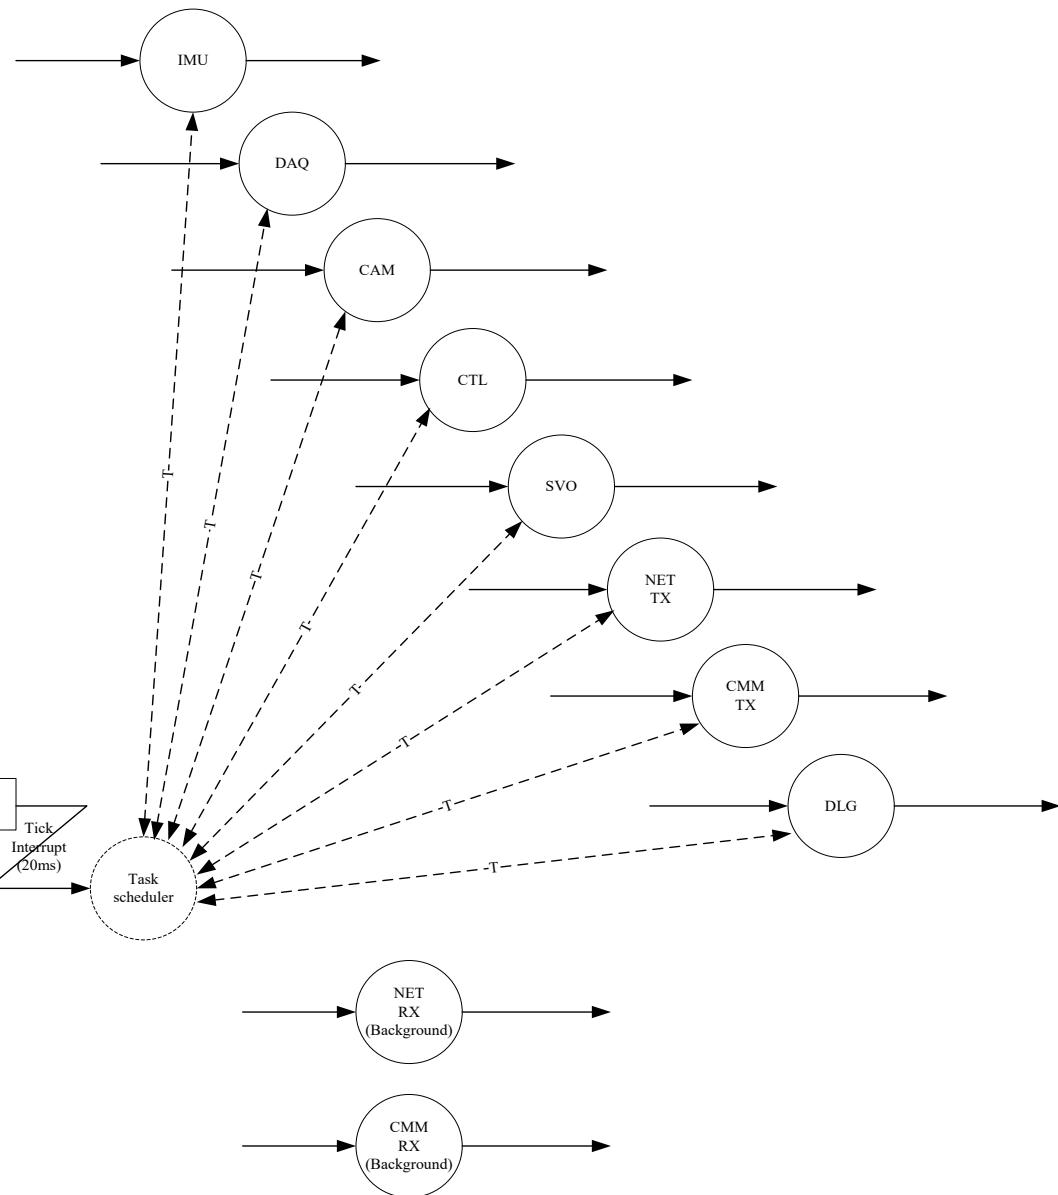

1. Multitasking (Multithreading) is necessary for real-time software
2. Task synchronization is realized via signal, IMU -> DAQ -> CAM -> CTL -> SVO -> NET -> CMM -> DLG
3. Background tasks are scheduled by the RTOS scheduler, will be activated once no other threads are working
4. Each working thread represents a state in the whole system behaviors
5. Task scheduler manages the state transitions

Onboard Software System – Performance Test

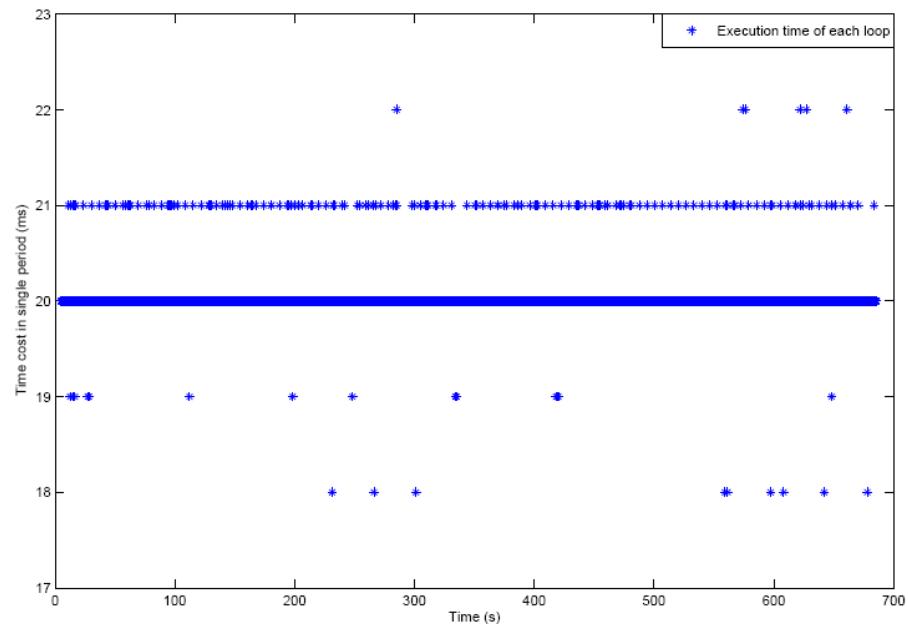


Figure 3.15: Time intervals between each loop.


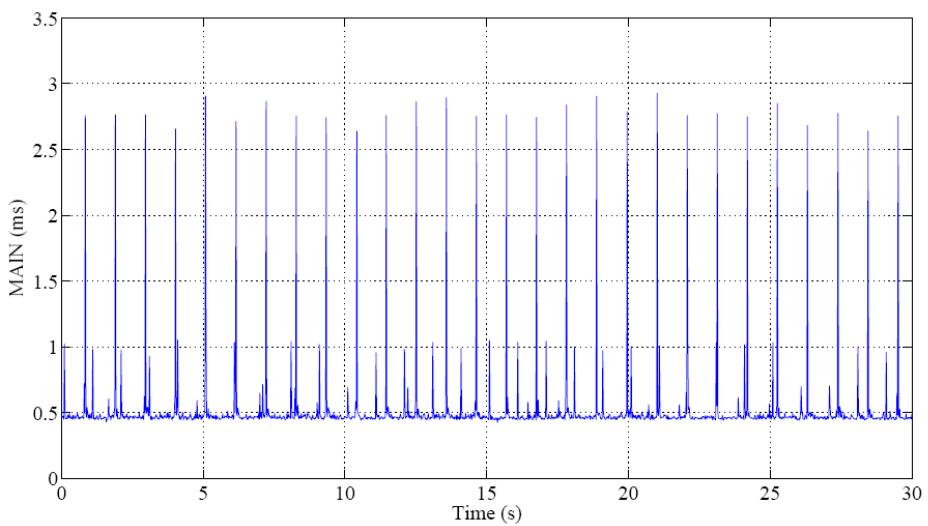


Figure 3.16: Time consumption statistics for main loop.

CPU maximum working load

$$\text{usage}_{\max} = \tau_{\max}/T_{\text{cyc}} = 2.93/20 = 14.65\%$$

Ground Control System – Software Framework

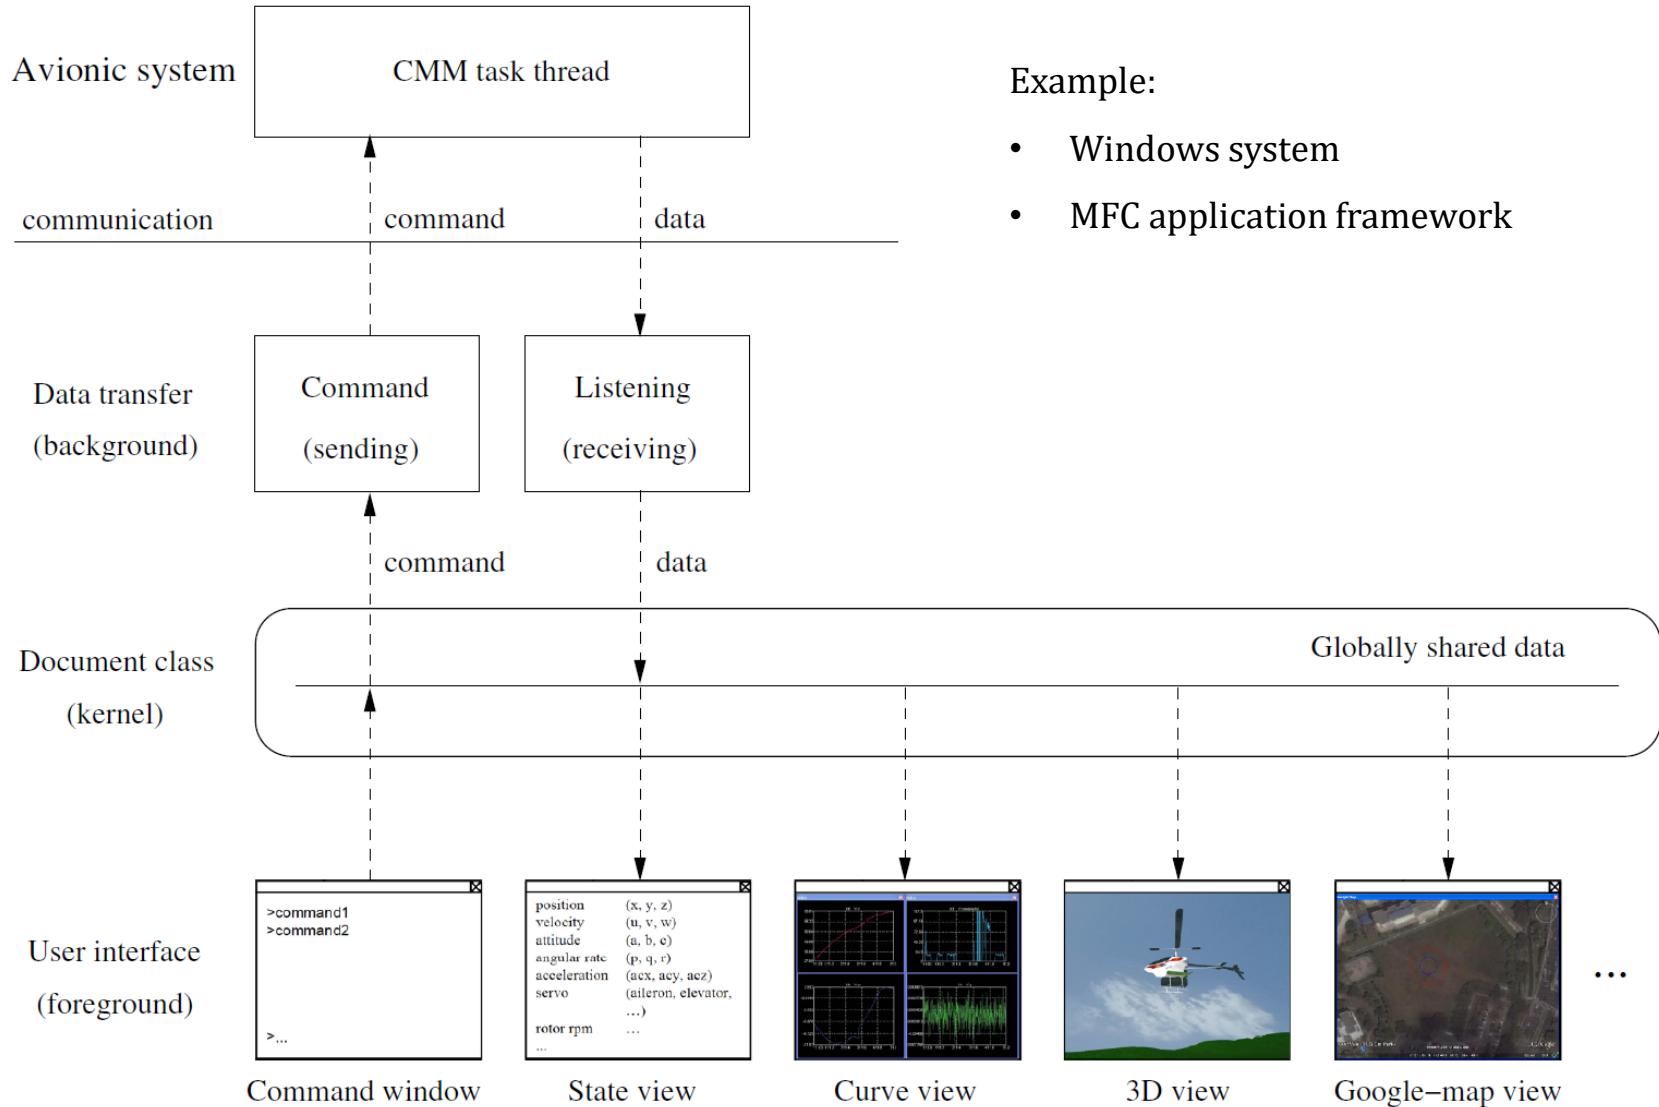

Software System – Safety Features

Safety Mode	Description	Triggering Events
Automatically return home	The UAV will cease its mission and follow a pre-defined safety trajectory back to 'home position' and land autonomously.	<ul style="list-style-type: none"> ▪ Mission related sensor faulty (outlier occurs for more than 1 second) ▪ Loss of remote transmitter signal (>10 seconds without re-gaining communication link) ▪ UAV hit 'soft geo-fence' boundary ▪ Etc.
Automatically land	The UAV will land gradually on its current location and stop engine when landed.	<ul style="list-style-type: none"> ▪ Low battery (single cell less than 3.6V) ▪ Mission control board or redundant sensor faulty ▪ Bad control performance (> 2 meters position tracking error with respect to the reference at any given point of time) ▪ Etc.
Flight termination	The UAV will immediately turn off all the motors or engines.	<ul style="list-style-type: none"> ▪ The UAV exits 'hard geo-fence' ▪ Low level autopilot "lock-up" ▪ UAV attitude is more than 45 degrees ▪ Etc.

Ground Control System – Information Monitoring

Station

Connection View Simulation Help

variable Data


- time
- x (NED)
- y (NED)
- h (height)
- u (forward velocity)
- v (right velocity)
- w (downward velocity)
- a (roll angle)
- b (pitch angle)
- c (heading angle)
- p (roll rate)
- q (pitch rate)
- r (yaw rate)
- V (velocity to air)
- attack angle
- sideslip angle
- longitude
- latitude
- altitude
- velocity to north ug
- velocity to east vg
- velocity down wg
- acceleration acx
- acceleration acy
- acceleration acz
- ail(man)
- ele(man)
- aux(man)
- rud(man)
- thr(man)

Command Window

```
input>
```

Done

Google Maps

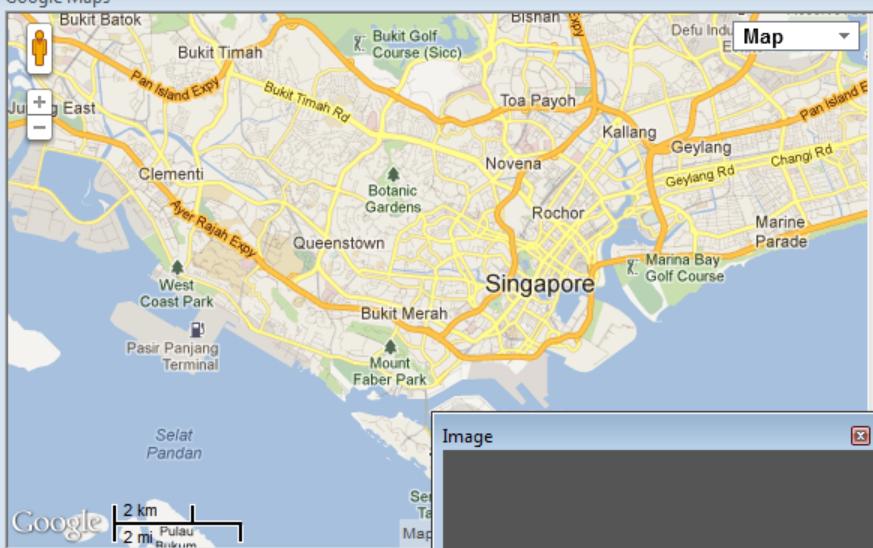

Map

Image

Figure windows showing data plots for various variables:

- y (NED) vs time: y ranges from 0 to 10
- h (height) vs time: h ranges from 0 to 20
- b (pitch angle) vs time: b ranges from -5 to 5
- c (heading angle) vs time: c ranges from 0 to 60
- ailron vs time: ailron ranges from 0 to 0.15
- elevator vs time: elevator ranges from 0 to 0.1
- rudder vs time: rudder ranges from 0 to 0.15
- throttle vs time: throttle ranges from 0 to 0.3
- throttle vs time: throttle ranges from 0 to 0.3


Meter displays:

- Analog gauge with scales from 0 to 100, currently at ~80.
- Analog gauge with scales from 0 to 12, currently at ~6.
- Analog gauge with scales from 0 to 6, currently at ~4.

What is a **flight dynamics model**?

A flight dynamics model is a set of equations that explains

1. How aerodynamic forces are generated on the aircraft body?
2. How actuators and external factors affect these forces?
3. How these forces affect the aircraft's motion?

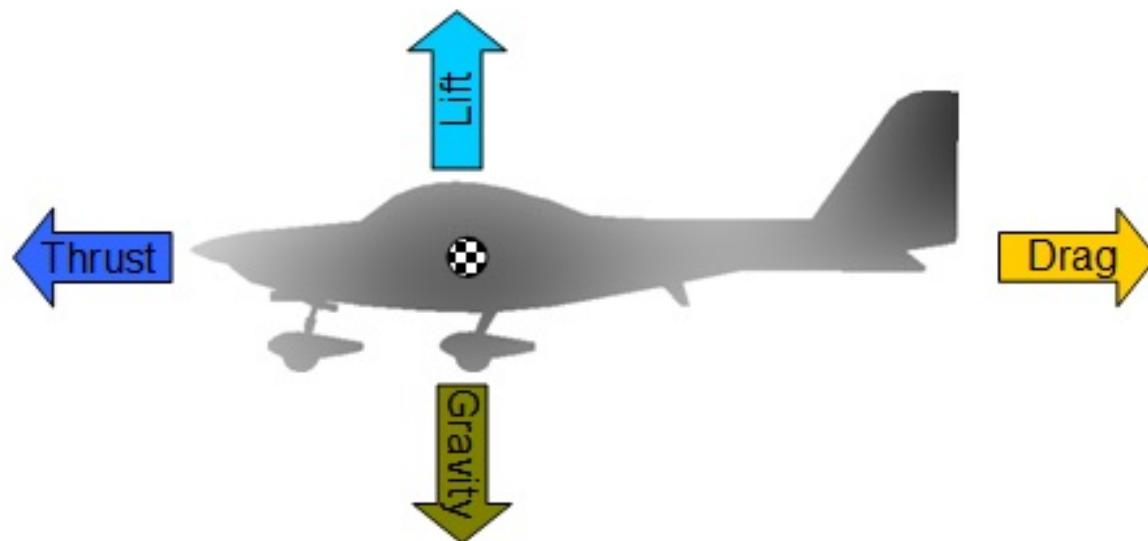

Why do we need a **flight dynamics model**?

1. Design and tuning of autonomous flight controller

Most control techniques are model based. An accurate flight dynamics model can assist flight control design efficiently in terms of parameter tuning and performance evaluation.

2. Design and modification of aircraft structure

Aerodynamic stability, physical limits and characteristics can be analyzed based on the obtained model. Mechanical modification or re-structuring can be applied if there is inherent deficiencies in the original structure.

How do we obtain a **flight dynamics model**?

1) First-principles Modeling Approach

- Build mathematical model by manipulating equations of physics
- Complex, nonlinear, rigorous with physical meanings
- Test-bench experiments

2) System Identification Approach

- Build mathematical model by fitting measurement data
- Simplified, linear, black-box
- Flight test experiments

3) Combination of the above two approaches

How do we obtain a **flight dynamics model**?

1) First-principles Modeling Approach

- Build mathematical model by manipulating equations of physics
- Complex, nonlinear, rigorous with physical meanings
- Test-bench experiments

2) System Identification Approach



- Build mathematical model by fitting measurement data
- Simplified, linear, black-box
- Flight test experiments

3) Combination of the above two approaches


First-principles Modeling Approach

Coordinate System and Rotational Frames

Body Frame

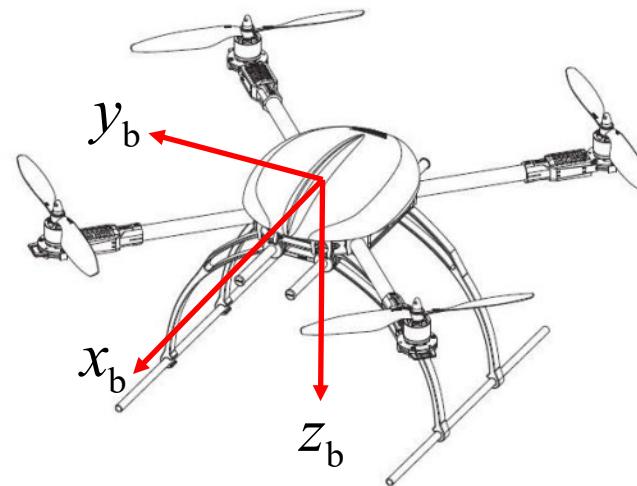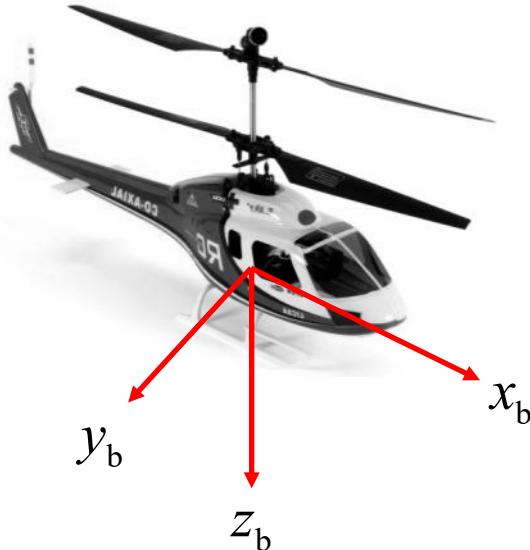

Ground Frame

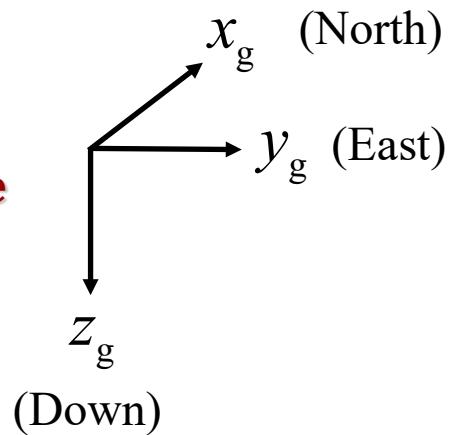


First-principles Modeling Approach

Coordinate System and Rotational Frames

Rotate a 3D point from
body **frame** to NED **frame**

$$\begin{pmatrix} x_n \\ y_n \\ z_n \end{pmatrix} = R_{nb} * \begin{pmatrix} x_b \\ y_b \\ z_b \end{pmatrix}$$

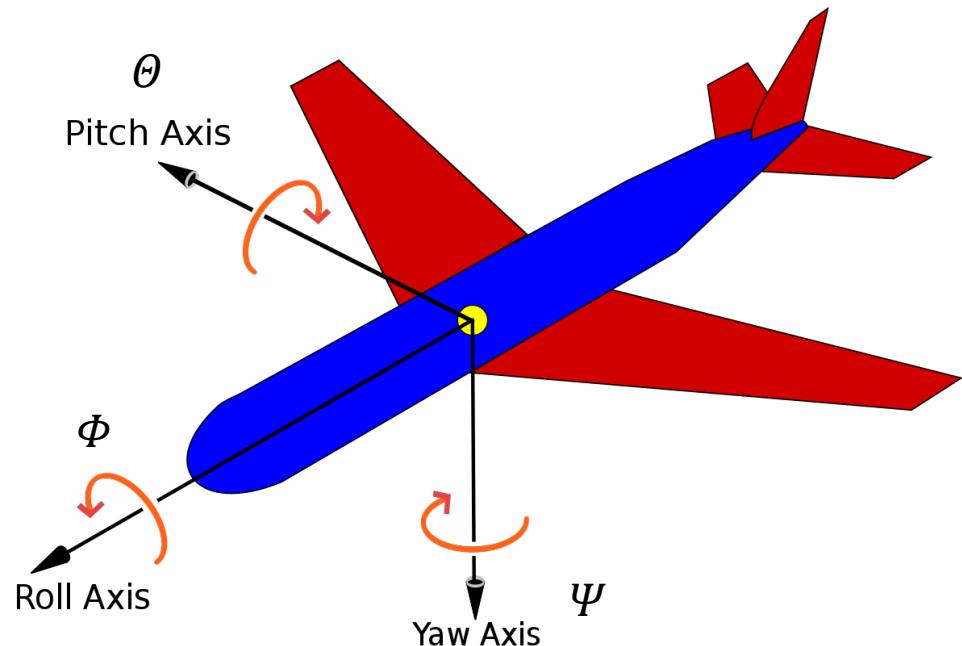

$$R_{nb} = R_\psi R_\theta R_\phi$$


$$= \begin{bmatrix} \cos \psi & -\sin \psi & 0 \\ \sin \psi & \cos \psi & 0 \\ 0 & 0 & 1 \end{bmatrix} \begin{bmatrix} \cos \theta & 0 & \sin \theta \\ 0 & 1 & 0 \\ -\sin \theta & 0 & \cos \theta \end{bmatrix} \begin{bmatrix} 1 & 0 & 0 \\ 0 & \cos \phi & -\sin \phi \\ 0 & \sin \phi & \cos \phi \end{bmatrix}$$

First-principles Modeling Approach

General aircraft model structure

Different for different aircrafts

Same for all aircrafts

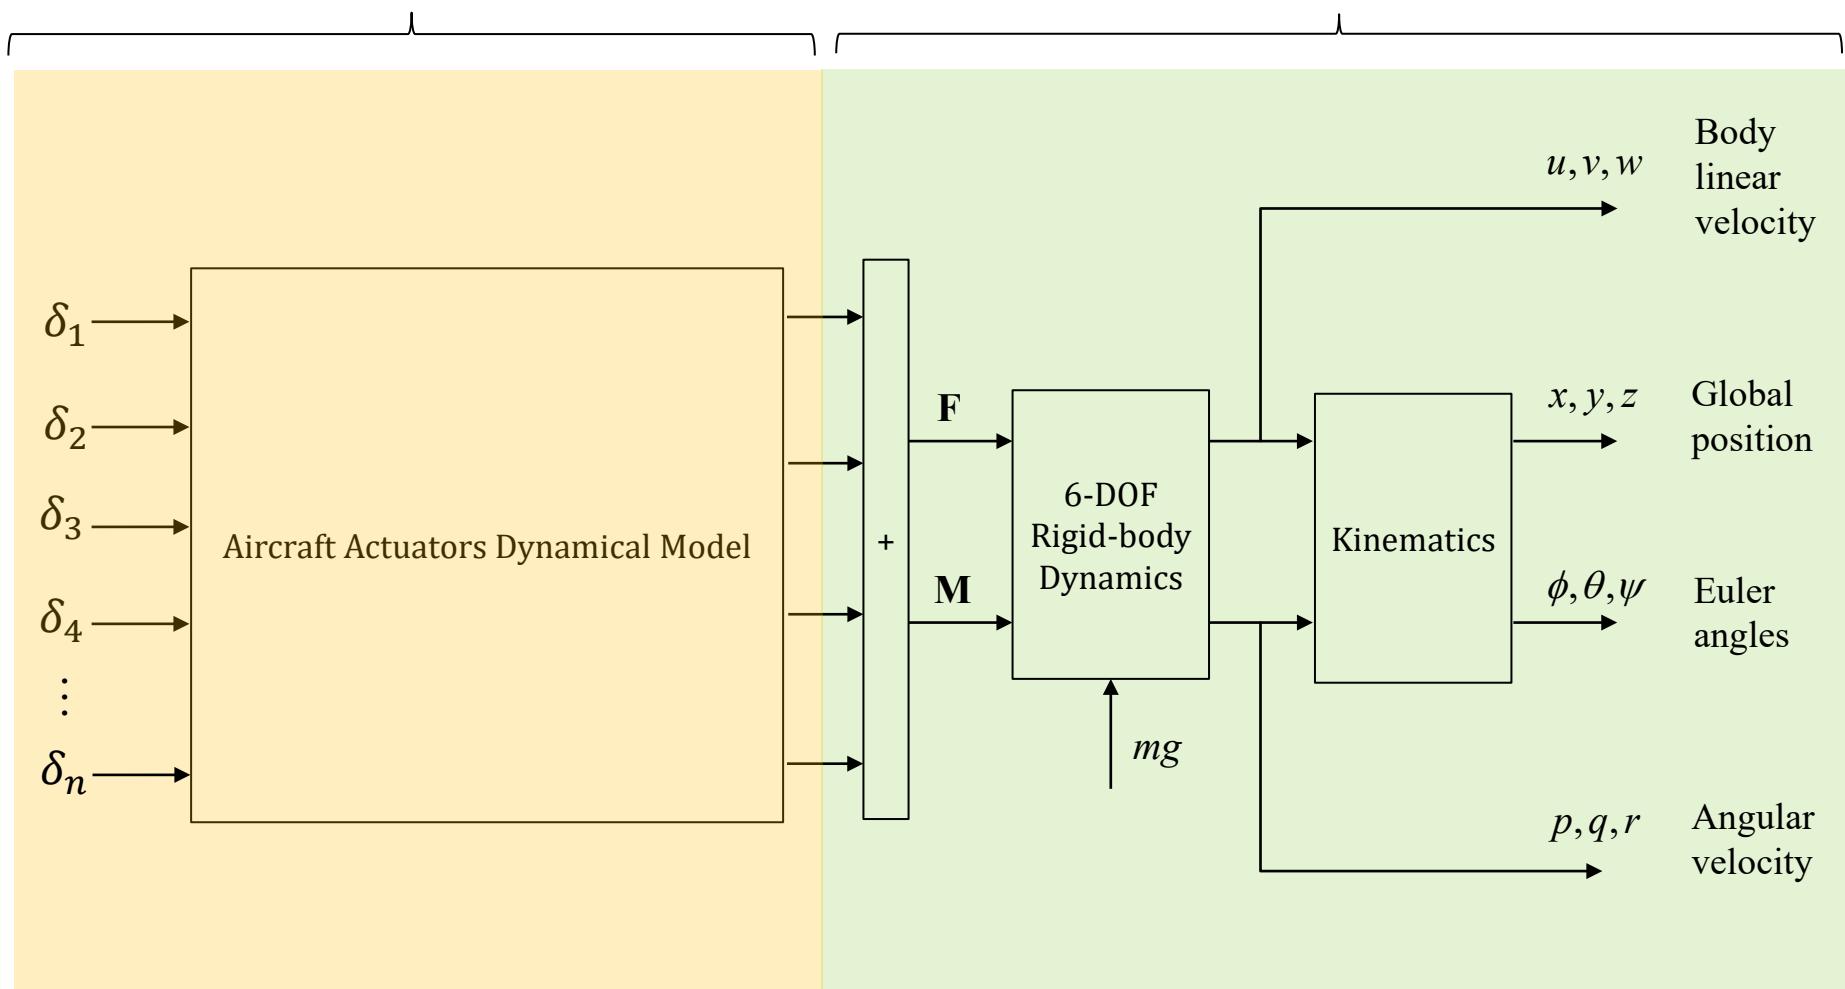

First-principles Modeling Approach

Rigid-body dynamics

Body-frame
acceleration

Body-frame
resultant force

$$\begin{pmatrix} \dot{u} \\ \dot{v} \\ \dot{w} \end{pmatrix} = \frac{1}{m} \begin{pmatrix} F_x \\ F_y \\ F_z \end{pmatrix} - \begin{pmatrix} p \\ q \\ r \end{pmatrix} \times \begin{pmatrix} u \\ v \\ w \end{pmatrix}$$

Cross-coupling
between axes

$$\begin{pmatrix} \dot{p} \\ \dot{q} \\ \dot{r} \end{pmatrix} = \mathbf{J}^{-1} \left\{ \begin{pmatrix} M_x \\ M_y \\ M_z \end{pmatrix} - \begin{pmatrix} p \\ q \\ r \end{pmatrix} \times \mathbf{J} \begin{pmatrix} p \\ q \\ r \end{pmatrix} \right\}$$

* If rotation happens,
the aircraft's body
frame becomes a
non-inertial frame

Body-frame
angular
acceleration

Body-frame
resultant torque

First-principles Modeling Approach

Kinematics

Derivative of
global-frame
position

\mathbf{R}_{nb}

Body-frame
velocity

$$\begin{pmatrix} \dot{x} \\ \dot{y} \\ \dot{z} \end{pmatrix} = \begin{bmatrix} c_\psi c_\theta & c_\psi s_\theta s_\phi - s_\psi c_\phi & c_\psi s_\theta c_\phi + s_\psi s_\phi \\ s_\psi c_\theta & s_\psi s_\theta s_\phi + c_\psi c_\phi & s_\psi s_\theta c_\phi - c_\psi s_\phi \\ -s_\theta & c_\theta s_\phi & c_\theta c_\phi \end{bmatrix} \begin{pmatrix} u \\ v \\ w \end{pmatrix}$$

$$\begin{pmatrix} \dot{\phi} \\ \dot{\theta} \\ \dot{\psi} \end{pmatrix} = \begin{bmatrix} 1 & s_\phi s_\theta / c_\theta & c_\phi s_\theta / c_\theta \\ 0 & c_\phi & -s_\phi \\ 0 & s_\phi / c_\theta & c_\phi / c_\theta \end{bmatrix} \begin{pmatrix} p \\ q \\ r \end{pmatrix}$$

Derivative of
Euler angles

\mathbf{S}^{-1}

Body-frame
angular velocity

* Euler angles
are sequential

1) Multi-rotor (quadrotor) UAV

- Multiple rotors to create difference in torque
- Multiple rotors to create thrust

2) Fixed-pitch Co-axial UAV


- Two counter rotating main rotors to create thrust and balance torque
- Two servo motors to control direction of flight

3) Single-rotor UAV

- One main rotor for the lift
- One tail rotor to balance heading angle
- Multiple servo motors to control collective pitch and direction of flight

First-principles Modeling Approach


Quadrotor working principles

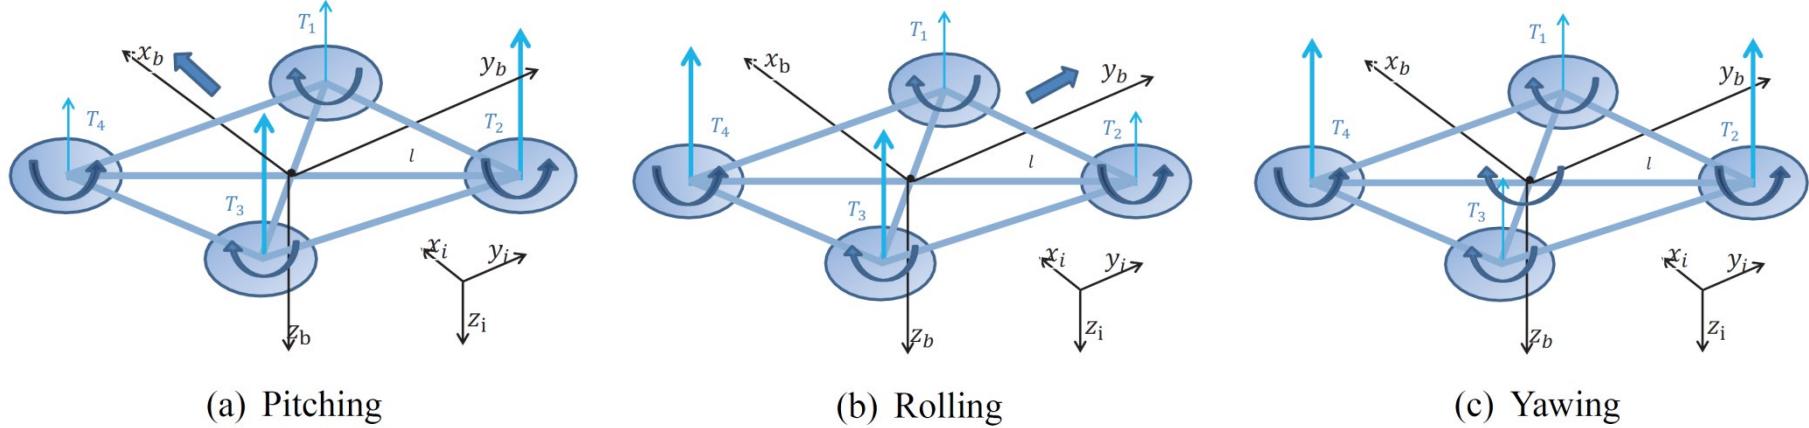

- Symmetric structure
- All types of motion controlled by adjusting motor speeds
- All thrust forces in the UAV body frame z-axis direction
- Open-loop dynamics fast and unstable

First-principles Modeling Approach

Quadrotor model structure

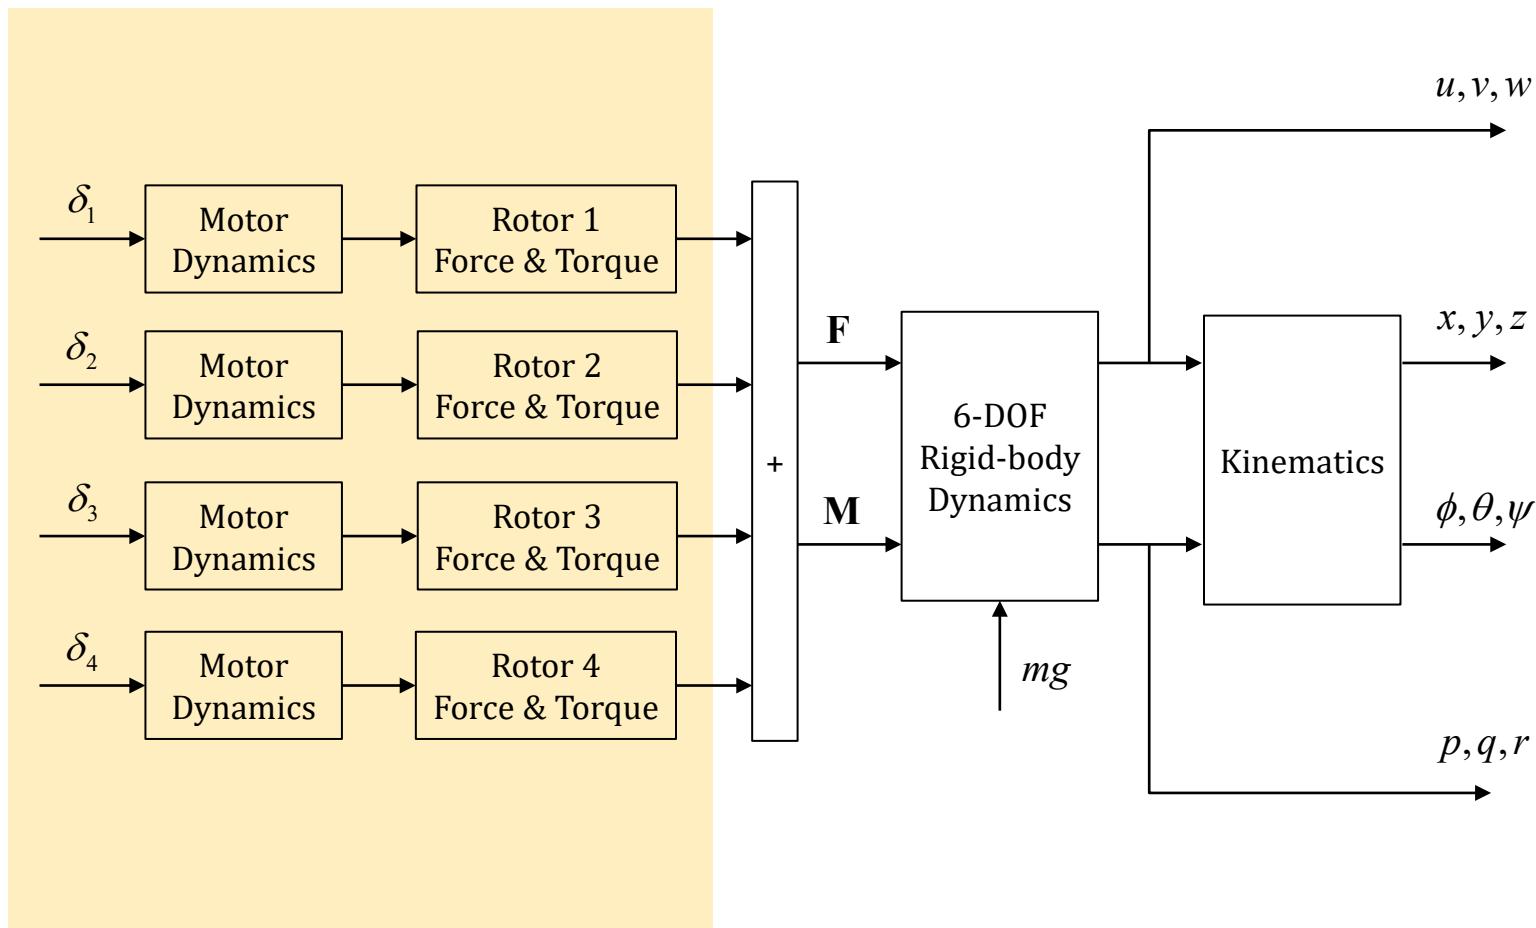


First-principles Modeling Approach


Motor and propeller

Approximated by a 1st order dynamics system


$$\dot{\Omega} = -\frac{1}{\tau} \Omega + \frac{m\delta + c}{\tau}$$

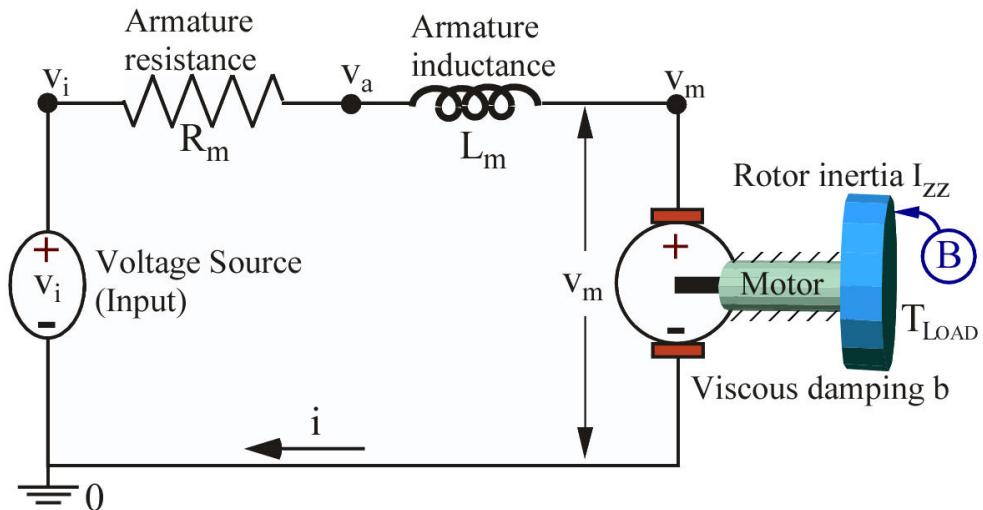

Ω (steady state motor speed)

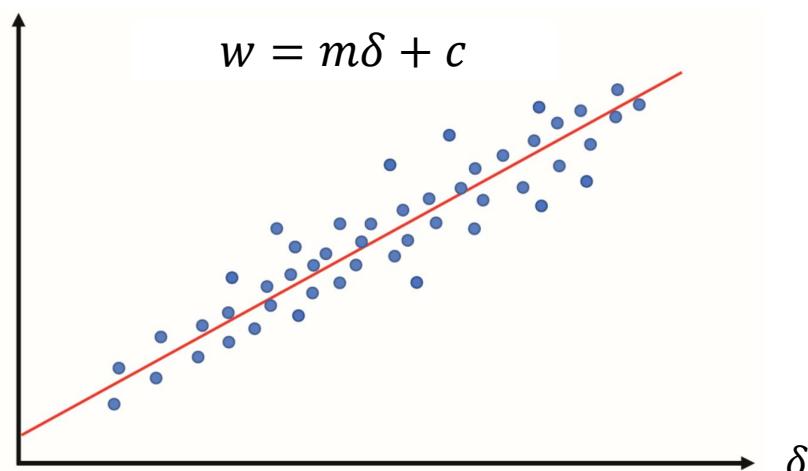


Ω (normalized real-time motor speed)

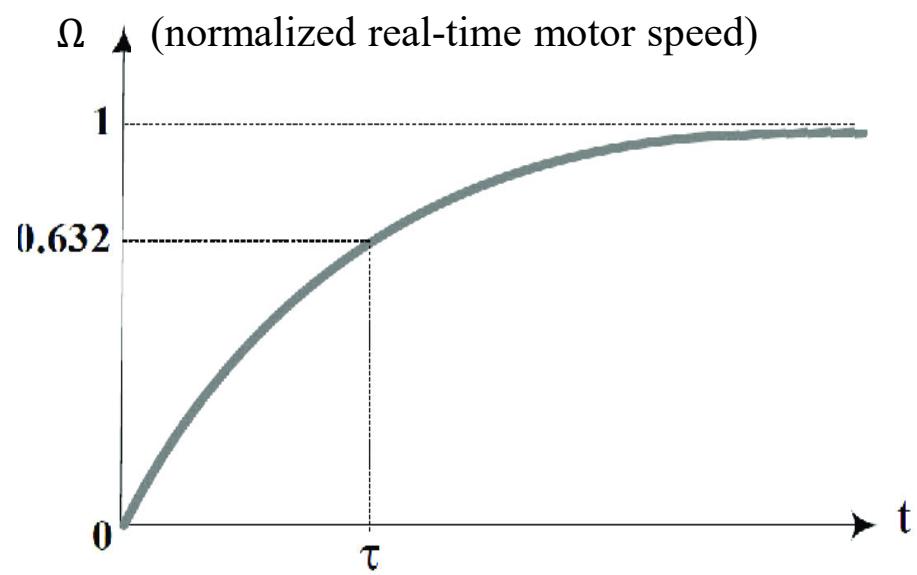

First-principles Modeling Approach

Motor and propeller

Ignore wind disturbance and
propeller flapping effects

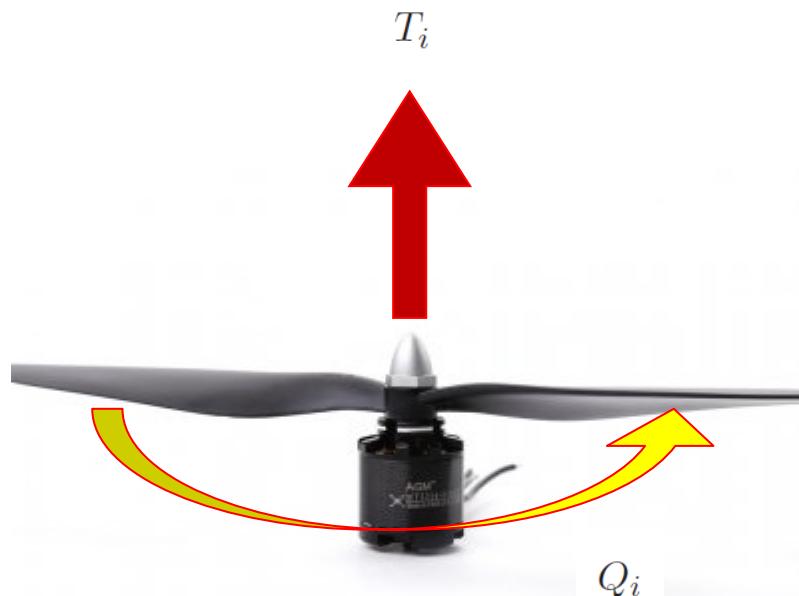

$$T_i = C_T \rho A R^2 \Omega_i^2,$$

$$Q_i = C_Q \rho A R^3 \Omega_i^2,$$


Assume air density
remains constant

$$T_i = k_T \Omega_i^2,$$

$$Q_i = k_Q \Omega_i^2,$$

First-principles Modeling Approach

Quadrotor force & torque decomposition

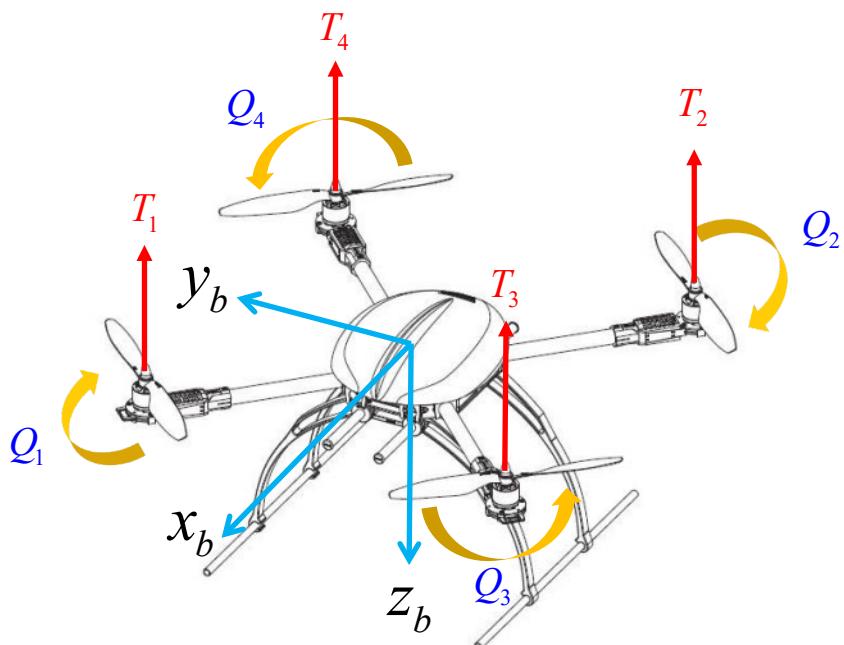

$$\begin{pmatrix} F_x \\ F_y \\ F_z \end{pmatrix} = - \begin{pmatrix} 0 \\ 0 \\ |T_1| + |T_2| + |T_3| + |T_4| \end{pmatrix} + mg \begin{pmatrix} -\sin \theta \\ \sin \phi \cos \theta \\ \cos \phi \cos \theta \end{pmatrix}$$

$$\begin{pmatrix} M_x \\ M_y \\ M_z \end{pmatrix} = \begin{pmatrix} (|T_2| + |T_3| - |T_1| - |T_4|) \times l / \sqrt{2} \\ (|T_1| + |T_3| - |T_2| - |T_4|) \times l / \sqrt{2} \\ |Q_1| + |Q_2| - |Q_3| - |Q_4| \end{pmatrix}$$

$$T_i = k_T \Omega_i^2,$$

$$Q_i = k_Q \Omega_i^2,$$

1) Multi-rotor (quadrotor) UAV

- Multiple rotors to create difference in torque
- Multiple rotors to create thrust

2) Fixed-pitch Co-axial UAV

- Two counter rotating rotors to create thrust and balance torque
- Two servo motors to control direction of flight


3) Single-rotor UAV

- One main rotor for the lift
- One tail rotor to balance heading angle
- Multiple servo motors to control collective pitch and direction of flight

First-principles Modeling Approach


Coaxial helicopter working principles

- Dual main rotors spin in opposite directions
- Rotational speed can be controlled
 - Sum → Height motion
 - Difference → Yaw motion
- Bottom rotor attached to swashplate
 - Servo 1 → Roll motion
 - Servo 2 → Pitch motion
- Top rotor attached to stabilizer bar
 - Roll & Pitch motion damped

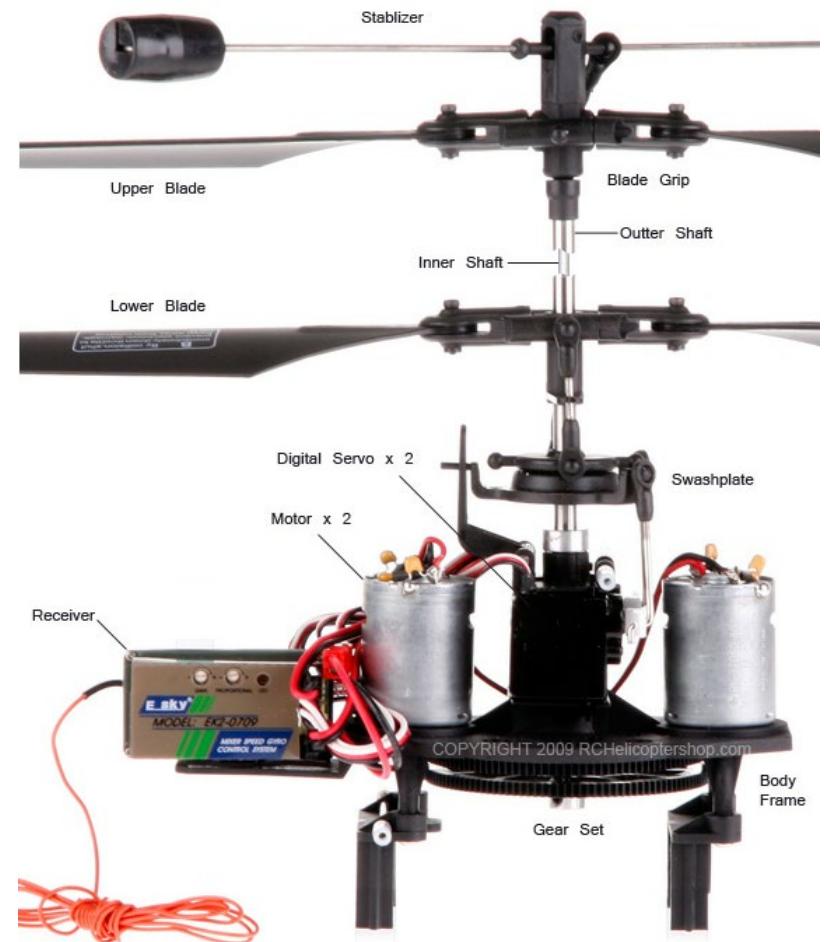

First-principles Modeling Approach


Coaxial helicopter working principles (stabilizer bar)

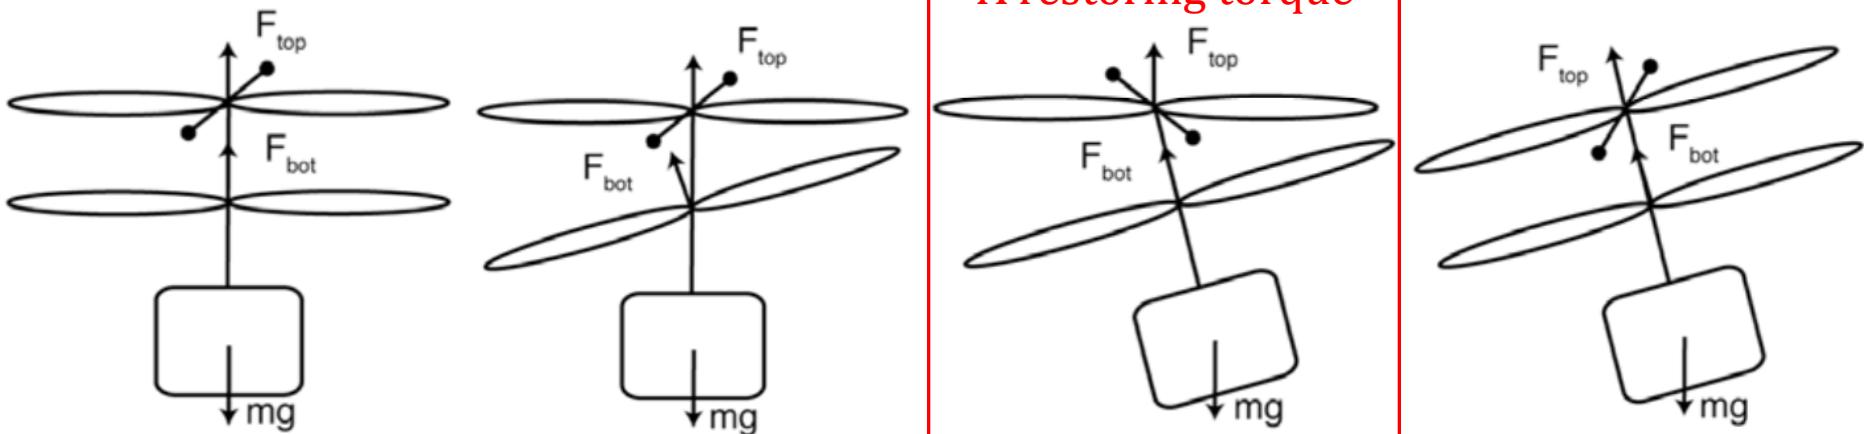

- Roll and pitch dynamics are slowed down
- Stability increased (inherently stable)
- Maneuverability decreased


First-principles Modeling Approach

Coaxial helicopter model structure

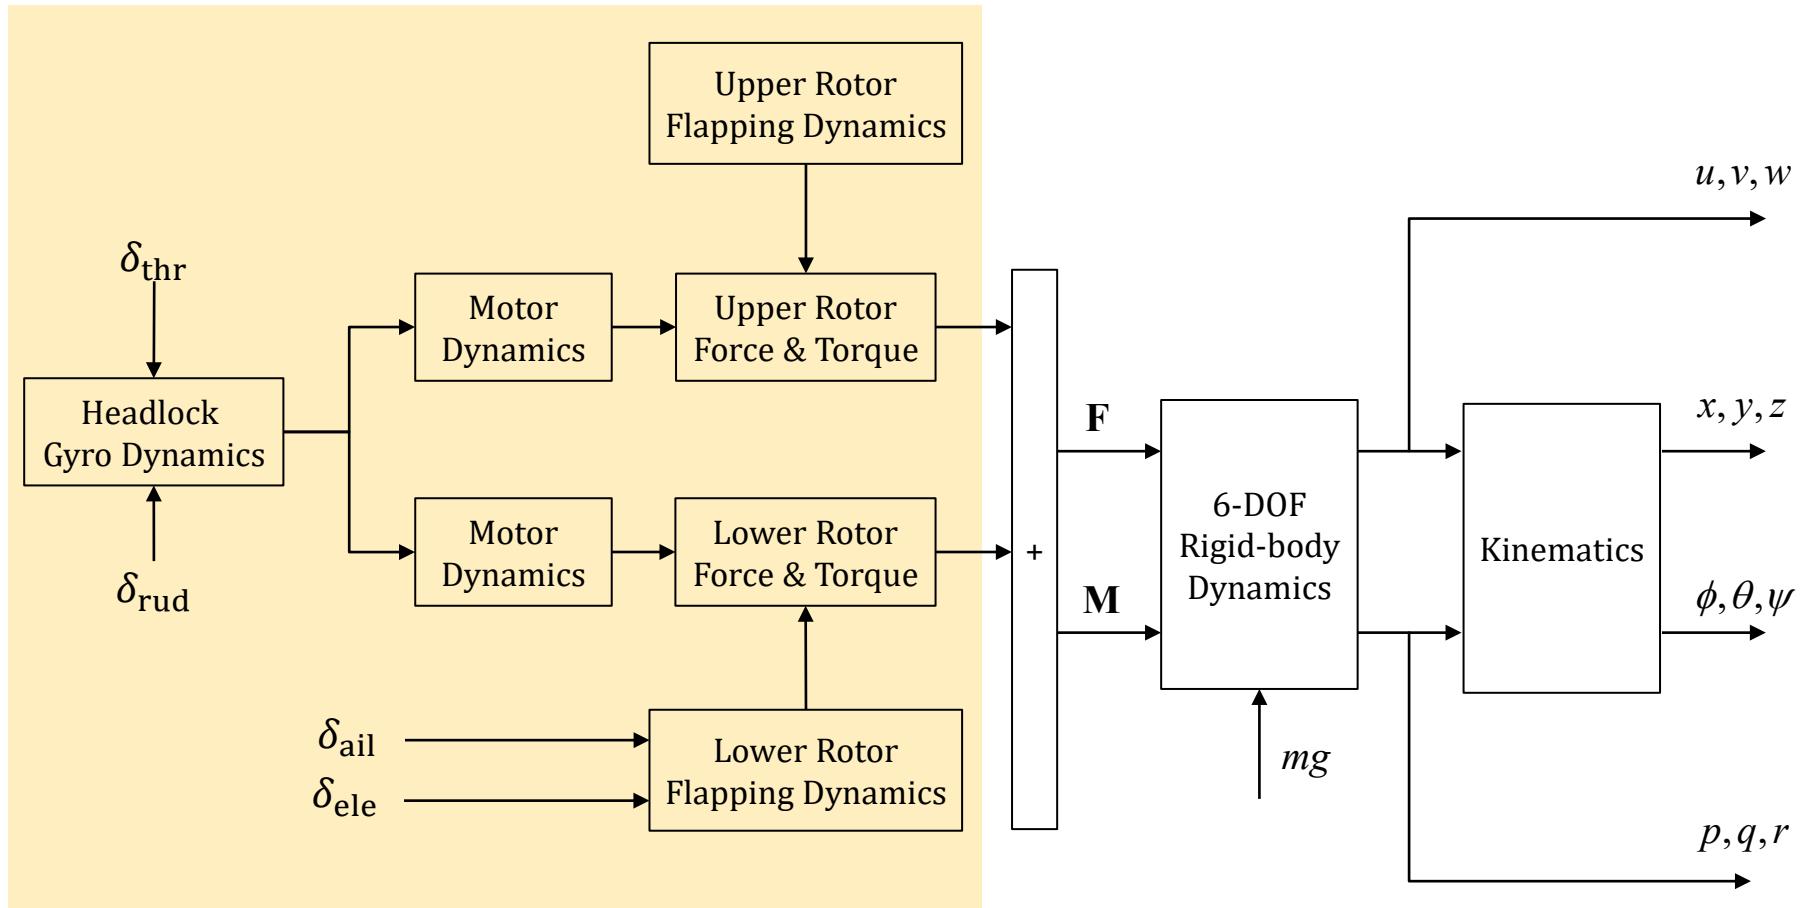

First-principles Modeling Approach

Mixer & headlock gyro dynamics

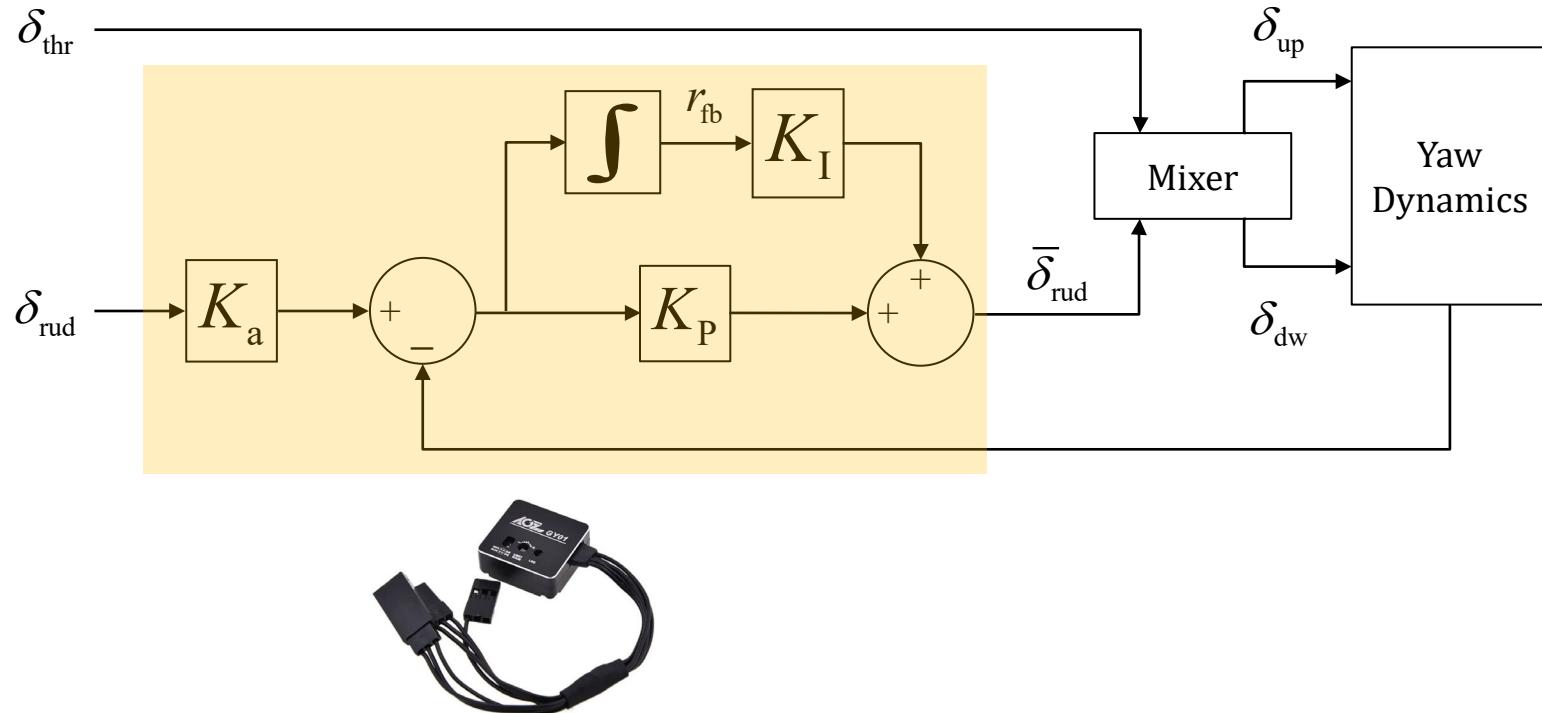

$$\bar{\delta}_{\text{rud}} = K_p(K_a \delta_{\text{rud}} - r) + K_I r_{\text{fb}}$$


$$\dot{r}_{\text{fb}} = K_a \delta_{\text{rud}} - r$$

$$\delta_{\text{up}} = \delta_{\text{thr}} + \bar{\delta}_{\text{rud}}$$

$$\delta_{\text{dw}} = \delta_{\text{thr}} - \bar{\delta}_{\text{rud}}$$

First-principles Modeling Approach

Coaxial helicopter force & torque decomposition

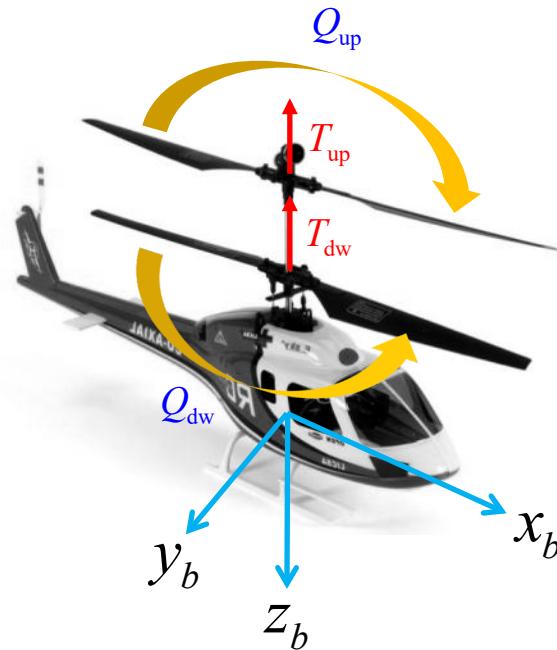

$$T_i = k_T \Omega_i^2,$$

$$Q_i = k_Q \Omega_i^2,$$

$$\begin{pmatrix} F_x \\ F_y \\ F_z \end{pmatrix} = |T_{\text{up}}| \begin{pmatrix} -\sin a_{\text{up}} \\ \sin b_{\text{up}} \\ -\cos a_{\text{up}} \cos b_{\text{up}} \end{pmatrix} + |T_{\text{dw}}| \begin{pmatrix} -\sin a_{\text{dw}} \\ \sin b_{\text{dw}} \\ -\cos a_{\text{dw}} \cos b_{\text{dw}} \end{pmatrix} + mg \begin{pmatrix} -\sin \theta \\ \sin \phi \cos \theta \\ \cos \phi \cos \theta \end{pmatrix}$$

$$\begin{pmatrix} M_x \\ M_y \\ M_z \end{pmatrix} = \begin{pmatrix} 0 \\ 0 \\ -l_{\text{up}} \end{pmatrix} \times |T_{\text{up}}| \begin{pmatrix} -\sin a_{\text{up}} \\ \sin b_{\text{up}} \\ -\cos a_{\text{up}} \cos b_{\text{up}} \end{pmatrix} + \begin{pmatrix} 0 \\ 0 \\ -l_{\text{dw}} \end{pmatrix} \times |T_{\text{dw}}| \begin{pmatrix} -\sin a_{\text{dw}} \\ \sin b_{\text{dw}} \\ -\cos a_{\text{dw}} \cos b_{\text{dw}} \end{pmatrix} + \begin{pmatrix} 0 \\ 0 \\ |Q_{\text{up}}| - |Q_{\text{dw}}| \end{pmatrix}$$

First-principles Modeling Approach


Identification of mass and moment of inertia

Mass



$$m = 0.934 \text{ kg}$$

Moment of inertial


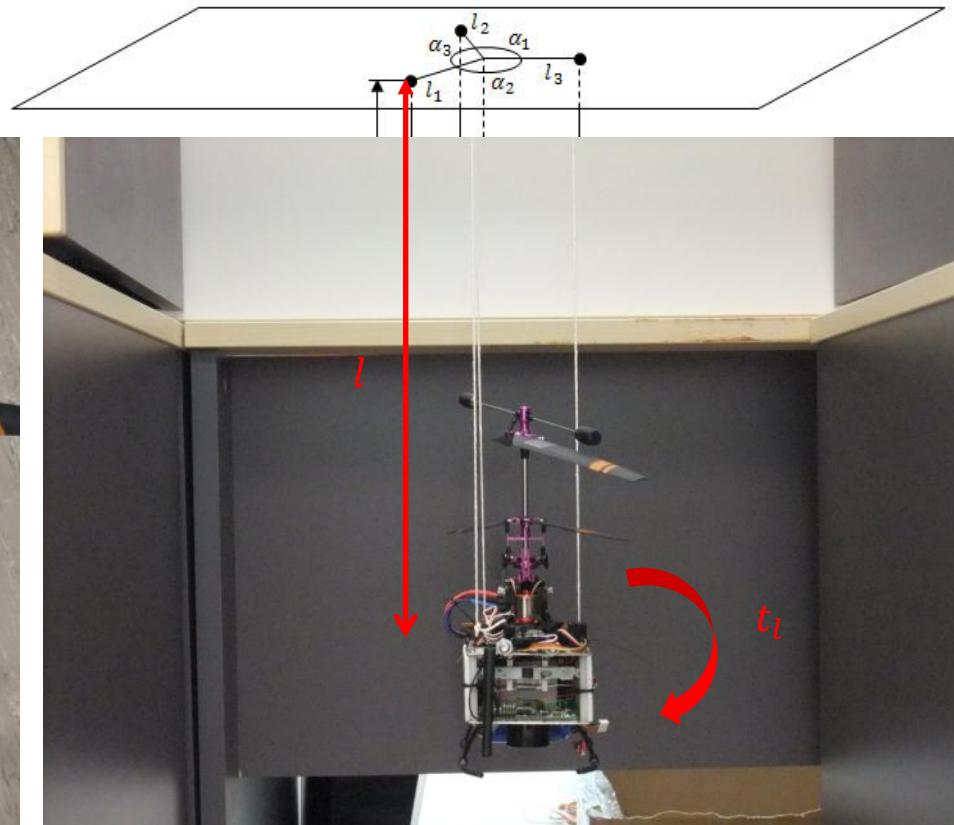


$$J_{zz} = \frac{mg l_1 l_2 l_3 t_l^2}{4\pi^2 l} \cdot \frac{l_1 \sin \alpha_1 + l_2 \sin \alpha_2 + l_3 \sin \alpha_3}{l_2 l_3 \sin \alpha_1 + l_1 l_3 \sin \alpha_2 + l_1 l_2 \sin \alpha_3}$$



First-principles Modeling Approach

Identification of propeller parameters

Thrust

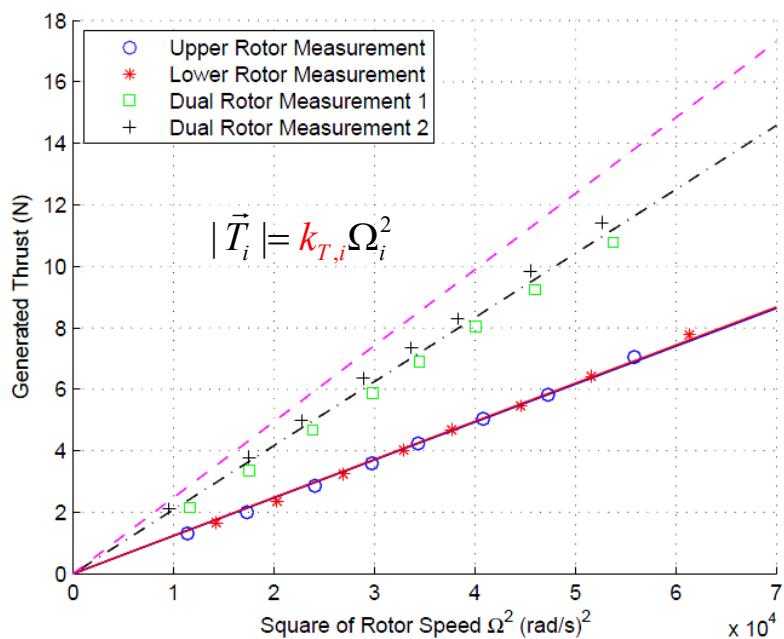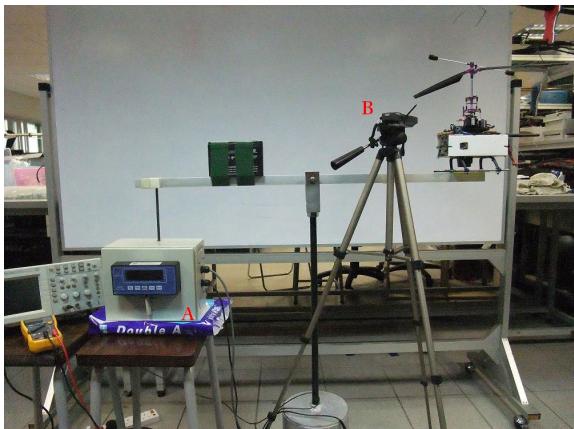



Torque

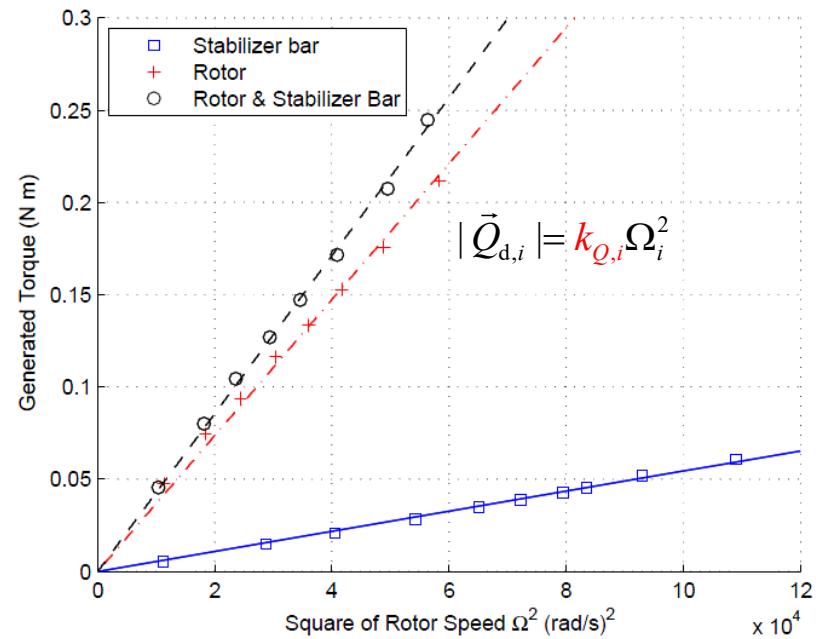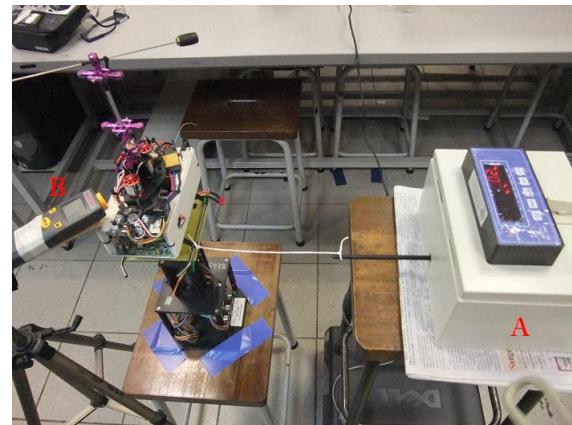

First-principles Modeling Approach

Identification of motor parameters

Motor dynamics


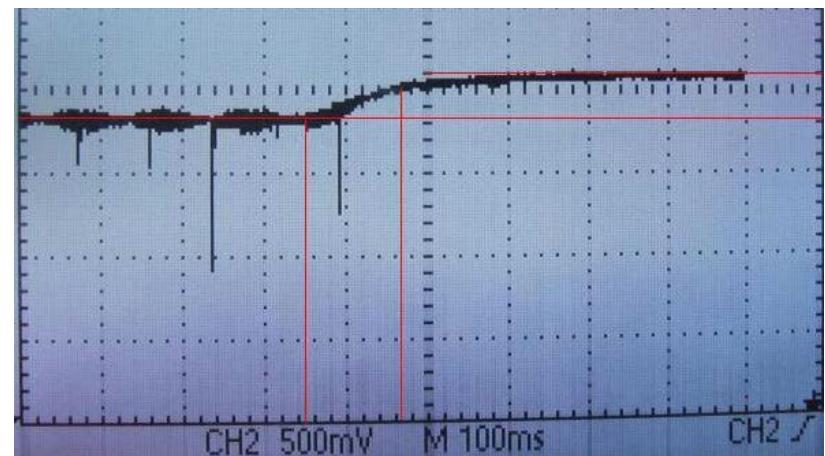
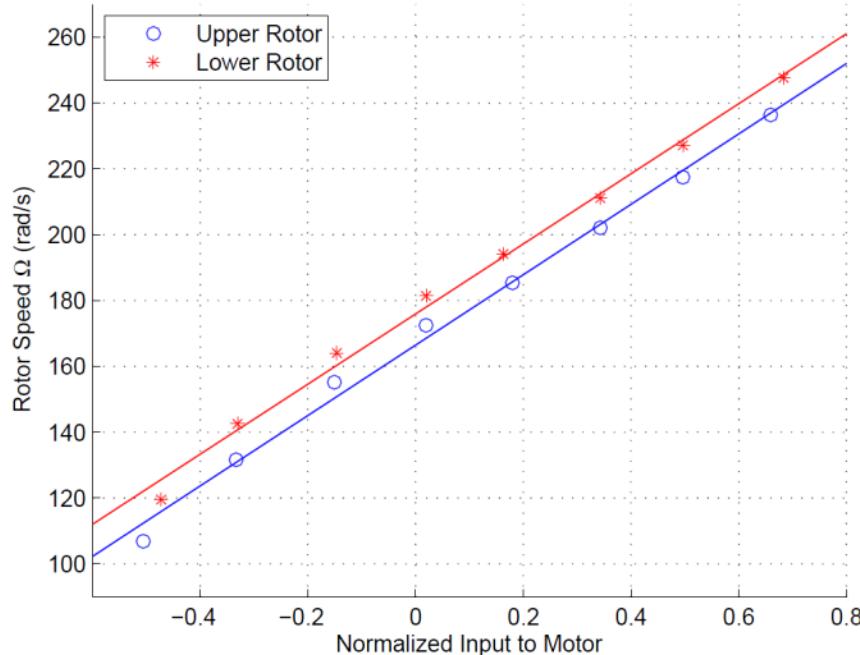


$$\dot{\Omega}_{\text{up}} = \frac{1}{\tau_{\text{mt}}} (\textcolor{red}{m}_{\text{up}} \delta_{\text{up}} + \Omega_{\text{up}}^* - \Omega_{\text{up}})$$

$$\dot{\Omega}_{\text{dw}} = \frac{1}{\tau_{\text{mt}}} (\textcolor{red}{m}_{\text{dw}} \delta_{\text{dw}} + \Omega_{\text{dw}}^* - \Omega_{\text{dw}})$$

First-principles Modeling Approach


Swashplate mechanism and propeller tip-path-plane

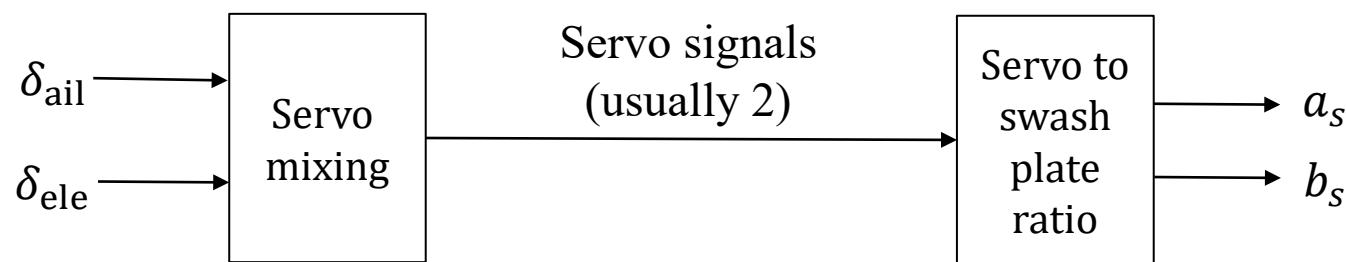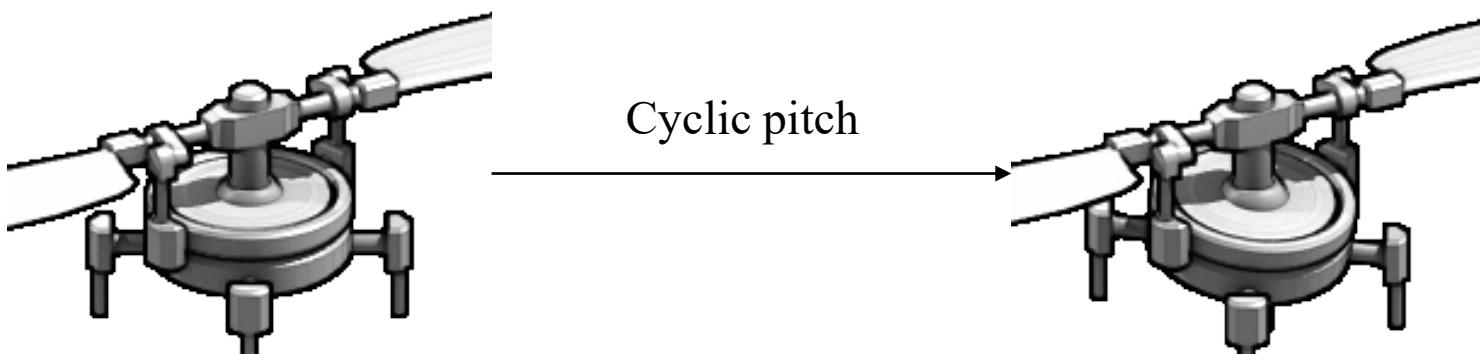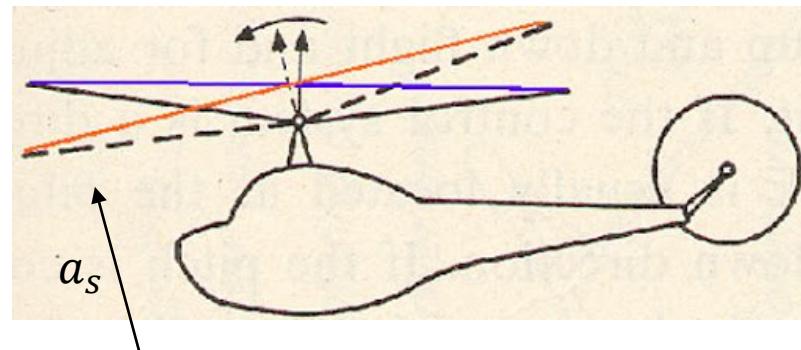


First-principles Modeling Approach

Identification of tip-path-plane parameters


Tip-path-plane motion

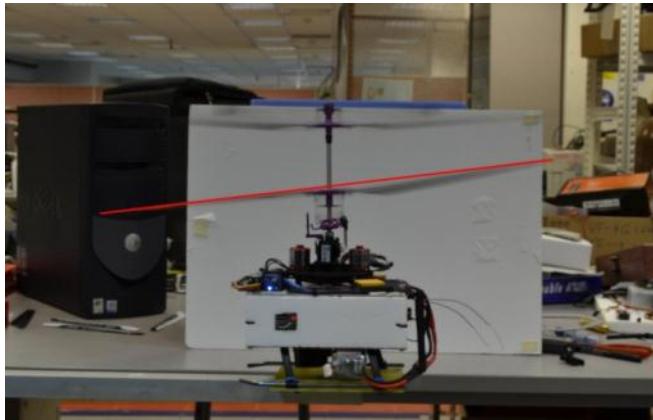


$$a_{\text{dw}} = A_{a,\text{dw}} \delta_{\text{ele}} + A_{b,\text{dw}} \delta_{\text{ail}}$$

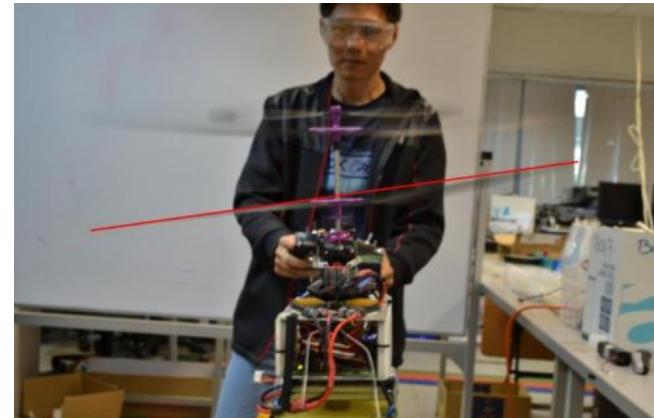

$$b_{\text{dw}} = B_{b,\text{dw}} \delta_{\text{ail}} + B_{a,\text{dw}} \delta_{\text{ele}}$$

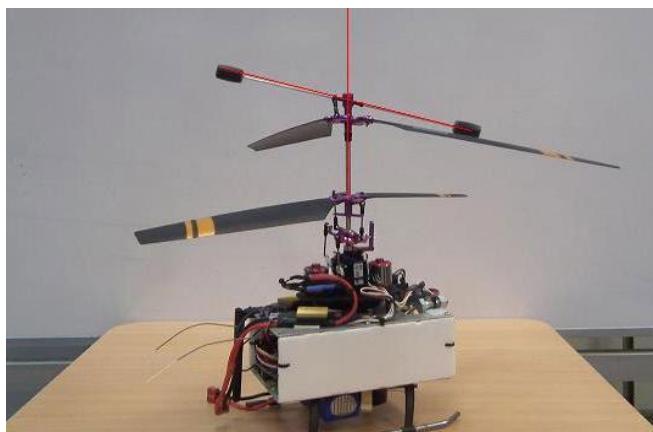

$$\dot{a}_{\text{up}} = -\frac{1}{\tau_{\text{up}}} a_{\text{up}} - A_{a,\text{up}} q - A_{b,\text{up}} p$$

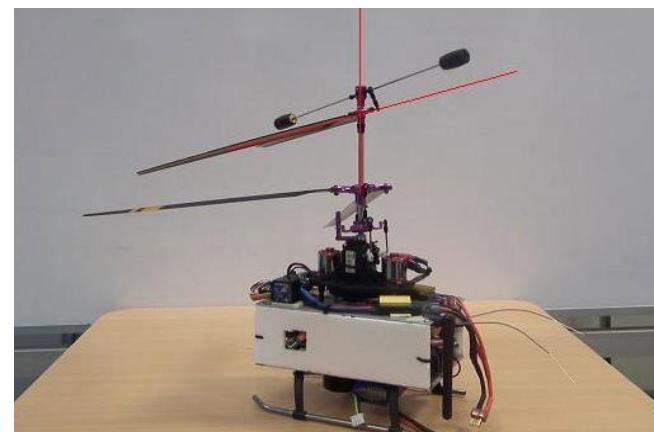

$$\dot{b}_{\text{up}} = -\frac{1}{\tau_{\text{up}}} b_{\text{up}} - B_{b,\text{up}} p - B_{a,\text{up}} q$$

First-principles Modeling Approach


Identification of tip-path-plane parameters

Tip-path-plane dynamics of upper rotor

$$\begin{pmatrix} \dot{p} \\ \dot{q} \\ \dot{a}_{\text{up}} \\ \dot{b}_{\text{up}} \end{pmatrix} = \begin{bmatrix} -\frac{X_{\text{dw}}B_{p,\text{dw}}}{J_{xx}} & 0 & 0 & \frac{X_{\text{up}}}{J_{xx}} \\ 0 & -\frac{X_{\text{dw}}A_{q,\text{dw}}}{J_{yy}} & \frac{X_{\text{up}}}{J_{yy}} & 0 \\ -A_{b,\text{up}} & -A_{a,\text{up}} & -\frac{1}{\tau_{\text{sb}}} & 0 \\ -B_{b,\text{up}} & -B_{a,\text{up}} & 0 & -\frac{1}{\tau_{\text{sb}}} \end{bmatrix} \begin{pmatrix} p \\ q \\ a_{\text{up}} \\ b_{\text{up}} \end{pmatrix} + \begin{bmatrix} \frac{X_{\text{dw}}B_{b,\text{dw}}}{J_{xx}} & \frac{X_{\text{dw}}B_{a,\text{dw}}}{J_{xx}} \\ \frac{X_{\text{dw}}A_{b,\text{dw}}}{J_{yy}} & \frac{X_{\text{dw}}A_{a,\text{dw}}}{J_{yy}} \\ 0 & 0 \\ 0 & 0 \end{bmatrix} \begin{pmatrix} \delta_{\text{ail}} \\ \delta_{\text{ele}} \end{pmatrix}$$


$$\begin{pmatrix} \dot{p} \\ \dot{q} \\ \dot{a}_{\text{up}} \\ \dot{b}_{\text{up}} \end{pmatrix} = \begin{bmatrix} -17.19 & 0 & 0 & 934.1 \\ 0 & -5.360 & 291.3 & 0 \\ 0.2745 & -0.49 & -5 & 0 \\ -0.49 & -0.2745 & 0 & -5 \end{bmatrix} \begin{pmatrix} p \\ q \\ a_{\text{up}} \\ b_{\text{up}} \end{pmatrix} + \begin{bmatrix} -102.48 & -38.08 \\ -11.73 & 31.95 \\ 0 & 0 \\ 0 & 0 \end{bmatrix} \begin{pmatrix} \delta_{\text{ail}} \\ \delta_{\text{ele}} \end{pmatrix}$$

Tip-path-plane dynamics of upper rotor

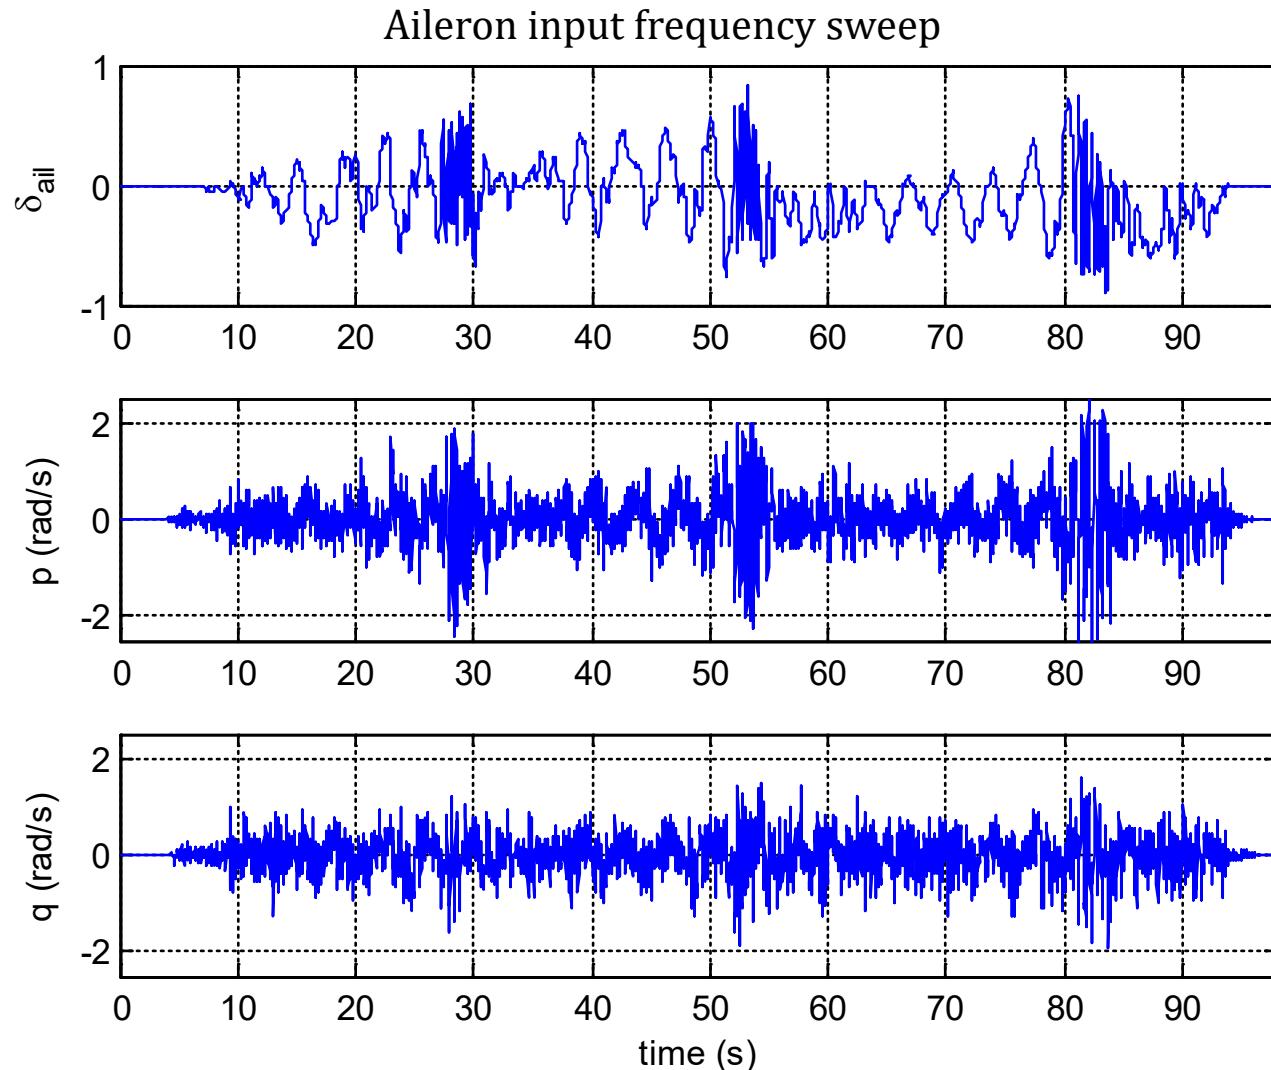



Tip-path-plane dynamics of upper rotor

Elevator input frequency sweep

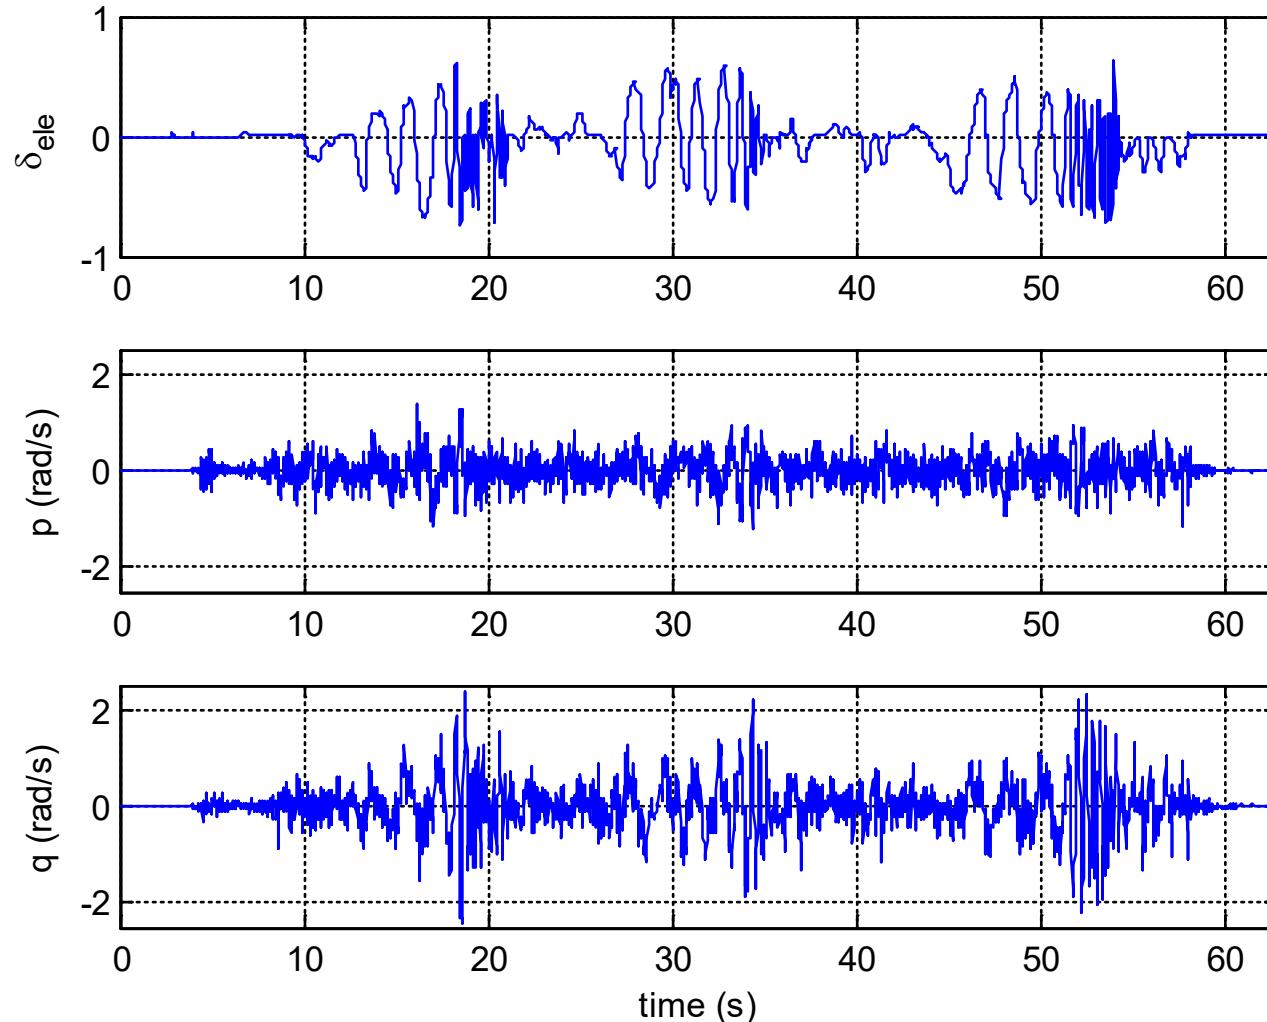

Tip-path-plane dynamics of upper rotor

Parameter identification via aileron frequency sweep

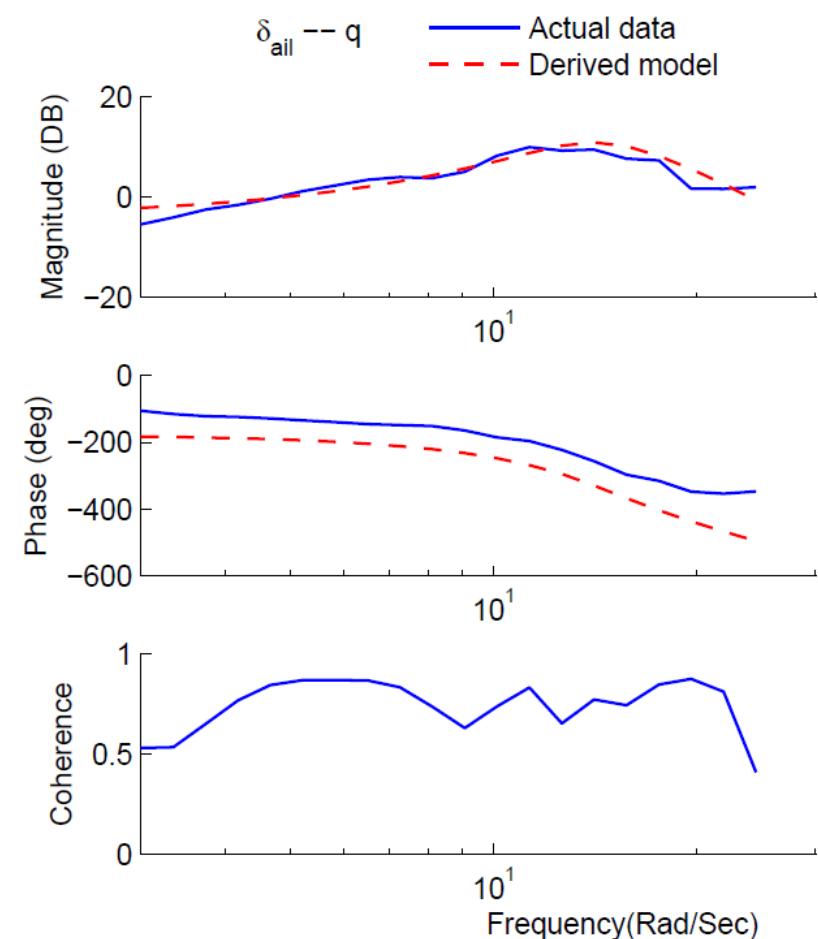
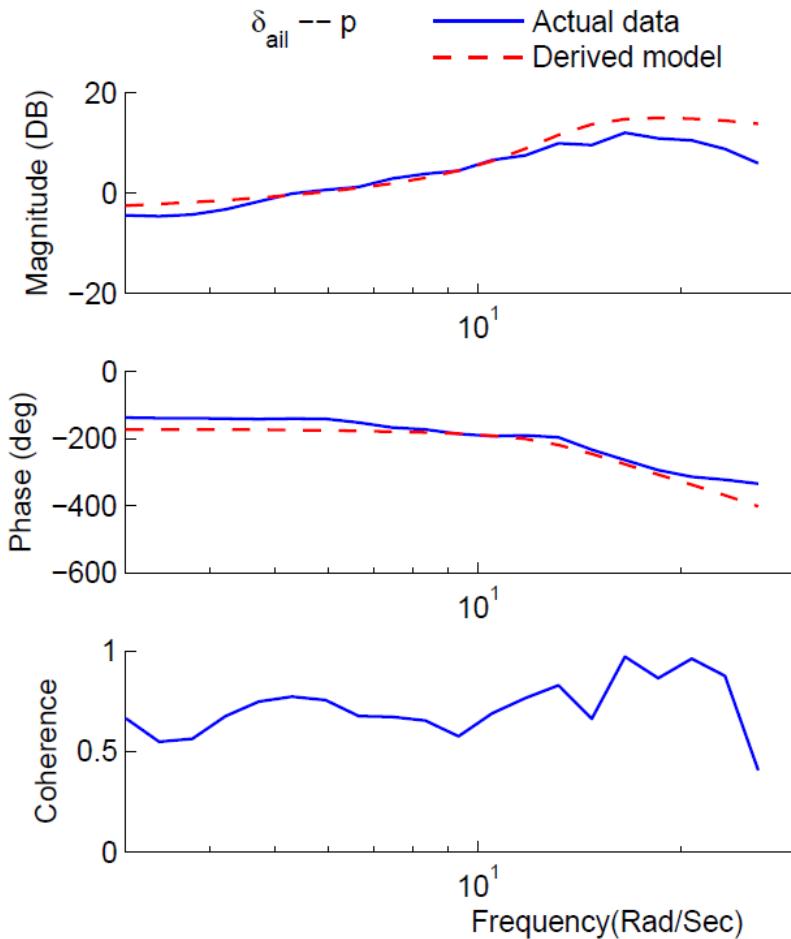


First-principles Modeling Approach

Identification of tip-path-plane parameters

Tip-path-plane dynamics of upper rotor

Parameter identification via elevator frequency sweep

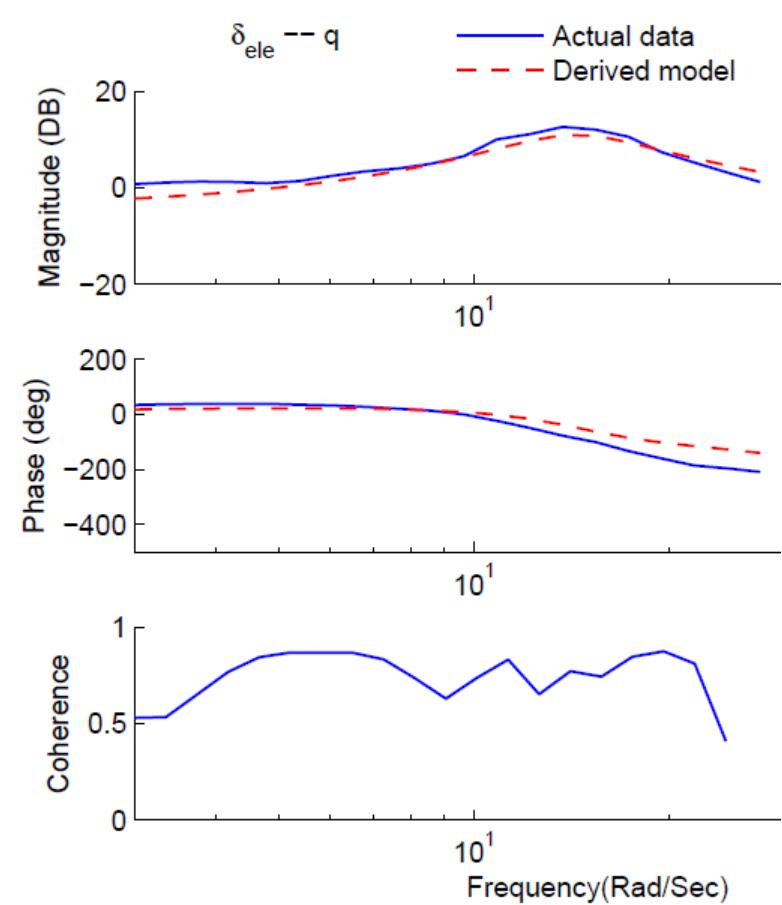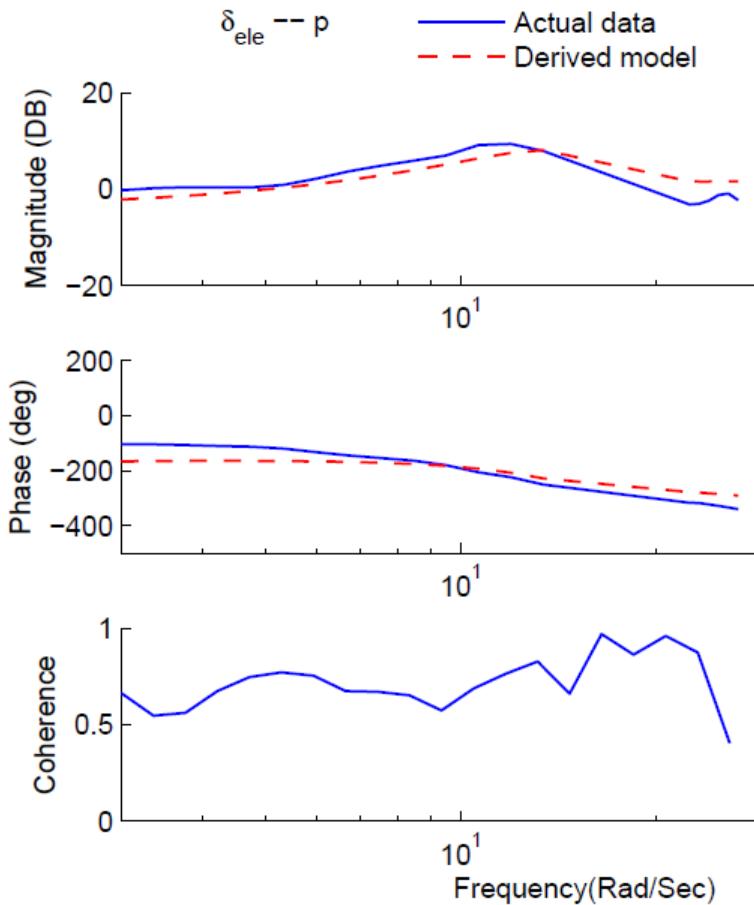

First-principles Modeling Approach

All model parameters of coaxial helicopter



1. Direct measurement
2. Test-bench experiment
3. Flight test data

$\rho = 1.204$ $m = 0.977$ $R = 0.250$ $g = 9.781$	$m_{\text{up}} = 106.90$ $m_{\text{dw}} = 106.45$ $\tau_{\text{sb}} = 0.2$ $\tau_{\text{mt}} = 0.12$	$\Omega_{\text{up}}^* = 203.38$ $\Omega_{\text{dw}}^* = 217.88$ $K_\beta = 4.377$
$S_{fx} = 0.00835$ $S_{fy} = 0.01310$ $S_{fz} = 0.01700$	$K_a = 6.4267$ $K_p = 0.667/K_a$ $K_I = 0.713/K_a$	$J_{xx} = 0.0059$ $J_{yy} = 0.0187$ $J_{zz} = 0.0030$
$l_{up} = 0.195$ $l_{dw} = 0.120$	$J_{\text{up}} = 6.8613 \cdot 10^{-4}$ $J_{\text{dw}} = 3.2906 \cdot 10^{-4}$	$A_q = 0.0204$ $B_p = 0.0204$
$k_{T,\text{up}} = 1.23 \cdot 10^{-4}$ $k_{T,\text{dw}} = 8.50 \cdot 10^{-5}$ $k_{Q,\text{up}} = 4.23 \cdot 10^{-6}$ $k_{Q,\text{dw}} = 3.68 \cdot 10^{-6}$	$A_{a,\text{up}} = 0.4900$ $A_{b,\text{up}} = -0.2745$ $B_{a,\text{up}} = 0.2745$ $B_{b,\text{up}} = 0.4900$	$A_{a,\text{dw}} = 0.1217$ $A_{b,\text{dw}} = -0.0450$ $B_{a,\text{dw}} = -0.0450$ $B_{b,\text{dw}} = -0.1217$

1) Multi-rotor (quadrotor) UAV

- Multiple rotors to create difference in torque
- Multiple rotors to create thrust

2) Fixed-pitch Co-axial UAV


- Two counter rotating main rotors to create thrust and balance torque
- Two servo motors to control direction of flight

3) Single-rotor UAV

- One main rotor to generate lift
- One tail rotor to balance yaw motion
- Multiple servo motors to control collective pitch and direction of flight

First-principles Modeling Approach


Single-rotor helicopter coordinate systems and variables

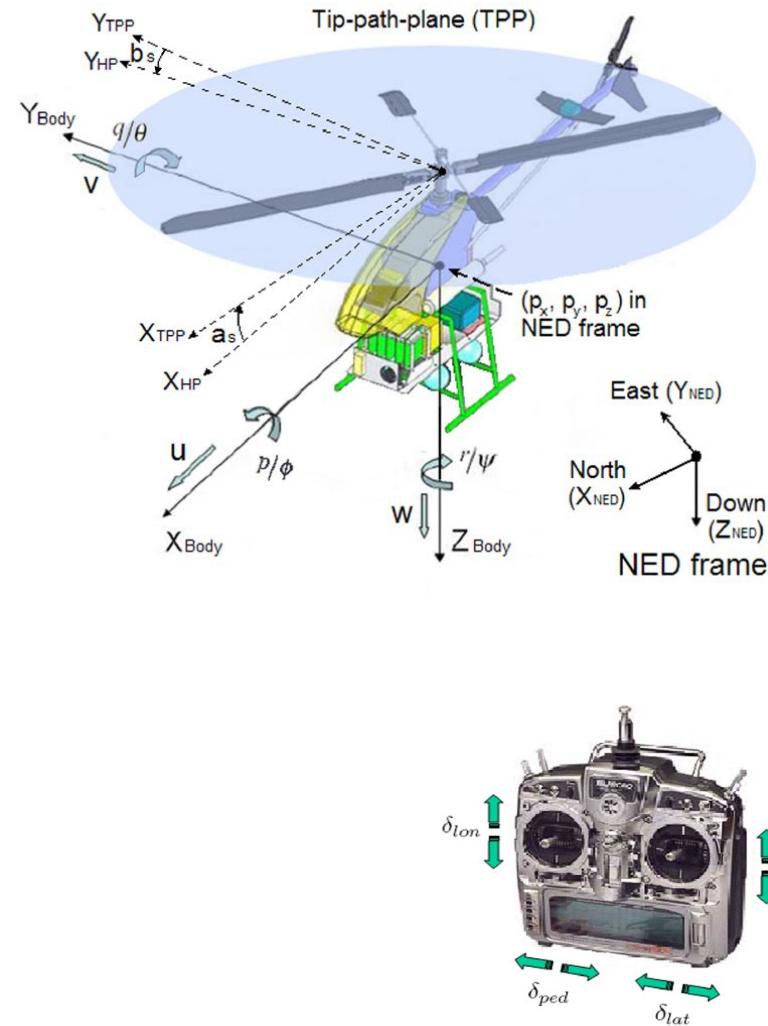

Variable	Physical description	Unit
p_x, p_y, p_z	Position vector along NED-frame x, y, and z axes	m
u, v, w	Velocity vector along body-frame x, y, and z axes	m/s
p, q, r	Roll, pitch, and yaw angular rates	rad/s
ϕ, θ, ψ	Euler angles	rad
a_s, b_s	Longitudinal and lateral tip-path-plane (TPP) flapping angle	rad
$\delta_{ped,int}$	Intermediate state in yaw rate gyro dynamics	NA
δ_{lat}	Normalized aileron servo input (-1, 1)	NA
δ_{lon}	Normalized elevator servo input (-1, 1)	NA
δ_{col}	Normalized collective pitch servo input (-1, 1)	NA
δ_{ped}	Normalized rudder servo input (-1, 1)	NA

First-principles Modeling Approach

Single-rotor helicopter

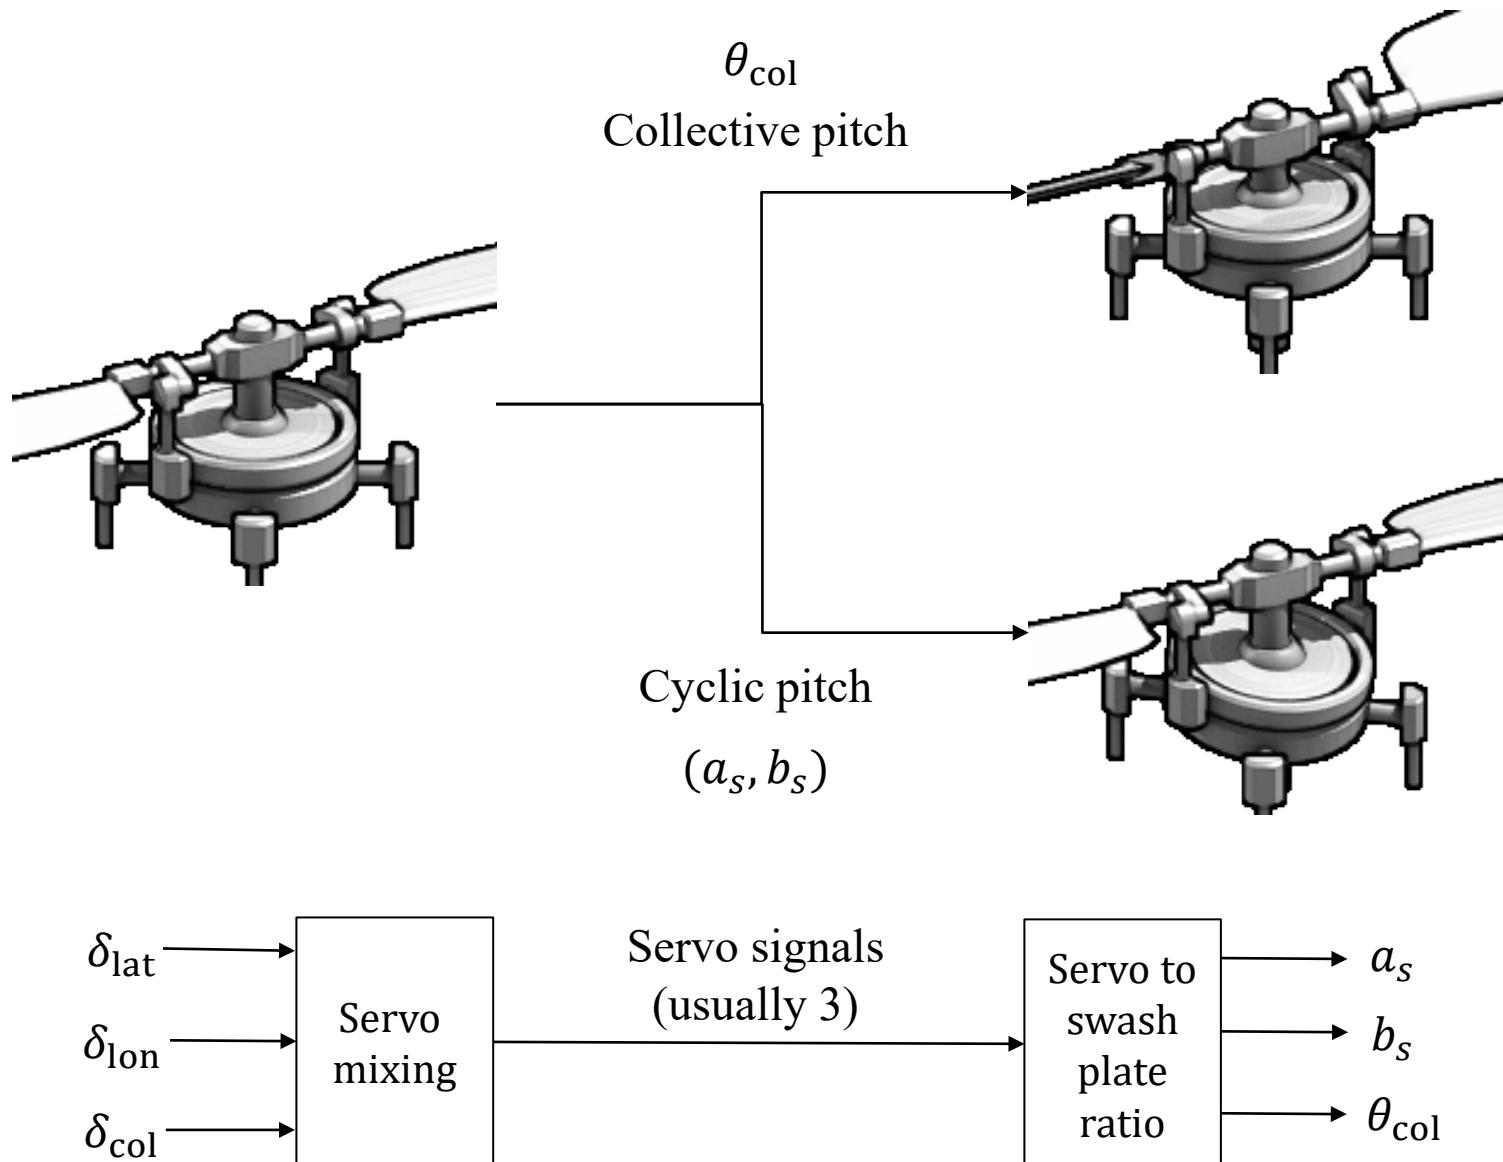


First-principles Modeling Approach

Single-rotor helicopter


Forces and Moments

$$F = F_{mr} + F_{tr} + F_{fus} + F_{hf} + F_{vf}$$

$$M = M_{mr} + M_{tr} + M_{fus} + M_{hf} + M_{vf}$$

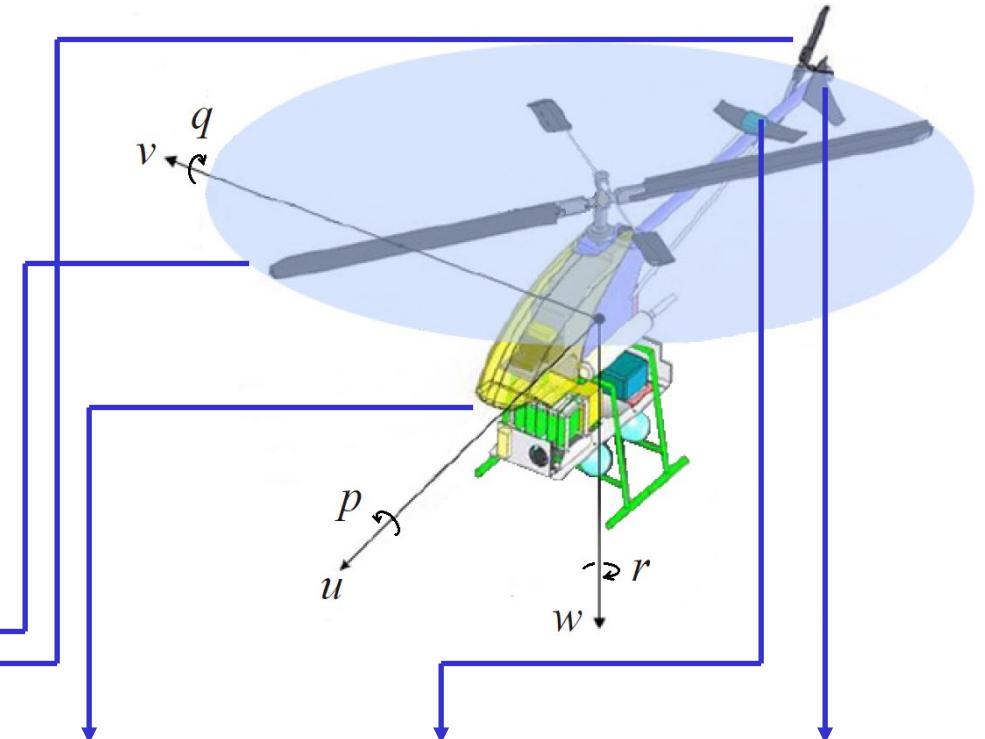

(---)_{mr} for the main rotor (---)_{tr} for the tail rotor (---)_{fus} for the fuselage (---)_{hf} for the horizontal fin (---)_{vf} for the vertical fin

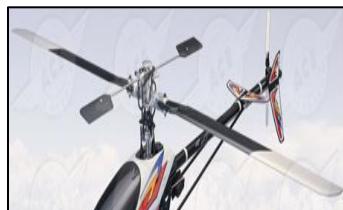


First-principles Modeling Approach

Single-rotor helicopter

Main rotor forces and moments

$$\left\{ \begin{array}{l} X_{\text{mr}} = -T \sin(a_s) \\ Y_{\text{mr}} = T \sin(b_s) \\ Z_{\text{mr}} = -T \cos(a_s) \cos(b_s) \\ L_{\text{mr}} = (K_\beta + TH_{\text{mr}}) \sin(b_s) \\ M_{\text{mr}} = (K_\beta + TH_{\text{mr}}) \sin(a_s) \\ N_{\text{mr}} = -(P_{\text{pr}} + P_i + P_{\text{pa}} + P_c)/\Omega \end{array} \right.$$

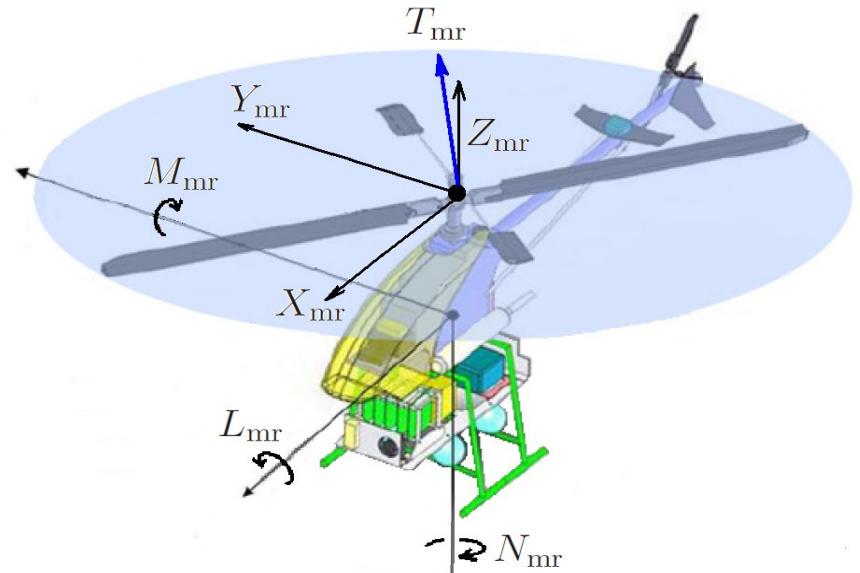

$$\left\{ \begin{array}{l} T_{\text{mr}} = \frac{\rho \Omega_{\text{mr}} R_{\text{mr}}^2 C_{l\alpha,\text{mr}} b_{\text{mr}} c_{\text{mr}}}{4} (w_{\text{bl},\text{mr}} - v_{i,\text{mr}}) \\ v_{i,\text{mr}}^2 = \sqrt{\left(\frac{\hat{v}_{\text{mr}}^2}{2}\right)^2 + \left(\frac{T_{\text{mr}}}{2\rho\pi R_{\text{mr}}^2}\right)^2} - \frac{\hat{v}_{\text{mr}}^2}{2} \\ \hat{v}_{\text{mr}}^2 = u_a^2 + v_a^2 + w_{r,\text{mr}}(w_{r,\text{mr}} - 2v_{i,\text{mr}}) \\ w_{r,\text{mr}} = w_a + a_s u_a - b_s v_a \\ w_{\text{bl},\text{mr}} = w_{r,\text{mr}} + \frac{2}{3} \Omega_{\text{mr}} R_{\text{mr}} \theta_{\text{col}} \end{array} \right.$$

$$\left\{ \begin{array}{l} P_{\text{pr}} = \frac{\rho \Omega R^2 C_{D0} b_{\text{mr}} c_{\text{mr}}}{8} [(\Omega R)^2 + 4.6(u_a^2 + v_a^2)] \\ P_i = T v_i \\ P_c = -mg w_a \\ P_{\text{pa}} = |X_{\text{fus}} u_a| + |Y_{\text{fus}} v_a| + |Z_{\text{fus}} (w_a - v_i)|. \end{array} \right.$$

Initial values: $T(0) = mg$, $v_i(0) = \frac{mg}{2\rho\pi R^2}$, $\hat{v}(0) = 0$.

First-principles Modeling Approach

Single-rotor helicopter

Tail rotor forces and moments

$$T_{\text{tr}} = \frac{\rho \Omega_{\text{tr}} R_{\text{tr}}^2 C_{l\alpha,\text{tr}} b_{\text{tr}} c_{\text{tr}}}{4} (w_{\text{bl,tr}} - v_{i,\text{tr}})$$

$$v_{i,\text{tr}}^2 = \sqrt{\left(\frac{\hat{v}_{\text{tr}}^2}{2}\right)^2 + \left(\frac{T_{\text{tr}}}{2\rho\pi R_{\text{tr}}^2}\right)^2} - \frac{\hat{v}_{\text{tr}}^2}{2}$$

$$\hat{v}_{\text{tr}}^2 = (w_a + qD_{\text{tr}})^2 + u_a^2 + w_{r,\text{tr}}(w_{r,\text{tr}} - 2v_{i,\text{tr}})$$


$$w_{r,\text{tr}} = v_a - rD_{\text{tr}} + pH_{\text{tr}}$$

$$w_{\text{bl,tr}} = w_{r,\text{tr}} + \frac{2}{3}\Omega_{\text{tr}} R_{\text{tr}} \theta_{\text{ped}}$$

$$\theta_{\text{ped}} = K_{\text{ped}} \bar{\delta}_{\text{ped}} + \theta_{\text{ped},0}$$

Initial values: $Y_{\text{tr}}(0) = \frac{1}{\Omega D_{\text{tr}}} \left(\frac{\rho \Omega^3 R^4 C_{D0} b_{\text{mr}} c_{\text{mr}}}{8} + \frac{m^2 g^2}{2\rho\pi R^2} \right), \quad v_{i,\text{tr}}(0) = \frac{Y_{\text{tr}}(0)}{2\rho\pi R_{\text{tr}}^2}, \quad \hat{v}_{\text{tr}}(0) = 0$

$$Y_{\text{tr}} = -T_{\text{tr}} \quad L_{\text{tr}} = -Y_{\text{tr}} H_{\text{tr}}, \quad N_{\text{tr}} = Y_{\text{tr}} D_{\text{tr}}$$

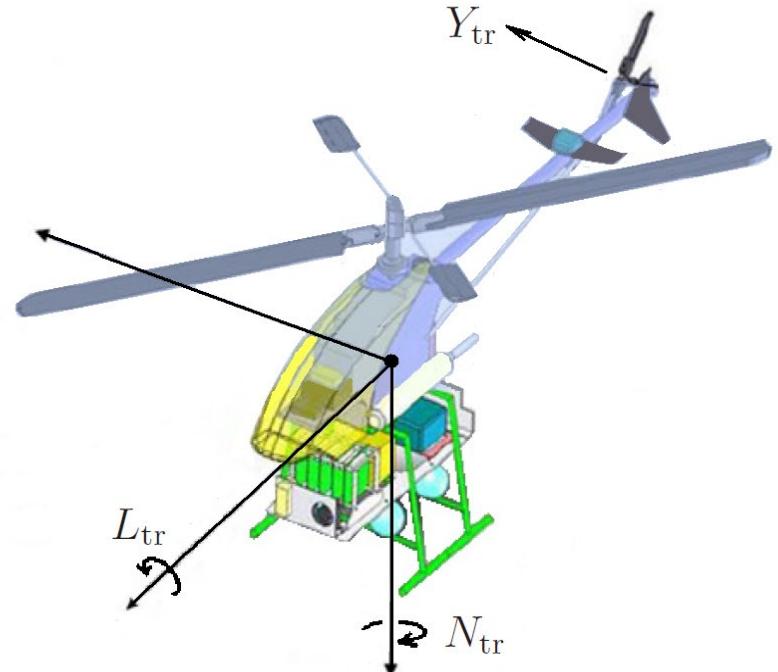

First-principles Modeling Approach


Single-rotor helicopter

Fuselage forces

$$X_{\text{fus}} = \begin{cases} -\frac{\rho}{2} S_{fx} u_a v_{i,\text{mr}}, & \text{if } |u_a| \leq v_{i,\text{mr}} \\ -\frac{\rho}{2} S_{fx} u_a |u_a|, & \text{if } |u_a| > v_{i,\text{mr}} \end{cases}$$

$$Y_{\text{fus}} = \begin{cases} -\frac{\rho}{2} S_{fy} v_a v_{i,\text{mr}}, & \text{if } |v_a| \leq v_{i,\text{mr}} \\ -\frac{\rho}{2} S_{fy} v_a |v_a|, & \text{if } |v_a| > v_{i,\text{mr}} \end{cases}$$

$$Z_{\text{fus}} = -\frac{\rho}{2} S_{fz} (w_a - v_{i,\text{mr}}) |w_a - v_{i,\text{mr}}|$$

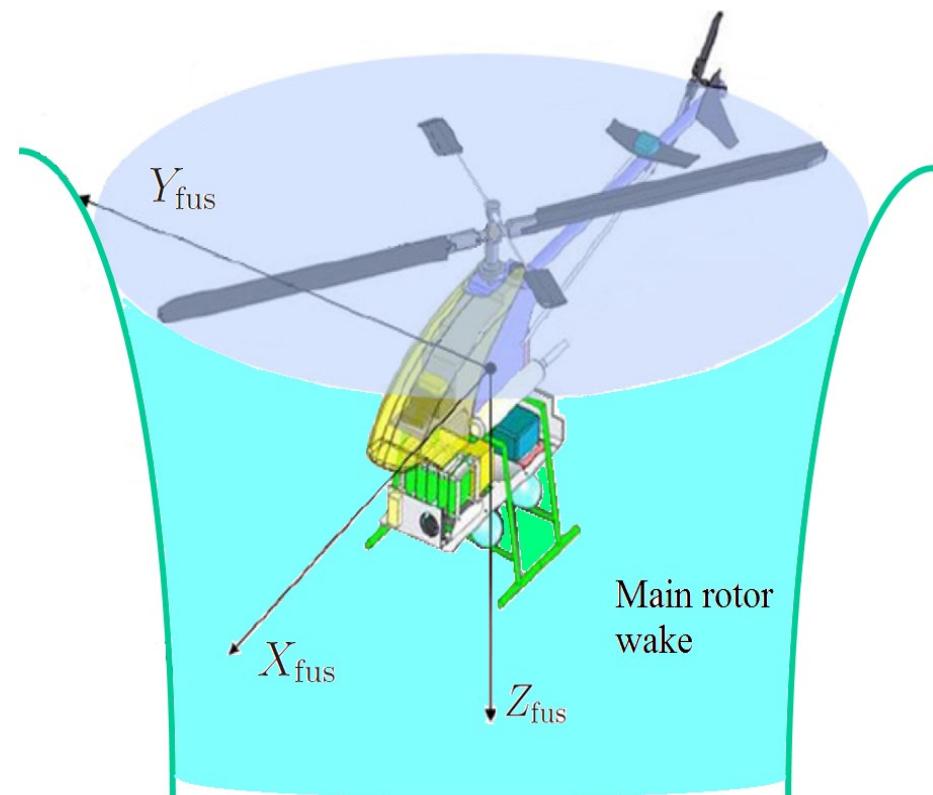

First-principles Modeling Approach


Single-rotor helicopter

Vertical fin forces and moments

$$Y_{\text{vf}} = \begin{cases} -\frac{\rho}{2} C_{l\alpha,\text{vf}} S_{\text{vf}} v_{\text{vf}} |u_a|, & \text{if } \left| \frac{v_{\text{vf}}}{u_a} \right| \leq \tan(\alpha_{\text{st}}) \\ -\frac{\rho}{2} S_{\text{vf}} v_{\text{vf}} |v_{\text{vf}}|, & \text{if } \left| \frac{v_{\text{vf}}}{u_a} \right| > \tan(\alpha_{\text{st}}) \text{ (stalled)} \end{cases}$$

where $v_{\text{vf}} = v_a + v_{i,\text{tr}} - r D_{\text{vf}}$

$$L_{\text{vf}} = Y_{\text{vf}} H_{\text{vf}}, \quad N_{\text{vf}} = Y_{\text{vf}} D_{\text{vf}}$$

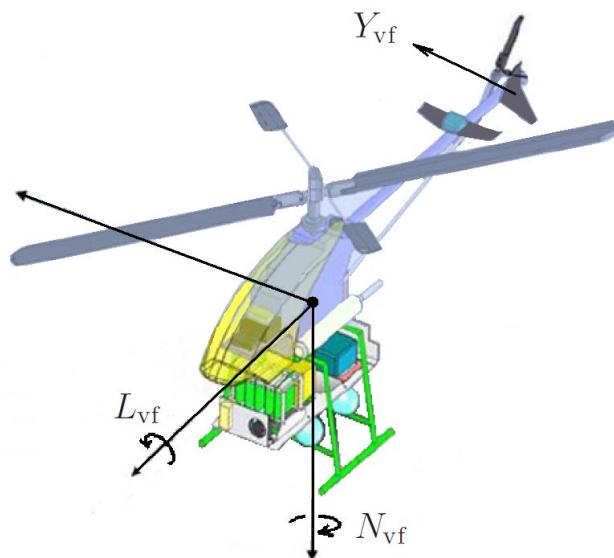


Horizontal fin forces and moments

$$Z_{\text{hf}} = \begin{cases} -\frac{\rho}{2} C_{l\alpha,\text{hf}} S_{\text{hf}} w_{\text{hf}} |u_a|, & \text{if } \left| \frac{w_{\text{hf}}}{u_a} \right| \leq \tan(\alpha_{\text{st}}) \\ -\frac{\rho}{2} S_{\text{hf}} w_{\text{hf}} |w_{\text{hf}}|, & \text{if } \left| \frac{w_{\text{hf}}}{u_a} \right| > \tan(\alpha_{\text{st}}) \text{ (stalled)} \end{cases}$$

where $w_{\text{hf}} = w_a + q D_{\text{hf}} - v_{i,\text{mr}}$

$$M_{\text{hf}} = Z_{\text{hf}} H_{\text{hf}}$$

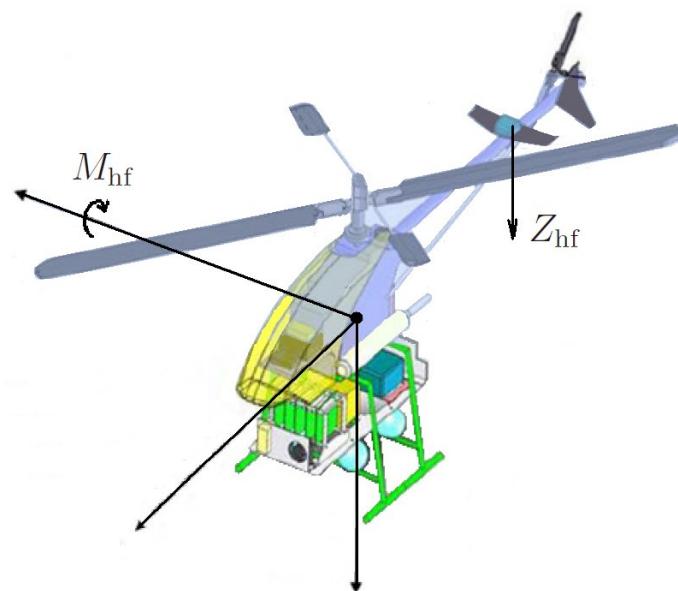

First-principles Modeling Approach

Single-rotor helicopter

Direct measurement

Parameter	Physical meaning
$I_{mr} = 0.055 \text{ kg}\cdot\text{m}^2$	Main blade inertia w.r.t. rotor hub
$I_{sb} = 0.004 \text{ kg}\cdot\text{m}^2$	Stabilizer bar inertia w.r.t. rotor hub
$R = 0.7 \text{ m}$	Main rotor radius
$R_{sb,in} = 0.231 \text{ m}$	Stabilizer bar inner radius
$R_{sb,out} = 0.312 \text{ m}$	Stabilizer bar outer radius
$R_{tr} = 0.128 \text{ m}$	Tail rotor radius
$S_{fx} = 0.103 \text{ m}^2$	Effective longitudinal fuselage drag area
$S_{fy} = 0.900 \text{ m}^2$	Effective lateral fuselage drag area
$S_{fv} = 0.084 \text{ m}^2$	Effective vertical fuselage drag area
$S_{hf} = 0.011 \text{ m}^2$	Horizontal fin area
$S_{vf} = 0.007 \text{ m}^2$	Vertical fin area
$b = 2$	Main blade number
$b_{tr} = 2$	Tail blade number
$c = 0.062 \text{ m}$	Main blade chord length
$c_{sb} = 0.059 \text{ m}$	Stabilizer bar chord length
$c_{tr} = 0.029 \text{ m}$	Tail rotor chord length
$g = 9.781 \text{ N}\cdot\text{kg}^{-1}$	Acceleration of gravity
$m = 9.750 \text{ kg}$	Helicopter mass
$n_{tr} = 4.650$	Gear ratio of the tail rotor to the main rotor
$\rho = 1.290 \text{ kg/m}^3$	Air density

Ground Tests

Parameter	Physical meaning
$D_{hf} = 0.751 \text{ m}$	Horizontal fin location behind the CG
$D_{tr} = 1.035 \text{ m}$	Tail rotor hub location behind the CG
$D_{vf} = 0.984 \text{ m}$	Vertical fin location behind the CG
$H_{mr} = 0.337 \text{ m}$	Main rotor hub location above the CG
$H_{tr} = 0.172 \text{ m}$	Tail rotor hub location above the CG
$H_{vf} = 0.184 \text{ m}$	Vertical fin location above the CG
$A_{lon} = 0.210 \text{ rad}$	Direct linkage gain from δ_{lon} to main blade deflection
$B_{lat} = 0.200 \text{ rad}$	Direct linkage gain from δ_{lat} to main blade deflection
$C_{lon} = 0.560 \text{ rad}$	Linkage gain from δ_{lon} to stabilizer bar deflection
$D_{lat} = 0.570 \text{ rad}$	Linkage gain from δ_{lat} to stabilizer bar deflection
$K_{sb} = 1$	Ratio of main blade deflection to stabilizer bar TPP titling angle
$I_{xx} = 0.249 \text{ kg}\cdot\text{m}^2$	Rolling moment of inertia
$I_{yy} = 0.548 \text{ kg}\cdot\text{m}^2$	Pitching moment of inertia
$I_{zz} = 0.787 \text{ kg}\cdot\text{m}^2$	Yawing moment of inertia
$K_I K_a = 8.499 \text{ rad}$	Product of integral gain K_I and scaling factor K_a
$K_P K_a = 1.608 \text{ rad}$	Product of proportional gain K_P and scaling factor K_a
$K_{col} = -0.165 \text{ rad}$	Ratio of θ_{col} to δ_{col}
$K_{ped} = 1$	Ratio of θ_{ped} to $\bar{\delta}_{ped}$
$\theta_{col,0} = 0.075 \text{ rad}$	θ_{col} value when δ_{col} is zero
$\theta_{ped,0} = 0.143 \text{ rad}$	θ_{ped} value when $\bar{\delta}_{col}$ is zero

CG
Location

Airfoil
deflection

Inertia

Collective
Pitch
curve

First-principles Modeling Approach

Single-rotor helicopter

Wind Tunnel Data

Parameter	Physical meaning
$C_{l\alpha,hf} = 2.85 \text{ rad}^{-1}$	Horizontal fin lift curve slope
$\hat{C}_{l\alpha,mr} = 5.71 \text{ rad}^{-1}$	Main blade lift curve slope
$\hat{C}_{l\alpha,sb} = 2.23 \text{ rad}^{-1}$	Stabilizer bar lift curve slope
$\hat{C}_{l\alpha,tr} = 2.23 \text{ rad}^{-1}$	Tail blade lift curve slope
$C_{l\alpha,vf} = 2.85 \text{ rad}^{-1}$	Vertical fin lift curve slope

Actual Flight Tests

Parameters	Physical meaning
$A_{ba} = 9.720 \text{ sec}^{-1}$	Coupling effect
$B_{ba} = 10.704 \text{ sec}^{-1}$	Coupling effect
$K_I = 2.2076$	Integral gain of the embedded PI controller
$K_P = 0.4177$	Proportional gain of the embedded PI controller
$K_a = -3.85 \text{ rad}$	Scaling factor of the amplifier circuit
$K_\beta = 112.84 \text{ N}\cdot\text{m}$	Main rotor spring constant
$C_{l\alpha,mr} = 5.73 \text{ rad}^{-1}$	Main blade lift curve slope
$C_{l\alpha,sb} = 2.13 \text{ rad}^{-1}$	Stabilizer bar lift curve slope
$C_{l\alpha,tr} = 2.81 \text{ rad}^{-1}$	Tail blade lift curve slope
$\Omega_{mr} = 193.73 \text{ rad}$	Main rotor rotating speed
$\Omega_{tr} = 900.85 \text{ rad}$	Main rotor rotating speed

How do we obtain a **flight dynamics model**?

1) First-principles Modeling Approach

- Build mathematical model by manipulating equations of physics
- Complex, nonlinear, rigorous with physical meanings
- Test-bench experiments

2) System Identification Approach

- Build mathematical model by fitting measurement data
- Simplified, linear, black-box
- Flight test experiments





System Identification Approach

Steps

System Identification Approach is suitable for obtaining linear dynamics model and can be conducted in both time-domain and frequency-domain.

$$\dot{x} = Ax + Bu$$
$$x = [u \ v \ p \ q \ \phi \ \theta \ a_s \ b_s \ w \ r \ r_{fb}]^T,$$
$$u = [\delta_{lat} \ \delta_{lon} \ \delta_{col} \ \delta_{ped}]^T,$$
$$A = \begin{bmatrix} X_u & 0 & 0 & 0 & -g & X_{a_s} & 0 & 0 & 0 & 0 \\ 0 & Y_v & 0 & 0 & g & 0 & 0 & Y_b & 0 & 0 \\ L_u & L_v & 0 & 0 & 0 & L_{a_s} & L_b & 0 & 0 & 0 \\ M_u & M_v & 0 & 0 & 0 & M_{a_s} & M_b & 0 & 0 & 0 \\ 0 & 0 & 1 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 1 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & -1 & 0 & 0 & -1/\tau & A_{b_s} & 0 & 0 \\ 0 & 0 & -1 & 0 & 0 & 0 & 0 & B_{a_s} & 1/\tau & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & 0 & B_{b_s} & 0 & Z_{col} & 0 \\ 0 & N_v & 0 & 0 & 0 & 0 & 0 & 0 & 0 & N_r & N_{r_{fb}} \\ 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & N_{ped} \end{bmatrix}, \quad B = \begin{bmatrix} 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ A_{lat} & A_{lon} & 0 & 0 \\ B_{lat} & B_{lon} & 0 & 0 \\ 0 & 0 & Z_{col} & 0 \\ 0 & 0 & 0 & N_{ped} \\ 0 & 0 & 0 & 0 \end{bmatrix}.$$

Model structure determination

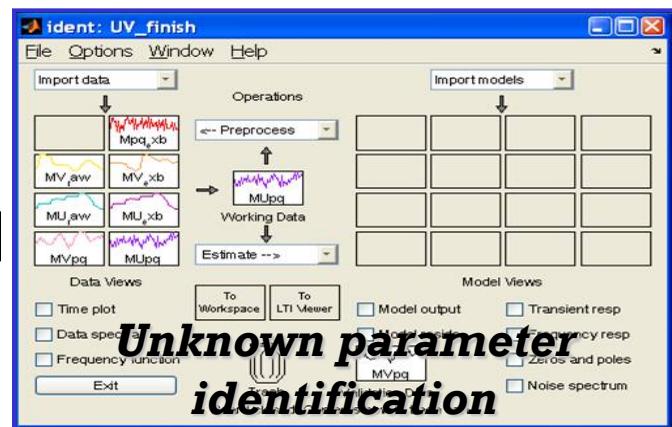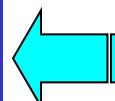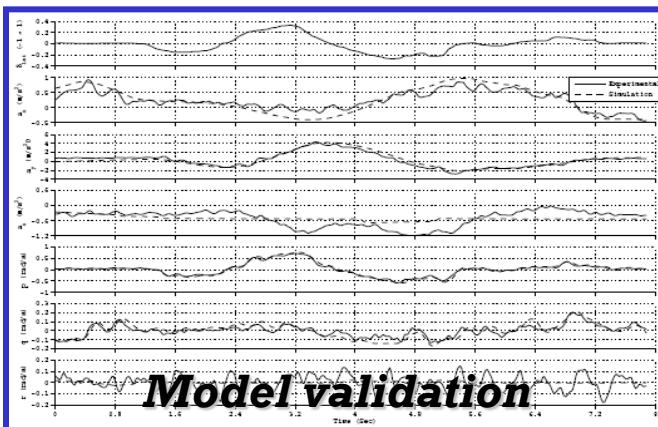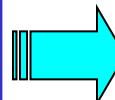

System Identification Approach

Case Study: single-rotor helicopter


Step 1: Model structure determination:

$$\dot{\mathbf{x}} = A\mathbf{x} + B\mathbf{u}$$

$$\left\{ \begin{array}{l} \mathbf{x} = [u \ v \ p \ q \ \phi \ \theta \ a_s \ b_s \ w \ r \ r_{fb}]', \\ \mathbf{u} = [\delta_{lat} \ \delta_{lon} \ \delta_{col} \ \delta_{ped}]', \end{array} \right.$$

$$A = \begin{bmatrix} X_u & 0 & 0 & 0 & 0 & -g & X_{a_s} & 0 & 0 & 0 & 0 \\ 0 & Yv & 0 & 0 & g & 0 & Y_{b_s} & 0 & 0 & 0 & 0 \\ L_u & Lv & 0 & 0 & 0 & 0 & L_{a_s} & L_{b_s} & 0 & 0 & 0 \\ M_u & Mv & 0 & 0 & 0 & 0 & M_{a_s} & M_{b_s} & 0 & 0 & 0 \\ 0 & 0 & 1 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 1 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & -1 & 0 & 0 & -1/\tau & A_{b_s} & 0 & 0 & 0 \\ 0 & 0 & -1 & 0 & 0 & 0 & B_{a_s} & -1/\tau & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & Z_w & Z_r & 0 \\ 0 & Nv & 0 & 0 & 0 & 0 & 0 & 0 & 0 & N_r & N_{r_{fb}} \\ 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & K_r & K_{r_{fb}} & \end{bmatrix},$$



$$B = \begin{bmatrix} 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ A_{lat} & A_{lon} & 0 & 0 \\ B_{lat} & B_{lon} & 0 & 0 \\ 0 & 0 & Z_{col} & 0 \\ 0 & 0 & 0 & N_{ped} \\ 0 & 0 & 0 & 0 \end{bmatrix}.$$

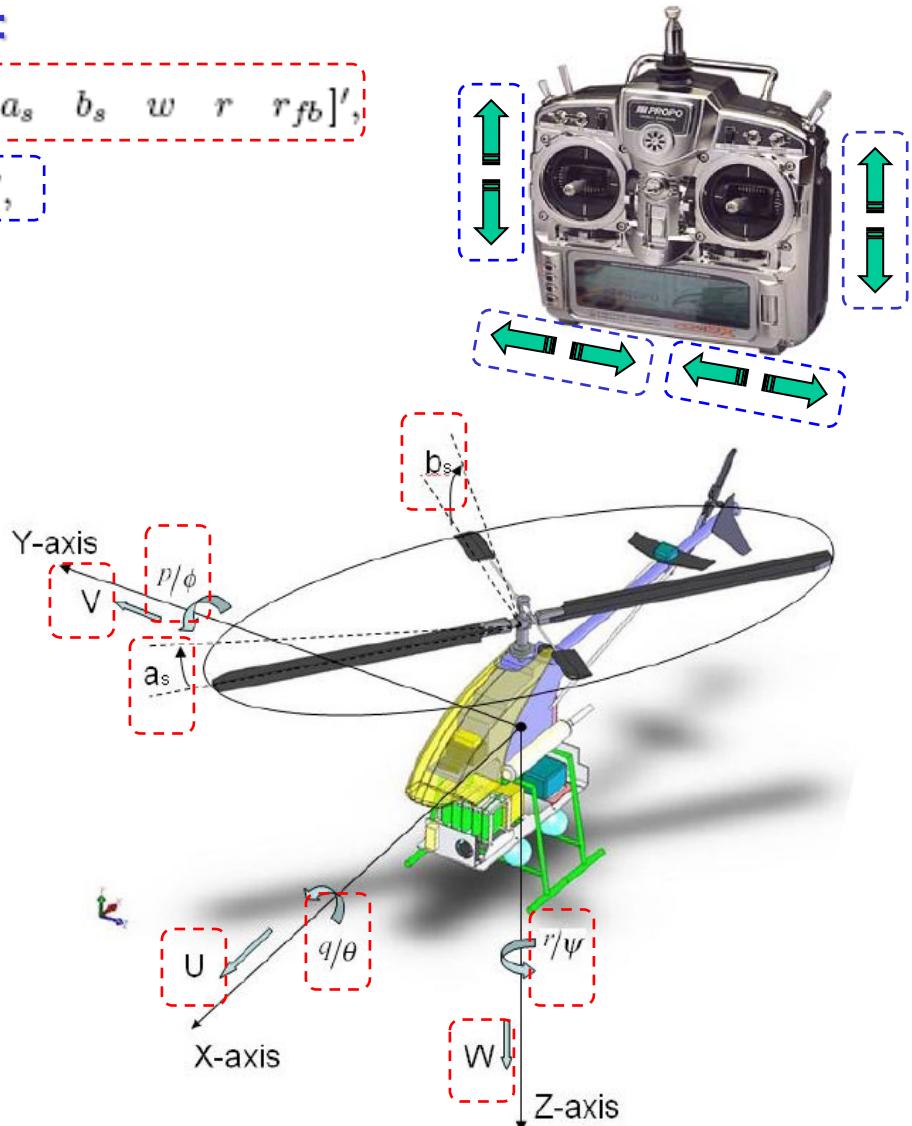

System Identification Approach

Case Study: single-rotor helicopter

Step 2: Data collection and preprocessing:

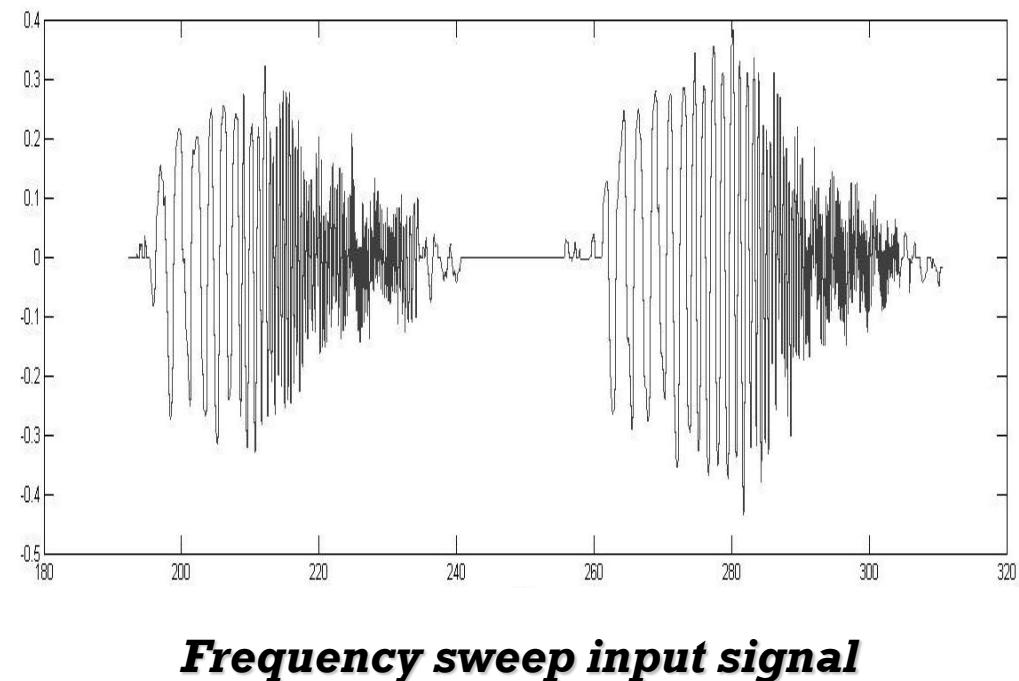
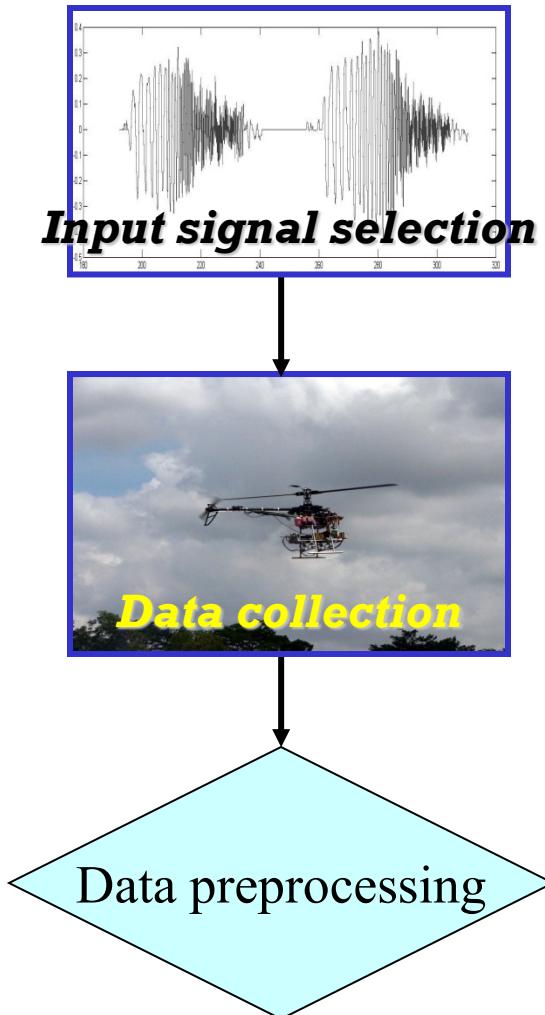


Frequency sweep input signal

System Identification Approach

Case Study: single-rotor helicopter

Step 2: Data collection and preprocessing:

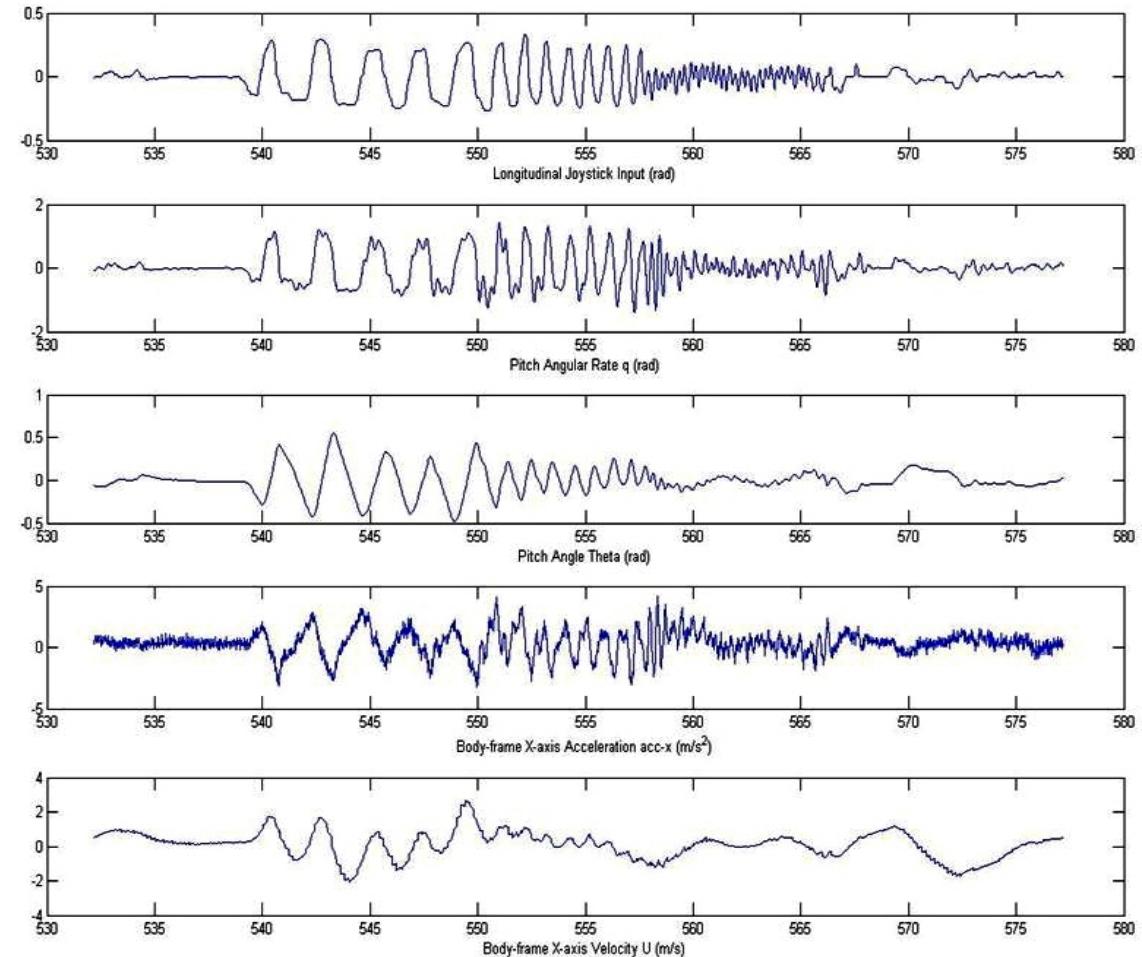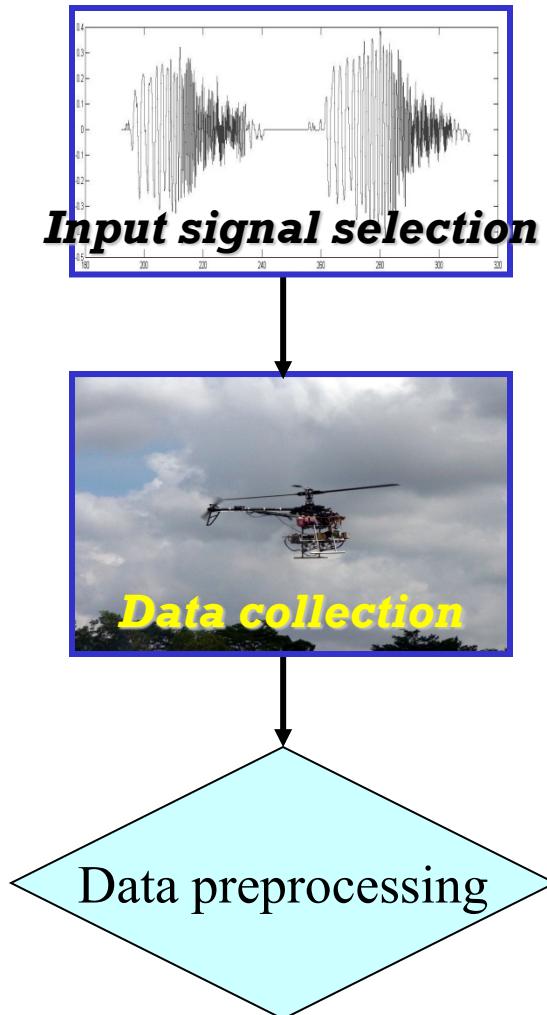


Output responses

System Identification Approach

Toolkits


Toolkits:

Time-domain: IDENT

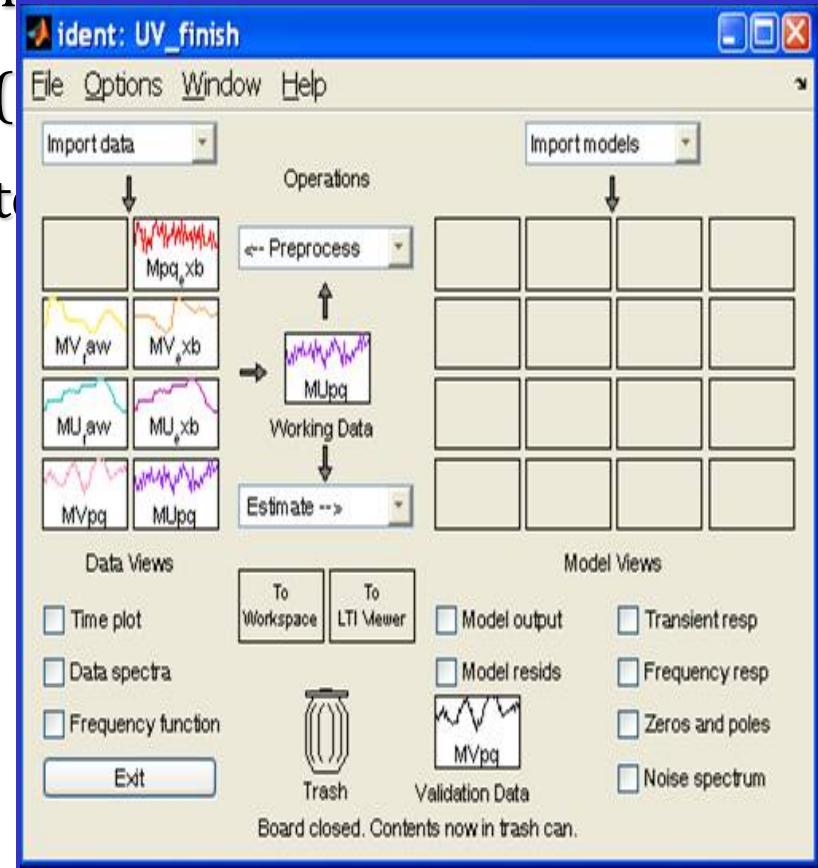

IDENT


Frequency-domain: CIFER

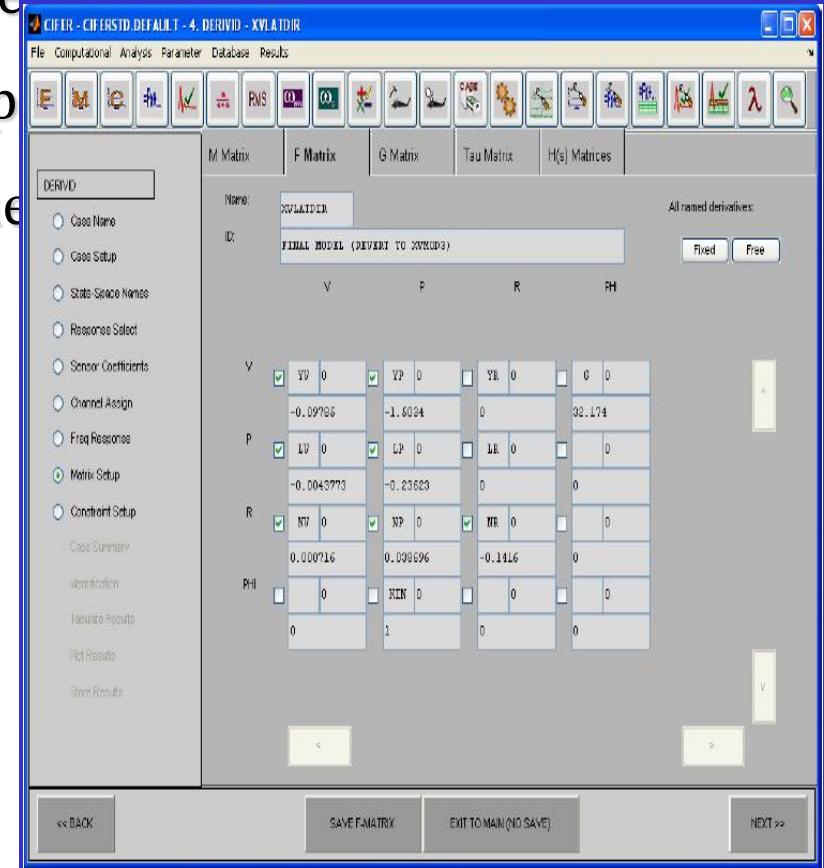

CIFER

System Identification Approach

Case Study: single-rotor helicopter

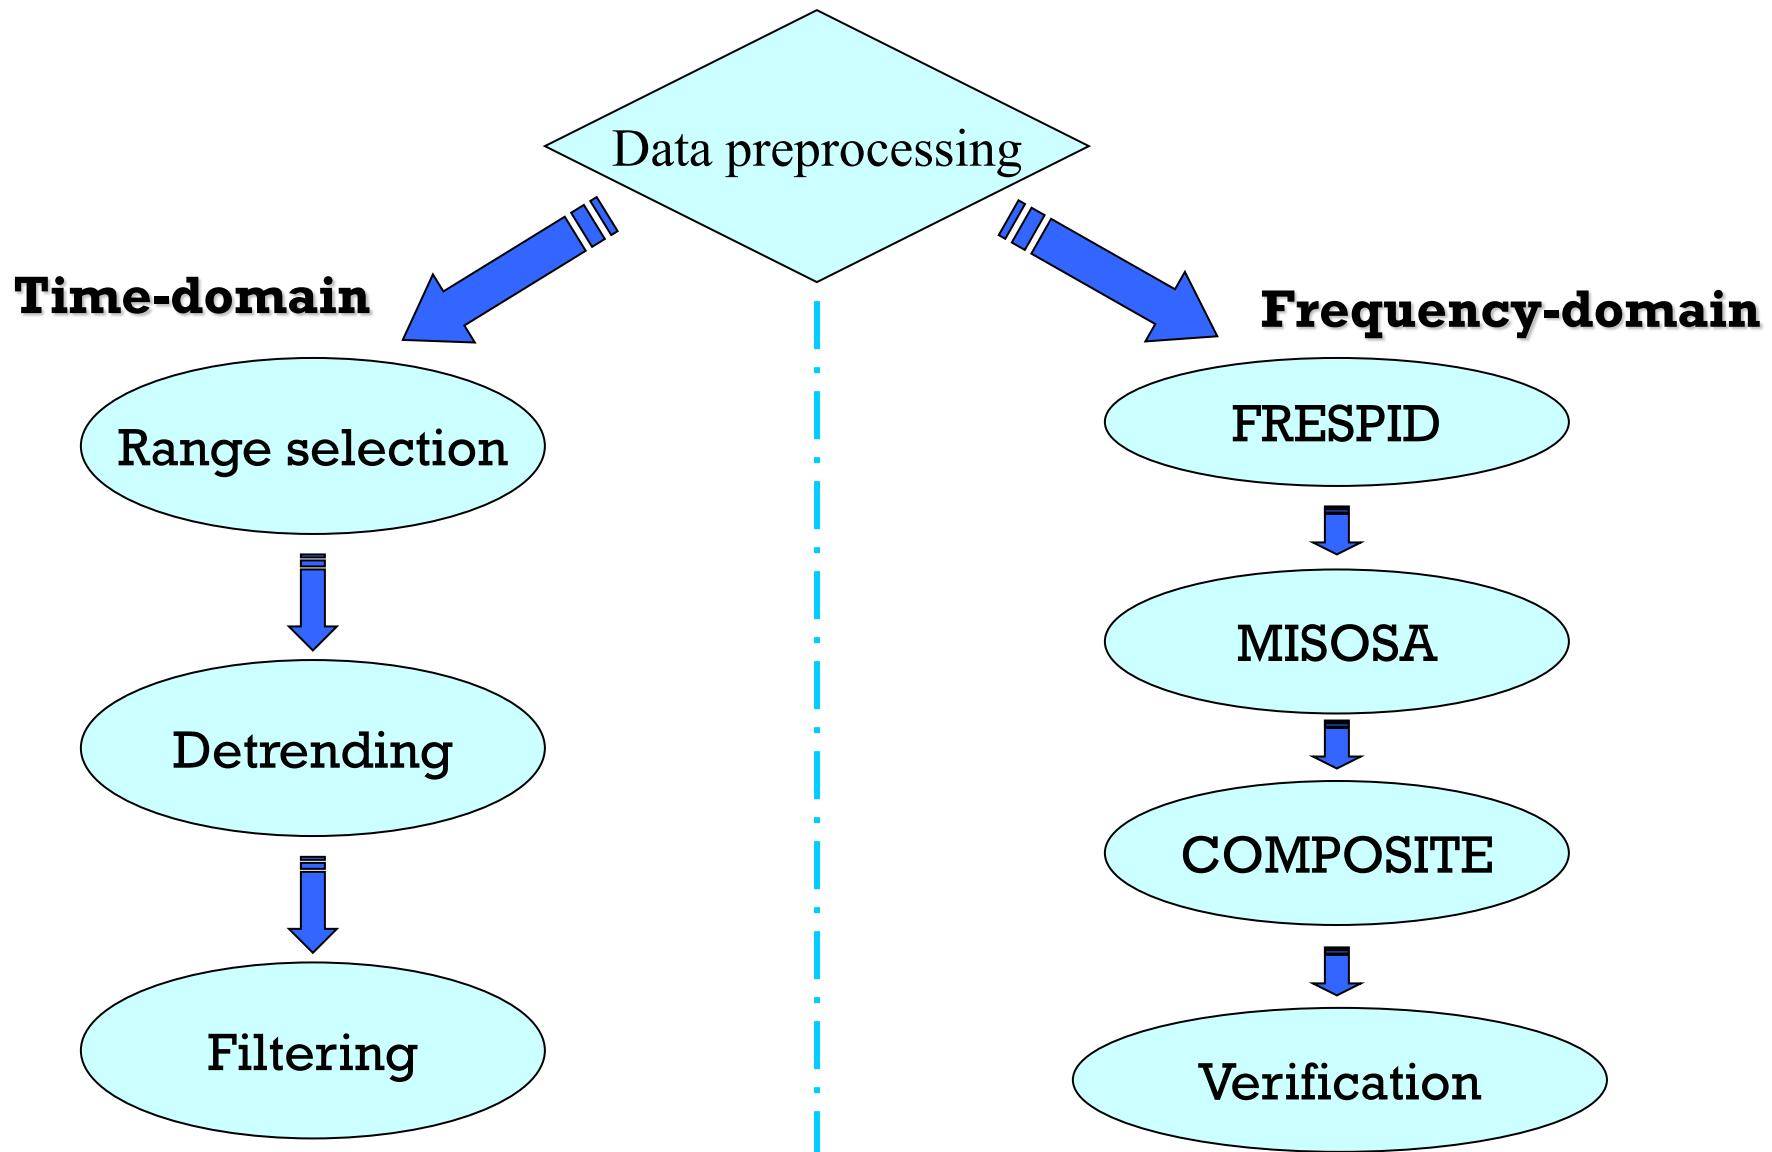

System Identification Approach

Case Study: single-rotor helicopter


Step 3: Unknown parameter identification:

- 1). Angular rate dynamics;
- 2). Horizontal velocity dynamics;
- 3). Height dynamics;
- 4). Yaw dynamics;

a. Time-domain: Hover model of a single-rotor helicopter

$$A = \begin{bmatrix} -0.1778 & 0 & 0 & 0 & 0 & -9.7807 & -9.7807 & 0 & 0 & 0 \\ 0 & -0.3104 & 0 & 0 & 9.7807 & 0 & 0 & 9.7807 & 0 & 0 \\ -0.3326 & -0.5353 & 0 & 0 & 0 & 0 & 75.764 & 343.86 & 0 & 0 \\ -0.1903 & -0.2490 & 0 & 0 & 0 & 0 & 172.62 & -59.958 & 0 & 0 \\ 0 & 0 & 1 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 1 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & -1 & 0 & 0 & -8.1222 & 4.6535 & 0 & 0 \\ 0 & 0 & -1 & 0 & 0 & 0 & -0.0921 & -8.1222 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & -0.6821 & -0.0535 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & -0.2892 & -5.5561 & -36.674 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & 2.7492 & -11.112 & 0 & 0 \end{bmatrix}, \quad B = \begin{bmatrix} 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \end{bmatrix},$$

, $B = \begin{bmatrix} 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 \end{bmatrix},$

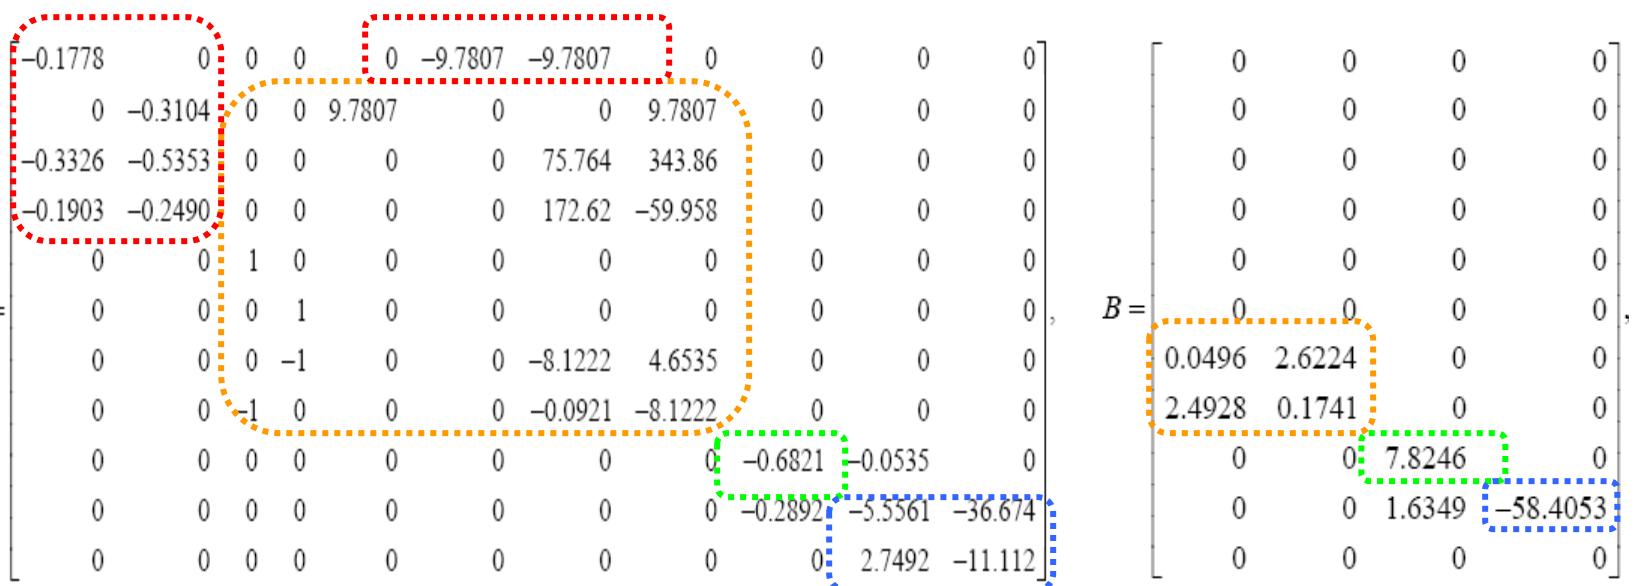

System Identification Approach

Case Study: single-rotor helicopter

b. Frequency-domain: Hovering model of a single-rotor helicopter

Extra metrics for parameter accuracy evaluation:

1). Cramer-Rao bound (CR% < 20%); 2). Insensitivity (I% < 10%)

Parameter	Value	CR%	I%
X_u	-0.5198	20.31	9.827
X_{a_s}	-9.7807 !	—	—
Y_v	-0.4225	19.51	9.231
Y_{b_s}	9.7807 !	—	—
L_u	-0.3262 !	—	—
L_v	-0.0675 *	—	—
L_{a_s}	0 +	—	—
L_{b_s}	439.4000	2.489	1.020
M_u	-0.0814 *	—	—
M_v	-2.1210	18.02	7.143
M_{a_s}	275.1000	2.794	1.067
M_{b_s}	-42.1100	14.17	4.562
τ	-4.7790	7.678	2.367
a_{b_s}	2.3850	13.67	4.309

b_{a_s}	0	—	—
Z_w	-0.5996	19.33	12.13
Z_r	0.1103	6.369	2.514
N_r	-4.6150	7.515	2.441
N_{rfb}	154.5000 *	—	—
N_v	0	—	—
K_r	-1.0830	5.805	1.929
K_{rfb}	-9.2300 *	—	—
A_{lat}	0.0610	16.62	8.979
A_{lon}	2.8080	2.731	1.319
B_{lat}	2.1810	2.687	1.202
B_{lon}	0 +	—	—
Z_{col}	22.9400	3.776	1.856
N_{ped}	-154.5000	6.663	1.833

+ : Eliminated in model structure determination


! : Fixed empirically

* : Tied to other parameters

System Identification Approach

Case Study: single-rotor helicopter


Frequency responses matching

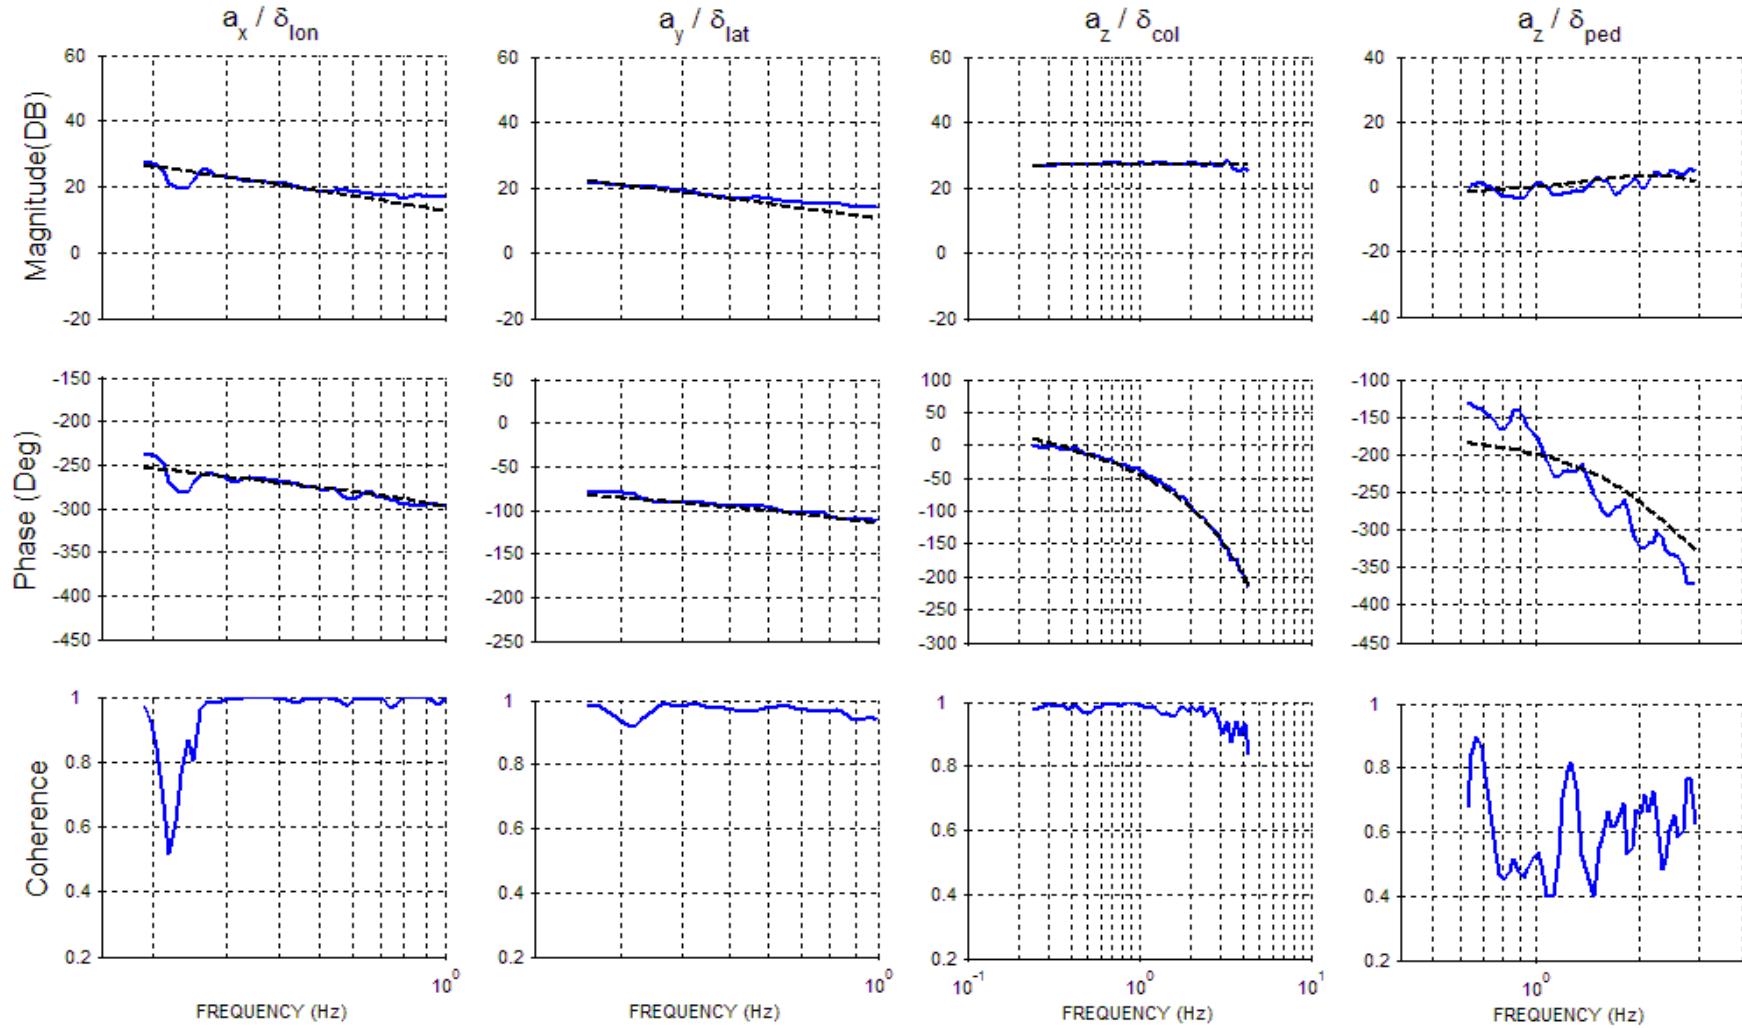


System Identification Approach

Case Study: single-rotor helicopter

Step 4: Model validation

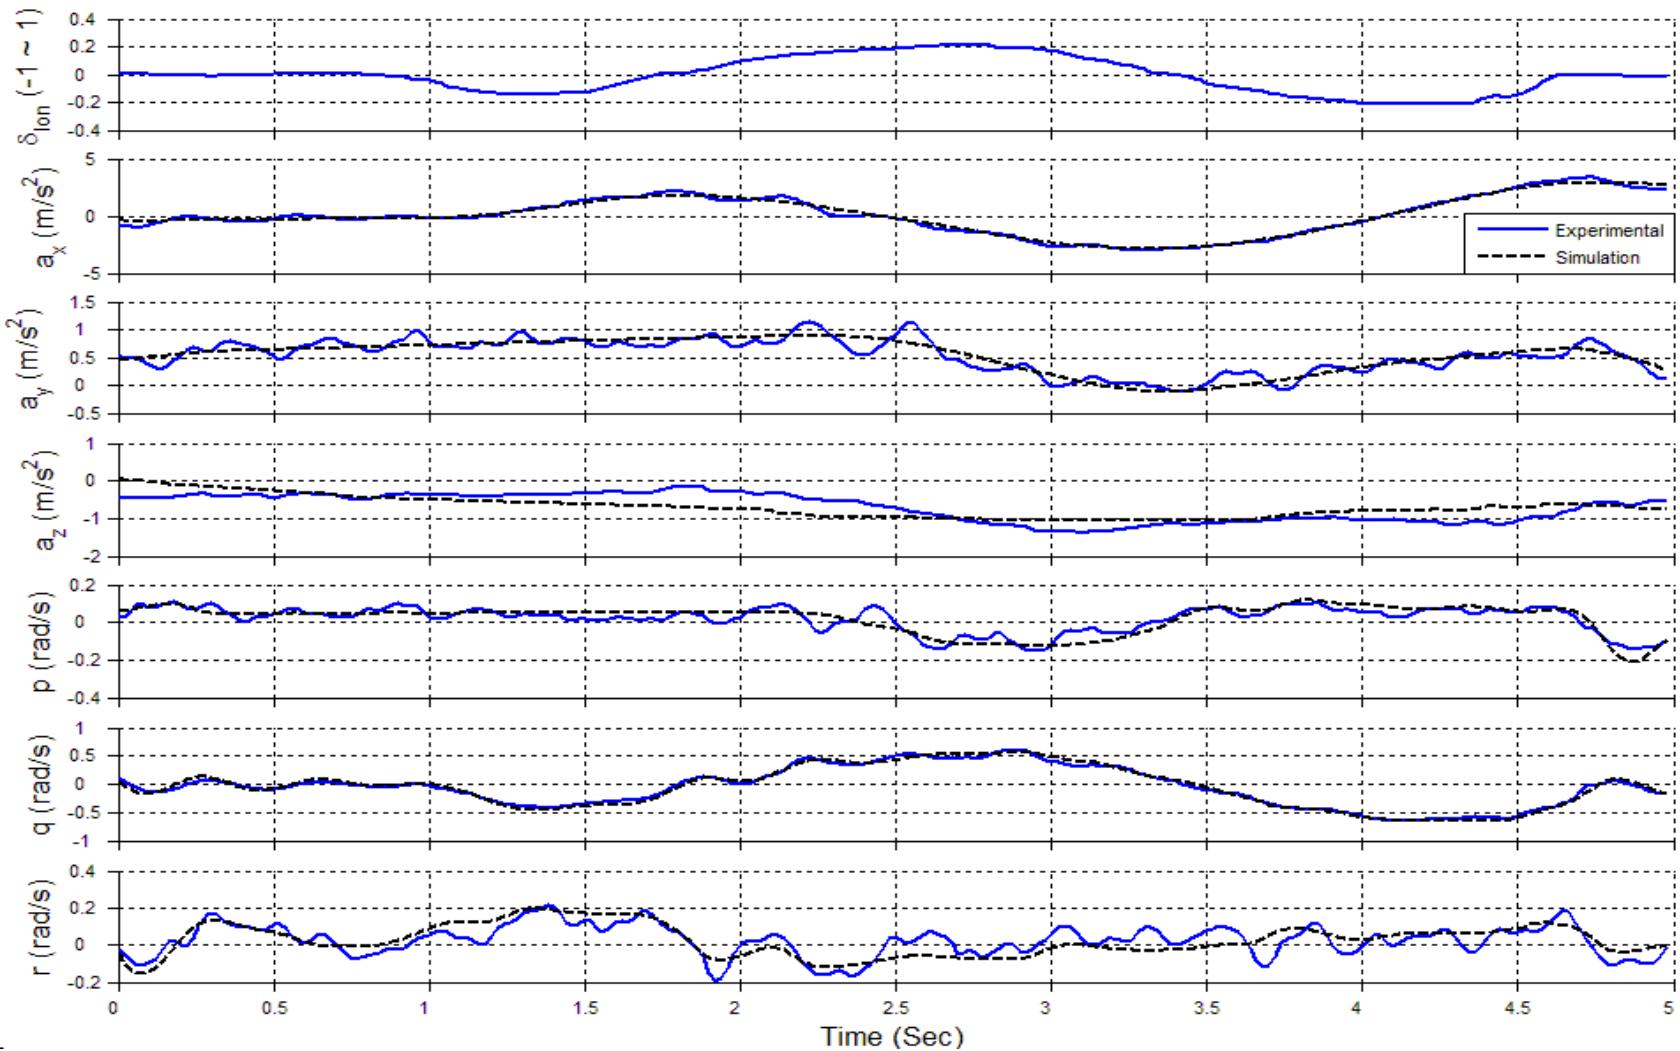


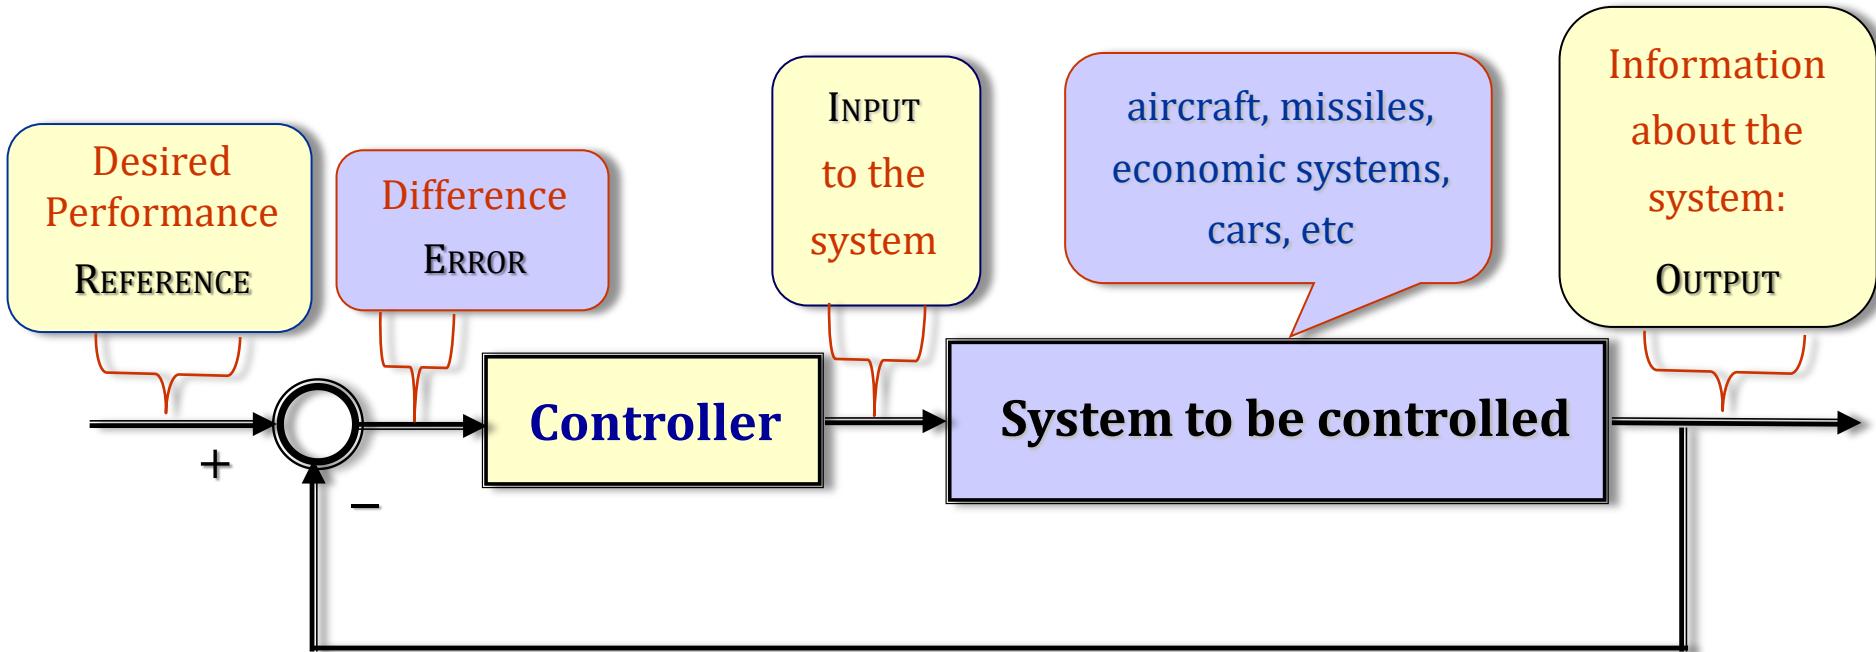

Objective: To make the system **OUTPUT** and the desired **REFERENCE** as close as possible, i.e., to make the **ERROR** as small as possible.

Key Issues: (1) How to describe the system to be controlled? **(Modeling)**
(2) How to design the controller? **(Control)**

There are many other factors of life have to be carefully considered when designing a control system for real-life problems. These factors include:

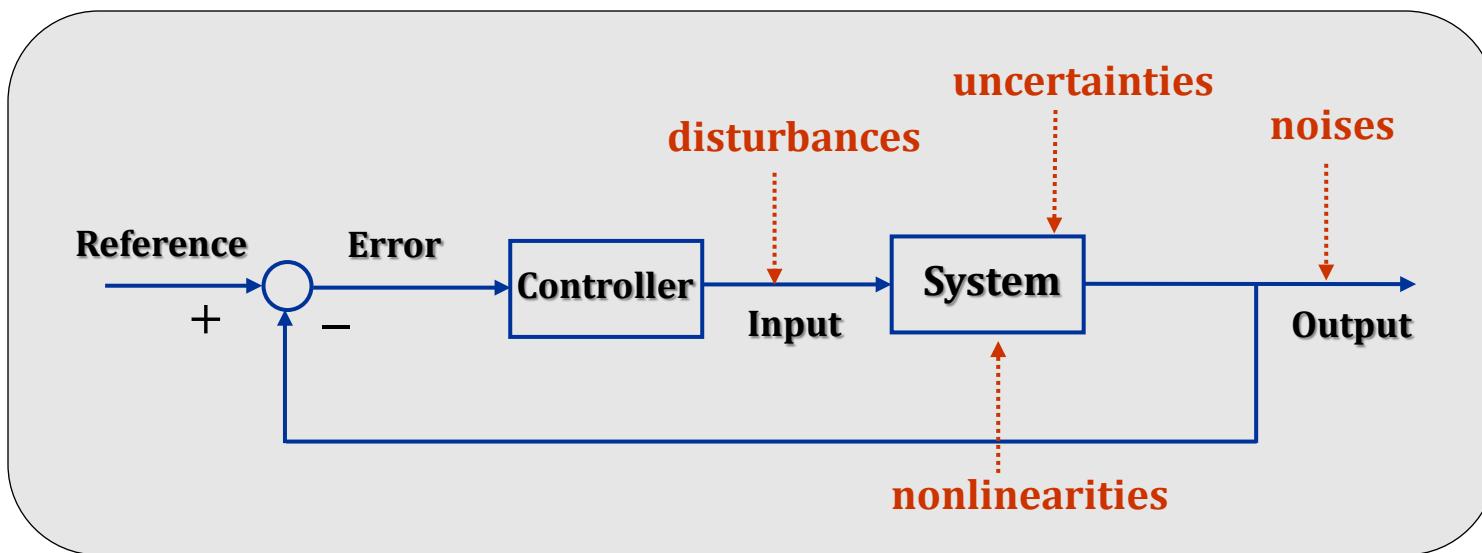


These real-life factors, i.e., disturbances, uncertainties, nonlinearities, give birth of many modern control techniques...

The following is my personal view on the clarification of control techniques:


- ◆ **Classical control:** PID control, developed in 1940s and utilized heavily for in industrial processes. Examples: *everywhere in life...*
- ◆ **Optimal control:** Linear quadratic regulator (LQR), H_2 optimal control, Kalman filter, developed in 1960s to achieve certain optimal performance and boomed by *NASA Apollo Project*.
- ◆ **Robust control:** H_∞ control, developed in 1980s and 90s to handle systems with uncertainties and disturbances and with high performances.
- ◆ **Nonlinear control:** Still on-going research topics, developed to handle nonlinear systems with high performances.
- ◆ **Intelligent control:** Knowledge-based control, adaptive control, neural and fuzzy logic control, etc., researched heavily in 1990s, developed to handle unknown system models. Examples: *economic systems, social systems...*

A 3-layer automatic flight control structure


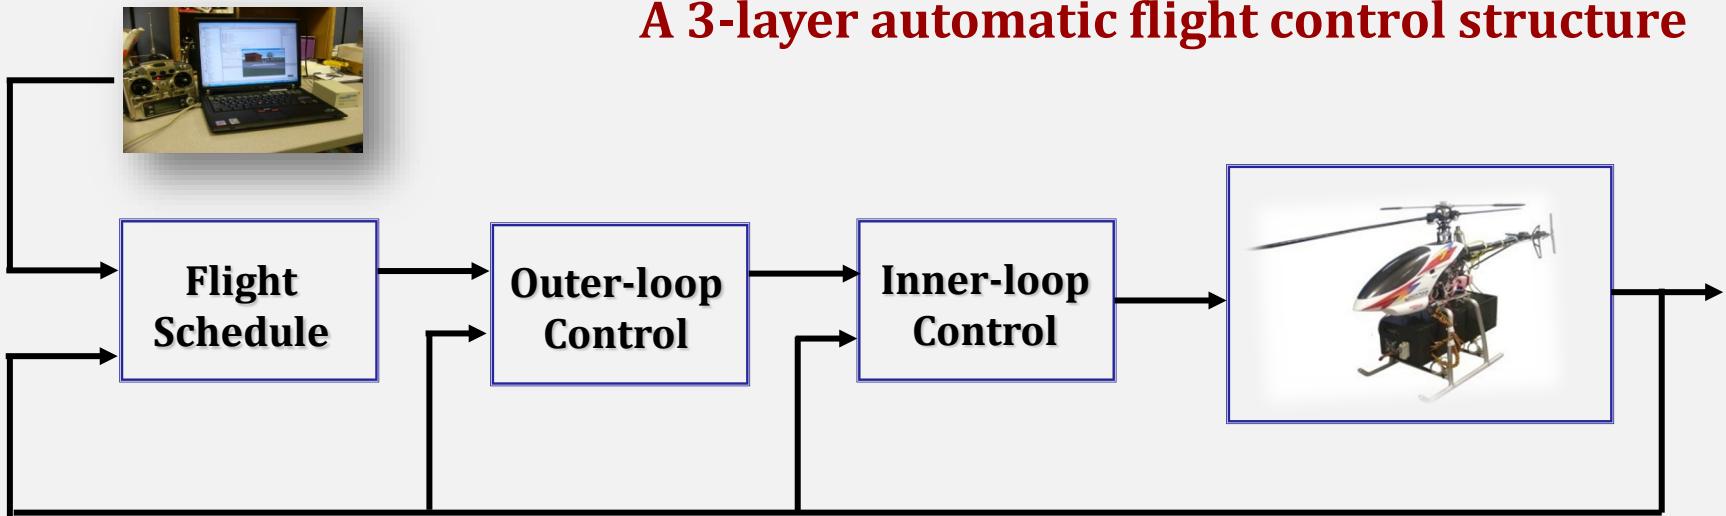


- Inner loop control is to guarantee the stability of the aircraft attitude
- Outer loop control is to control the aircraft position
- Flight schedule is to generate references for flight missions


Structure of quadrotor flight control

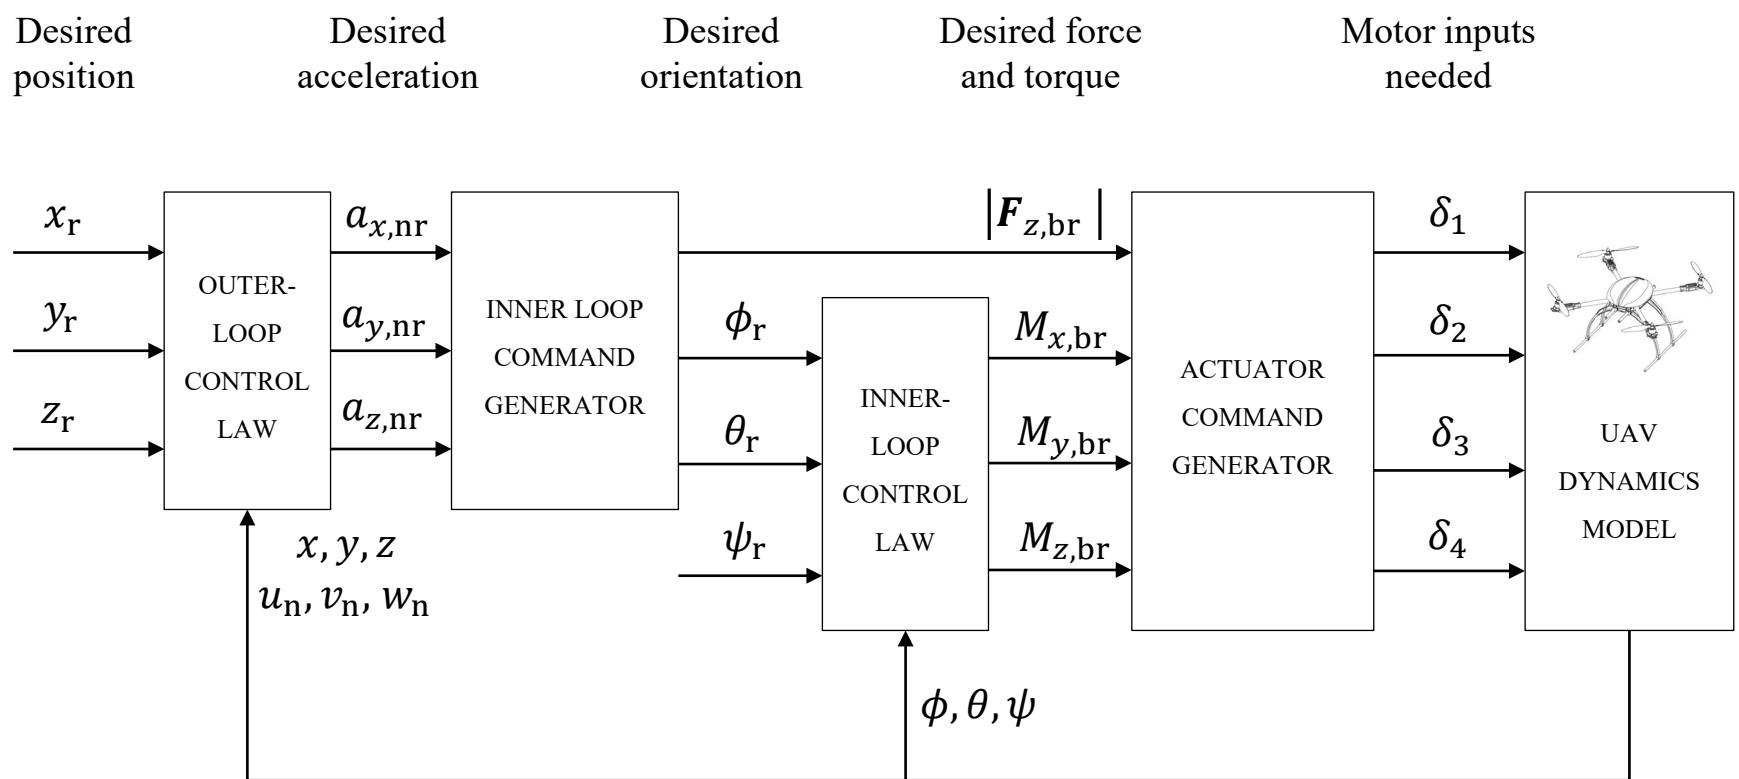


Inner loop command generator

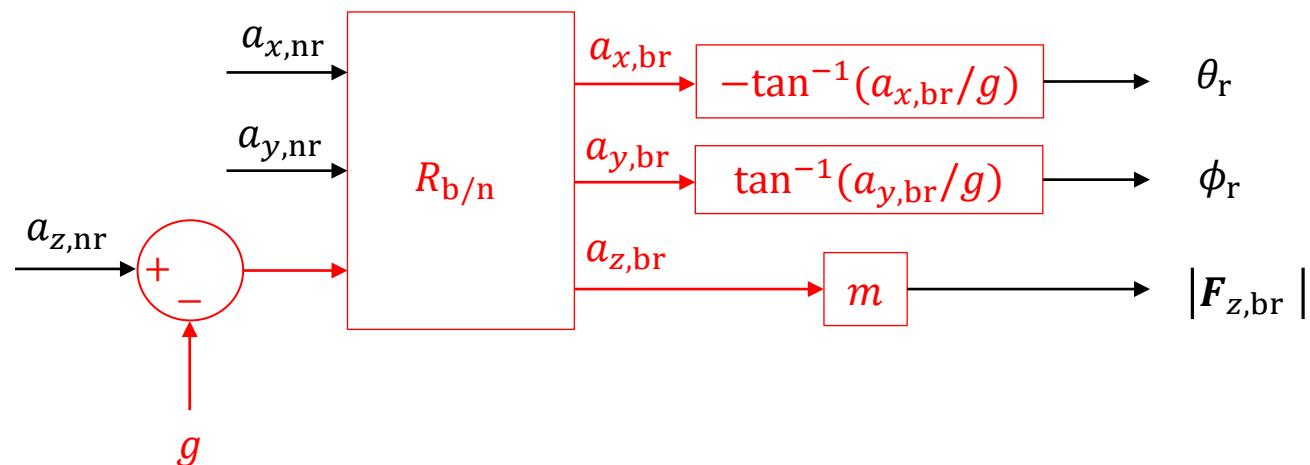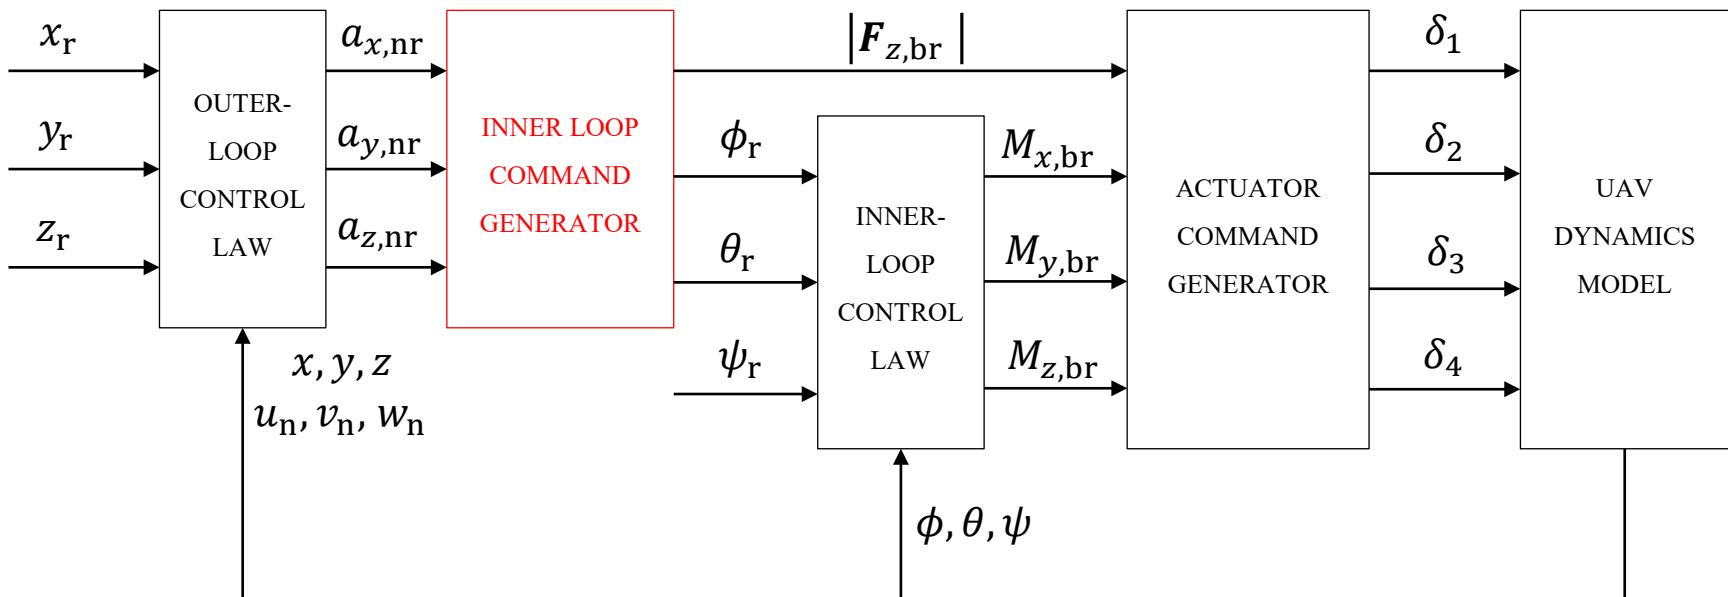

Actuator command generator

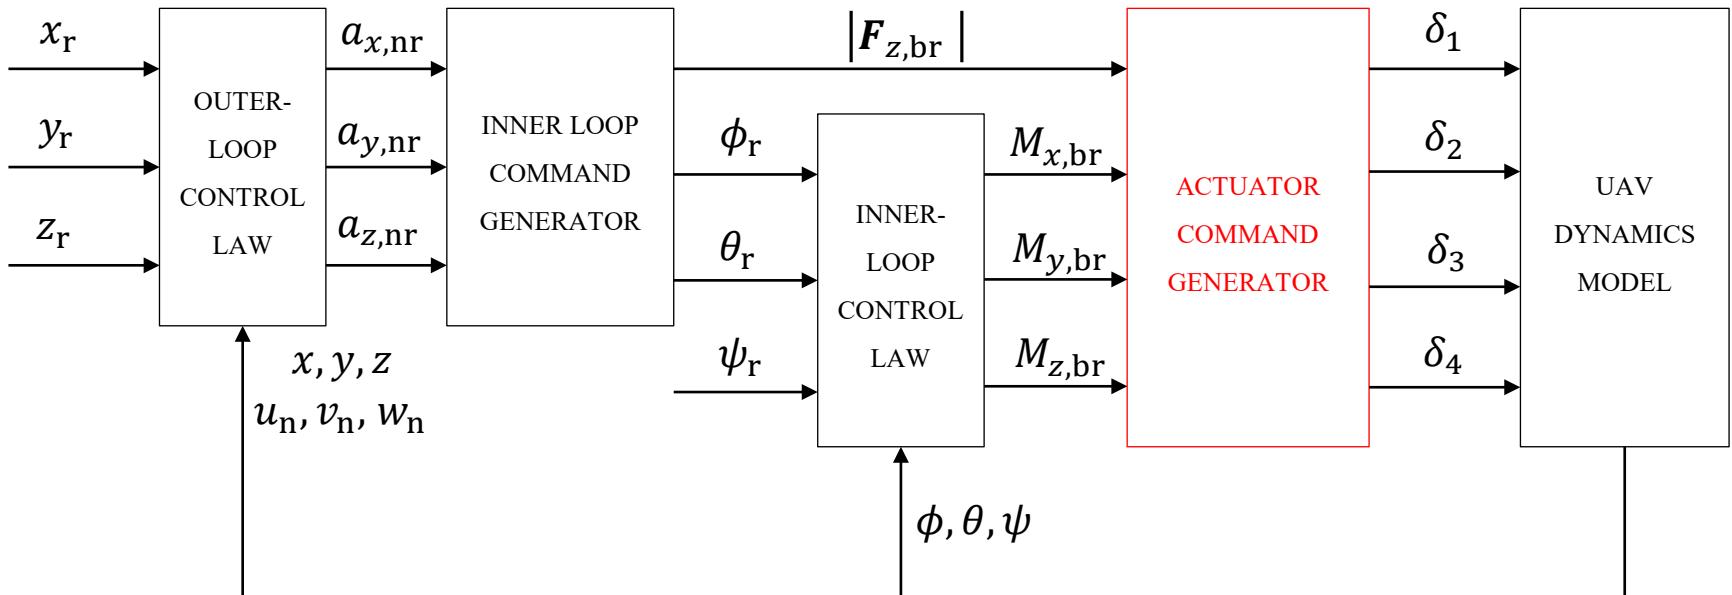

$$\left\{
 \begin{array}{l}
 k_T \Omega_1^2 + k_T \Omega_2^2 + k_T \Omega_3^2 + k_T \Omega_4^2 = |F_{z,br}| \\
 -k_T \Omega_1^2 + k_T \Omega_2^2 + k_T \Omega_3^2 - k_T \Omega_4^2 = M_x * \sqrt{2}/l \\
 k_T \Omega_1^2 - k_T \Omega_2^2 + k_T \Omega_3^2 - k_T \Omega_4^2 = M_y * \sqrt{2}/l \\
 k_Q \Omega_1^2 + k_Q \Omega_2^2 - k_Q \Omega_3^2 - k_Q \Omega_4^2 = M_z
 \end{array}
 \right. \quad \xrightarrow{\Omega_i^2} \Omega_i \quad \xrightarrow{\delta_i}$$

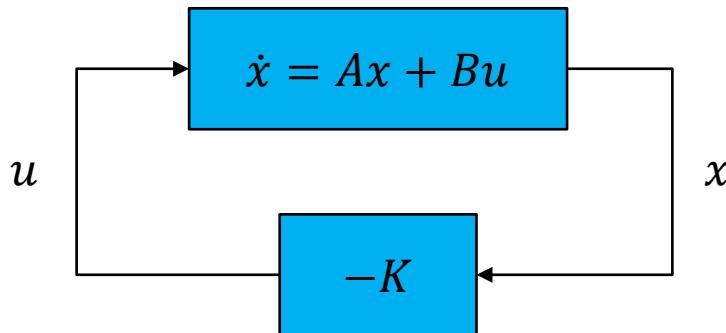

Closed-loop system:

$$\dot{x} = (A - BK)x$$

Find K which minimizes the following cost function with a non-zero initial condition

$$J = \int_0^{\infty} (x^T Q x + u^T R u) dt$$

Solution (proof skipped):

$$u = -Kx = -(R^{-1}B^T P)x$$


MATLAB code:

```
>> K = lqr (A, B, Q, R);
```


where P is the solution of the Algebraic Riccati Equation (ARE) below:

$$PA + A^T P + Q + PBR^{-1}B^T P = 0$$

1

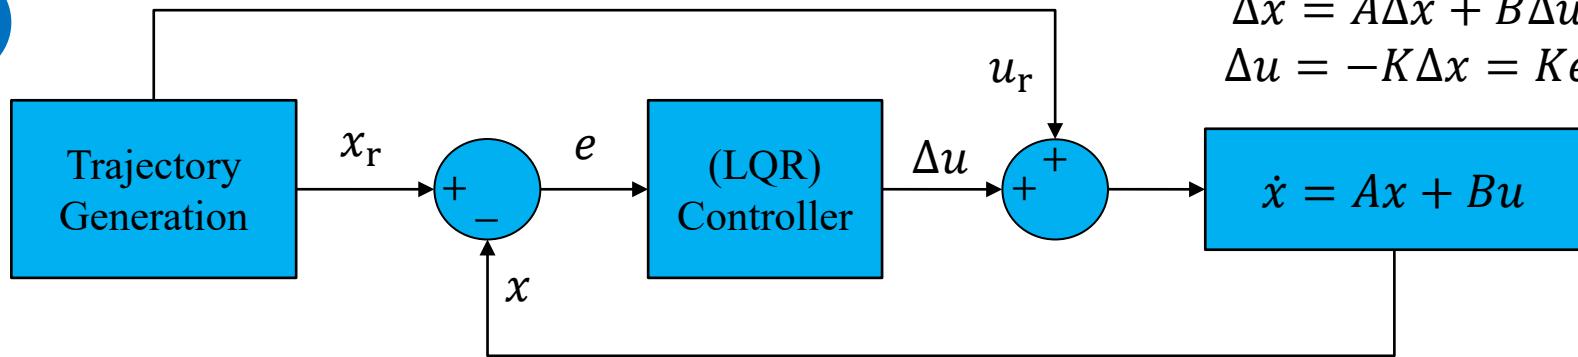


2

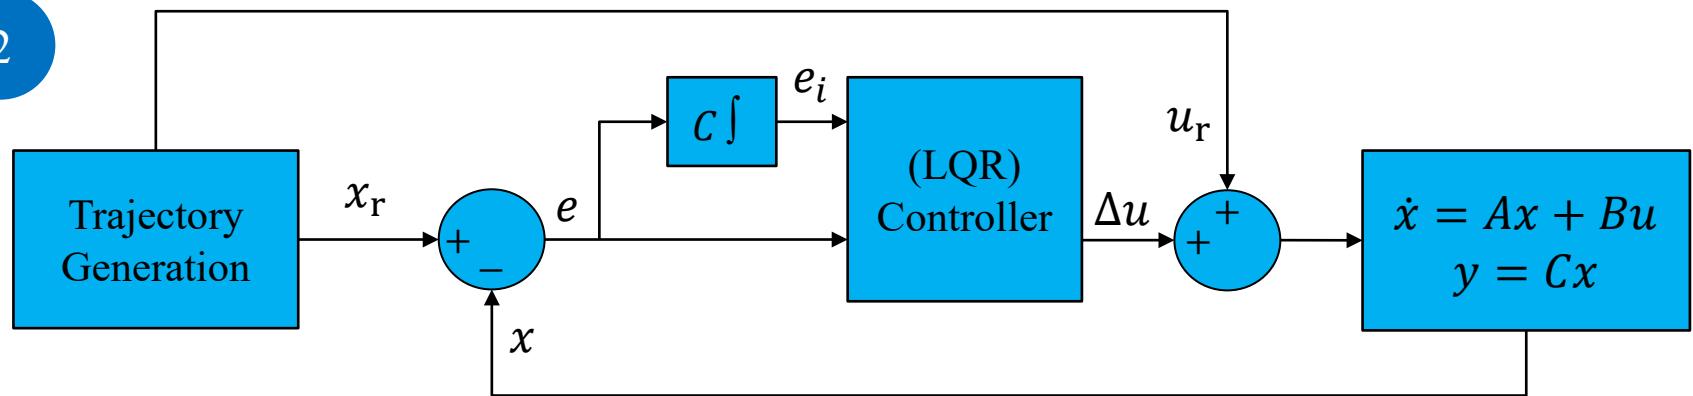

$$\begin{bmatrix} \dot{e}_i \\ \Delta x \end{bmatrix} = \underbrace{\begin{bmatrix} 0 & -C \\ 0 & A \end{bmatrix}}_{\bar{A}} \begin{bmatrix} e_i \\ \Delta x \end{bmatrix} + \underbrace{\begin{bmatrix} 0 \\ B \end{bmatrix}}_{\bar{B}} \Delta u$$


$$\Delta u = -K\Delta \bar{x} = K \begin{bmatrix} -e_i \\ e \end{bmatrix}$$

Inner-loop controller

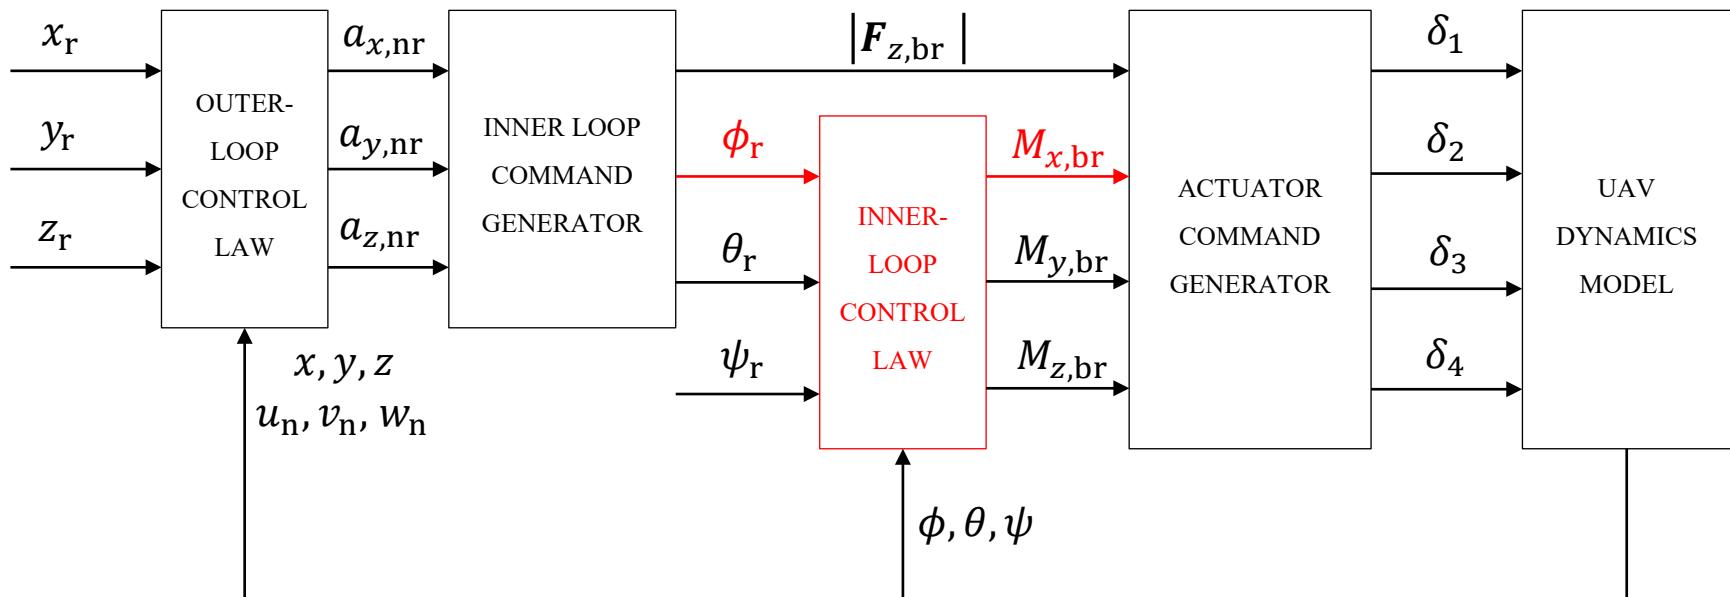


$$\begin{bmatrix} \dot{e}_i \\ \Delta\dot{\phi} \\ \Delta\ddot{\phi} \\ \Delta\ddot{\ddot{\phi}} \end{bmatrix} = \begin{bmatrix} 0 & -1 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 1 \\ 0 & 0 & 0 & \frac{-1}{\tau} \end{bmatrix} \begin{bmatrix} e_i \\ \Delta\phi \\ \Delta\dot{\phi} \\ \Delta\ddot{\phi} \end{bmatrix} + \begin{bmatrix} 0 \\ 0 \\ 0 \\ \frac{1}{I_x\tau} \end{bmatrix} \Delta M_x$$

Outer-loop controller

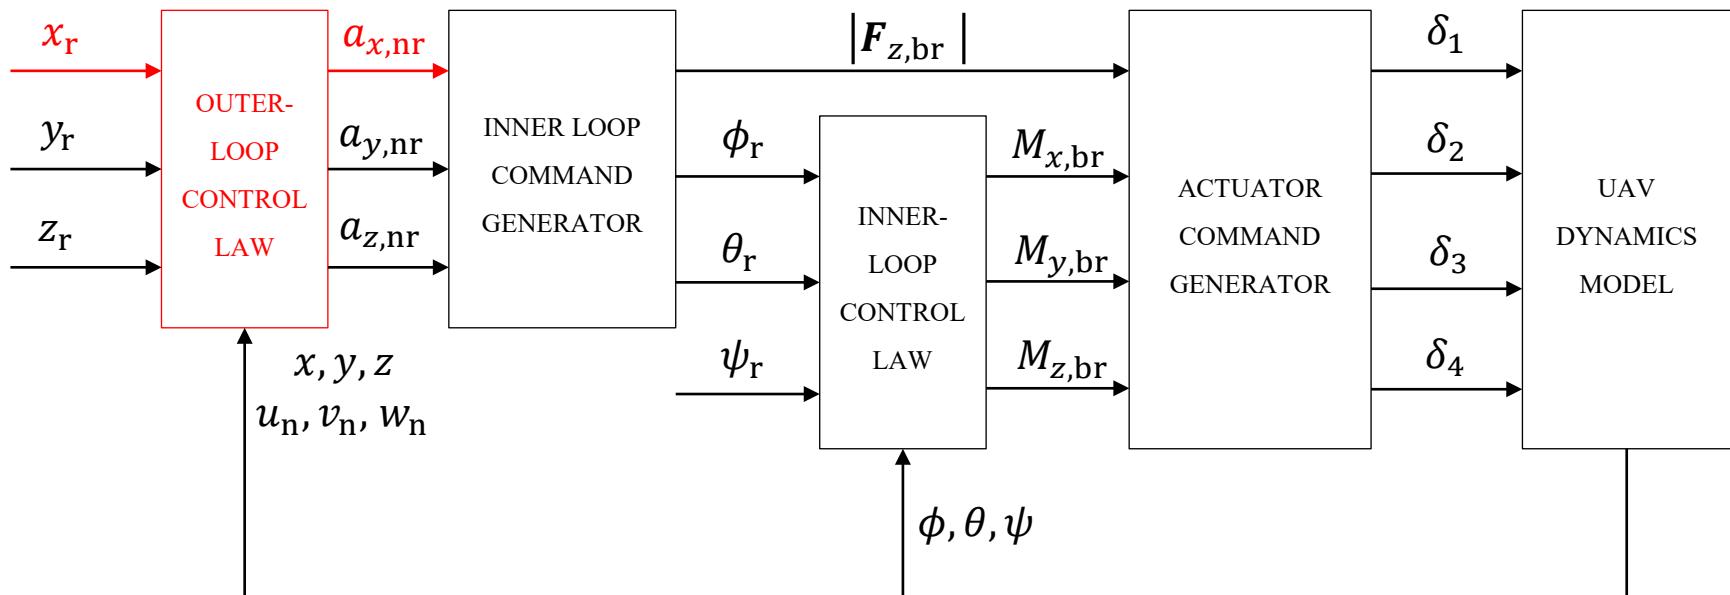

$$\begin{bmatrix} \dot{e}_i \\ \Delta x \\ \Delta \dot{x} \end{bmatrix} = \begin{bmatrix} 0 & -1 & 0 \\ 0 & 0 & 1 \\ 0 & 0 & 0 \end{bmatrix} \begin{bmatrix} e_i \\ \Delta x \\ \Delta \dot{x} \end{bmatrix} + \begin{bmatrix} 0 \\ 0 \\ 1 \end{bmatrix} \Delta a_x$$

Structure of helicopter flight control

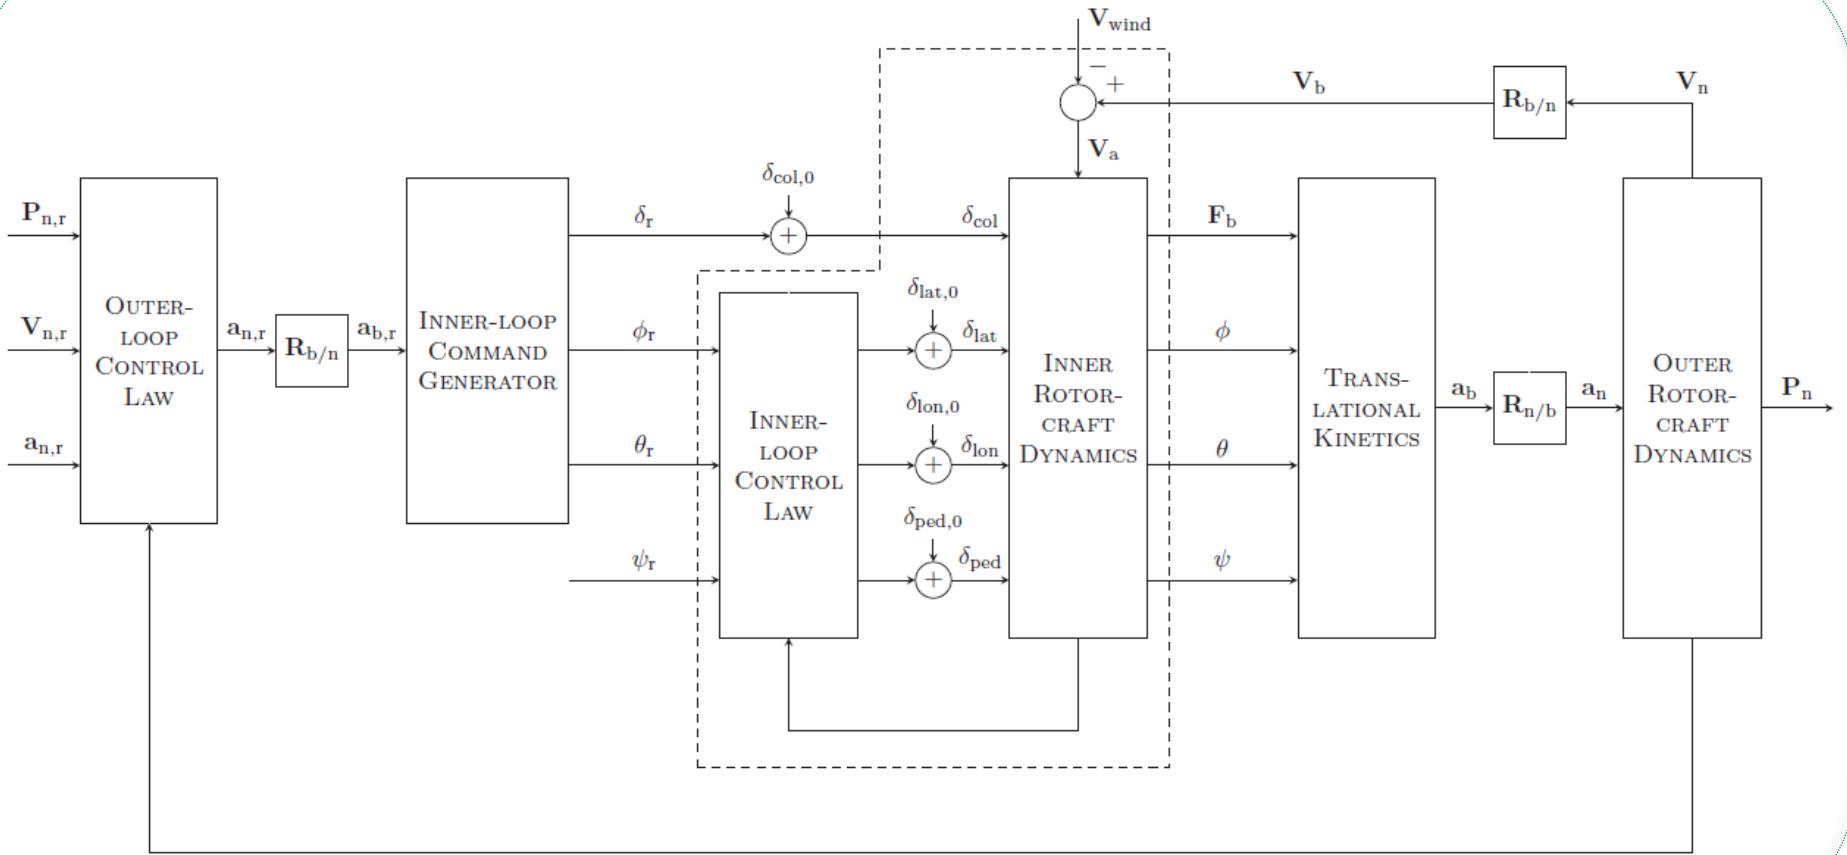


Inner-loop control

Inner-loop control is to stabilize the overall aircraft and to control its attitude



We adopt the design specifications set by the USA military organization for military rotorcraft, which place strict requirements on:

- closed-loop stability
- bandwidth of pitch and roll attitude response
- coupling effect between roll and pitch channels
- coupling effect from heave control to yaw response
- disturbance rejection
- quickness of pitch, roll and yaw responses
- attitude hold for spike disturbance input

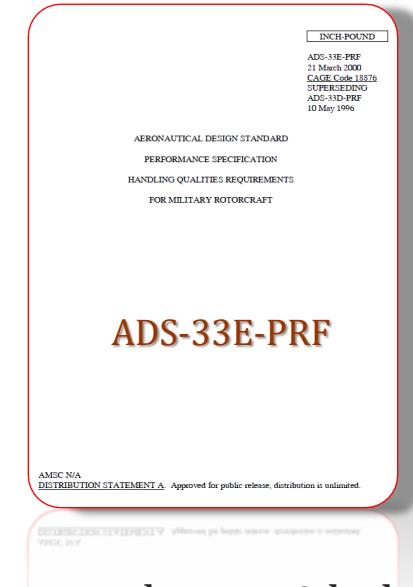

We aim to achieve **Level 1 performance** in all specifications in accordance with the military standards set by U.S. Army Aviation (ADS-33E-PRF).


For the inner loop, we treat wind gusts as disturbance entering the system and then formulate the overall problem as an H_∞ control problem, which is to design a control law such that when it is applied to the given system, the resulting closed-loop system is stable and the effect of the disturbance to the output to be controlled (the position of the aircraft in our case) is minimized in H_∞ sense:

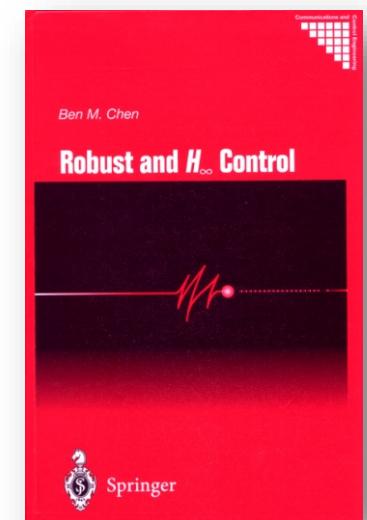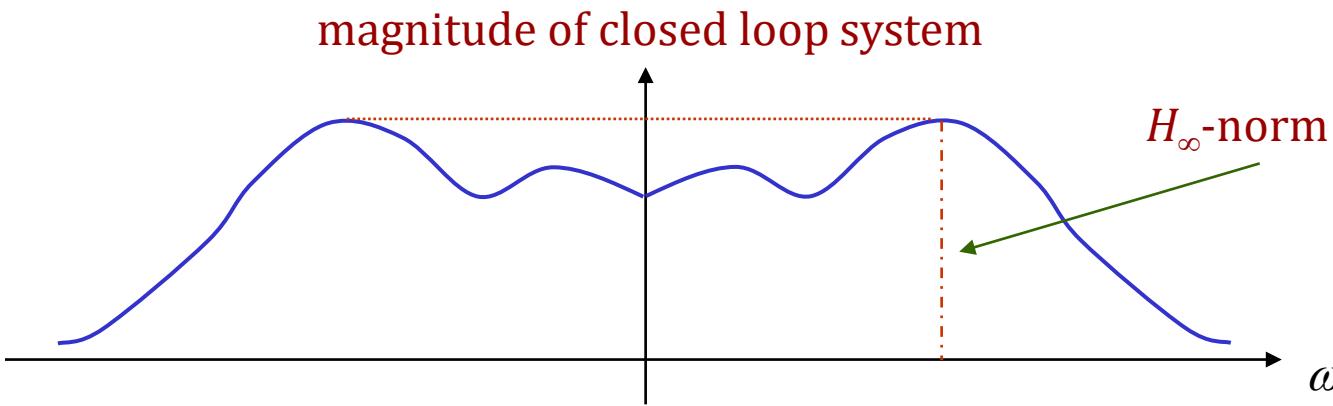

H_∞ optimization is closely and commonly related to ***robust control***...

Introduction to H_∞ control

Consider a stabilizable and detectable linear time-invariant system Σ with a proper controller Σ_c

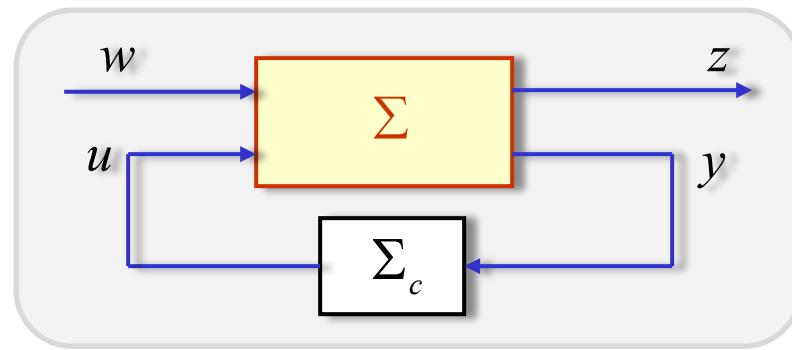

where

$$\Sigma : \begin{cases} \dot{x} = A x + B u + E w \\ y = C_1 x + \dots + D_1 w \\ z = C_2 x + D_2 u \end{cases}$$

$$\Sigma_c : \begin{cases} \dot{v} = A_{\text{cmp}} v + B_{\text{cmp}} y \\ u = C_{\text{cmp}} v + D_{\text{cmp}} y \end{cases}$$

$$\begin{cases} x \Leftrightarrow \text{state variable} \\ y \Leftrightarrow \text{measurement} \\ z \Leftrightarrow \text{controlled output} \end{cases}$$

$$\begin{cases} u \Leftrightarrow \text{control input} \\ w \Leftrightarrow \text{disturbance} \\ v \Leftrightarrow \text{controller state} \end{cases}$$

Introduction to H_∞ control

The problem of H_∞ control is to design a control law Σ_c such that when it is applied to the given plant with disturbance, i.e., Σ , we have

- The resulting closed loop system is internally stable (this is necessary for any control system design).
- The H_∞ -norm of the resulting closed-loop transfer function from the disturbance to the controlled output is as small as possible, i.e., the effect of the disturbance on the controlled output is minimized.


Note: A transfer function is a function of frequencies ranging from 0 to ∞ . It is hard to tell if it is large or small. The common practice is to measure its norms instead. H_2 -norm and **H_∞ -norm** are two commonly used norms in measuring the sizes of a transfer function.

Interpretation of H_∞ norm

Given a stable and proper transfer function $T_{zw}(s)$, its H_∞ -norm is defined as

$$\|T_{zw}\|_\infty = \sup_{0 \leq \omega < \infty} \sigma_{\max}[T_{zw}(j\omega)]$$

where $\sigma_{\max}[T_{zw}(j\omega)]$ denotes the maximum singular value of $T_{zw}(j\omega)$. For a SISO transfer function $T_{zw}(s)$, it is equivalent to the magnitude of $T_{zw}(j\omega)$. Graphically,

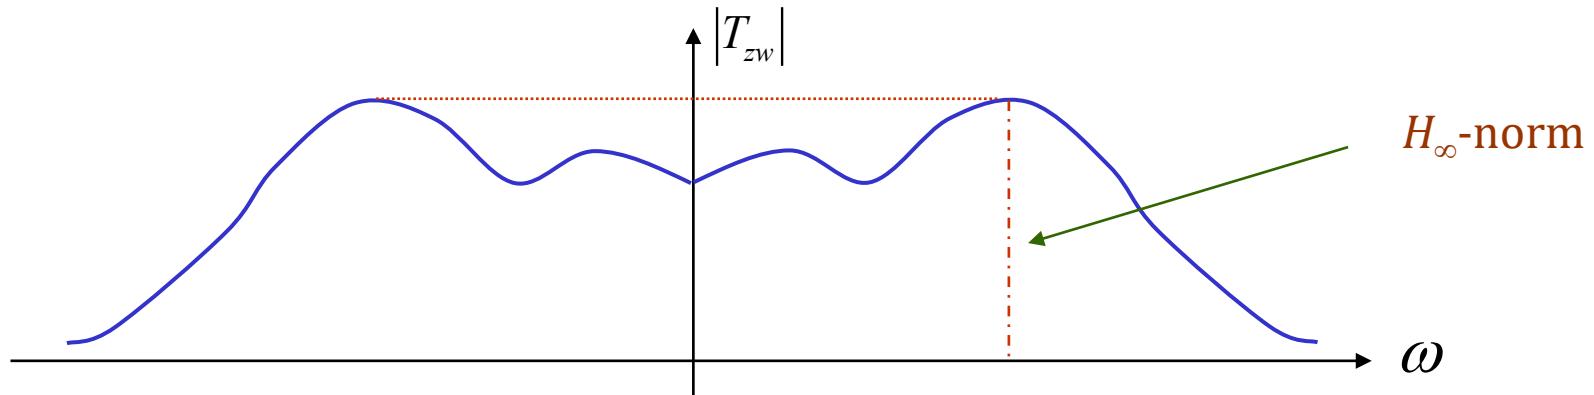

Note: The H_∞ -norm is the worst case gain in $T_{zw}(s)$. Thus, minimization of the H_∞ -norm of $T_{zw}(s)$ is equivalent to the minimization of the worst case (gain) situation on the effect from the disturbance w to the controlled output z .

H_∞ control: regular vs. singular cases

Most results in H_∞ control deal with a so-called a regular problem or regular case because it is simple. An H_∞ control problem is said to be **regular** if the following conditions are satisfied,

1. D_2 is of maximal column rank, i.e., D_2 is a tall and full rank matrix
2. The subsystem (A, B, C_2, D_2) has no invariant zeros on the imaginary axis;
3. D_1 is of maximal row rank, i.e., D_1 is a fat and full rank matrix
4. The subsystem (A, E, C_1, D_1) has no invariant zeros on the imaginary axis.

An H_∞ control problem is said to be **singular** if it is not regular, i.e., at least one of the above 4 conditions is not satisfied.

Solution to regular H_∞ state feedback problem

Given $\gamma > \gamma_\infty^*$ (see the note below), solve the following algebraic Riccati equation


$$A^T P + PA + C_2^T C_2 + P E E^T P / \gamma^2 - (PB + C_2^T D_2) \left(D_2^T D_2 \right)^{-1} (D_2^T C_2 + B^T P) = 0$$

for a unique positive semi-definite solution $P \geq 0$. The H_∞ state feedback law is then given by

$$u = F x = - \left(D_2^T D_2 \right)^{-1} \left(D_2^T C_2 + B^T P \right) x$$

The resulting closed-loop system $T_{zw}(s)$ has the following property: $\| T_{zw} \|_\infty < \gamma$.

Note: The computation of the best achievable H_∞ attenuation level, γ_∞^* , is very complicated. For certain cases, γ_∞^* can be computed exactly. Generally, γ_∞^* can only be obtained using some iterative algorithms. One method is to keep solving the Riccati equation for different values of γ until it hits γ_∞^* for which and any $\gamma < \gamma_\infty^*$, the Riccati equation does not have a solution. See Chen (2000) for details.

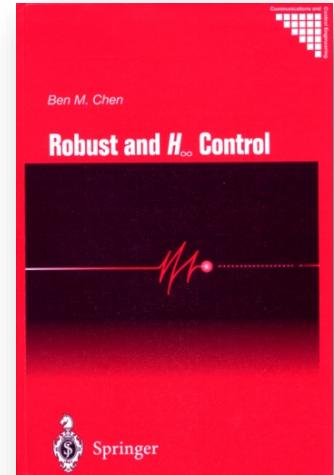

Solution to singular H_∞ state feedback problem

Step 1: Given a $\gamma > \gamma_\infty^*$, choose $\varepsilon = 1$.

Step 2: Define the corresponding \tilde{C}_2 and \tilde{D}_2

$$\tilde{C}_2 := \begin{bmatrix} C_2 \\ \varepsilon I \\ 0 \end{bmatrix} \quad \text{and} \quad \tilde{D}_2 := \begin{bmatrix} D_2 \\ 0 \\ \varepsilon I \end{bmatrix}$$

Step 3: Solve the following Riccati equation for \tilde{P} :

$$A^T \tilde{P} + \tilde{P} A + \tilde{C}_2^T \tilde{C}_2 + \tilde{P} E E^T \tilde{P} / \gamma^2 - (\tilde{P} B + \tilde{C}_2^T \tilde{D}_2) (\tilde{D}_2^T \tilde{D}_2)^{-1} (\tilde{D}_2^T \tilde{C}_2 + B^T \tilde{P}) = 0$$


Step 4: If $\tilde{P} > 0$, go to Step 5. Otherwise, reduce the value of ε and go to Step 2.

Step 5: Compute the required state feedback control law


$$u = \tilde{F} x = -(\tilde{D}_2^T \tilde{D}_2)^{-1} (\tilde{D}_2^T \tilde{C}_2 + B^T \tilde{P}) x$$

The resulting closed-loop system $T_{zw}(s)$ has: $\| T_{zw} \|_\infty < \gamma$.

More general results for the singular case can be found in Chen (2000).

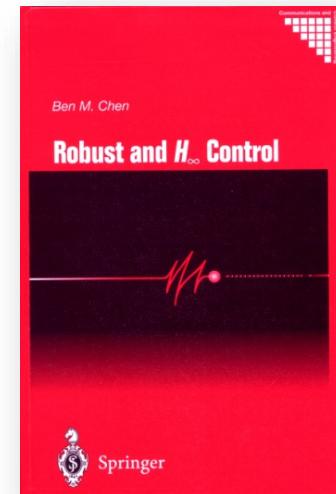

Inner-loop control system design setup

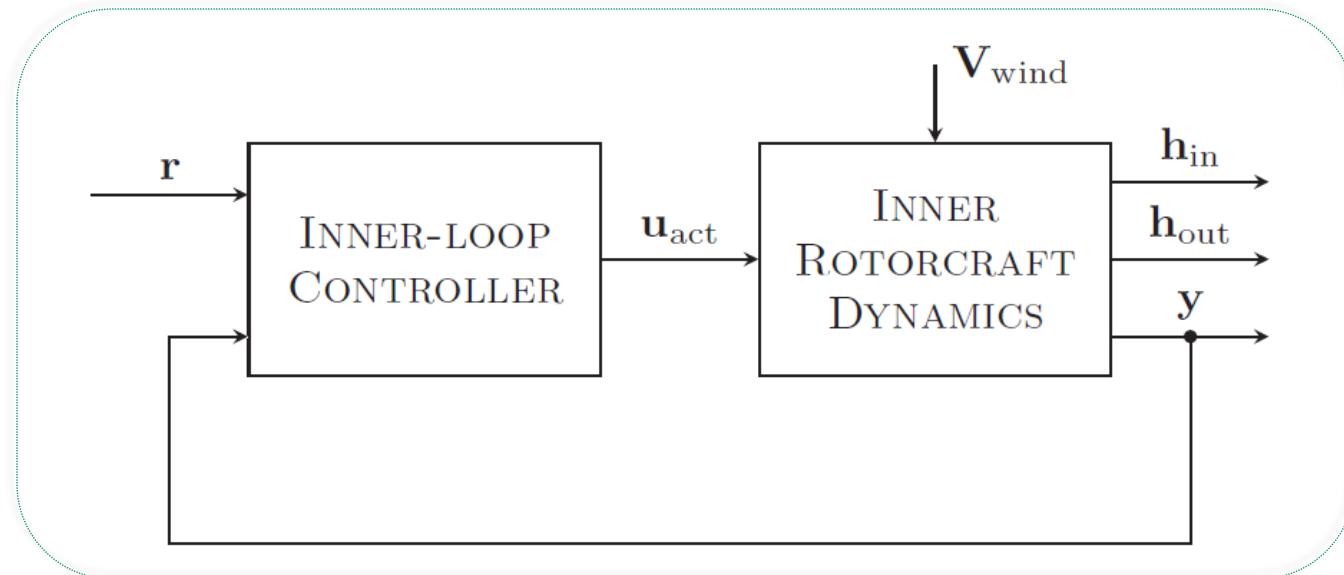

$$\mathbf{x} = [\phi \quad \theta \quad p \quad q \quad a_s \quad b_s \quad r \quad \delta_{\text{ped,int}} \quad \psi]^T$$

$$\mathbf{u}_{\text{act}} = [\delta_{\text{lat}} \quad \delta_{\text{lon}} \quad \delta_{\text{ped}}]^T$$

$$\mathbf{y} = [\phi \quad \theta \quad p \quad q \quad r \quad \psi]^T$$

$$\mathbf{h}_{\text{out}} := [\phi \quad \theta \quad \psi]^T$$

No gain scheduling is required in our flight control system!

Inner-loop linearized model at hover

$$\left\{ \begin{array}{l} \dot{\mathbf{x}} = A\mathbf{x} + B\mathbf{u} + E\mathbf{w} \\ \mathbf{y} = C_1\mathbf{x} \\ \mathbf{h}_{\text{out}} = C_{\text{out}}\mathbf{x} \end{array} \right.$$

$$\mathbf{y} = \begin{pmatrix} \phi \\ \theta \\ p \\ q \\ r \\ \psi \end{pmatrix}$$

$$\mathbf{h}_{\text{out}} = \begin{pmatrix} \phi \\ \theta \\ \psi \end{pmatrix}$$

$$A = \begin{bmatrix} 0 & 0 & 1 & 0 & 0 & 0 & 0.0009 & 0 & 0 \\ 0 & 0 & 0 & 0.9992 & 0 & 0 & -0.0389 & 0 & 0 \\ 0 & 0 & -0.0302 & -0.0056 & -0.0003 & 585.1165 & 11.4448 & -59.529 & 0 \\ 0 & 0 & 0 & -0.0707 & 267.7499 & -0.0003 & 0 & 0 & 0 \\ 0 & 0 & 0 & -1.0000 & -3.3607 & 2.2223 & 0 & 0 & 0 \\ 0 & 0 & -1 & 0 & 2.4483 & -3.3607 & 0 & 0 & 0 \\ 0 & 0 & 0.0579 & 0.0108 & 0.0049 & 0.0037 & -21.9557 & 114.2 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & -1 & 0 & 0 \\ 0 & 0 & 0 & 0.0389 & 0 & 0 & 0.9992 & 0 & 0 \end{bmatrix}$$

$$B = \begin{bmatrix} 0 & 0 & 0 \\ 0 & 0 & 0 \\ 0 & 0 & 43.3635 \\ 0 & 0 & 0 \\ 0.2026 & 2.5878 & 0 \\ 2.5878 & -0.0663 & 0 \\ 0 & 0 & -83.1883 \\ 0 & 0 & -3.8500 \\ 0 & 0 & 0 \end{bmatrix} \quad E = \begin{bmatrix} 0 & 0 & 0 \\ 0 & 0 & 0 \\ -0.0001 & 0.1756 & -0.0395 \\ 0.0000 & 0.0003 & 0.0338 \\ 0 & 0 & 0 \\ 0 & 0 & 0 \\ -0.0002 & -0.3396 & 0.6424 \\ 0 & 0 & 0 \\ 0 & 0 & 0 \end{bmatrix}$$

Inner-loop control law

H_∞ state feedback control law...

$$\mathbf{u} = F \mathbf{x} + G (\mathbf{r} - \mathbf{h}_{\text{out,trim}})$$









$$F = \begin{bmatrix} -1.0368 & -0.0604 & -0.0230 & -0.0083 & -0.2857 & -2.6165 & -0.0312 & 0.0499 & -0.0746 \\ 0.0760 & -0.9970 & 0.0174 & -0.0378 & -1.8340 & -0.1130 & 0.0026 & 0.0024 & -0.0169 \\ -0.0002 & -0.0185 & -0.0066 & 0.0004 & 0.0353 & 0.0990 & 0.0044 & 0.2295 & 0.2441 \end{bmatrix}$$

$$G = [C_{\text{out}} (A - BF)^{-1} B]^{-1} = \begin{bmatrix} 1.0368 & 0.0604 & 0.0746 \\ -0.0760 & 0.9970 & 0.0169 \\ 0.0002 & 0.0185 & -0.2441 \end{bmatrix}$$

The above state feedback control law is to be implemented together with a properly designed reduced-order observer for the state variables that cannot be measured...

Inner-loop control performance evaluation

Evaluation results with the standard set by U.S. Army Aviation...

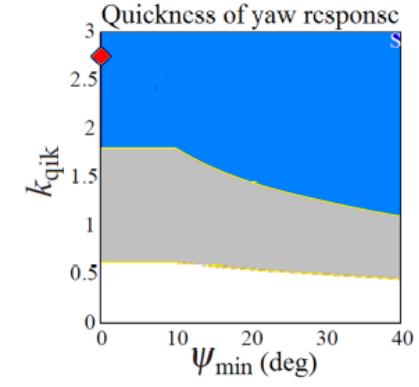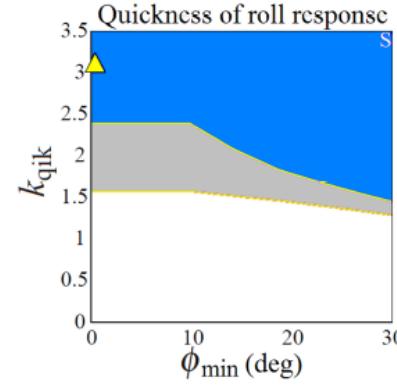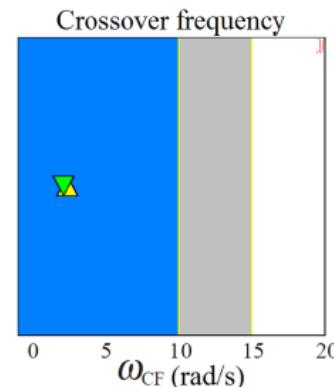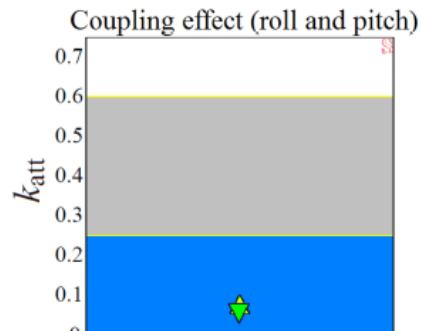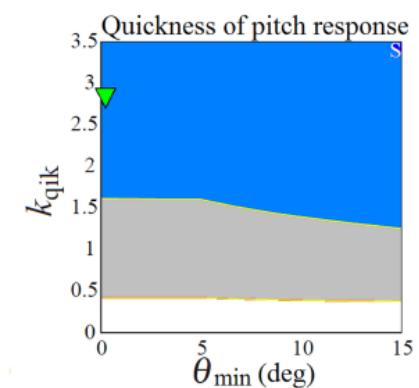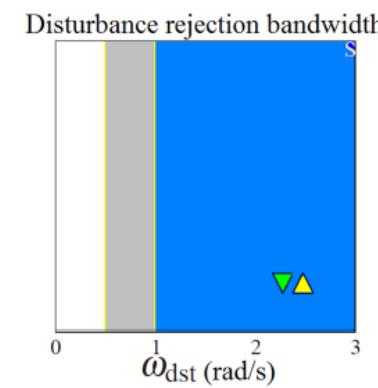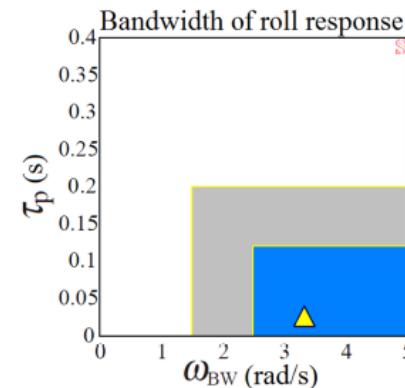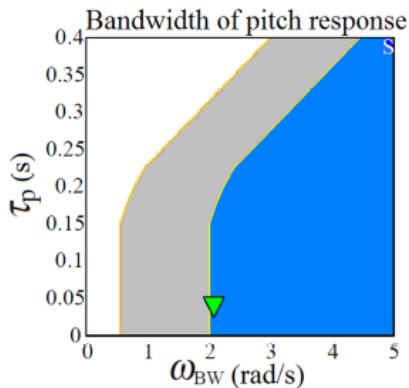


Level 1
 Roll Channel

Level 2
 Pitch Channel

Level 3
 Yaw Channel

Inner-loop command generator

under cover...

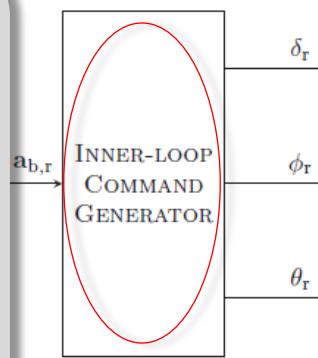


The inner-loop command generator is given as



$$\begin{pmatrix} \delta_r \\ \phi_r \\ \theta_r \end{pmatrix} = \begin{bmatrix} -0.0001 & 0.0019 & 0.0478 \\ 0.0022 & -0.1031 & -0.0048 \\ 0.1022 & 0 & 0.0002 \end{bmatrix} \mathbf{a}_{b,r}$$

Outer-loop control system design setup


The outer-loop control is to control the position of the aircraft and at the same time to generate necessary commands for the inner-loop control system...

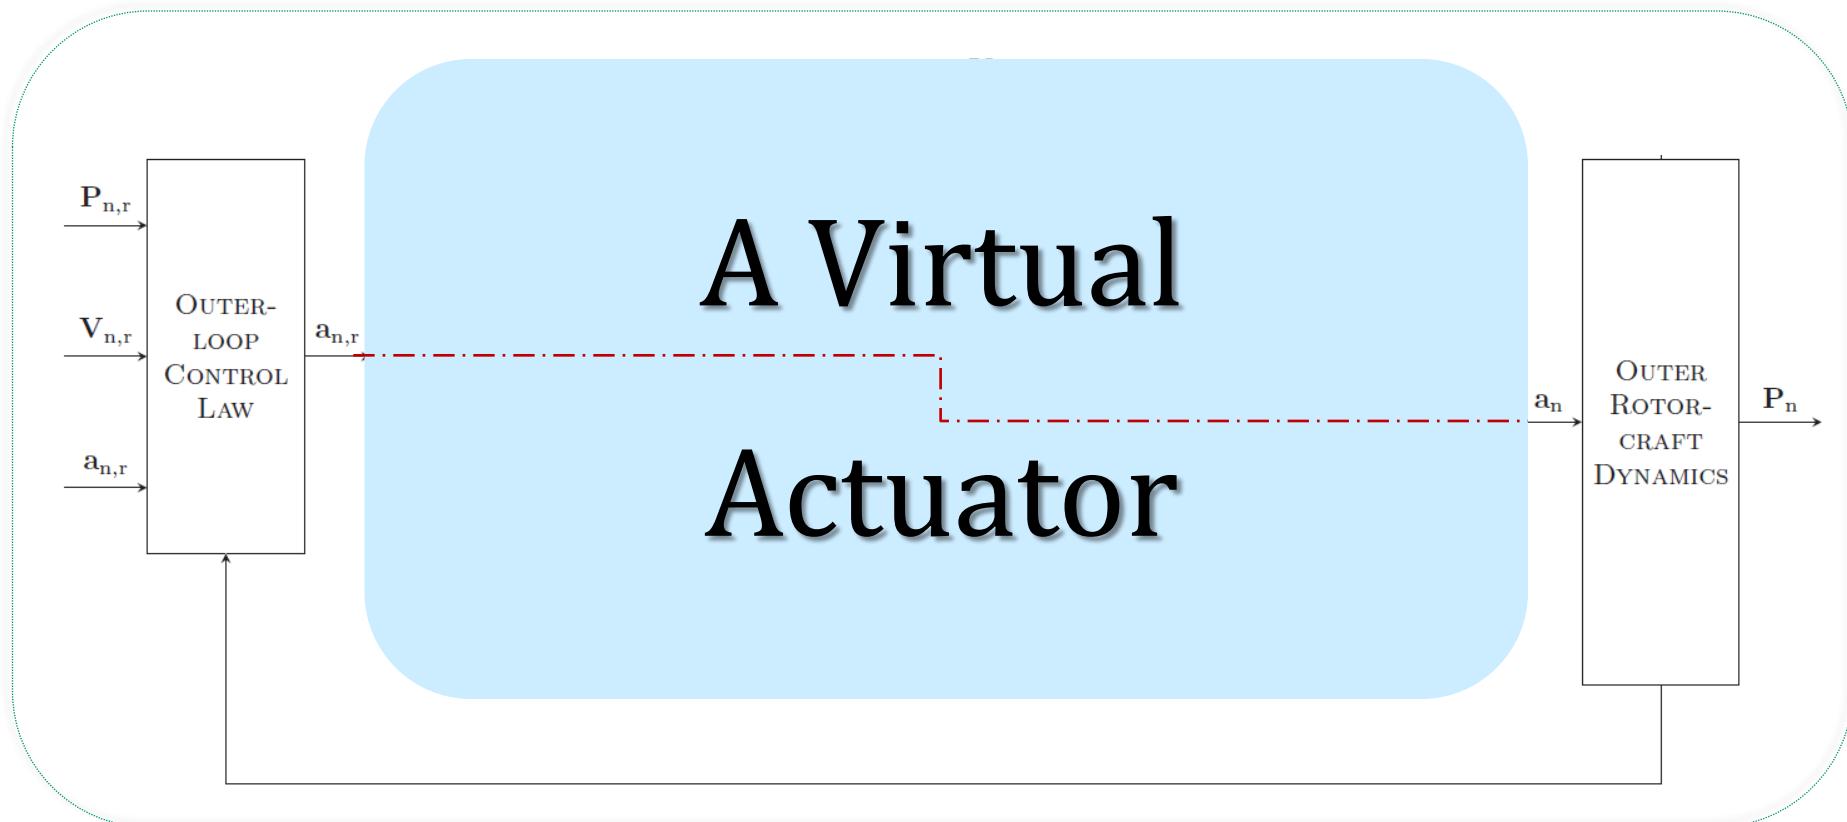

Properties of the virtual actuator

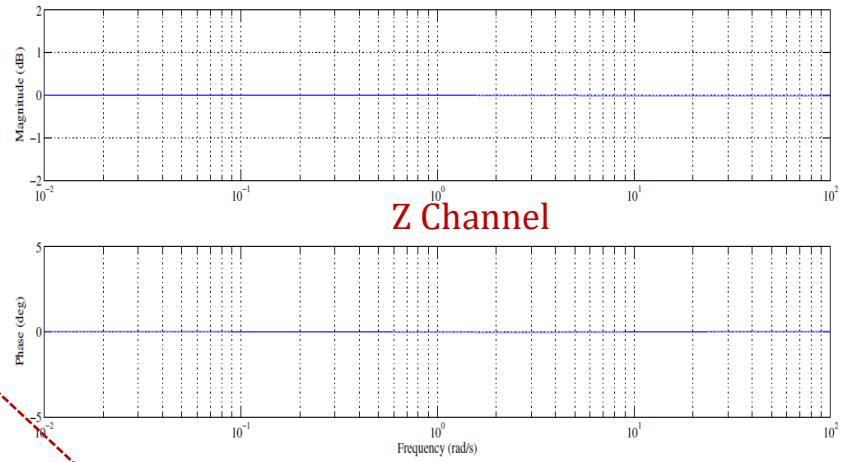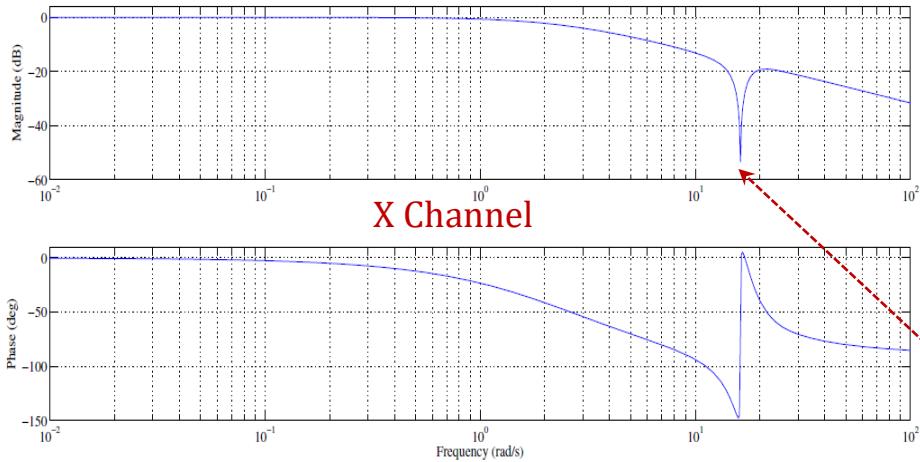

Frequency response of the virtual actuator...

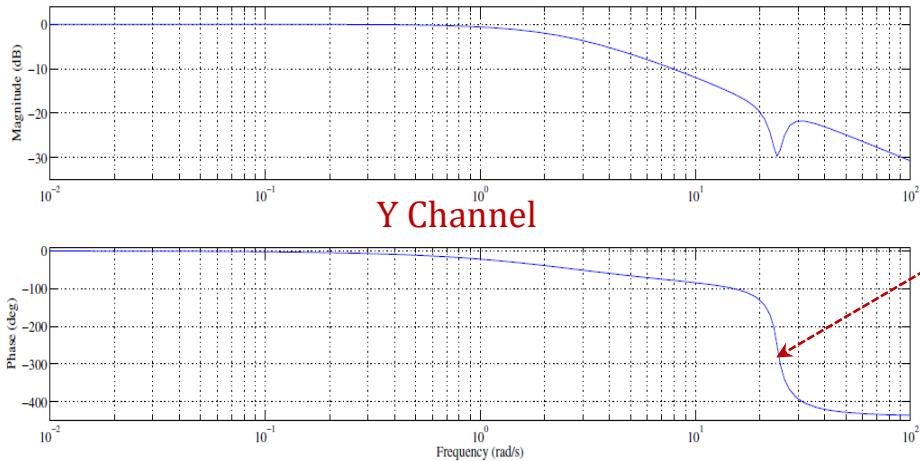

Unstable Zeros!

From practical point of view, it is safe to ignore them so long as the outer-loop bandwidth is within 1 rad/sec...

Properties of the outer-loop dynamics

It can also be verified that coupling among each channel of the outer loop dynamics is very weak and thus can be ignored. As a result, all the x, y and z channels of the rotorcraft dynamics can be treated as decoupled and each channel can be characterized by

$$\begin{pmatrix} \dot{p}_* \\ \dot{v}_* \end{pmatrix} = \begin{bmatrix} 0 & 1 \\ 0 & 0 \end{bmatrix} \begin{pmatrix} p_* \\ v_* \end{pmatrix} + \begin{pmatrix} 0 \\ 1 \end{pmatrix} a_*$$



where p_* is the position, v_* is the velocity and a_* is the acceleration, which is treated a control input in our formulation.

For such a simple system, it can be controlled by almost all the control techniques available in the literature, which include the most popular and the simplest one such as PID control...

Control technique adopted for the outer loop

The outer-loop control system is designed using the so-called **robust and perfect tracking (RPT)** control technique developed by Chen and his co-workers. It is to design a controller such that the resulting closed-loop system is stable and the controlled output almost perfectly tracks a given reference signal in the presence of any initial conditions and external disturbances.

One of the most interesting features in the RPT control method is its capability of utilizing all possible information available in its controller structure. Such a feature is highly desirable for flight missions involving complicated maneuvers, in which not only the position reference is useful, but also its velocity and even acceleration information are important or even necessary to be used in order to achieve a good overall performance.

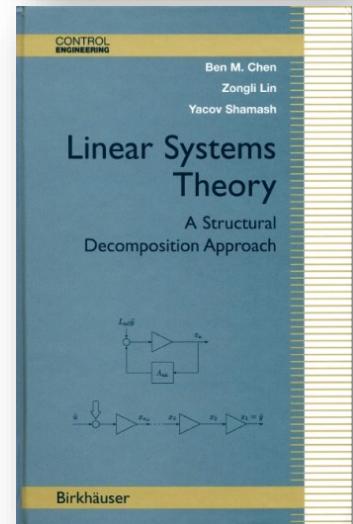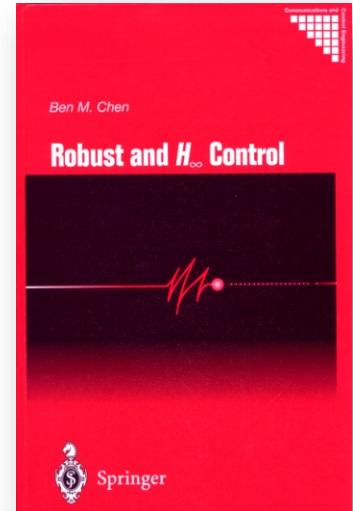

The RPT control renders flight formation of multiple UAVs a trivial task.

Introduction to RPT control

Consider the following continuous-time system:

$$\Sigma : \begin{cases} \dot{\mathbf{x}} = A \mathbf{x} + B \mathbf{u} + E \mathbf{w}, \\ \mathbf{y} = C_1 \mathbf{x} + D_1 \mathbf{w}, \\ \mathbf{h} = C_2 \mathbf{x} + D_2 \mathbf{u} + D_{22} \mathbf{w} \end{cases} \quad \mathbf{x}(0) = \mathbf{x}_0, \quad (8.1)$$

where $\mathbf{x} \in \mathbb{R}^n$ is the state, $\mathbf{u} \in \mathbb{R}^m$ is the control input, $\mathbf{w} \in \mathbb{R}^q$ is the external disturbance, $\mathbf{y} \in \mathbb{R}^p$ is the measurement output, and $\mathbf{h} \in \mathbb{R}^\ell$ is the output to be controlled. Given the external disturbance $\mathbf{w} \in L_p$, $p \in [1, \infty)$, and any reference signal vector $\mathbf{r} \in \mathbb{R}^\ell$ with $\mathbf{r}, \dot{\mathbf{r}}, \dots, \mathbf{r}^{(\kappa-1)}$, $\kappa \geq 1$, being available, and $\mathbf{r}^{(\kappa)}$ being either a vector of delta functions or in L_p , the RPT problem for the system in (8.1) is to find a parameterized dynamic measurement control law of the following form:


$$\begin{cases} \dot{\mathbf{v}} = A_{\text{cmp}}(\varepsilon) \mathbf{v} + B_{\text{cmp}}(\varepsilon) \mathbf{y} + G_0(\varepsilon) \mathbf{r} + \dots + G_{\kappa-1}(\varepsilon) \mathbf{r}^{(\kappa-1)} \\ \mathbf{u} = C_{\text{cmp}}(\varepsilon) \mathbf{v} + D_{\text{cmp}}(\varepsilon) \mathbf{y} + H_0(\varepsilon) \mathbf{r} + \dots + H_{\kappa-1}(\varepsilon) \mathbf{r}^{(\kappa-1)} \end{cases} \quad (8.2)$$

such that when the controller of (8.2) is applied to the system of (8.1), we have the following

1. There exists an $\varepsilon^* > 0$ such that the resulting closed-loop system with $\mathbf{r} = 0$ and $\mathbf{w} = 0$ is asymptotically stable for all $\varepsilon \in (0, \varepsilon^*]$.
2. Let $\mathbf{h}(t, \varepsilon)$ be the closed-loop controlled output response and let $\mathbf{e}(t, \varepsilon)$ be the resulting tracking error, i.e., $\mathbf{e}(t, \varepsilon) := \mathbf{h}(t, \varepsilon) - \mathbf{r}(t)$. Then, for any initial condition of the state, $\mathbf{x}_0 \in \mathbb{R}^n$,

$$\|\mathbf{e}\|_p = \left(\int_0^\infty |\mathbf{e}(t)|^p dt \right)^{1/p} \rightarrow 0 \text{ as } \varepsilon \rightarrow 0. \quad (8.3)$$

Robust to disturbance

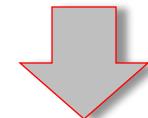

RPT Control




Perfect in Tracking

RPT control solvability conditions

The necessary and sufficient condition for the solvability of the general RTP control problem can be found in Chen (200). For the case when $D_1 = 0$, the conditions are relatively simple and are given as

1. (A, B) is stabilizable and (A, C_1) is detectable.
2. $D_{22} = 0$.
3. (A, B, C_2, D_2) is right invertible and of minimum phase.
4. $\text{Ker}(C_2) \supset \text{Ker}(C_1)$.

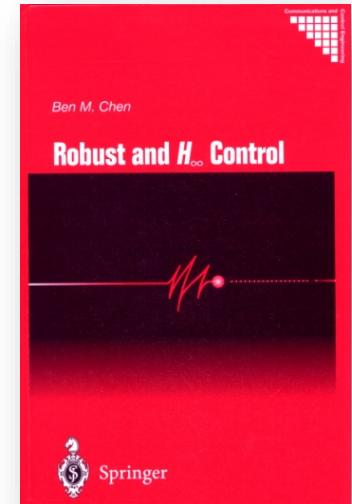

where $\text{Ker}(X)$ represents the null space of a constant matrix X .

We note that the last condition is automatically satisfied if the control output \mathbf{h} of the given system is part of its measurement output \mathbf{y} .

Step 1. For a sufficiently small scalar ε_0 , we define

$$\tilde{\mathbf{C}}_2 = \begin{bmatrix} \mathbf{C}_2 \\ \varepsilon I_{\kappa\ell+n} \\ 0 \end{bmatrix}, \quad \tilde{\mathbf{D}}_2 = \begin{bmatrix} \mathbf{D}_2 \\ 0 \\ \varepsilon I_m \end{bmatrix},$$

$$\tilde{\mathbf{A}} = \begin{bmatrix} \tilde{A}_0 & 0 \\ 0 & A \end{bmatrix}, \quad \tilde{A}_0 = -\varepsilon_0 I_{\kappa\ell} + \begin{bmatrix} 0 & I_\ell & \cdots & 0 \\ \vdots & \vdots & \ddots & \vdots \\ 0 & 0 & \cdots & I_\ell \\ 0 & 0 & \cdots & 0 \end{bmatrix}$$

Step 2. Then, solve for positive-definite solution for the following Riccati equation

$$\mathbf{P}\tilde{\mathbf{A}} + \tilde{\mathbf{A}}^T \mathbf{P} + \tilde{\mathbf{C}}_2^T \tilde{\mathbf{C}}_2 - (\mathbf{P}\mathbf{B} + \tilde{\mathbf{C}}_2^T \tilde{\mathbf{D}}_2)(\tilde{\mathbf{D}}_2^T \tilde{\mathbf{D}}_2)^{-1}(\mathbf{P}\mathbf{B} + \tilde{\mathbf{C}}_2^T \tilde{\mathbf{D}}_2)^T = 0$$

Step 3. The required state feedback control law that solves the RPT problem is

$$\mathbf{u} = F(\varepsilon)\mathbf{x} + H_0(\varepsilon)\mathbf{r} + \cdots + H_{\kappa-1}(\varepsilon)\mathbf{r}^{(\kappa-1)}$$

where $\tilde{\mathbf{F}}(\varepsilon) = -(\tilde{\mathbf{D}}_2^T \tilde{\mathbf{D}}_2)^{-1}(\mathbf{P}\mathbf{B} + \tilde{\mathbf{C}}_2^T \tilde{\mathbf{D}}_2)^T = [H_0(\varepsilon) \quad \cdots \quad H_{\kappa-1}(\varepsilon) \quad F(\varepsilon)]$.

Outer-loop control law for the UAV

$$a_{x,n} = - \begin{bmatrix} \frac{\omega_{n,x}^2}{\varepsilon_x^2} & \frac{2\zeta_x \omega_{n,x}}{\varepsilon_x} \end{bmatrix} \begin{pmatrix} x_n \\ u_n \end{pmatrix} + \left(\frac{\omega_{n,x}^2}{\varepsilon_x^2} \right) x_{n,r} + \left(\frac{2\zeta_x \omega_{n,x}}{\varepsilon_x} \right) u_{n,r} + a_{x,n,r}$$

$$a_{y,n} = - \begin{bmatrix} \frac{\omega_{n,y}^2}{\varepsilon^2} & \frac{2\zeta_y \omega_{n,y}}{\varepsilon} \end{bmatrix} \begin{pmatrix} y_n \\ v_n \end{pmatrix} + \left(\frac{\omega_{n,y}^2}{\varepsilon^2} \right) y_{n,r} + \left(\frac{2\zeta_y \omega_{n,y}}{\varepsilon} \right) v_{n,r} + a_{y,n,r}$$

$$a_{z,n} = - \begin{bmatrix} \frac{\omega_{n,z}^2}{\varepsilon^2} & \frac{2\zeta_z \omega_{n,z}}{\varepsilon} \end{bmatrix} \begin{pmatrix} z_n \\ w_n \end{pmatrix} + \left(\frac{\omega_{n,z}^2}{\varepsilon^2} \right) z_{n,r} + \left(\frac{2\zeta_z \omega_{n,z}}{\varepsilon} \right) w_{n,r} + a_{z,n,r}$$


$$\varepsilon_x = \varepsilon_y = \varepsilon_z = 1$$

$$\zeta_x = 1, \quad \zeta_y = 1, \quad \zeta_z = 1.1$$


$$\omega_{n,x} = 0.54, \quad \omega_{n,y} = 0.62, \quad \omega_{n,z} = 0.78$$

Outer-loop control system gain and phase margins



Gain margin = ∞ , Phase margin = 76.3 deg (at 0.042 Hz)

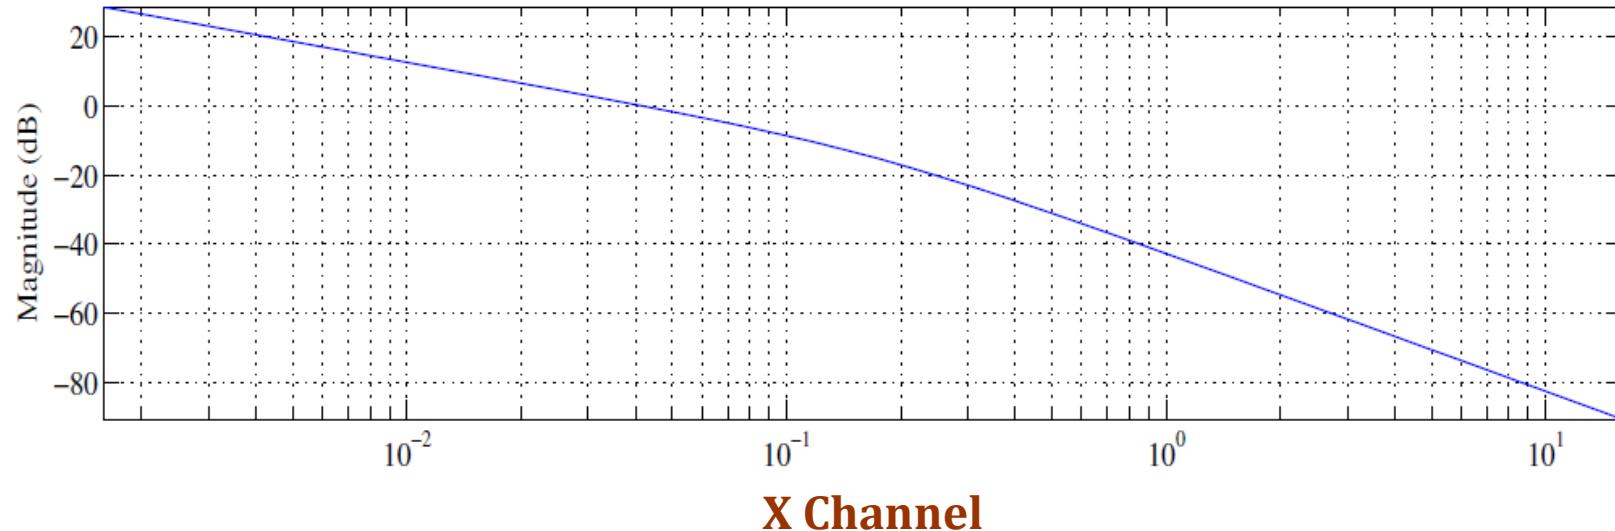

X Channel


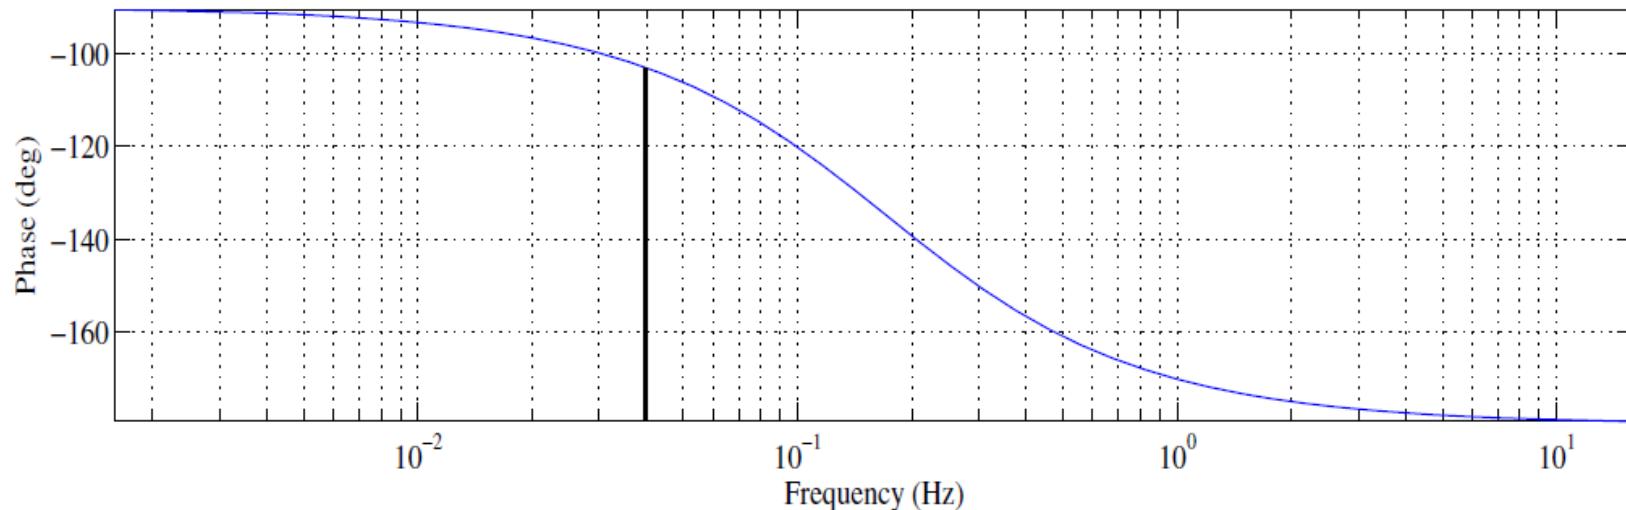


Outer-loop control system gain and phase margins

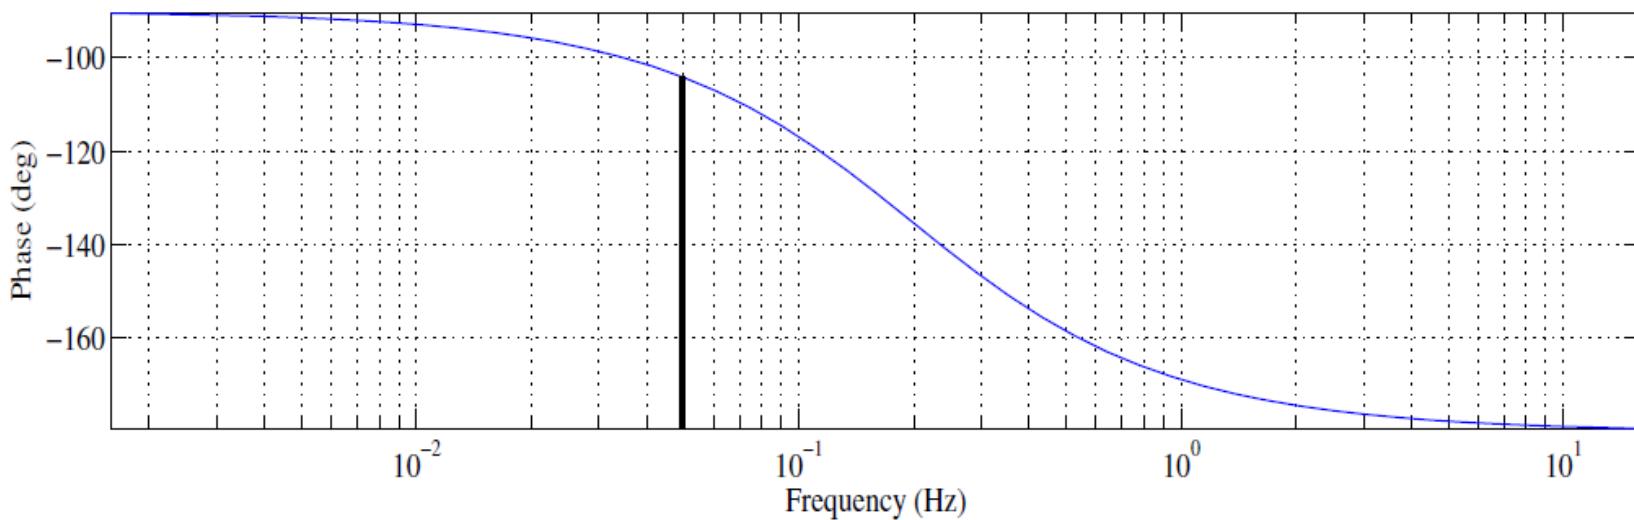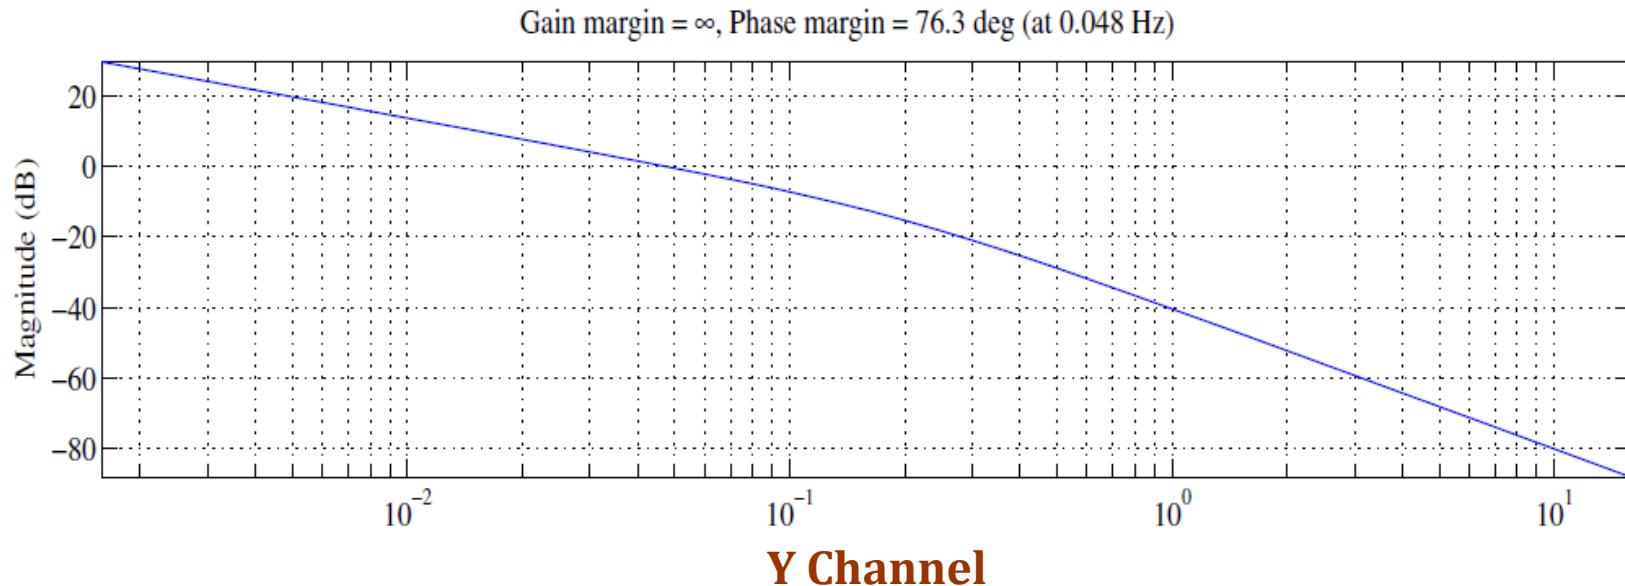

Outer-loop control system gain and phase margins

Gain margin = ∞ , Phase margin = 78.6 deg (at 0.056 Hz)

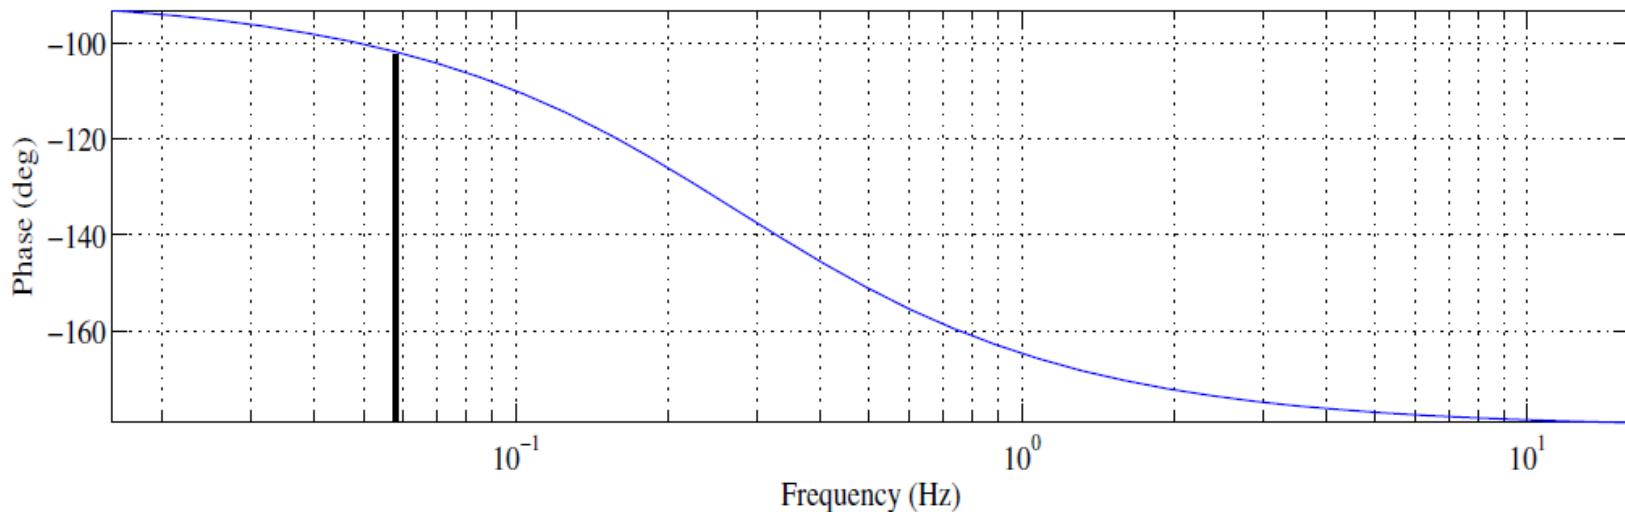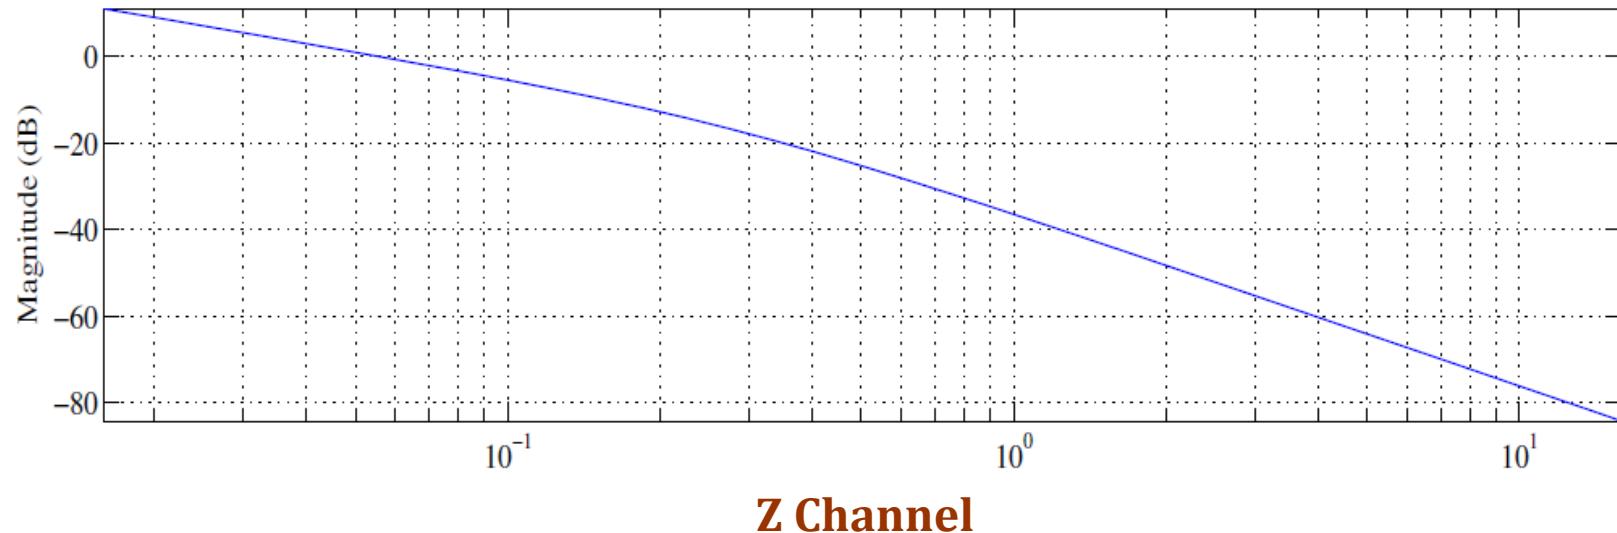

Single-rotor Helicopter




Quadrotor



What is Navigation?


In a broader sense, navigation is the study of monitoring and controlling the movement of an object from one place to another. It is to answer the following three questions:

- **Where is the object?**
- **Where should the object be?**
- **How to bring the object back to the correct path?**

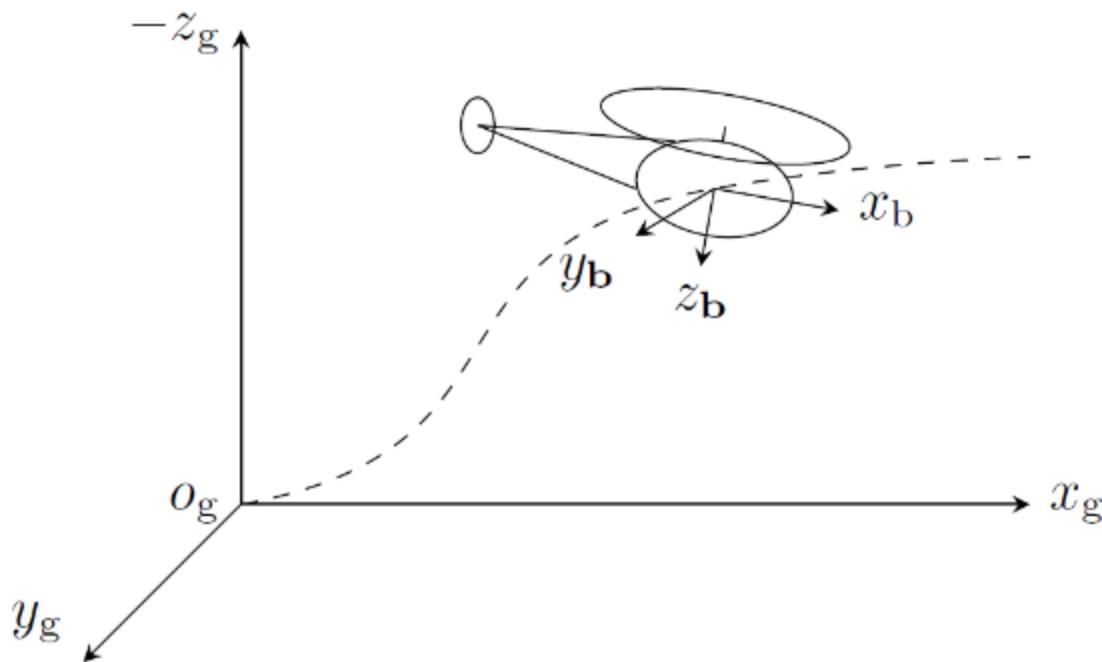




What is Navigation?

In a narrower sense, navigation refers to the study of determining the position and orientation of a vehicle.

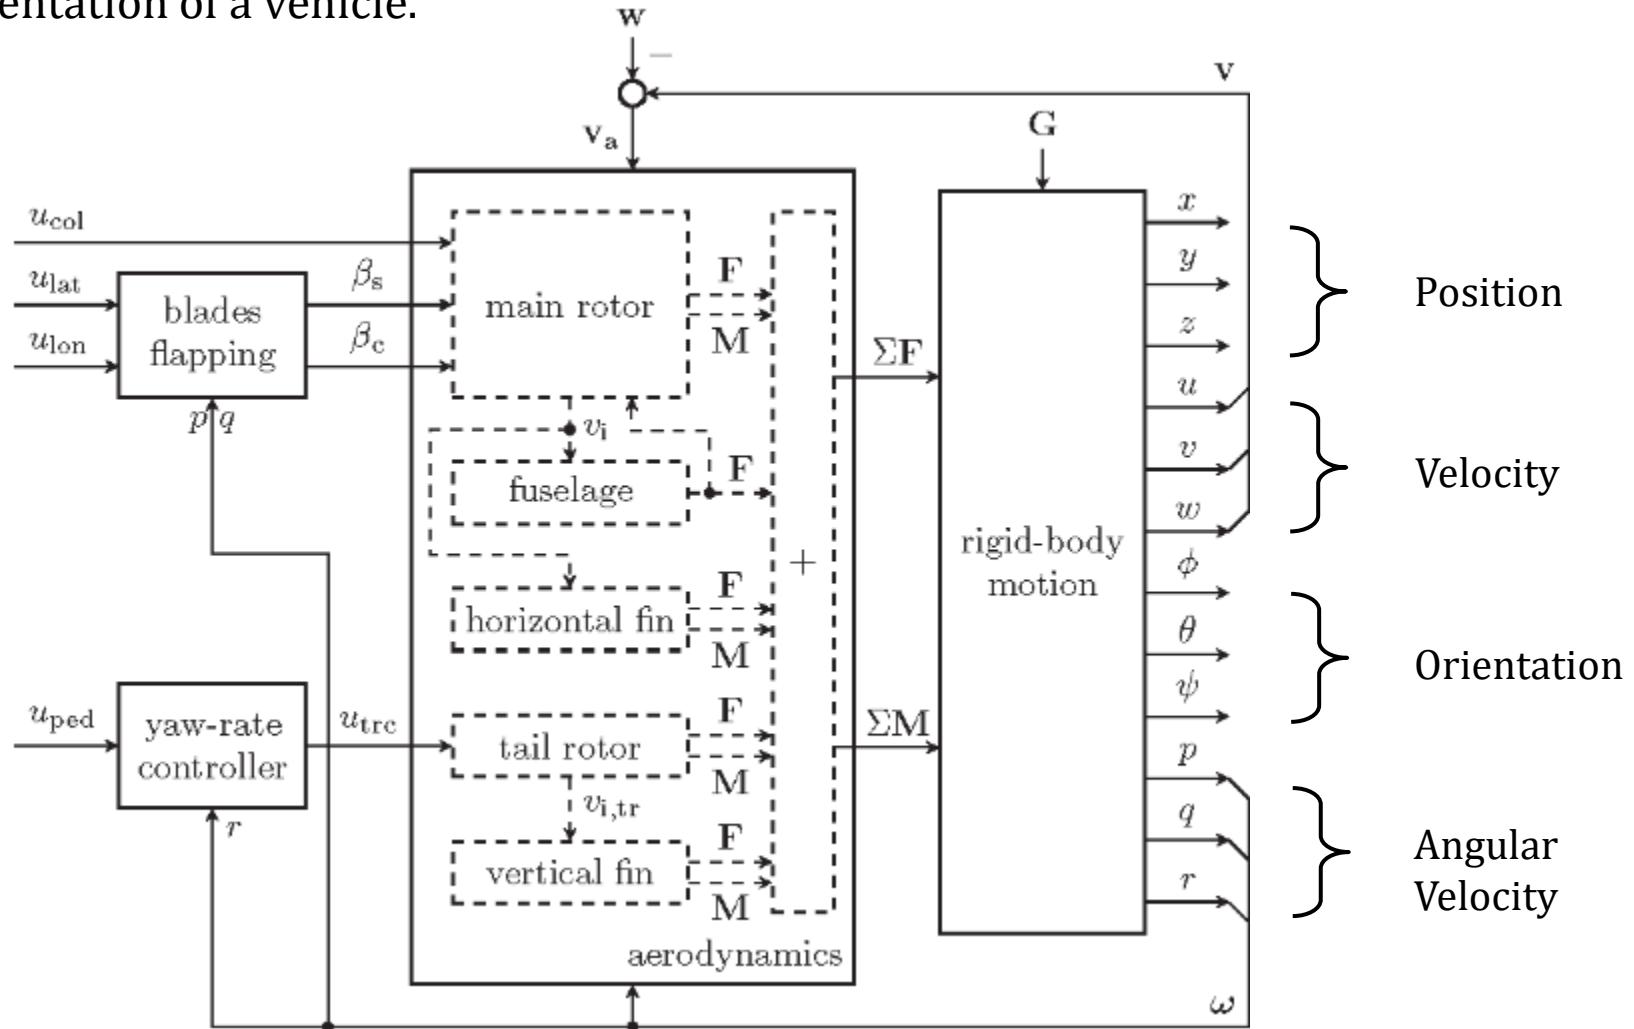


Different Methods of Navigation

- Landmarks recognition
- Celestial Navigation
- Radio Navigation
 - Signal-based navigation
 - Satellite navigation
- Inertial Navigation
 - Gimbaled INS
 - Strapdown INS
- Laser Aided Navigation
- Visual Navigation
- ...

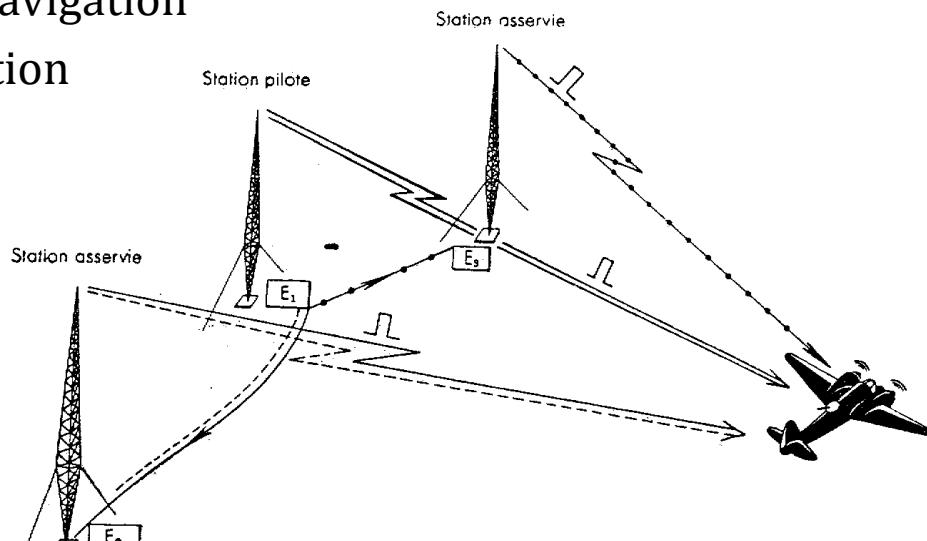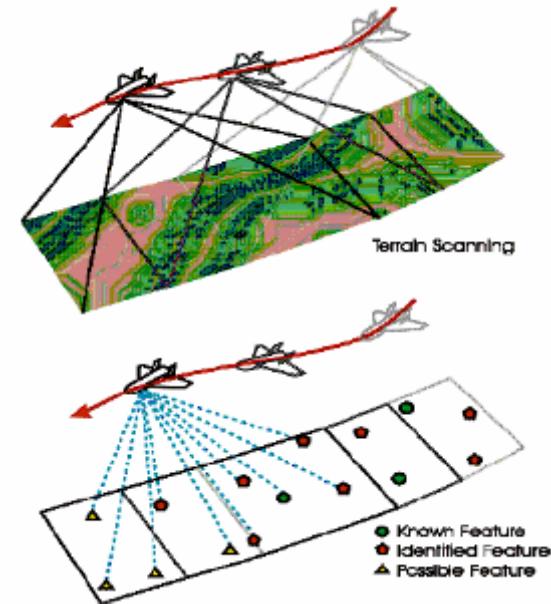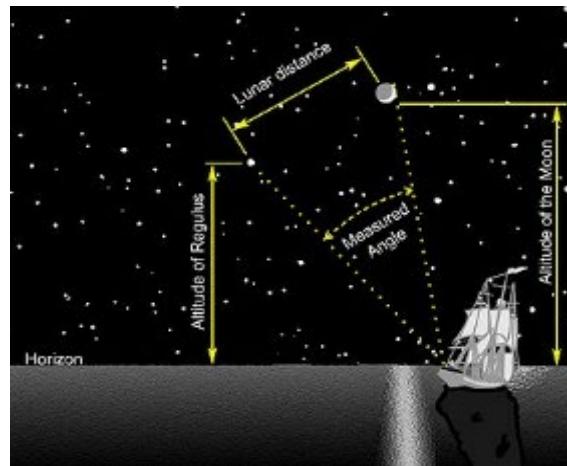


Geodetic, earth-centered earth-fixed (ECEF) & local north-east-down (NED)

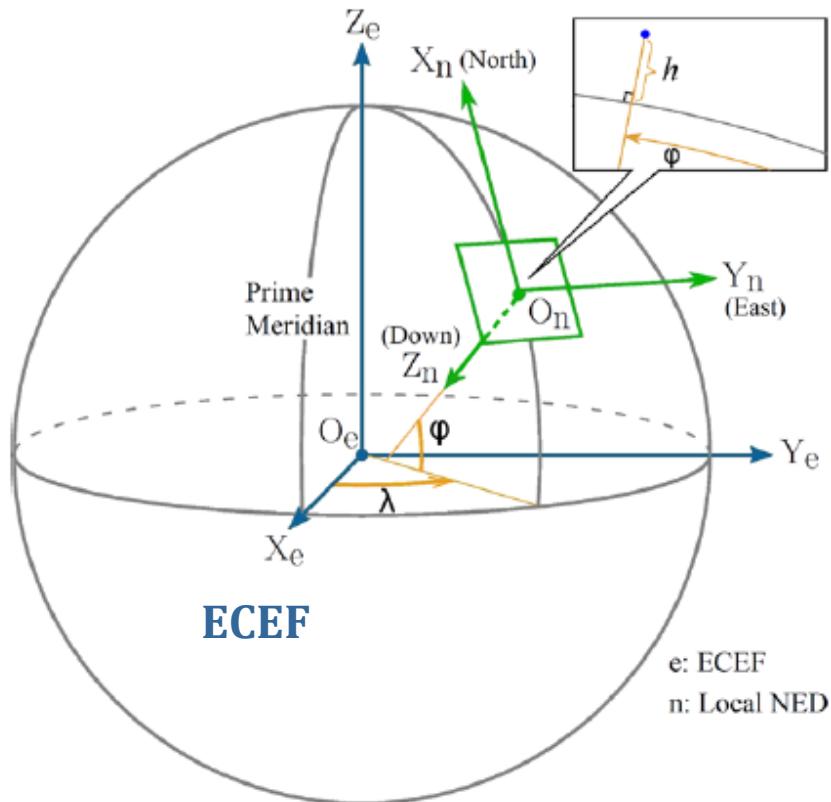

$$\text{Geodetic: } \mathbf{P}_g = \begin{bmatrix} \lambda \\ \phi \\ h \end{bmatrix}$$

- Origin at centre of mass of Earth
- λ : The **longitude** measures the rotational angle between the Prime Meridian and the measured point.
- ϕ : The **latitude** measures the angle between the equatorial plane and the normal of the reference ellipsoid that passes through the measured point.
- h : The **altitude** is the local vertical distance between the measured point and the reference ellipsoid.


Geodetic, earth-centered earth-fixed (ECEF) & local north-east-down (NED)

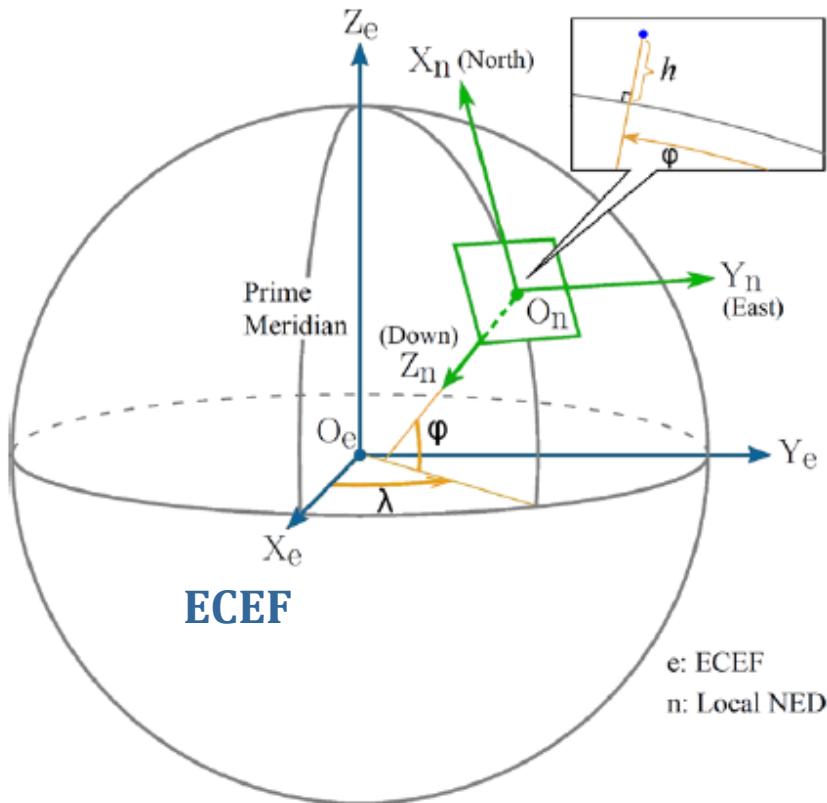

$$\text{ECEF: } \mathbf{P}_e = \begin{bmatrix} X_e \\ Y_e \\ Z_e \end{bmatrix}$$

- Origin at centre of mass of Earth
- The Z-axis extends through true north
- The X-axis intersects the sphere of the earth at 0° latitude (the equator) and 0° longitude (prime meridian in Greenwich)
- The Y-axis intersects the sphere of the earth at 0° latitude (the equator) and 90° longitude

Geodetic, earth-centered earth-fixed (ECEF) & local north-east-down (NED)

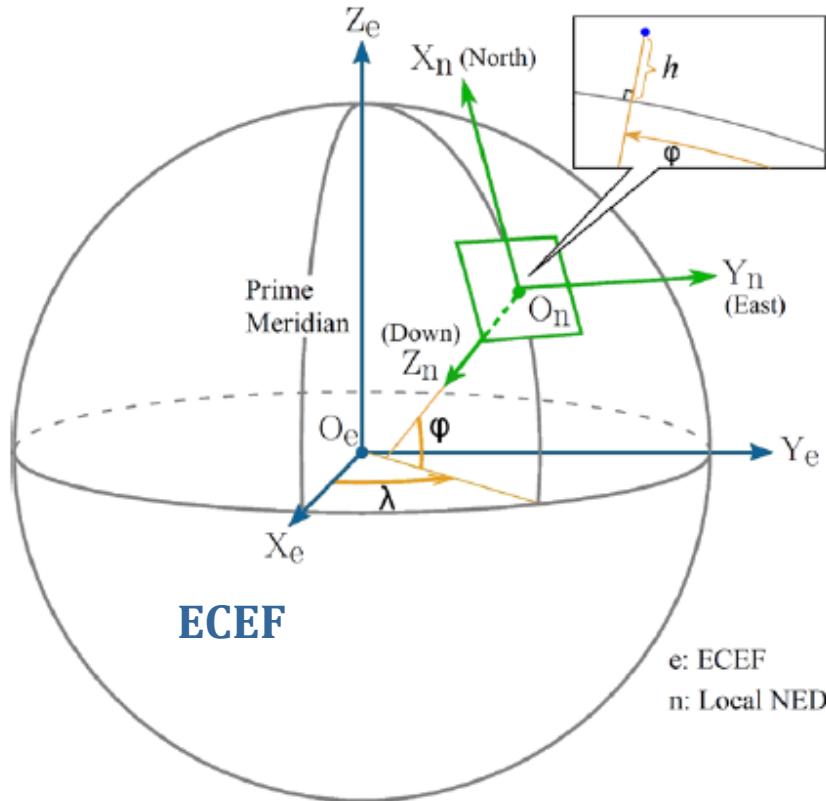

Local NED: $\mathbf{P}_n = \begin{bmatrix} X_n \\ Y_n \\ Z_n \end{bmatrix}$

- The origin is arbitrarily fixed to a point on the earth's surface.
- The X-axis points toward the ellipsoid north (geodetic north).
- The Y-axis points toward the ellipsoid east (geodetic east).
- The Z-axis points downward along the ellipsoid normal.

Conversion from Geodetic to ECEF Coordinates

$$\begin{cases} X_e = (N(\varphi) + h) \cos \varphi \cos \lambda \\ Y_e = (N(\varphi) + h) \cos \varphi \sin \lambda \\ Z_e = \left(\frac{b^2}{a^2} N(\varphi) + h \right) \sin \varphi \end{cases}$$

where $N(\varphi) = \frac{a^2}{\sqrt{a^2 \cos^2 \varphi + b^2 \sin^2 \varphi}} = \frac{a}{\sqrt{1 - e^2 \sin^2 \varphi}}$

a : Equatorial radius (semi-major axis)

b : Polar radius (semi-minor axis)

$e^2 = 1 - \frac{b^2}{a^2}$: Square of the first numerical eccentricity of ellipsoid

$N(\varphi)$: Prime vertical radius of curvature

Conversion from ECEF to Local NED Coordinates


(Zero) reference point
in ECEF coordinates

$$\begin{bmatrix} X_n \\ Y_n \\ Z_n \end{bmatrix} = R^T \left(\begin{bmatrix} X_e \\ Y_e \\ Z_e \end{bmatrix} - \begin{bmatrix} X_{e0} \\ Y_{e0} \\ Z_{e0} \end{bmatrix} \right)$$

where $R = \begin{bmatrix} -\sin \varphi \cos \lambda & -\sin \lambda & -\cos \varphi \cos \lambda \\ -\sin \varphi \sin \lambda & \cos \lambda & -\cos \varphi \sin \lambda \\ \cos \varphi & 0 & -\sin \varphi \end{bmatrix}$


Coordinate Systems

(Rotational) Conversion from NED to Body Frame

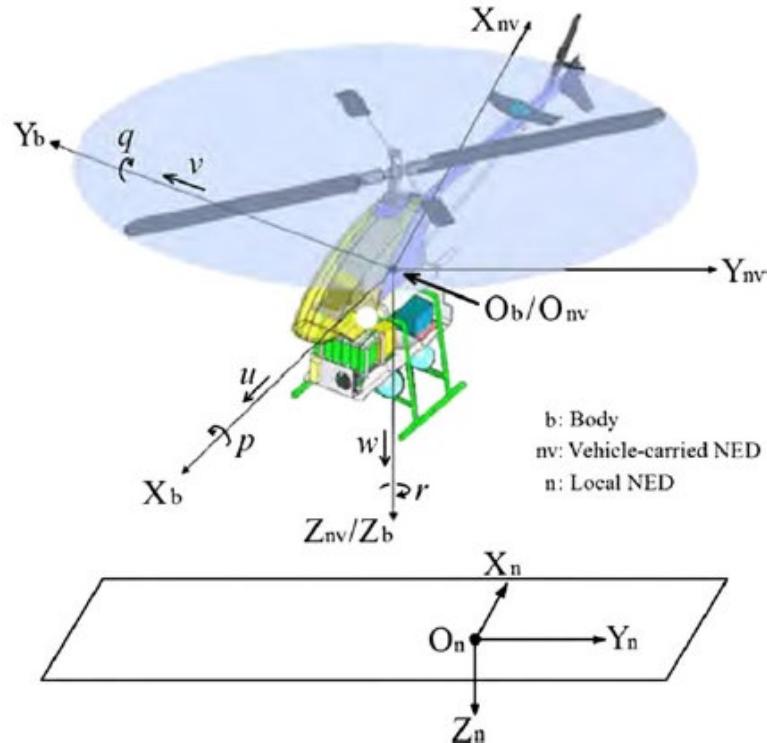

NED-frame
velocity


$$\begin{pmatrix} \dot{X}_n \\ \dot{Y}_n \\ \dot{Z}_n \end{pmatrix} = \begin{bmatrix} c_\psi c_\theta & c_\psi s_\theta s_\phi - s_\psi c_\phi & c_\psi s_\theta c_\phi + s_\psi s_\phi \\ s_\psi c_\theta & s_\psi s_\theta s_\phi + c_\psi c_\phi & s_\psi s_\theta c_\phi - c_\psi s_\phi \\ -s_\theta & c_\theta s_\phi & c_\theta c_\phi \end{bmatrix} \begin{pmatrix} u \\ v \\ w \end{pmatrix}$$

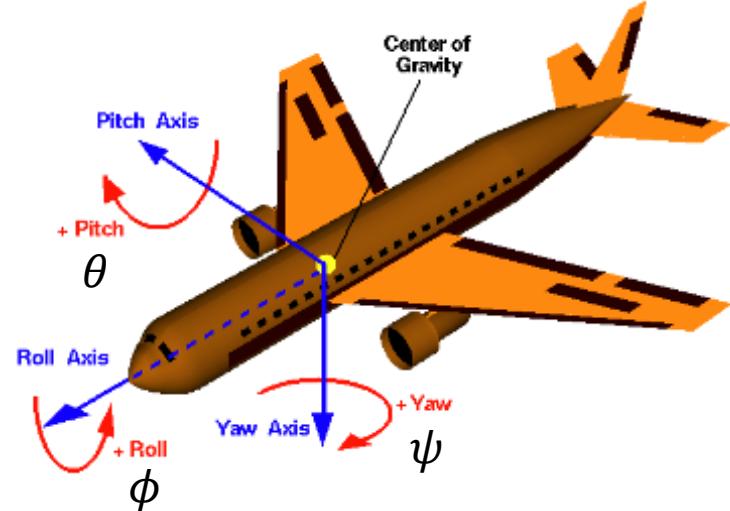


Body-frame
velocity

Inertial Measurement Unit

Inertial Measurement Units (IMUs) is a self-contained system that measures linear and angular motion usually with **a triad of gyroscopes** and **triad of accelerometers**. An IMU can either be gimbaled or strapdown, outputting the integrating quantities of angular velocity and acceleration in the sensor/body frame.

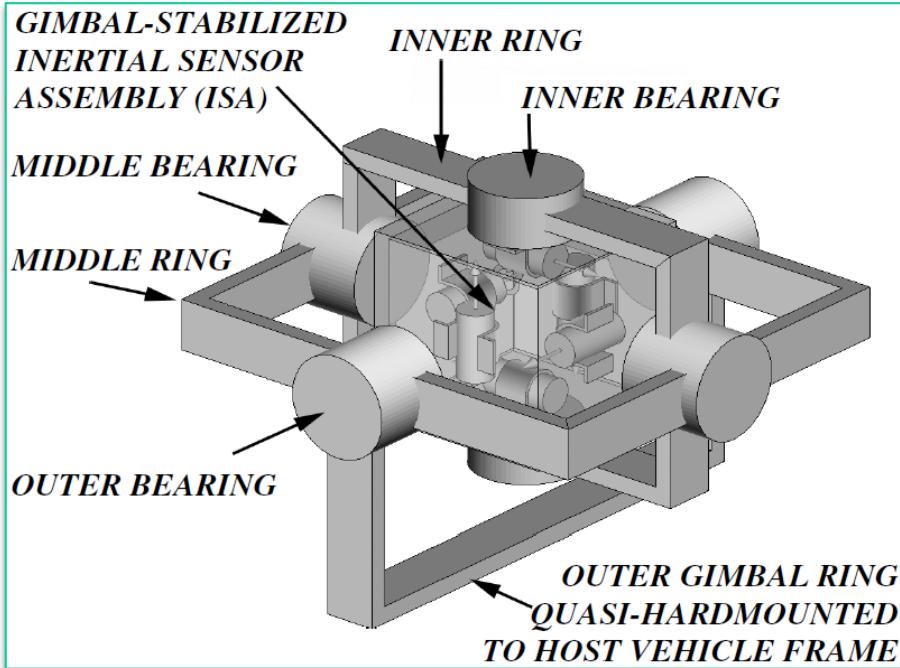


Gimbaled IMU

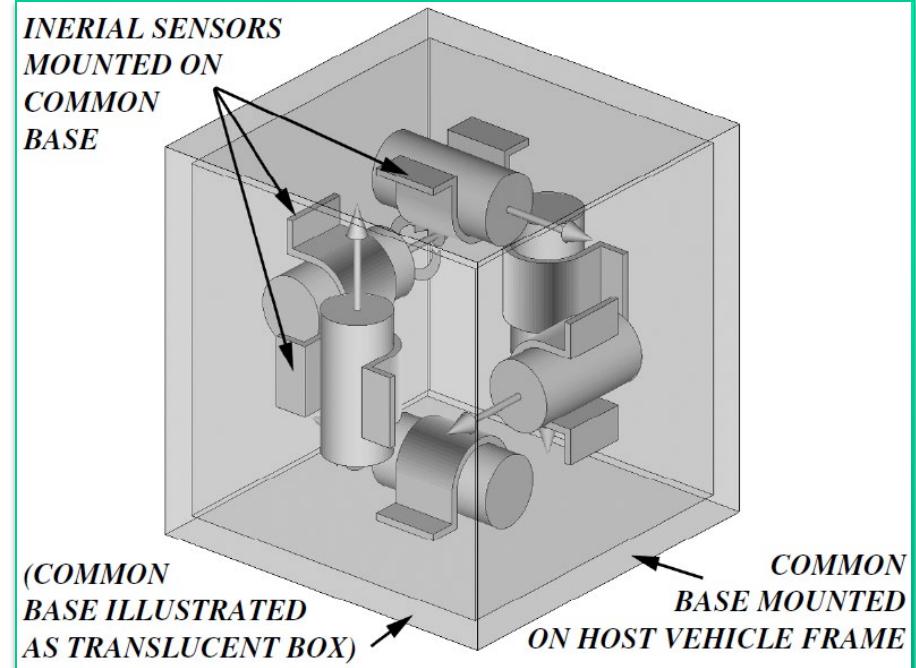

Strapdown IMU


Accelerometer

By attaching a mass to a spring, measuring its deflection, we get a simple accelerometer.

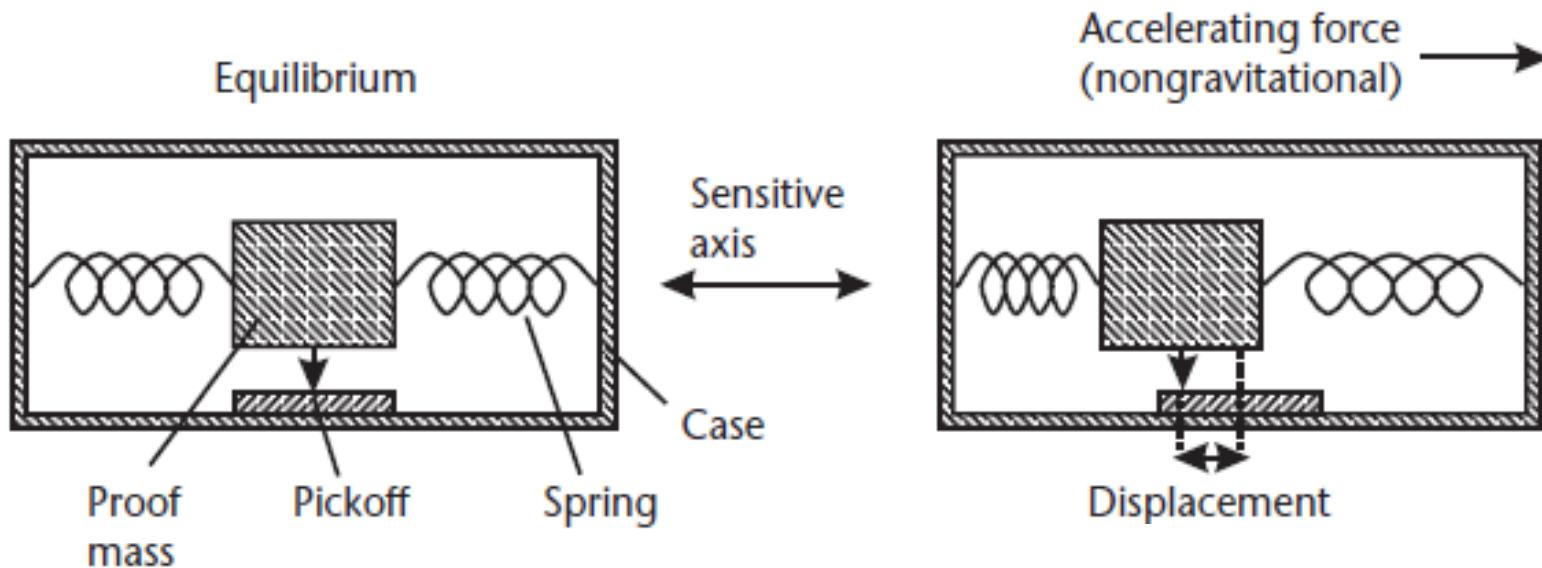

Basic principle: mass inertia effect

- Measure voltage of piezo crystals
- Changes in capacity
- Laser deflection
- Pendulous Integrating (PIGA)

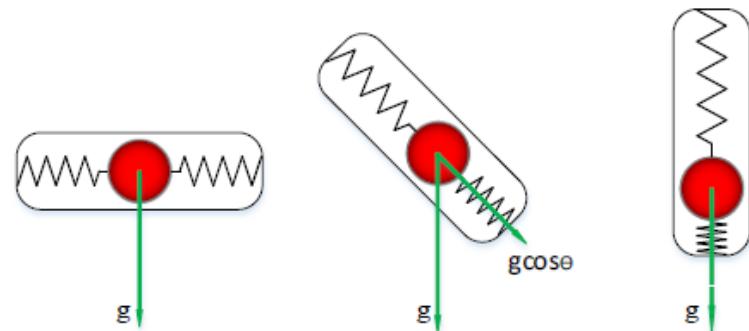

Accelerometer

Define noise model of measurement vector $\vec{a}^* = (a_x^*, a_y^*, a_z^*)$:

$$\underbrace{\vec{a}^*}_{\text{measurement}} = \underbrace{\vec{b}_C + s \cdot M \cdot \vec{a} + \vec{b}}_{\text{calibration}} + \underbrace{W\vec{n} + \vec{o}}_{\text{modelling}}$$

Where: \vec{a}^* = measured acceleration vector

\vec{b}_c = long term constant bias

s = scale factor

M = misalignment correction matrix

\vec{b} = short term constant bias

W = crosscorrelation matrix for white noise vector \vec{n}

\vec{o} = other (environmental) influences

Simplified model after calibration




$$\vec{a}_{nb, IMU} = \vec{a}_{nb} - \vec{b}_a - \vec{w}_a,$$

where $\vec{b}_a \in \mathbb{R}^3$ is unknown but constant measurement biases; and $\vec{w}_a \in \mathbb{R}^3$ is zero-mean Gaussian white noises.

Rate Gyroscope

Micro Electro-Mechanical System (MEMS) gyroscopes use **Coriolis effect** to indirectly measure angular velocity:

- Proof masses vibrate at frequency ω_r in the 1st axis:
 - Position $p = A \sin(\omega_r t)$
 - Velocity $v = \dot{p} = A\omega_r \cos(\omega_r t)$
- If rotation happens in the 2nd axis, an acceleration $a = -2(v \times \omega)$ will be introduced in the 3rd axis
- This acceleration can be measured by an accelerometer

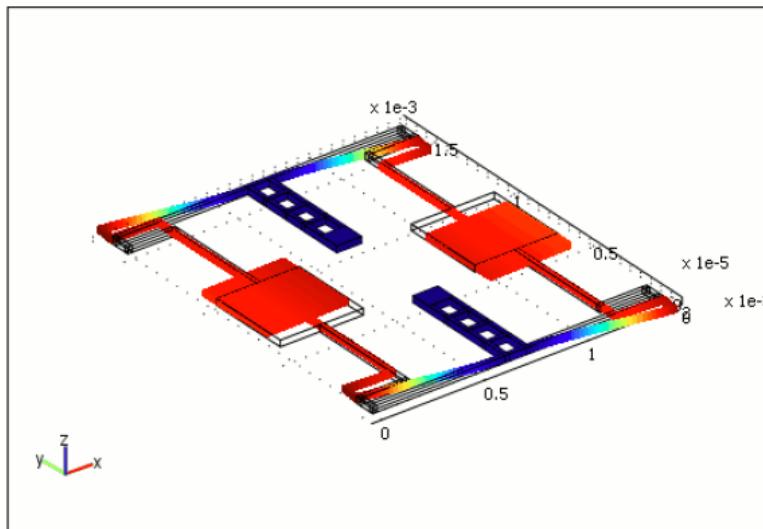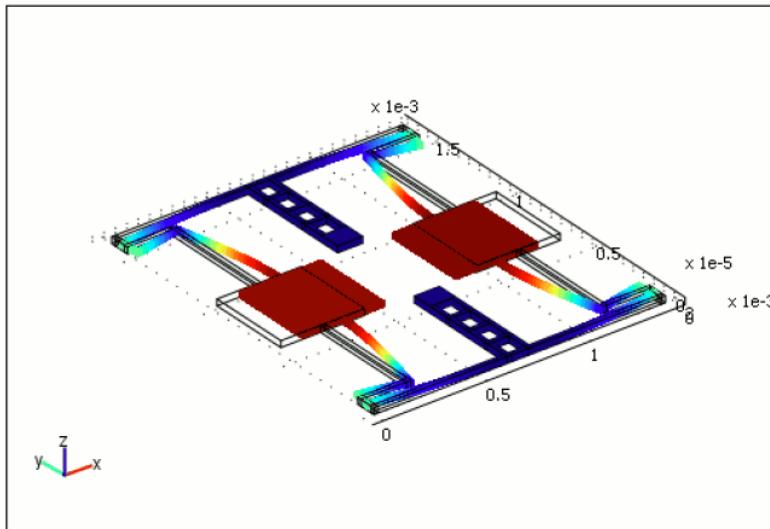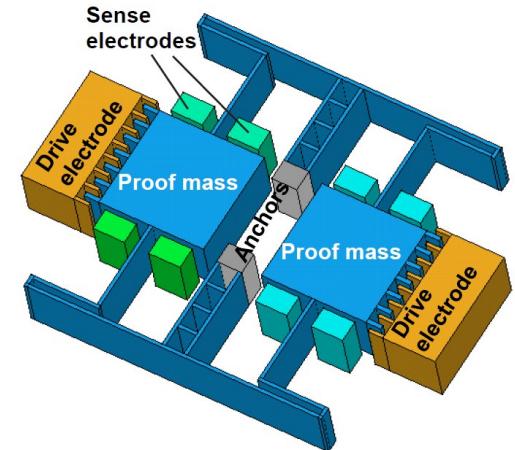

Rate Gyroscope

Define noise model of measurement vector $\vec{\omega}^* = (\omega_x^*, \omega_y^*, \omega_z^*)$

$$\underbrace{\vec{\omega}^*}_{\text{measurement}} = \underbrace{\vec{b}_c}_{\text{calibration}} + \underbrace{s \cdot M \cdot \vec{\omega}}_{\text{estimation}} + \underbrace{\vec{b} + W\vec{n}}_{\text{modelling}} + \vec{o}$$

Where: $\vec{\omega}^*$ = measured angular velocities

b_c = long term constant bias

s = scale factor

M = misalignment correction matrix

\vec{b} = short term constant bias

W = crosscorrelation matrix for white noise vector n


\vec{o} = other (environmental) influences

Simplified model after the calibration

$$\omega_{b/n, \text{IMU}}^b = \omega_{b/n}^b - b_\omega - w_\omega,$$

where $b_\omega \in \mathbb{R}^3$ is unknown but constant measurement biases; and $w_\omega \in \mathbb{R}^3$ is zero-mean Gaussian white noises.

Do your own detailed research ☺

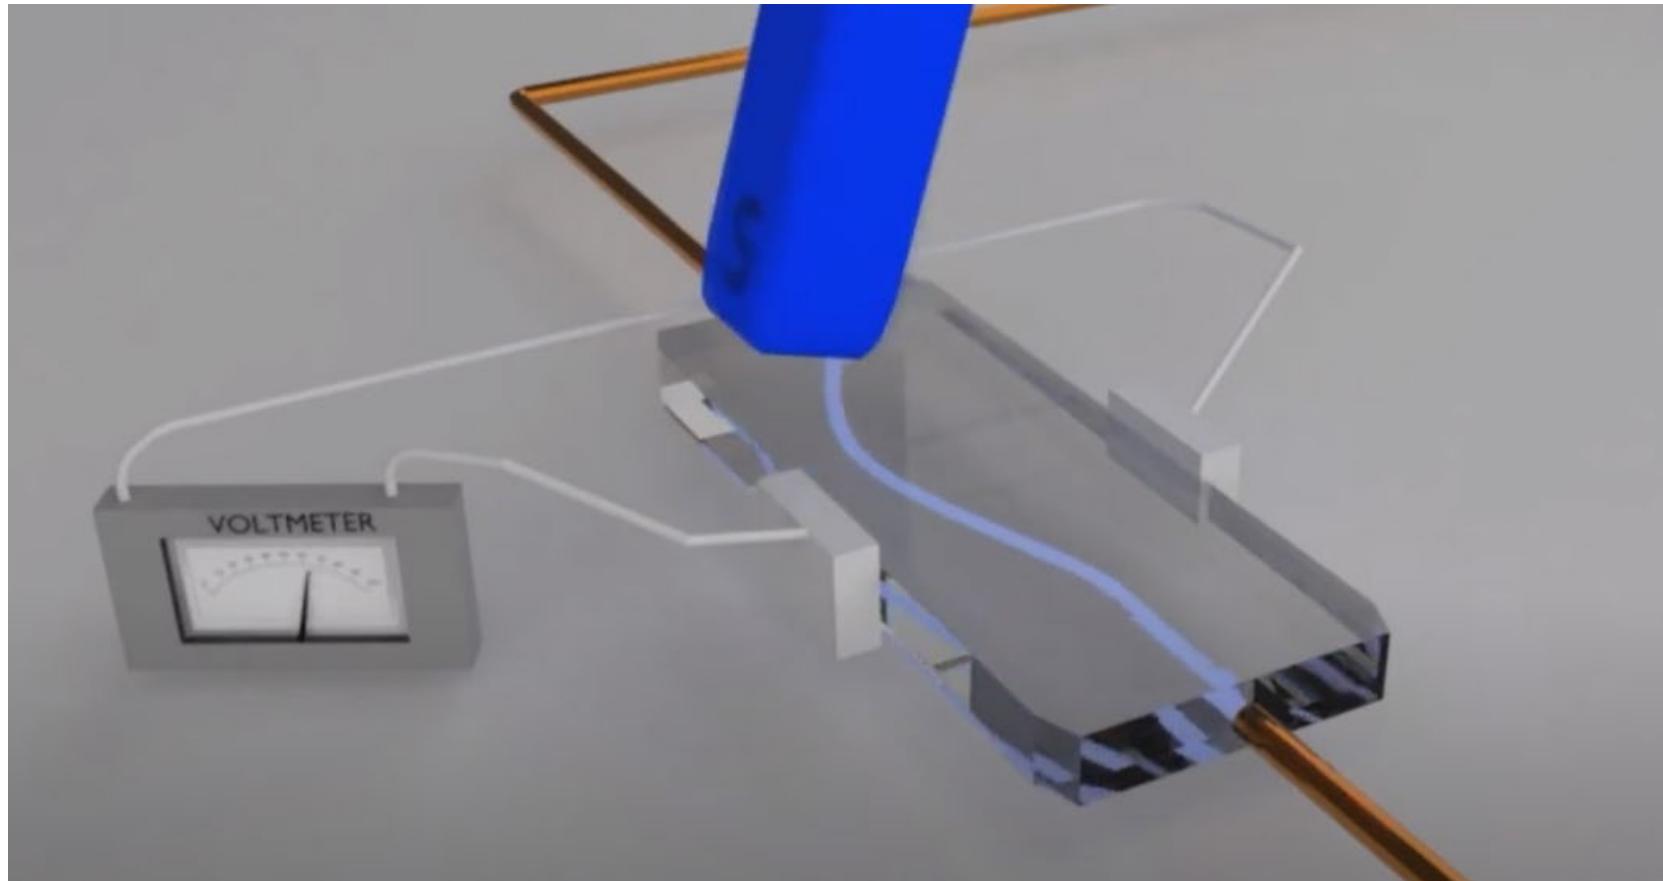

The **Global Positioning System (GPS)** is a space-based navigation system that provides **location** and **time** information in all weather conditions, anywhere on or near the Earth where there is an unobstructed line of sight to four or more GPS satellites.

- Based on time and the known position of specialized satellites;
- Independent of time of day or weather;
- Began in 1973 and fully operational since April 1995;
- Currently 30 active satellites (6 paths, 55 deg. inclination);
- Carrier frequency is 1575.42 MHz (1227.6 MHz).


Other Similar Systems

- GLONASS – Russian
- BEIDO – China
- GALILEO – Europe

Global Positioning System

Space Satellites:

- NAVSTAR: 30 satellites with atomic clocks
- At least 5 always visible (usually 7-8)
- 20000 km alt. 13000 km/h speed

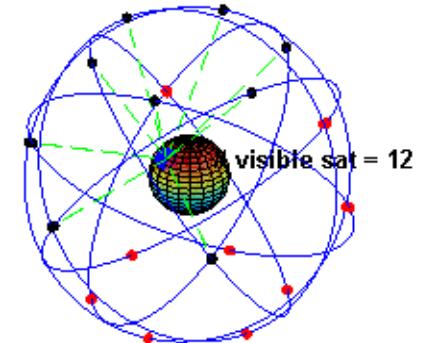

Control Station:

- Master control for satellites
- Update satellite position and atomic clocks



User Reception:

- GPS receiver with antenna and precise clock (crystal)
- Geoid model for height estimation



Global Positioning System

Navigation Equation

The receiver uses messages received from satellites to determine the satellite positions and time sent. For n satellites, the equations to satisfy are:

$$(x - x_i)^2 + (y - y_i)^2 + (z - z_i)^2 = (\tilde{t}_i - b - s_i)c^2, \quad i = 1, 2, \dots, n$$

where

(x_i, y_i, z_i) : position of satellite i ;

(x, y, z) : receiver position;


c : speed of light;

b : receiver's clock bias;

\tilde{t}_i : on-board receiver clock;

s_i : satellite time.

Least Squares Solution

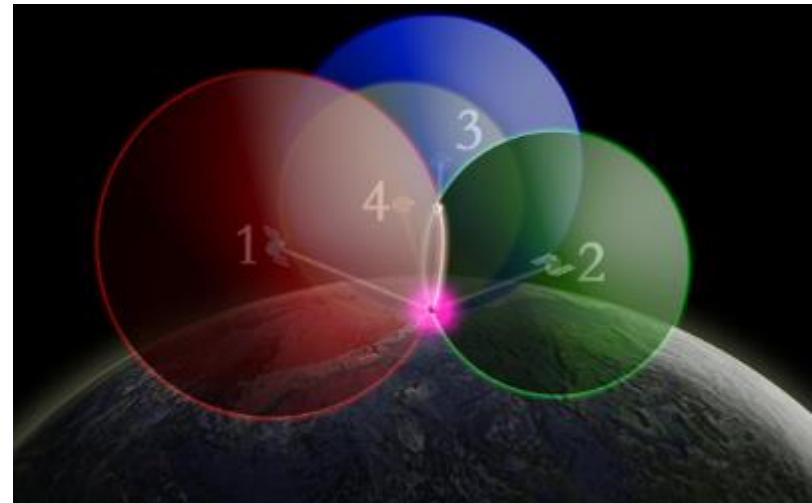


$$(\hat{x}, \hat{y}, \hat{z}, \hat{b}) = \arg \min_{(x, y, z, b)} \sum_i \left(\sqrt{(x - x_i)^2 + (y - y_i)^2 + (z - z_i)^2} + bc - p_i \right)^2$$

where


$$p_i = (\tilde{t}_i - s_i)c \quad \text{is called the pseudo-range}$$

For 3D localization, we need
at least 4 satellites!

GPS-Aided Inertial Navigation System

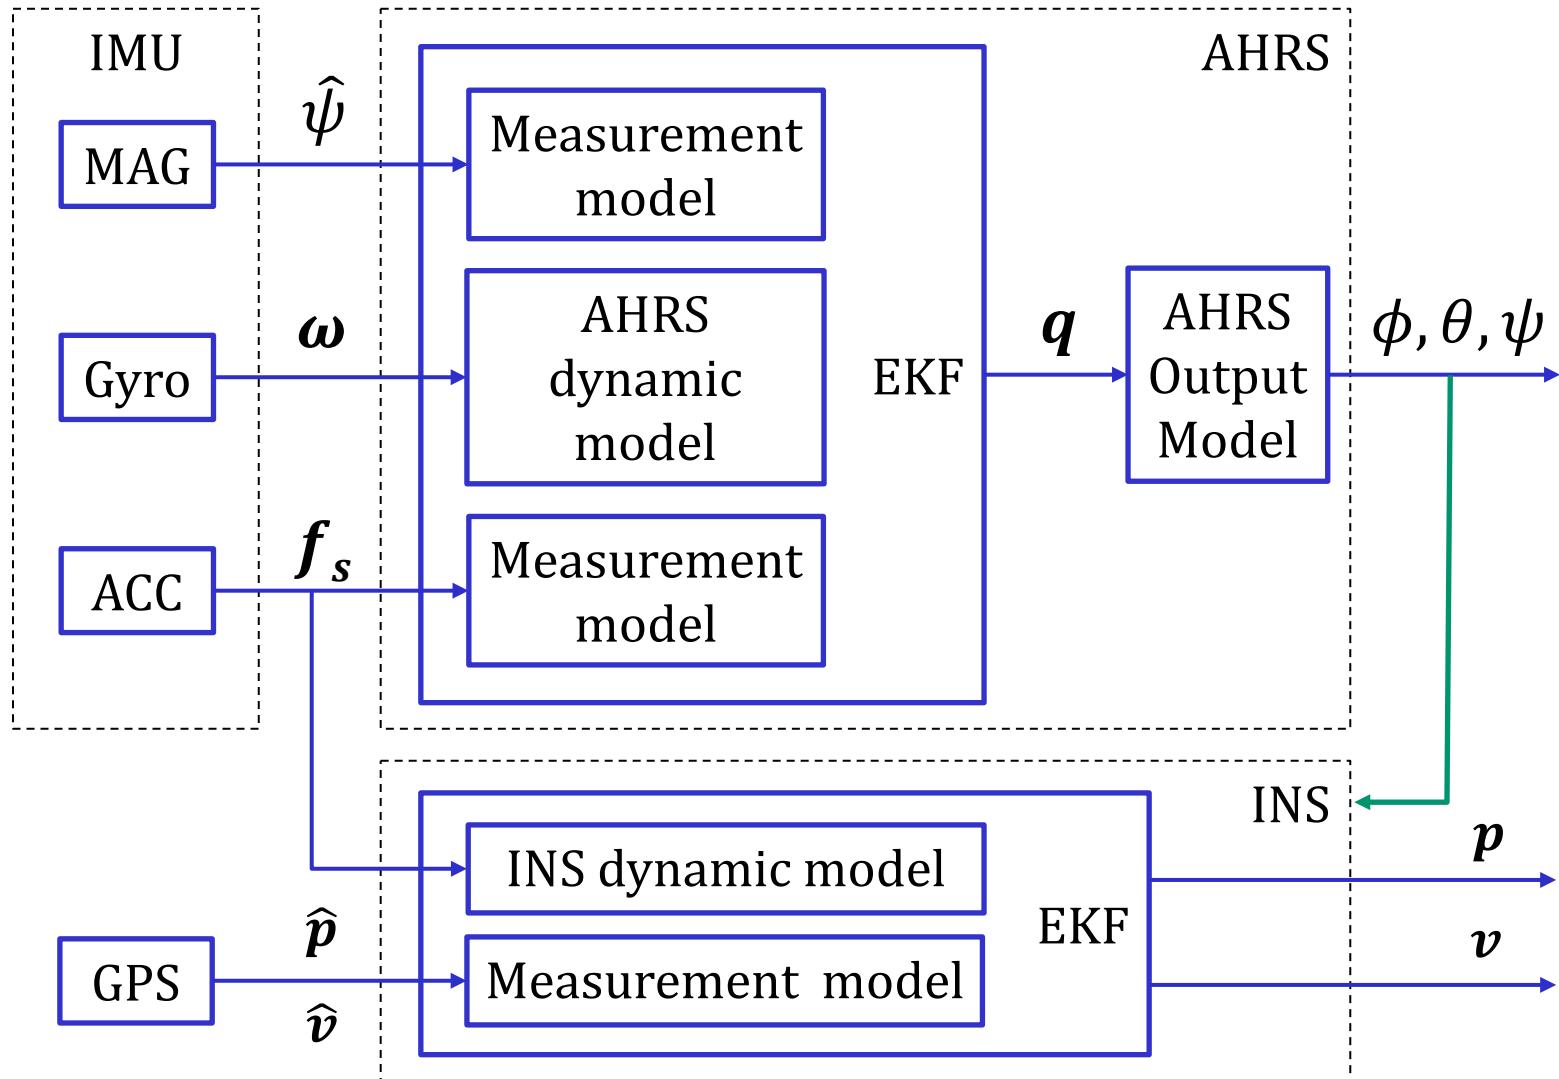

State Space Representation of a System

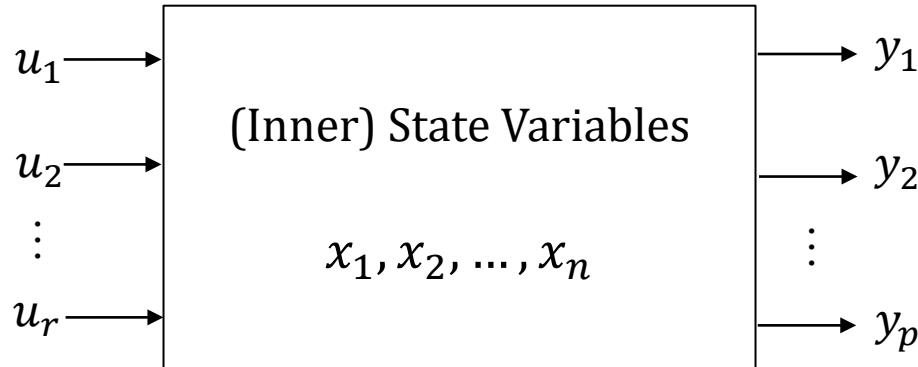

- State: the smallest set of variables (called State Variables or State Vector) such that the knowledge of these variables at $t = t_0$, together with knowledge of the input for $t \geq t_0$, completely determines the behavior and outputs of the system for any time t_0 to t .
- The number of state variables to completely define the dynamics of the system is equal to the number of integrator involved in the system (System Order).
- The above system has r inputs, p outputs and n state variables


State Space Representation of a System

$$\begin{cases} \dot{x}(t) = Fx(t) + Gu(t) & \text{State equation} \\ y(t) = Hx(t) + Ju(t) & \text{Output equation} \end{cases}$$

- x = State Vector
- $\dot{x} = \frac{dx(t)}{dt}$ = Derivative of the State Vector
- u = Input Vector
- y = Output Vector
- F = State Matrix = System Matrix
- G = Input Matrix
- H = Output Matrix

State Space Representation of a System

$$Ri(t) + L \frac{di(t)}{dt} + \frac{1}{C} \int_0^t i(t) dt = e_i(t)$$

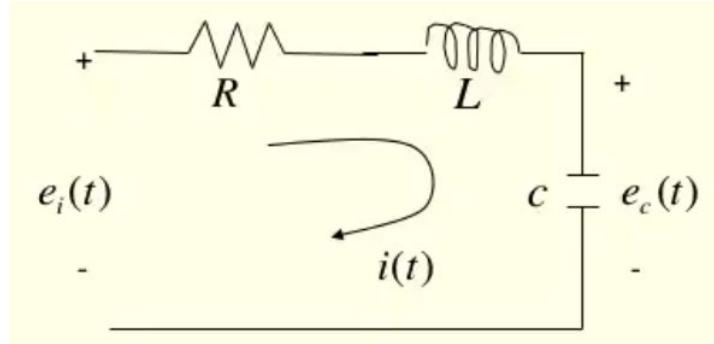

let

$$\begin{aligned} x_1(t) &= i(t) \\ x_2(t) &= \int i(t) dt \\ y(t) &= i(t) \end{aligned}$$



$$\begin{bmatrix} \dot{x}_1 \\ \dot{x}_2 \end{bmatrix} = \begin{bmatrix} -\frac{R}{L} & -\frac{1}{LC} \\ 1 & 0 \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \end{bmatrix} + \begin{bmatrix} \frac{1}{L} \\ 0 \end{bmatrix} e_i(t)$$

$$y(t) = [1 \ 0] \begin{bmatrix} x_1 \\ x_2 \end{bmatrix}$$

let

$$\begin{aligned} \hat{x}_1(t) &= i(t) \\ \hat{x}_2(t) &= e_c(t) \\ y(t) &= i(t) \end{aligned}$$



$$\begin{bmatrix} \dot{\hat{x}}_1 \\ \dot{\hat{x}}_2 \end{bmatrix} = \begin{bmatrix} -R/L & -1/L \\ 1/C & 0 \end{bmatrix} \begin{bmatrix} \hat{x}_1 \\ \hat{x}_2 \end{bmatrix} + \begin{bmatrix} 1/L \\ 0 \end{bmatrix} e_i(t)$$

$$y(t) = [1 \ 0] \begin{bmatrix} \hat{x}_1 \\ \hat{x}_2 \end{bmatrix}$$

Remark: the choice of state is NOT unique

State Space Representation of a System


- The state space model

$$\dot{x} = Ax + Bu$$

$$y = Cx + Du$$

- by Laplace transform

$$sX(s) = AX(s) + BU(s) \implies X(s) = (sI - A)^{-1}BU(s)$$

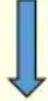

$$Y(s) = CX(s) + DU(s) \implies Y(s) = [C(sI - A)^{-1}B + D]U(s)$$

- Then, the transfer function is

$$T(s) = \frac{Y(s)}{U(s)} = C(sI - A)^{-1}B + D$$

State Space Representation of a System

$$\begin{cases} \dot{x}(t) = Fx(t) + Gu(t) & C(F, G) = [G \ FG \ F^2G \ \dots \ F^{n-1}G] \\ y(t) = Hx(t) + Ju(t) & V(F, G) = [H \ HF \ HF^2 \ \dots \ HF^{n-1}]^T \end{cases}$$

Controllability Matrix Observability Matrix

A system is said to be (state) **controllable** at time t_0 , if there exists a finite $t_1 > t_0$ such that for any $x(t_0)$ and any x_1 , there exists an input $u_{[t_0, t_1]}$ that will transfer the state $x(t_0)$ to the state x_1 at time t_1 . Otherwise, the system is said to be **uncontrollable** at time t_0 .

$$\begin{aligned} \text{rank}(C) &= n \\ \det(C) &\neq 0 \end{aligned}$$

A system is said to be (completely state) **observable** at time t_0 , if there exists a finite $t_1 > t_0$ such that for any $x(t_0)$ at time t_0 , the knowledge of the input $u_{[t_0, t_1]}$ and the output $y_{[t_0, t_1]}$ over the time interval $[t_0, t_1]$ suffices to determine the state x_0 . Otherwise, the system is said to be **unobservable** at time t_0 .

$$\begin{aligned} \text{rank}(V) &= n \\ \det(V) &\neq 0 \end{aligned}$$

What is Kalman Filter?

Given the linear dynamical system:

$$x(k+1) = F(k)x(k) + G(k)u(k) + v(k)$$

$$y(k) = H(k)x(k) + w(k)$$

$x(k)$ is the n -dimensional state vector (unknown)

$u(k)$ is the m -dimensional input vector (known)

$y(k)$ is the p -dimensional output vector (known, measured)

$F(k), G(k), H(k)$ are appropriately dimensioned system matrices (known)

$v(k), w(k)$ are zero-mean, white Gaussian noise with (known)

covariance matrices $Q(k), R(k)$

Kalman Filter is a recursive algorithm that provides the ‘best’ or ‘most probable’ estimate of the state vector x .

Why use Kalman Filter?

$$x(k+1) = F(k)x(k) + G(k)u(k) + v(k)$$

$$y(k) = H(k)x(k) + w(k)$$

- State estimation via probability optimization from both inputs and measurements
- Noise smoothing
- Realtime scalable (computes next estimate using only most recent measurement)

How does Kalman Filter work?

$$x(k+1) = F(k)x(k) + G(k)u(k) + v(k)$$

$$y(k) = H(k)x(k) + w(k)$$

1. Prediction based on last estimate:

$$\hat{x}(k+1 | k) = F(k)\hat{x}(k | k) + G(k)u(k)$$

$$\hat{y}(k) = H(k)\hat{x}(k+1 | k)$$

2. Calculate correction based on prediction and current measurement:

$$\Delta x = f(y(k+1), \hat{x}(k+1 | k))$$


3. Update prediction: $\hat{x}(k+1 | k+1) = \hat{x}(k+1 | k) + \Delta x$

Kalman Filter (A Simple Special Case)

If measurement has zero noise and variance of x is the same in all axis ...

$$y = Hx$$

Given prediction \hat{x}_- and output y , find Δx so that $\hat{x} = \hat{x}_- + \Delta x$ is the "best" estimate of x .

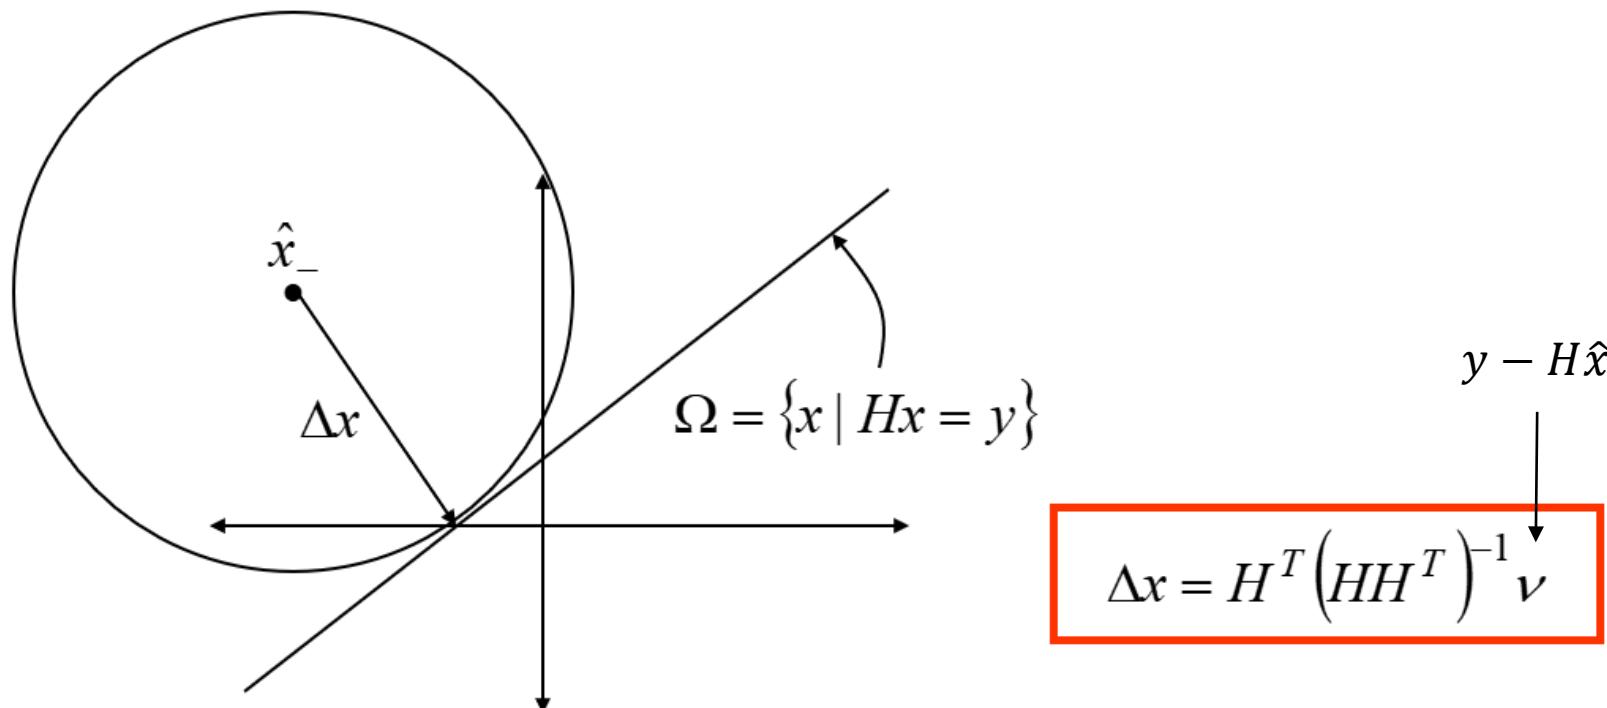

Kalman Filter (A Simple Special Case)

System:

$$x(k+1) = Fx(k) + Gu(k) + v(k)$$
$$y(k) = Hx(k)$$



1. Prediction:
$$\hat{x}(k+1 | k) = F\hat{x}(k | k) + Gu(k)$$
2. Compute correction:
$$\Delta x = H^T (H H^T)^{-1} (y(k+1) - H\hat{x}(k+1 | k))$$
3. Update:
$$\hat{x}(k+1 | k+1) = \hat{x}(k+1 | k) + \Delta x$$

Kalman Filter (A More Complicated Case)

If we consider variance of x follows a joint Gaussian distribution $p(x)$.


$$p(x) = \frac{1}{(2\pi)^{n/2} |P|^{1/2}} e^{\frac{-1}{2}((x-\hat{x})^T P^{-1} (x-\hat{x}))}$$

where $P = E((x - \hat{x})(x - \hat{x})^T)$ is the *covariance matrix*

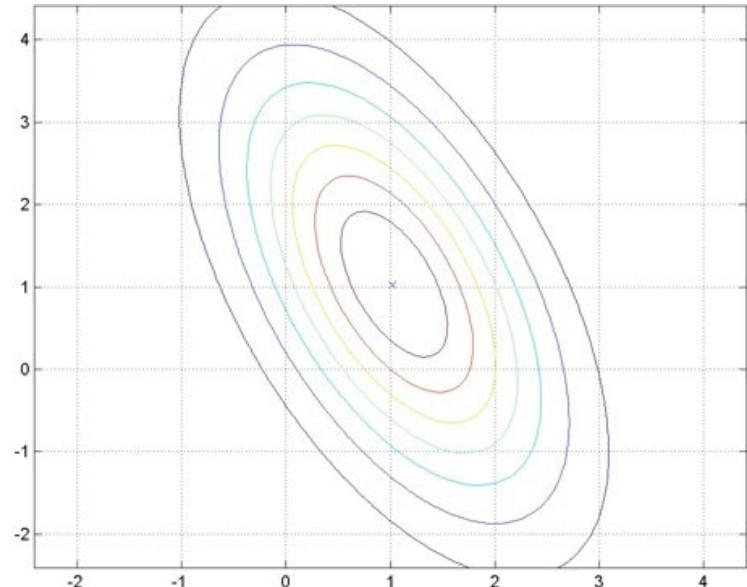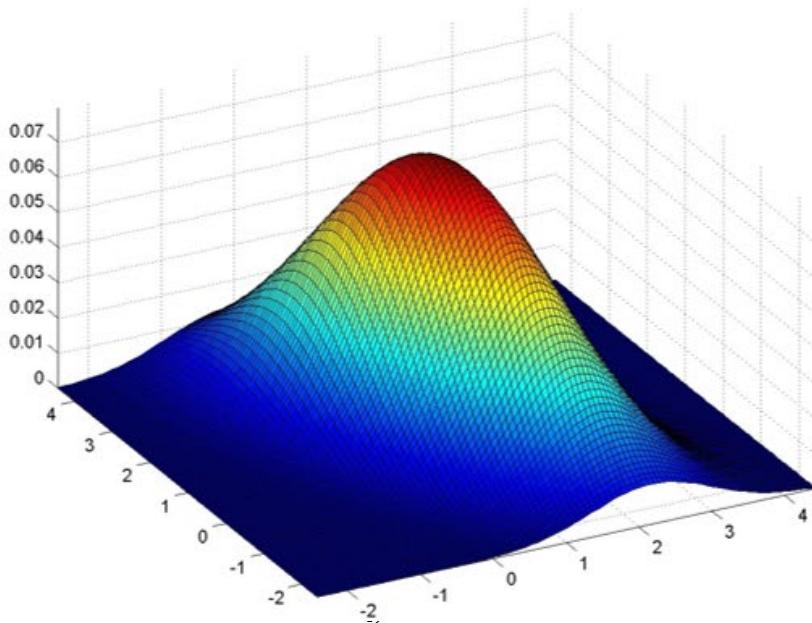

Kalman Filter (A More Complicated Case)

Given prediction \hat{x}_- , covariance P , and output y , find Δx so that $\hat{x} = \hat{x}_- + \Delta x$ is the "best" (i.e. most probable) estimate of x .

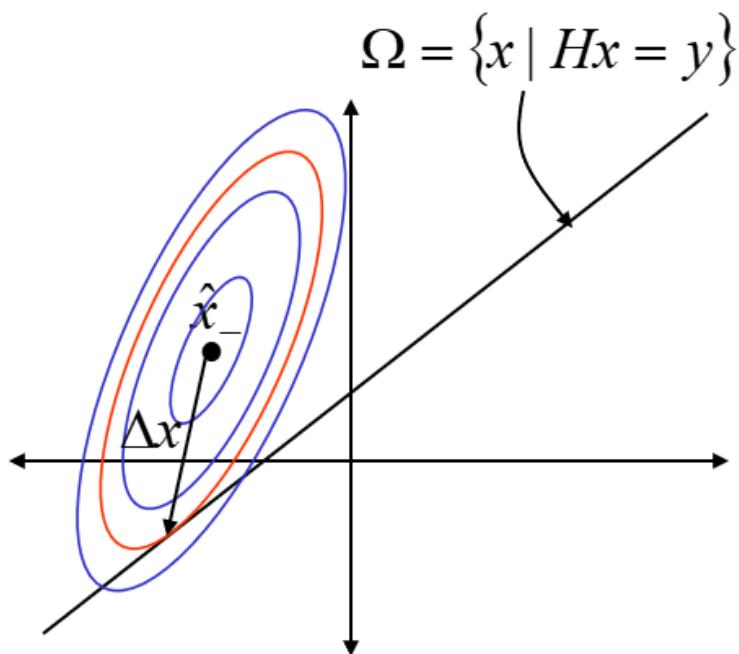

$$p(x) = \frac{1}{(2\pi)^{n/2} |P|^{1/2}} e^{\frac{-1}{2}((x-\hat{x})^T P^{-1} (x-\hat{x}))}$$

The most probable Δx is the one that :

1. satisfies $\hat{x} = \hat{x}_- + \Delta x$
2. minimizes $\Delta x^T P^{-1} \Delta x$

Kalman Filter (A More Complicated Case)

Suppose we define a new inner product on R^n to be :

$$\langle x_1, x_2 \rangle = x_1^T P^{-1} x_2 \quad (\text{this replaces the old inner product } x_1^T x_2)$$

Then we can define a new norm $\|x\|^2 = \langle x, x \rangle = x^T P^{-1} x$

The \hat{x} in Ω that minimizes $\|\Delta x\|$ is the orthogonal projection of \hat{x}_- onto Ω , so Δx is orthogonal to Ω .

$$\Rightarrow \langle \omega, \Delta x \rangle = 0 \text{ for } \omega \text{ in } T\Omega = \text{null}(H)$$

$$\langle \omega, \Delta x \rangle = \omega^T P^{-1} \Delta x = 0 \text{ iff } \Delta x \in \text{column}(P H^T)$$

Kalman Filter (A More Complicated Case)

Assuming that Δx is linear in $v = y - H\hat{x}_-$

$$\Delta x = PH^T K v$$

The condition $y = H(\hat{x}_- + \Delta x) \Rightarrow H\Delta x = y - H\hat{x}_- = v$

Substitution yields :

$$H\Delta x = v = HPH^T K v$$

$$\Rightarrow K = (HPH^T)^{-1}$$

$$\therefore \Delta x = PH^T (HPH^T)^{-1} v$$

Hence, we can create a better state observer following the same 3 steps, but with the additional involvement of covariance matrix P .

Step 1: Prediction

$$\hat{x}(k+1 | k) = F\hat{x}(k | k) + Gu(k)$$

P also needs to be updated as:

$$P(k | k) = E\left((x(k) - \hat{x}(k | k))(x(k) - \hat{x}(k | k))^T\right)$$

and

$$P(k+1 | k) = E\left((x(k+1) - \hat{x}(k+1 | k))(x(k+1) - \hat{x}(k+1 | k))^T\right)$$

Kalman Filter (A More Complicated Case)

$$\begin{aligned}
 P_{k+1}^- &= E\left((x_{k+1} - \hat{x}_{k+1}^-)(x_{k+1} - \hat{x}_{k+1}^-)^T\right) \\
 &= E\left(\left(Fx_k + Gu_k + v_k - (F\hat{x}_k + Gu_k)\right)\left(Fx_k + Gu_k + v_k - (F\hat{x}_k + Gu_k)\right)^T\right) \\
 &= E\left(\left(F(x_k - \hat{x}_k) + v_k\right)\left(F(x_k - \hat{x}_k) + v_k\right)^T\right) \\
 &= E\left(F(x_k - \hat{x}_k)(x_k - \hat{x}_k)^T F^T + 2F(x_k - \hat{x}_k)v_k^T + v_k v_k^T\right) \\
 &= FE\left((x_k - \hat{x}_k)(x_k - \hat{x}_k)^T\right)F^T + E(v_k v_k^T) \\
 &= FP_k F^T + Q
 \end{aligned}$$

$P(k+1 | k) = FP(k | k)F^T + Q$

Kalman Filter (A More Complicated Case)

From step 1 we get $\hat{x}(k+1|k)$ and $P(k+1|k)$.

Now we use these to compute Δx :

$$\Delta x = P(k+1|k)H\left(HP(k+1|k)H^T\right)^{-1}\left(y(k+1) - H\hat{x}(k+1|k)\right)$$

For ease of notation, define W so that


$$\Delta x = W\nu$$

Kalman Filter (A More Complicated Case)

$$\hat{x}(k+1 | k+1) = \hat{x}(k+1 | k) + Wv$$

$$\begin{aligned} P_{k+1} &= E\left((x_{k+1} - \hat{x}_{k+1})(x_{k+1} - \hat{x}_{k+1})^T\right) \\ &= E\left((x_{k+1} - \hat{x}_{k+1}^- - Wv)(x_{k+1} - \hat{x}_{k+1}^- - Wv)^T\right) \end{aligned}$$

(many steps of linear equation manipulations ...)

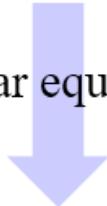

$$P(k+1 | k+1) = P(k+1 | k) - WHP(k+1 | k)H^TW^T$$

Kalman Filter (A More Complicated Case)

Many steps of linear equation manipulations ...

$$\begin{aligned} P_{k+1} &= E\left((x_{k+1} - \hat{x}_{k+1})(x_{k+1} - \hat{x}_{k+1})^T\right) \\ &= E\left((x_{k+1} - \hat{x}_{k+1}^- - W\nu)(x_{k+1} - \hat{x}_{k+1}^- - W\nu)^T\right) \\ &= E\left(\left((x_{k+1} - \hat{x}_{k+1}^-) - W\nu\right)\left((x_{k+1} - \hat{x}_{k+1}^-) - W\nu\right)^T\right) \\ &= E\left((x_{k+1} - \hat{x}_{k+1}^-)(x_{k+1} - \hat{x}_{k+1}^-)^T - 2W\nu(x_{k+1} - \hat{x}_{k+1}^-)^T + W\nu(W\nu)^T\right) \\ &= P_{k+1}^- + E\left(-2WH(x_{k+1} - \hat{x}_{k+1}^-)(x_{k+1} - \hat{x}_{k+1}^-)^T + WH(x_{k+1} - \hat{x}_{k+1}^-)(x_{k+1} - \hat{x}_{k+1}^-)^T H^T W^T\right) \\ &= P_{k+1}^- - 2WHP_{k+1}^- + WHP_{k+1}^- H^T W^T \\ &= P_{k+1}^- - 2P_{k+1}^- H^T \left(HP_{k+1}^- H^T\right)^{-1} HP_{k+1}^- + WHP_{k+1}^- H^T W^T \\ &= P_{k+1}^- - 2P_{k+1}^- H^T \left(HP_{k+1}^- H^T\right)^{-1} \left(HP_{k+1}^- H^T\right) \left(HP_{k+1}^- H^T\right)^{-1} HP_{k+1}^- + WHP_{k+1}^- H^T W^T \\ &= P_{k+1}^- - 2WHP_{k+1}^- H^T W^T + WHP_{k+1}^- H^T W^T \end{aligned}$$

Kalman Filter (A More Complicated Case)

System:

$$x(k+1) = Fx(k) + Gu(k) + v(k)$$

$$y(k) = Hx(k)$$

1. Predict

$$\hat{x}(k+1 | k) = F\hat{x}(k | k) + Gu(k)$$

$$P(k+1 | k) = FP(k | k)F^T + Q$$

2. Correction

$$W = P(k+1 | k)H^T \left(HP(k+1 | k)H^T \right)^{-1}$$

$$\Delta x = W(y(k+1) - H\hat{x}(k+1 | k))$$

3. Update

$$\hat{x}(k+1 | k+1) = \hat{x}(k+1 | k) + Wv$$


$$P(k+1 | k+1) = P(k+1 | k) - WHP(k+1 | k)H^TW^T$$

Kalman Filter (The Ultimate General Case)

If measurement has noises too ...

$$y = Hx + w$$

$$\Omega = \{x \mid Hx = y\}$$

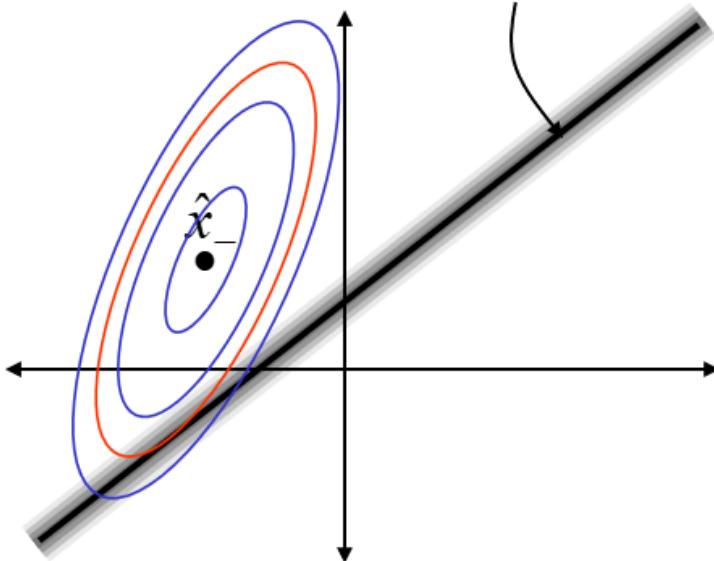

You do not have a hyperplane to directly aim for, you can't solve this with simple algebra!

You must solve an optimization problem.

The answer:

$$\Delta x = PH^T (HPH^T + R)^{-1} (y - H\hat{x}_-)$$

Kalman Filter (The Ultimate General Case)

System:

$$x(k+1) = Fx(k) + Gu(k) + v(k)$$

$$y(k) = Hx(k) + w(k)$$

- 1. Predict
- 2. Correction
- 3. Update

$$\hat{x}(k+1 | k) = F\hat{x}(k | k) + Gu(k)$$

$$P(k+1 | k) = FP(k | k)F^T + Q$$

$$S = HP(k+1 | k)H^T + R$$

$$W = P(k+1 | k)H^T S^{-1}$$

$$\Delta x = W(y(k+1) - H\hat{x}(k+1 | k))$$

$$\hat{x}(k+1 | k+1) = \hat{x}(k+1 | k) + Wv$$

$$P(k+1 | k+1) = P(k+1 | k) - WSW^T$$

Extended Kalman Filter (Direct Noise Form)

The extended Kalman filter is used for system state estimation with nonlinear dynamics or is usually seen as the nonlinear version of Kalman filter. We consider a given system characterized by

$$\mathbf{x}_k = \mathbf{f}(\mathbf{x}_{k-1}, \mathbf{u}_{k-1}) + \mathbf{w}_{k-1}$$

and

$$\mathbf{y}_k = \mathbf{h}(\mathbf{x}_k) + \mathbf{v}_k,$$

where \mathbf{x}_k is the true state vector at time k , $\mathbf{f}(\mathbf{x}_{k-1}, \mathbf{u}_{k-1})$ and $\mathbf{h}(\mathbf{x}_k)$ are some non-linear (or linear) functions, and \mathbf{w} and \mathbf{v} are the process and measurement noises. The noises, \mathbf{w} and \mathbf{v} , are assumed to be independent, zero mean, and with normal probability distributions

$$\mathbf{w}_k \sim \mathcal{N}(0, \mathbf{Q}_{\text{cov}})$$

and

$$\mathbf{v}_k \sim \mathcal{N}(0, \mathbf{R}_{\text{cov}}),$$

where \mathbf{Q}_{cov} and \mathbf{R}_{cov} are the process and measurement noise covariance matrices.

Extended Kalman Filter (Direct Noise Form)

Same as Kalman Filter, the computation of EKF involves two steps:

1. Prediction Step: The prediction step uses the previous time step to produce an estimation of the state at the current time step. In this stage we have the predicted state estimate, and the predicted estimated covariance as follows:

$$\hat{\mathbf{x}}_{k|k-1} = \mathbf{f}(\hat{\mathbf{x}}_{k-1|k-1}, \mathbf{u}_{k-1})$$

and

$$\mathbf{P}_{k|k-1} = \mathbf{F}_{k-1} \mathbf{P}_{k-1|k-1} \mathbf{F}_{k-1}^T + \mathbf{Q}_{\text{cov}}$$

where \mathbf{F}_{k-1} , the Jacobian matrix of the partial derivative of the function \mathbf{f} with respect to \mathbf{x} at time $k - 1$, is defined by

$$\mathbf{F}_{k-1} = \frac{\partial \mathbf{f}}{\partial \mathbf{x}} \Big|_{\hat{\mathbf{x}}_{k-1|k-1}, \mathbf{u}_{k-1}}$$

Extended Kalman Filter (Direct Noise Form)

2. Correction Step: In the correction step, the current predicted estimate is combined with current observation information to refine the state estimate. At time instance k , we need to compute the Kalman gain \mathbf{K}_k and then update the state estimate and error covariance as follows:

$$\mathbf{K}_k = \mathbf{P}_{k|k-1} \mathbf{H}_k^T (\mathbf{H}_k \mathbf{P}_{k|k-1} \mathbf{H}_k^T + \mathbf{R}_{\text{cov}})^{-1},$$
$$\hat{\mathbf{x}}_{k|k} = \hat{\mathbf{x}}_{k|k-1} + \mathbf{K}_k (\mathbf{y}_k - \mathbf{H}_k \hat{\mathbf{x}}_{k|k-1}),$$

and

$$\mathbf{P}_{k|k} = (\mathbf{I} - \mathbf{K}_k \mathbf{H}_k) \mathbf{P}_{k|k-1},$$

where \mathbf{H}_k , the Jacobian matrix of the partial derivative of the function \mathbf{h} with respect to \mathbf{x} at time k , is defined by

$$\mathbf{H}_k = \left. \frac{\partial \mathbf{h}}{\partial \mathbf{x}} \right|_{\hat{\mathbf{x}}_{k|k-1}}$$

Extended Kalman Filter (Indirect Noise Form)

$$\dot{\mathbf{x}} = \mathbf{f}_c(\mathbf{x}, u, \mathbf{w}) \quad p(\mathbf{w}) \sim N(0, \mathbf{Q})$$

$$\mathbf{y} = \mathbf{h}_c(\mathbf{x}, \mathbf{v}) \quad p(\mathbf{v}) \sim N(0, \mathbf{R})$$

$$\mathbf{F}_k = \frac{\partial f_c}{\partial x}$$

$$\boxed{\mathbf{W}_k = \frac{\partial f_c}{\partial w}}$$

$$\mathbf{H}_k = \frac{\partial h_c}{\partial x}$$

$$\boxed{\mathbf{V}_k = \frac{\partial h_c}{\partial v}}$$

- Time update (prediction):

$$\hat{\mathbf{x}}_{k|k-1} = \mathbf{f}_d(\hat{\mathbf{x}}_{k-1|k-1}, \mathbf{u}_{k-1}, 0)$$

$$\mathbf{P}_{k|k-1} = \mathbf{F}_k \mathbf{P}_{k-1|k-1} \mathbf{F}'_k + \boxed{\mathbf{W}_k \mathbf{Q}_k \mathbf{W}'_k}$$

- Measurement update (correction):

$$\mathbf{K}_k = \mathbf{P}_{k|k-1} \mathbf{H}'_k (\mathbf{H}_k \mathbf{P}_{k|k-1} \mathbf{H}'_k + \boxed{\mathbf{V}_k \mathbf{R}_k \mathbf{V}'_k})^{-1}$$

$$\hat{\mathbf{x}}_{k|k} = \hat{\mathbf{x}}_{k|k-1} + \mathbf{K}_k [\mathbf{y}_k - \mathbf{h}_d(\hat{\mathbf{x}}_{k|k-1})]$$

$$\mathbf{P}_{k|k} = \mathbf{P}_{k|k-1} - \mathbf{K}_k \mathbf{H}_k \mathbf{P}_{k|k-1}$$

Euler angle method

- Sequenced roll, pitch, yaw
- Non-linear computations
- Gimbal lock singularities

$$\begin{matrix} \text{Roll} \\ \text{Pitch} \\ \text{Yaw} \end{matrix} \begin{pmatrix} \dot{\phi} \\ \dot{\theta} \\ \dot{\psi} \end{pmatrix} = \begin{bmatrix} 1 & \sin \phi \tan \theta & \cos \phi \tan \theta \\ 0 & \cos \phi & -\sin \phi \\ 0 & \sin \phi \sec \theta & \cos \phi \sec \theta \end{bmatrix} \begin{pmatrix} p \\ q \\ r \end{pmatrix}$$


\mathbf{H}



Discretization

$$\Phi(t_k) = \Phi(t_{k-1}) + \int_{t_{k-1}}^{t_k} \mathbf{H} \boldsymbol{\omega} dt$$

*Angular
rate: $\boldsymbol{\omega}$*

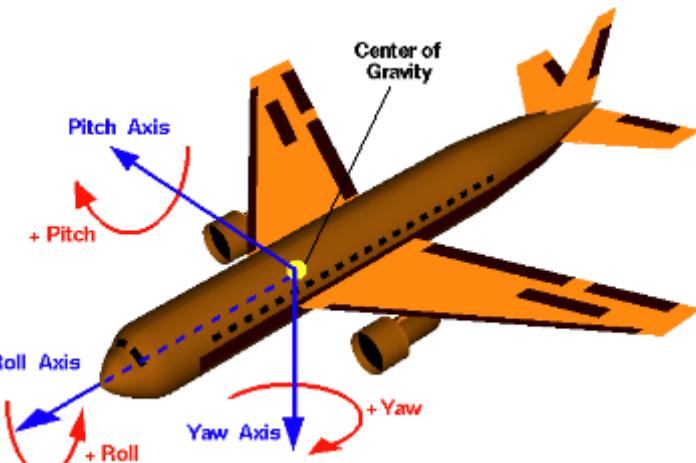

$\mathbf{F}_k, \mathbf{W}_k?$

$$\sec \theta = \frac{1}{\cos \theta}$$


EKF: Attitude and Heading Reference System

Quaternion method

$$i^2 = j^2 = k^2 = ijk = -1 \quad |\boldsymbol{v}| = 1 \quad |\boldsymbol{q}| = 1$$

$$\boldsymbol{q} = q_0 + q_1 \boldsymbol{i} + q_2 \boldsymbol{j} + q_3 \boldsymbol{k} = \cos \frac{\theta}{2} + \sin \frac{\theta}{2} (\boldsymbol{v})$$

$$\boldsymbol{q}^{-1} = q_0 - q_1 \boldsymbol{i} - q_2 \boldsymbol{j} - q_3 \boldsymbol{k} = \cos \frac{\theta}{2} - \sin \frac{\theta}{2} (\boldsymbol{v})$$

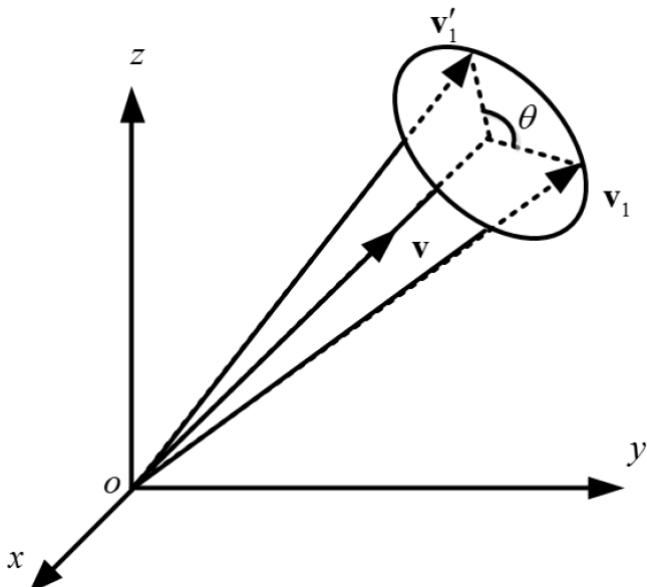

Symbol overload
NOT the same θ

$$q_0 = \cos \frac{\phi}{2} \cos \frac{\theta}{2} \cos \frac{\psi}{2} + \sin \frac{\phi}{2} \sin \frac{\theta}{2} \sin \frac{\psi}{2}$$

$$q_1 = \sin \frac{\phi}{2} \cos \frac{\theta}{2} \cos \frac{\psi}{2} - \cos \frac{\phi}{2} \sin \frac{\theta}{2} \sin \frac{\psi}{2}$$

$$q_2 = \cos \frac{\phi}{2} \sin \frac{\theta}{2} \cos \frac{\psi}{2} + \sin \frac{\phi}{2} \cos \frac{\theta}{2} \sin \frac{\psi}{2}$$

$$q_3 = \cos \frac{\phi}{2} \cos \frac{\theta}{2} \sin \frac{\psi}{2} - \sin \frac{\phi}{2} \sin \frac{\theta}{2} \cos \frac{\psi}{2}$$

$$\begin{bmatrix} 0 \\ x_2 \\ y_2 \\ z_2 \end{bmatrix} = \boldsymbol{q} \cdot \begin{bmatrix} 0 \\ x_1 \\ y_1 \\ z_1 \end{bmatrix} \cdot \boldsymbol{q}^{-1}$$

Rotate a point (x_1, y_1, z_1) around axis \boldsymbol{v} by angle θ and arrive at (x_2, y_2, z_2)


Quaternion method

$$\begin{pmatrix} \dot{q}_0 \\ \dot{q}_1 \\ \dot{q}_2 \\ \dot{q}_3 \end{pmatrix} = \frac{1}{2} \begin{bmatrix} 0 & -p & -q & -r \\ p & 0 & r & -q \\ q & -r & 0 & p \\ r & q & -p & 0 \end{bmatrix} \begin{pmatrix} q_0 \\ q_1 \\ q_2 \\ q_3 \end{pmatrix}$$

$$\dot{\mathbf{q}} = \frac{1}{2} \boldsymbol{\Omega} \mathbf{q}$$



Discretization

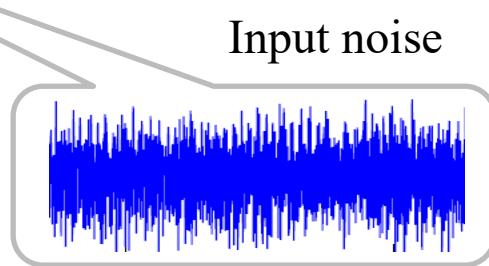

Re-normalization

$$\mathbf{q}(t_k) = \mathbf{q}(t_{k-1}) + \int_{t_{k-1}}^{t_k} \frac{1}{2} \boldsymbol{\Omega} \mathbf{q} dt \quad \rightarrow \quad q_0^2 + q_1^2 + q_2^2 + q_3^2 = 1$$


$\mathbf{F}_k, \mathbf{W}_k?$

Augmentation with gyro bias:

$$\begin{pmatrix} \dot{q}_0 \\ \dot{q}_1 \\ \dot{q}_2 \\ \dot{q}_3 \\ \dot{b}_p \\ \dot{b}_q \\ \dot{b}_r \end{pmatrix} = \begin{pmatrix} 0 & b_p - p & b_q - q & b_r - r \\ p + b_p & 0 & r - b_r & b_q - q \\ q + b_q & b_r - r & 0 & p - b_p \\ r + b_r & q - b_q & b_p - p & 0 \\ 0 & 0 & 0 & 0 \end{pmatrix} \begin{pmatrix} q_0 \\ q_1 \\ q_2 \\ q_3 \end{pmatrix}$$

$\mathbf{F}_k, \mathbf{W}_k$?

Update by accelerometer measurement:

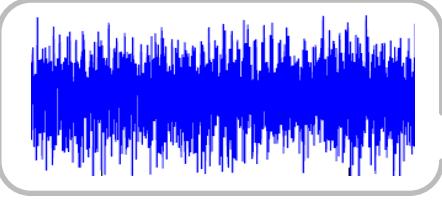


Measurement noise

$$\begin{pmatrix} f_u \\ f_v \\ f_w \end{pmatrix} = \begin{pmatrix} -2g(q_1q_3 - q_0q_2) \\ -2g(q_0q_1 + q_2q_3) \\ -g(q_0^2 - q_1^2 - q_2^2 + q_3^2) \end{pmatrix} \quad \mathbf{H}_k, \mathbf{V}_k?$$

Body acceleration

Update by magnetometer measurement:

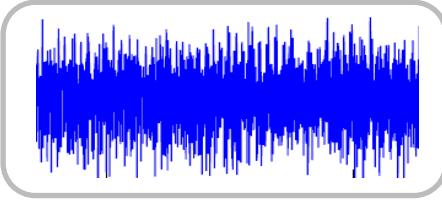


Measurement noise

$$\psi = \arctan \frac{2(q_1q_2 + q_0q_3)}{q_0^2 + q_1^2 - q_2^2 - q_3^2} \quad \mathbf{H}_k, \mathbf{V}_k?$$

Heading

EKF: Inertial Navigation System

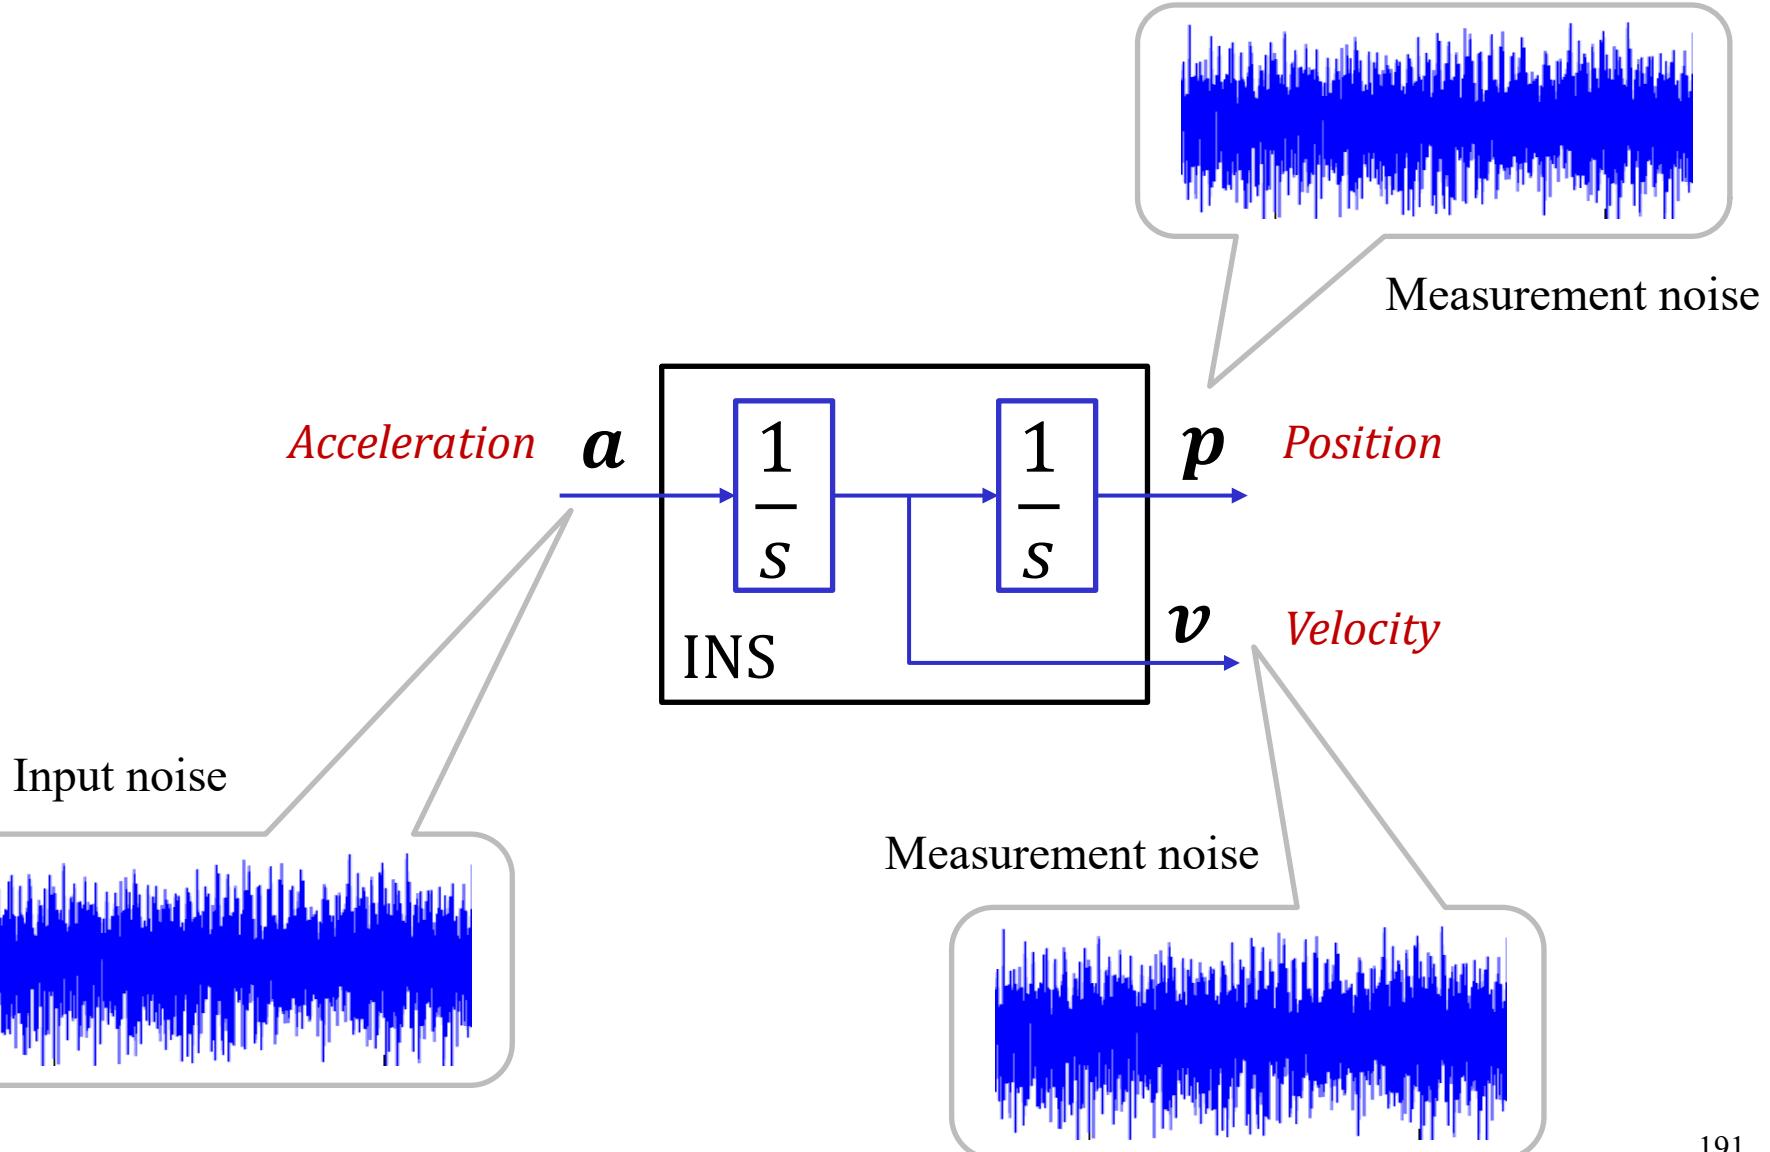

EKF: Inertial Navigation System

Process Model (works for navigation within small earth surface area):

$$\begin{bmatrix} x \\ y \\ z \\ v_x \\ v_y \\ v_z \\ b_x \\ b_y \\ b_z \end{bmatrix}_k = \underbrace{\begin{bmatrix} 1 & 0 & 0 & dt & 0 & 0 & -dt^2/2 & 0 & 0 \\ 0 & 1 & 0 & 0 & dt & 0 & 0 & -dt^2/2 & 0 \\ 0 & 0 & 1 & 0 & 0 & dt & 0 & 0 & -dt^2/2 \\ 0 & 0 & 0 & 1 & 0 & 0 & -dt & 0 & 0 \\ 0 & 0 & 0 & 0 & 1 & 0 & 0 & -dt & 0 \\ 0 & 0 & 0 & 0 & 0 & 1 & 0 & 0 & -dt \\ 0 & 0 & 0 & 0 & 0 & 0 & 1 & 0 & 0 \end{bmatrix} \begin{bmatrix} I_6 & 0 \\ 0 & R_{g/b} \end{bmatrix}}_{\boxed{F}} \begin{bmatrix} x \\ y \\ z \\ v_x \\ v_y \\ v_z \\ b_x \\ b_y \\ b_z \end{bmatrix}_{k-1} + \underbrace{\begin{bmatrix} dt^2/2 & 0 & 0 \\ 0 & dt^2/2 & 0 \\ 0 & 0 & dt^2/2 \\ dt & 0 & 0 \\ 0 & dt & 0 \\ 0 & 0 & dt \\ 0 & 0 & 0 \\ 0 & 0 & 0 \\ 0 & 0 & 0 \end{bmatrix} \begin{bmatrix} R_{g/b} & 0 \\ 0 & g \end{bmatrix}}_{\boxed{G}} \begin{bmatrix} a_x \\ a_y \\ a_z \\ g \end{bmatrix}_k$$

$$Q = G \begin{bmatrix} q_x & 0 & 0 & 0 \\ 0 & q_y & 0 & 0 \\ 0 & 0 & q_z & 0 \\ 0 & 0 & 0 & 0 \end{bmatrix} G'$$

Measurement Models:

$$\begin{bmatrix} p \\ v \\ b \end{bmatrix} = \begin{bmatrix} I & 0 & 0 \\ 0 & I & 0 \end{bmatrix} \begin{bmatrix} p \\ v \\ b \end{bmatrix}$$

$$[p] = [I \quad 0 \quad 0] \begin{bmatrix} p \\ v \\ b \end{bmatrix}$$

EKF: Inertial Navigation System

Process Model (works for long-range navigation on the earth):

Process Model:

$$\begin{pmatrix} \dot{\varphi} \\ \dot{\lambda} \\ \dot{h} \\ \dot{v}_x \\ \dot{v}_y \\ \dot{v}_z \\ \dot{b}_x \\ \dot{b}_y \\ \dot{b}_z \end{pmatrix} = \begin{pmatrix} \frac{v_x}{M+h} \\ \frac{v_y}{(N+h) \cos \varphi} \\ -v_z \\ -\frac{v_y^2 \sin \varphi}{(N+h) \cos \varphi} + \frac{v_x v_z}{M+h} + f_x - b_x \\ \frac{v_x v_y \sin \varphi}{(N+h) \cos \varphi} + \frac{v_y v_z}{N+h} + f_y - b_y \\ -\frac{v_y^2}{N+h} - \frac{v_x^2}{M+h} + g + f_z - b_z \\ 0 \\ 0 \\ 0 \end{pmatrix}$$

When a gimballed IMU is usually used, global frame acceleration can be measured directly


For a strapdown IMU, $b2g$ rotation need to be applied

Measurement Models:

$$[\mathbf{p}] = \begin{bmatrix} I & 0 & 0 \\ 0 & I & 0 \end{bmatrix} \begin{bmatrix} \mathbf{p} \\ \mathbf{v} \\ \mathbf{b} \end{bmatrix} \quad [\mathbf{p}] = [I \quad 0 \quad 0] \begin{bmatrix} \mathbf{p} \\ \mathbf{v} \\ \mathbf{b} \end{bmatrix}$$

What is SLAM?

SLAM is the process by which a robot or vehicle **builds a map** of the environment and, at the same time, uses this map to **compute its location**

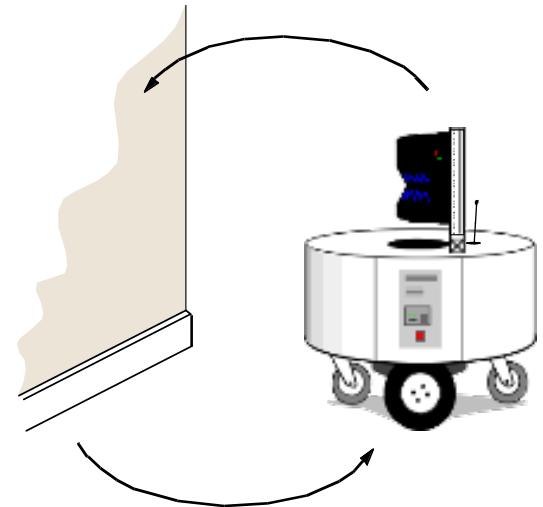

- SLAM is a chicken-or-egg problem:
 - A map is needed for localizing a robot
 - A pose estimate is needed to build a map
- SLAM is **the most fundamental problem** for robots to become **autonomous**
- The history of SLAM dates to the **mid-eighties** (stone-age of mobile robotics)

Given:

- The robot's controls

$$\mathbf{U}_{0:k} = \{\mathbf{u}_1, \mathbf{u}_2, \dots, \mathbf{u}_k\}$$

- Relative observations


Compute:

- Map of features

$$\mathbf{m} = \{\mathbf{m}_1, \mathbf{m}_2, \dots, \mathbf{m}_n\}$$

- Path of the robot

$$\mathbf{X}_{0:k} = \{\mathbf{x}_0, \mathbf{x}_1, \dots, \mathbf{x}_k\}$$

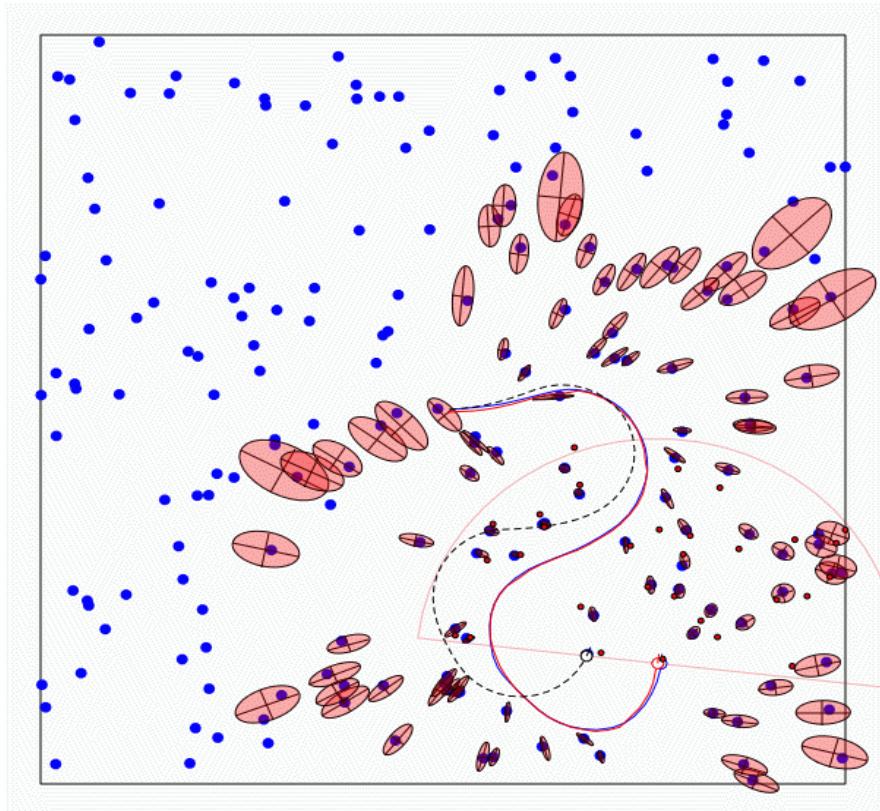

- **Full SLAM:** Estimates entire path and map!

$$p(x_{1:t}, m \mid z_{1:t}, u_{1:t})$$



- **Online SLAM:** Estimates most recent pose and map!

$$p(x_t, m \mid z_{1:t}, u_{1:t}) = \int \int \dots \int p(x_{1:t}, m \mid z_{1:t}, u_{1:t}) dx_1 dx_2 \dots dx_{t-1}$$

Integrations (marginalization) typically done one at a time




Map Representation of SLAM

- Grid maps or scans

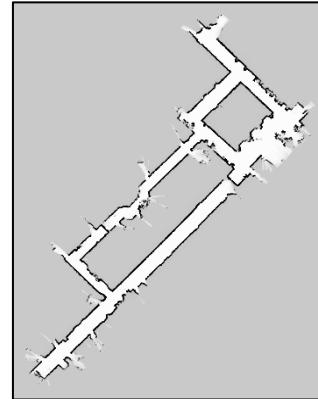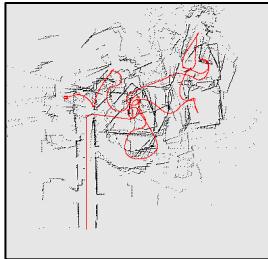

[Lu & Milios, 97; Gutmann, 98; Thrun 98; Burgard, 99; Konolige & Gutmann, 00; Thrun, 00; Arras, 99; Haehnel, 01;...]


- Landmark-based

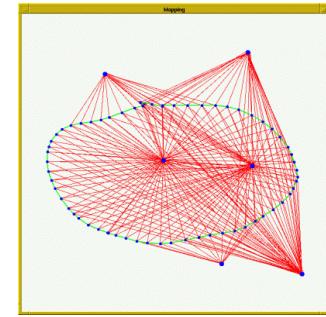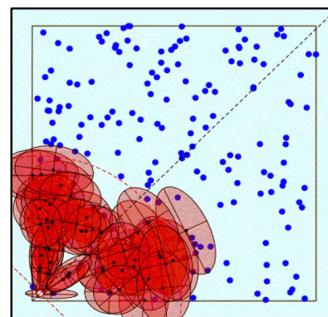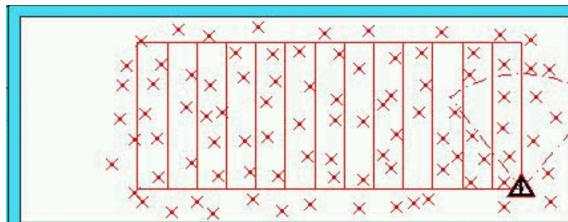

[Leonard et al., 98; Castelanos et al., 99; Dissanayake et al., 2001; Montemerlo et al., 2002;...]


Why is SLAM Challenging?

SLAM: robot position and map are both unknown

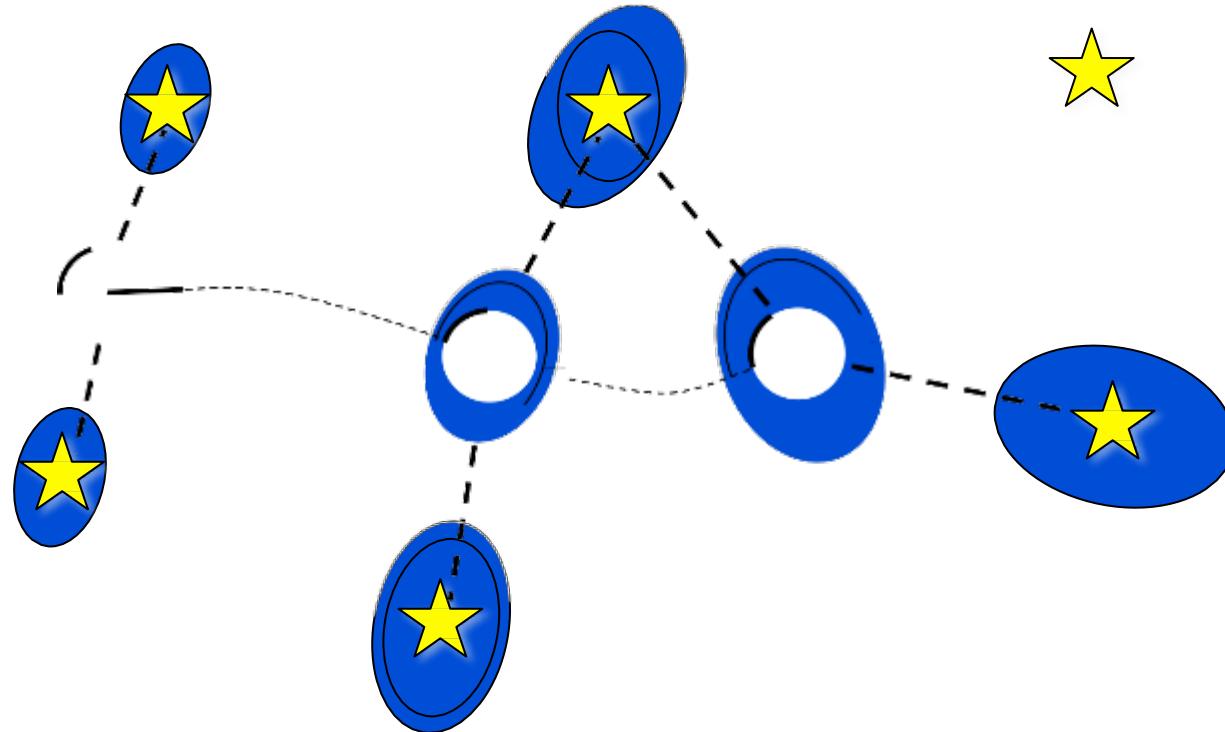

Robot position error correlates errors in the map



Why is SLAM Challenging?

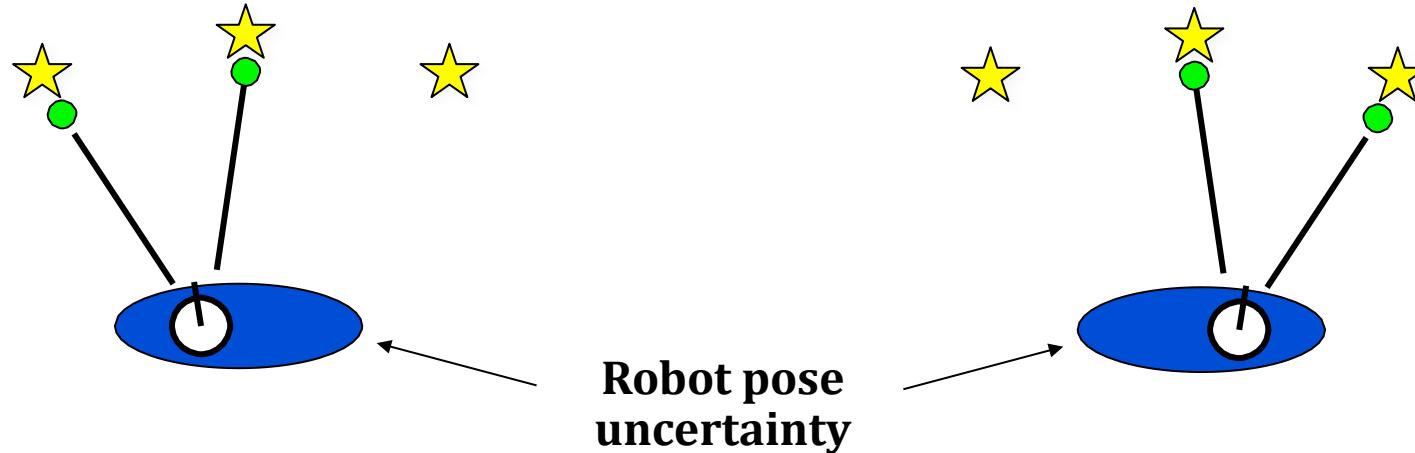

- In practice, the mapping between observations and landmarks is unknown
- Picking wrong data associations can have catastrophic consequences
- Pose error correlates data associations


Why is SLAM Challenging?

- Small local error accumulate to large global errors
- This is usually tolerable for navigation
- However, when **closing loops**, global error does matter

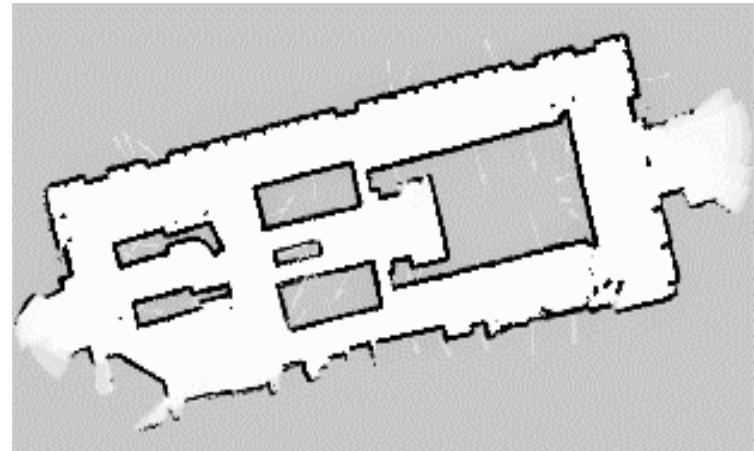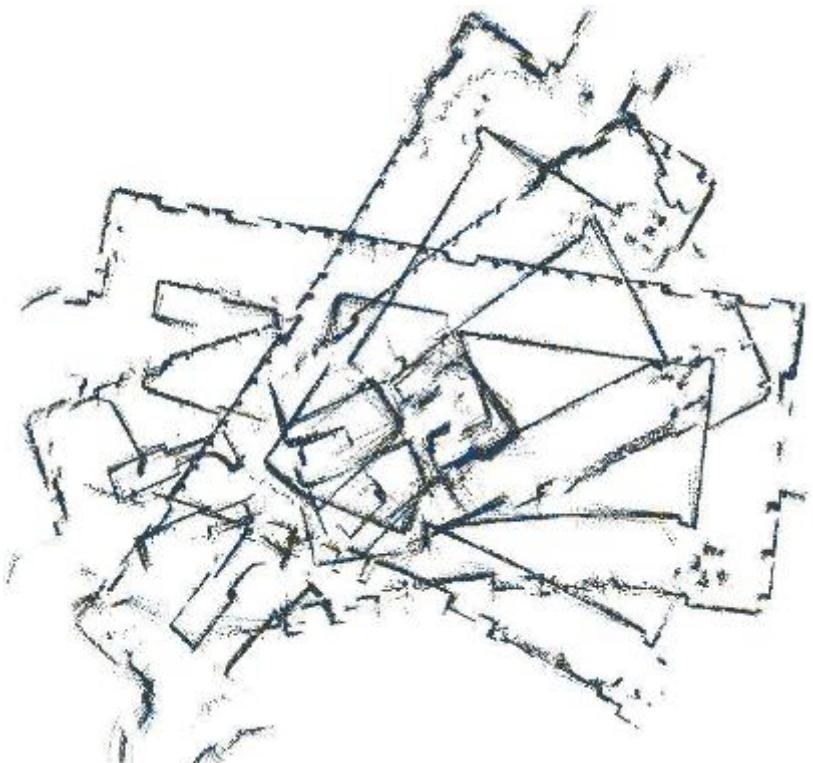


A Typical Simplified SLAM Process

- Assume that the robot uncertainty at its initial location is zero.
- From this position, the robot observes a feature which is mapped with an uncertainty related to the exteroceptive sensor error model

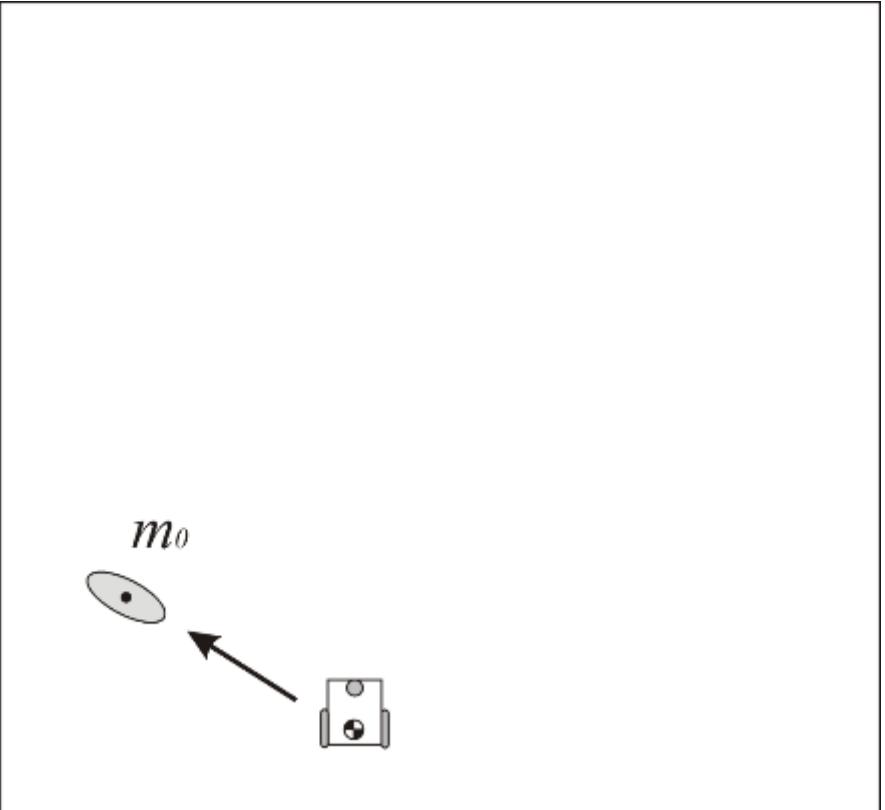


A Typical Simplified SLAM Process

- As the robot moves, its pose uncertainty increases under the effect of the errors introduced by its odometry

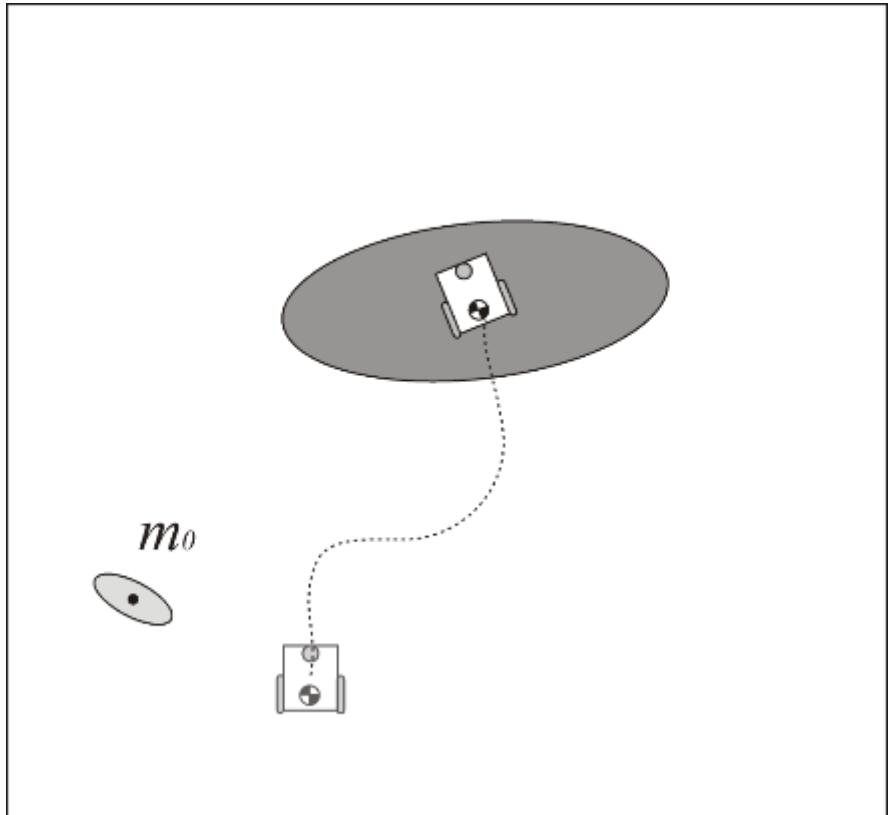


A Typical Simplified SLAM Process

- At this point, the robot observes two features and maps them with an uncertainty which results from the combination of measurement error with the robot pose and sensor uncertainty
- From this, we can notice that the map becomes correlated with the robot position estimate. Similarly, if the robot updates its position based on an observation of an imprecisely known feature in the map, the resulting position estimate becomes correlated with the feature location estimate.

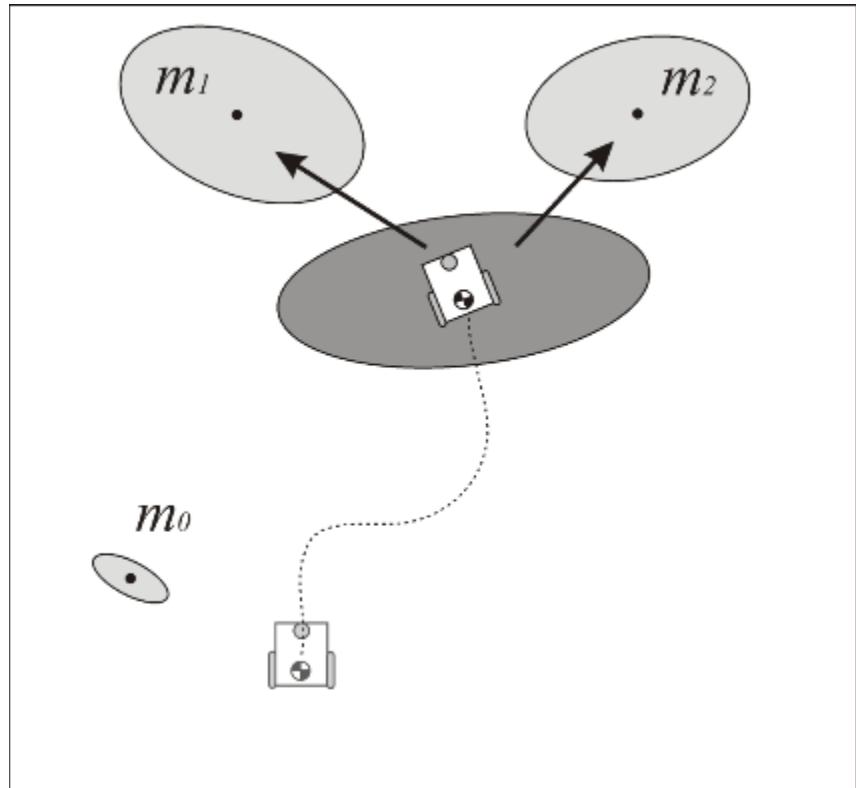


A Typical Simplified SLAM Process

- The robot moves again and its uncertainty increases under the effect of the errors introduced by the odometry

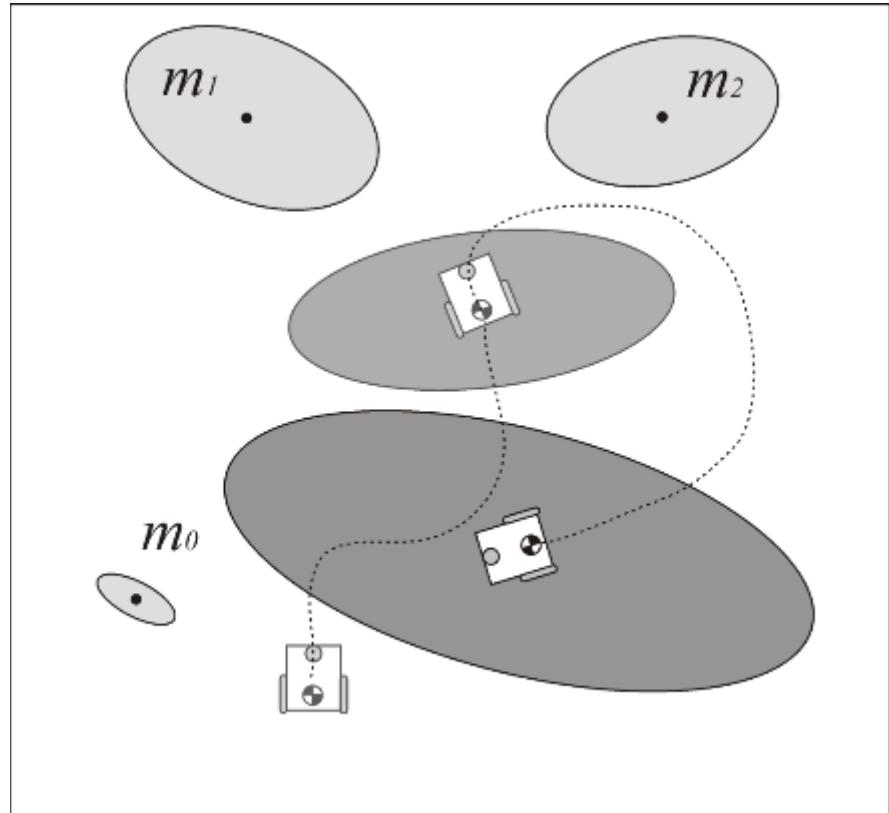

A Typical Simplified SLAM Process

- In order to reduce its uncertainty, the robot must observe features whose location is relatively well known. These features can be landmarks that the robot has already observed before.
- Such observation is called *loop closure detection*.
- When a loop closure is detected, the robot pose uncertainty shrinks. At the same time, the map is updated and the uncertainty of other observed features also reduce

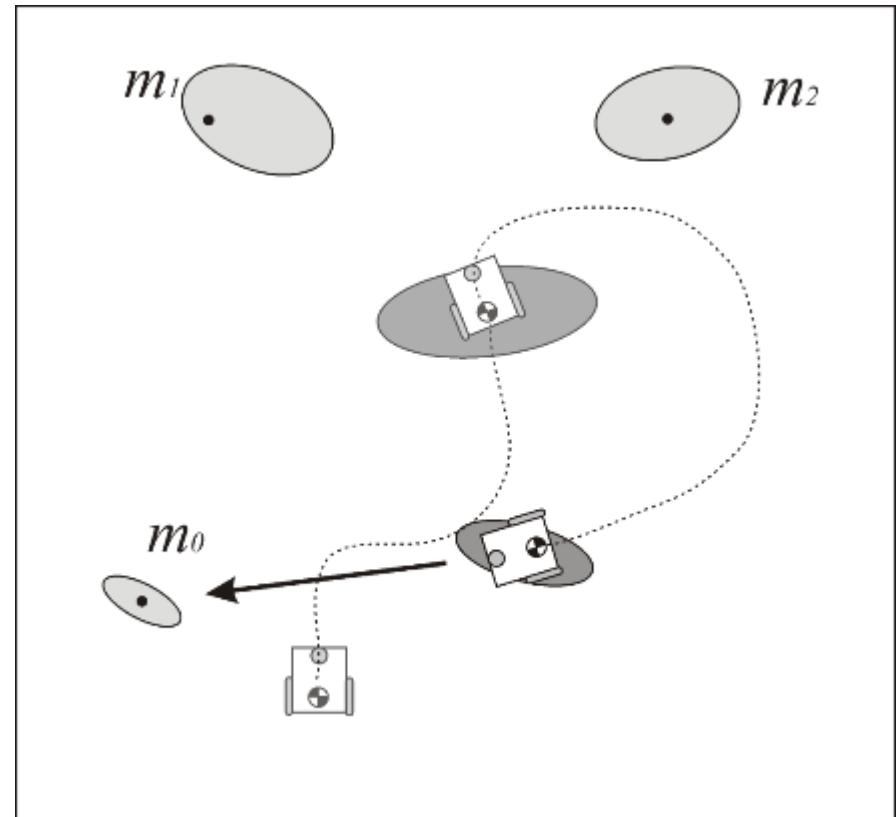

Most SLAM algorithms fall into three categories:

- 1. SLAM based on Extended Kalman Filter (EKF SLAM)**
- 2. SLAM based on Particle Filter (FastSLAM)**
- 3. SLAM based on Graph Optimization (GraphSLAM)**

- The EKF SLAM proceeds exactly like the standard EKF that we have seen for robot localization, with the only difference that it uses an **extended state vector** \mathbf{y}_t which comprises both the robot pose \mathbf{x}_t and the position of all the features \mathbf{m}_i in the map, that is:

$$\mathbf{y}_t = [x_t, m_1, \dots, m_{n-1}]^T$$

- If we sense 2D line-landmarks, the size of \mathbf{y}_t would be $3+2n$, since we need three variables to represent the robot pose and $2n$ variables for the n line-landmarks having vector components (α_i, r_i)

$$\mathbf{y}_t = [x_t, y_t, \theta_t, \alpha_0, r_0, \dots, \alpha_{n-1}, r_{n-1}]^T$$

- As the robot moves and takes measurements, the state vector and covariance matrix are updated using the standard equations of the extended Kalman filter

EKF SLAM: Prediction Step

- For the prediction step, the robot pose is updated using the odometric position update formula

$$\begin{bmatrix} \hat{x}_t \\ \hat{y}_t \\ \hat{\theta}_t \end{bmatrix} = \begin{bmatrix} x_{t-1} \\ y_{t-1} \\ \theta_{t-1} \end{bmatrix} + \begin{bmatrix} \frac{\Delta S_r + \Delta S_l}{2} \cos(\theta_{t-1} + \frac{\Delta S_r - \Delta S_l}{2b}) \\ \frac{\Delta S_r + \Delta S_l}{2} \sin(\theta_{t-1} + \frac{\Delta S_r - \Delta S_l}{2b}) \\ \frac{\Delta S_r - \Delta S_l}{b} \end{bmatrix}$$

- The position of the features, will conversely remain unchanged. Hence, we can write the prediction model of the EKF SLAM as

$$\begin{bmatrix} \hat{x}_t \\ \hat{y}_t \\ \hat{\theta}_t \\ \hat{\alpha}_0 \\ \hat{r}_0 \\ \dots \\ \hat{\alpha}_{n-1} \\ \hat{r}_{n-1} \end{bmatrix} = \begin{bmatrix} x_t \\ y_t \\ \theta_t \\ \alpha_0 \\ r_0 \\ \dots \\ \hat{\alpha}_{n-1} \\ r_{n-1} \end{bmatrix} + \begin{bmatrix} \frac{\Delta S_r + \Delta S_l}{2} \cos(\theta_{t-1} + \frac{\Delta S_r - \Delta S_l}{2b}) \\ \frac{\Delta S_r + \Delta S_l}{2} \sin(\theta_{t-1} + \frac{\Delta S_r - \Delta S_l}{2b}) \\ \frac{\Delta S_r - \Delta S_l}{b} \\ 0 \\ 0 \\ \dots \\ 0 \\ 0 \end{bmatrix}$$

$\hat{P}_t = F_y P_{t-1} F_y^T + F_u Q_t F_u^T$

EKF SLAM: Measurement Update Step

- The observation model is the same as the normal EKF localization:

$$\hat{z}_i = \begin{bmatrix} \hat{\alpha}_i \\ \hat{r}_i \end{bmatrix} = h(x)$$

- The measurement update step is also in the same manner as the conventional EKF:

$$y_t = \hat{y}_t + K_t(z - h(x))$$

$$P_t = \hat{P}_t - K_t \Sigma_{IN} {K_t}^T$$

where

$$\Sigma_{IN} = HPH^T + R$$

$$K_t = PH(\Sigma_{IN})^{-1}$$

- At the beginning of the process, when the robot/vehicle takes the first measurements, the covariance matrix is populated by assuming that these (initial) features are uncorrelated, which implies that the off-diagonal elements are all zeros.

$$P_0 = \begin{bmatrix} P_x & 0 & 0 & \dots & 0 & 0 \\ 0 & P_{m_0} & 0 & \dots & 0 & 0 \\ 0 & 0 & P_{m_1} & \dots & 0 & 0 \\ \dots & \dots & \dots & \dots & \dots & \dots \\ 0 & 0 & 0 & \dots & P_{m_{n-2}} & 0 \\ 0 & 0 & 0 & \dots & 0 & P_{m_{n-1}} \end{bmatrix}$$

EKF SLAM: Other Insights

- However, when the robot starts to move and takes new measurements, both the robot pose and features start becoming correlated.

$$\hat{P}_t = F_y P_{t-1} {F_y}^T + F_u Q_t {F_u}^T$$

- Accordingly, the covariance matrix becomes *non-sparse*.

$$P_0 = \begin{bmatrix} P_x & P_{xm_0} & P_{xm_1} & \dots & P_{xm_{n-2}} & P_{xm_{n-1}} \\ P_{xm_0} & P_{m_0} & P_{m_0m_1} & \dots & P_{m_0m_{n-2}} & P_{m_0m_{n-1}} \\ P_{xm_1} & P_{m_0m_1} & P_{m_1} & \dots & P_{m_1m_{n-2}} & P_{m_1m_{n-1}} \\ \dots & \dots & \dots & \dots & \dots & \dots \\ P_{xm_{n-2}} & P_{m_0m_{n-2}} & P_{m_1m_{n-2}} & \dots & P_{m_{n-2}} & P_{m_1m_{n-1}} \\ P_{xm_{n-1}} & P_{m_0m_{n-1}} & P_{m_1m_{n-1}} & \dots & P_{m_{n-2}m_{n-1}} & P_{m_{n-1}} \end{bmatrix}$$


- The existence of this correlation can be explained by recalling that the uncertainty of the features in the map depends not only on the uncertainty associated to the robot pose, but also on the uncertainty of other features that have been used to update the robot pose. This means that when a new feature is observed this contributes to correct not only the estimate of the robot pose but also that of the other features. The more observations are made, the more the correlations between the features will grow, the better the solution to SLAM.

This example is based on the following two papers:

- Andrew J. Davison, Real-Time Simultaneous Localization and Mapping with a Single Camera, ICCV 2003.
- Nicholas Molton, Andrew J. Davison and Ian Reid, Locally Planar Patch Features for Real-Time Structure from Motion, BMVC 2004.

EKF SLAM: A Vision-Based Example

- Take several images of the same object
- Visual features are extracted from all frames and matched among them
- Both camera motion and 3D structure can be recovered by fusing the overall information via solving an optimization problem
- In the computer vision community, this process is called Structure From Motion (SFM)

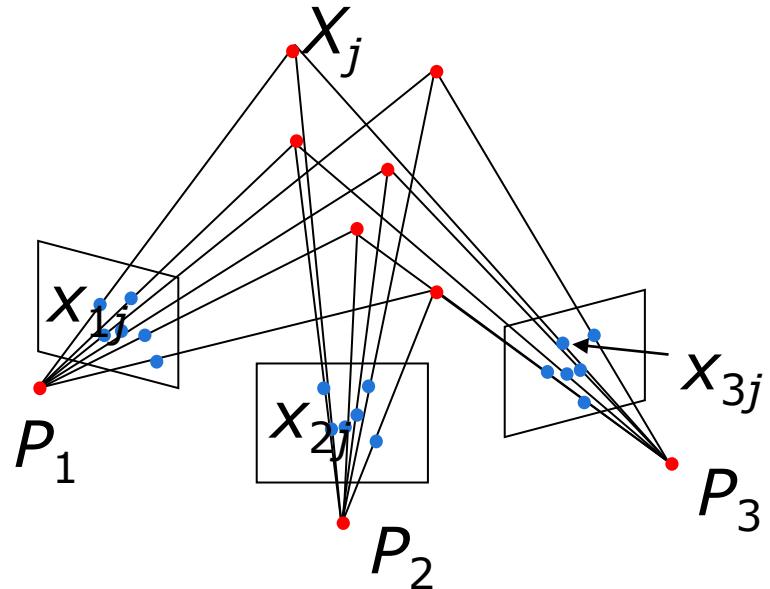

EKF SLAM: A Vision-Based Example



Visual feature extraction and matching


EKF SLAM: A Vision-Based Example

The state contains both the camera's pose and the 3D positions landmark points :

$$\hat{\mathbf{x}} = \begin{pmatrix} \hat{\mathbf{x}}_v \\ \hat{\mathbf{y}}_1 \\ \hat{\mathbf{y}}_2 \\ \vdots \end{pmatrix}$$

where

$$\mathbf{x}_v = \begin{pmatrix} \mathbf{r}^W \\ \mathbf{q}^{WR} \\ \mathbf{v}^W \\ \boldsymbol{\omega}^W \end{pmatrix}$$

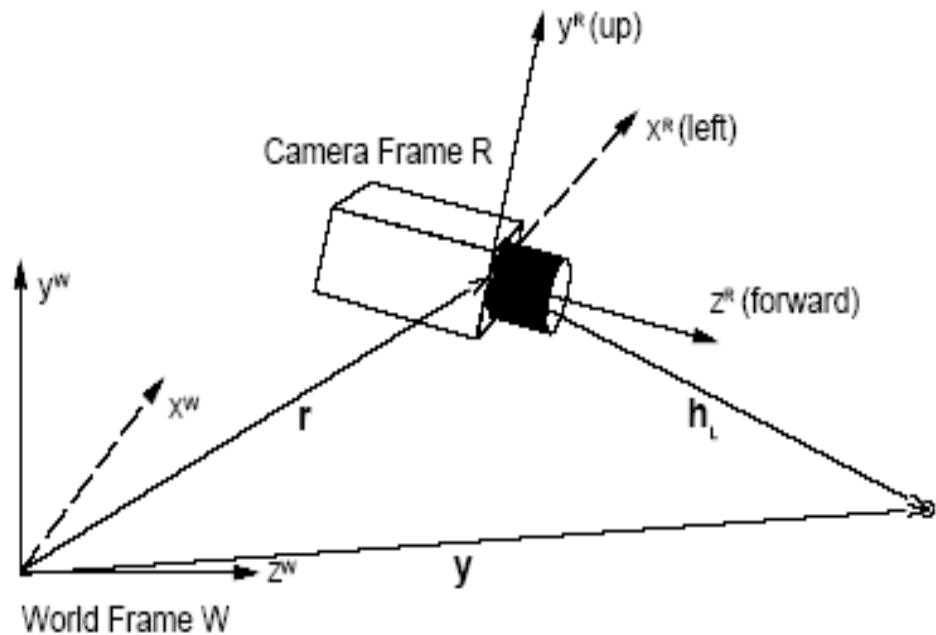

\mathbf{r} is the camera position $\mathbf{r} = (x, y, z)$ and \mathbf{q} is the camera orientation represented in quaternion. \mathbf{v} and $\boldsymbol{\omega}$ are the translational and rotational velocity.


EKF SLAM: A Vision-Based Example

$$\hat{x}_t = f(x_{t-1}, u_t)$$

$$\hat{P}_t = F_y P_{t-1} {F_y}^T + F_u Q_t {F_u}^T$$


How do we compute the next camera position?

$$\hat{x}_t = f(x_{t-1}, u_t) = ?$$

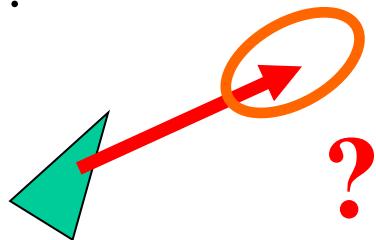

Davison uses a **constant velocity model**, i.e. motion at time $t-1$ equals to motion at time t .

EKF SLAM: A Vision-Based Example

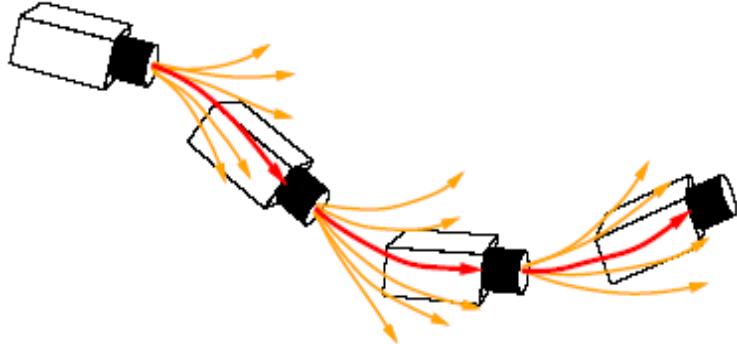

$$\mathbf{f}_v = \begin{pmatrix} \mathbf{r}_{new}^W \\ \mathbf{q}_{WR}^{new} \\ \mathbf{v}_W^{new} \\ \omega_W^{new} \end{pmatrix} = \begin{pmatrix} \mathbf{r}^W + (\mathbf{v}^W + \mathbf{V}^W)\Delta t \\ \mathbf{q}^{WR} \times \mathbf{q}((\omega^W + \Omega^W)\Delta t) \\ \mathbf{v}^W + \mathbf{V}^W \\ \omega^W + \Omega^W \end{pmatrix}$$

Model the acceleration as a process of zero mean and Gaussian distribution:

$$\mathbf{n} = \begin{pmatrix} \mathbf{V}^W \\ \Omega^W \end{pmatrix} = \begin{pmatrix} \mathbf{a}^W \Delta t \\ \alpha^W \Delta t \end{pmatrix}$$

By setting the covariance matrix of n to small or large values, we define the smoothness or rapidity of the motion we expect. In practice these values were used:

$$\begin{bmatrix} 4 \text{ m/s} \\ 6 \text{ rad/s} \end{bmatrix}$$

EKF SLAM: A Vision-Based Example

Observation: when a new feature is measured, both the camera pose and the covariance matrix will be updated as:

$$x_t = \hat{x}_t + K_t(z - h(x))$$

$$P_t = \hat{P}_t - K_t \Sigma_{IN} {K_t}^T$$

where


$$\Sigma_{IN} = HPH^T + R$$

$$K_t = PH(\Sigma_{IN})^{-1}$$


EKF SLAM: A Vision-Based Example

- By predicting the next camera pose, we can also predict where each features is going to appear:
- To compute the predicted observation we need to compute $h(x)$
- $h(x)$ is the perspective projection equation:

$$\lambda \begin{bmatrix} u \\ v \\ 1 \end{bmatrix} = \begin{bmatrix} \alpha_u & 0 & u_0 \\ 0 & \alpha_v & v_0 \\ 0 & 0 & 1 \end{bmatrix} \cdot R \begin{bmatrix} x_w \\ y_w \\ z_w \end{bmatrix} + T$$

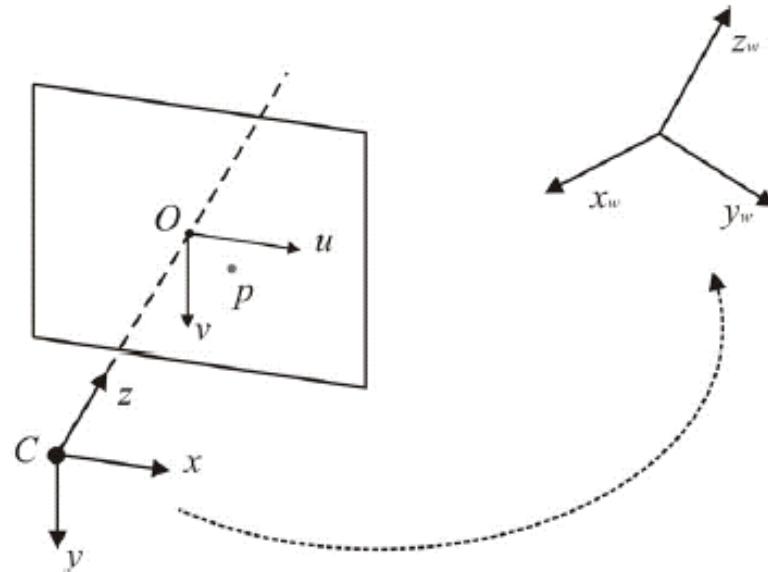

EKF SLAM: A Vision-Based Example

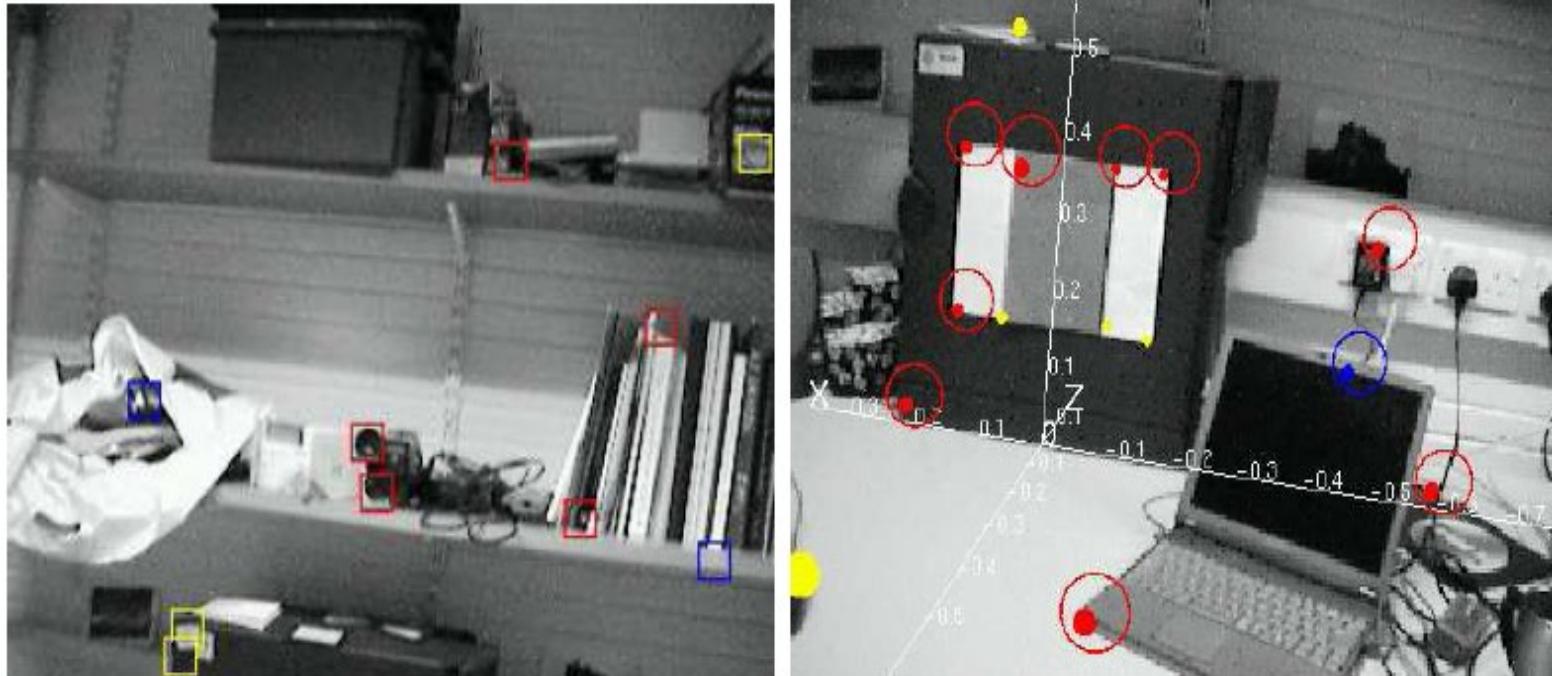


- At each frame, the features occurring at previous step are searched in the elliptic region where they are expected to be according to the motion model (Normalized Sum of Square Differences is used for matching)
- Once the features are matched, the entire state of the system is updated according to EKF

EKF SLAM: Drawbacks

- The state vector in EKF SLAM is much larger than the state vector in EKF localization where only the robot pose was being updated. This makes EKF SLAM computationally very expensive.
- Maps in EKF SLAM are feature-based. As new features are observed, they are added to the state vector. Thus, the noise covariance matrix grows quadratically, with size $(3+2n)^2$. For computational reasons, the size of the map is therefore usually limited to less than 1,000 features.
- EKF assumes that all noises are Gaussian distributed. This assumption can be too strong for some practical cases.

FastSLAM

- It solves the SLAM problem using particle filters
- Each particle k: Estimate mean and covariance of robot path and each of the n features: $P^{[k]}(X_t^{[k]}, \mu^{[k]}; \Sigma_1^{[k]} \dots \mu^{[k]} \Sigma_n^{[k]})$

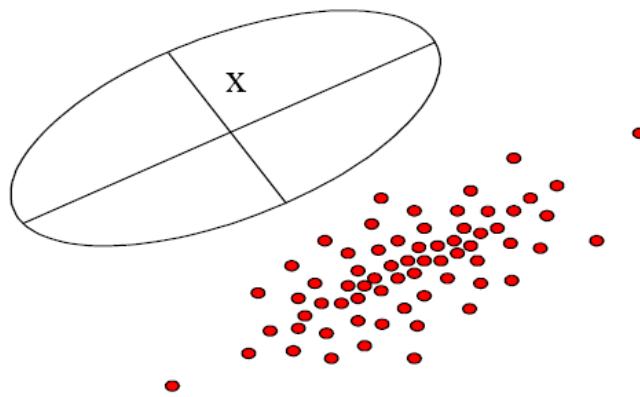


probability distribution (ellipse) as particle set (red dots)

Particle filter update

- In the update step a new particle distribution, given motion model and controls applied is generated.

a) For each particle:

1. Compare particle's prediction of measurements with actual measurements
2. Particles whose predictions match the measurements better are given a higher weight

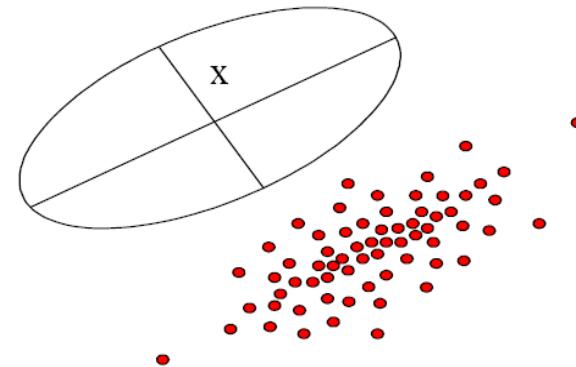


b) Filter resample:

- Resample particles based on weight
- Filter resample
 - Assign each particle a weight depending on how well its estimate of the state agrees with the measurements and randomly draw particles from previous distribution based on weights creating a new distribution.

FastSLAM: Particle Set

The robot posterior is solved using a Rao Blackwellized particle filtering using landmarks. Each landmark estimation is represented by a 2x2 EKF (Extended Kalman Filter). Each particle is “independent” (due the factorization) from each other and maintains the estimate of M landmark positions.

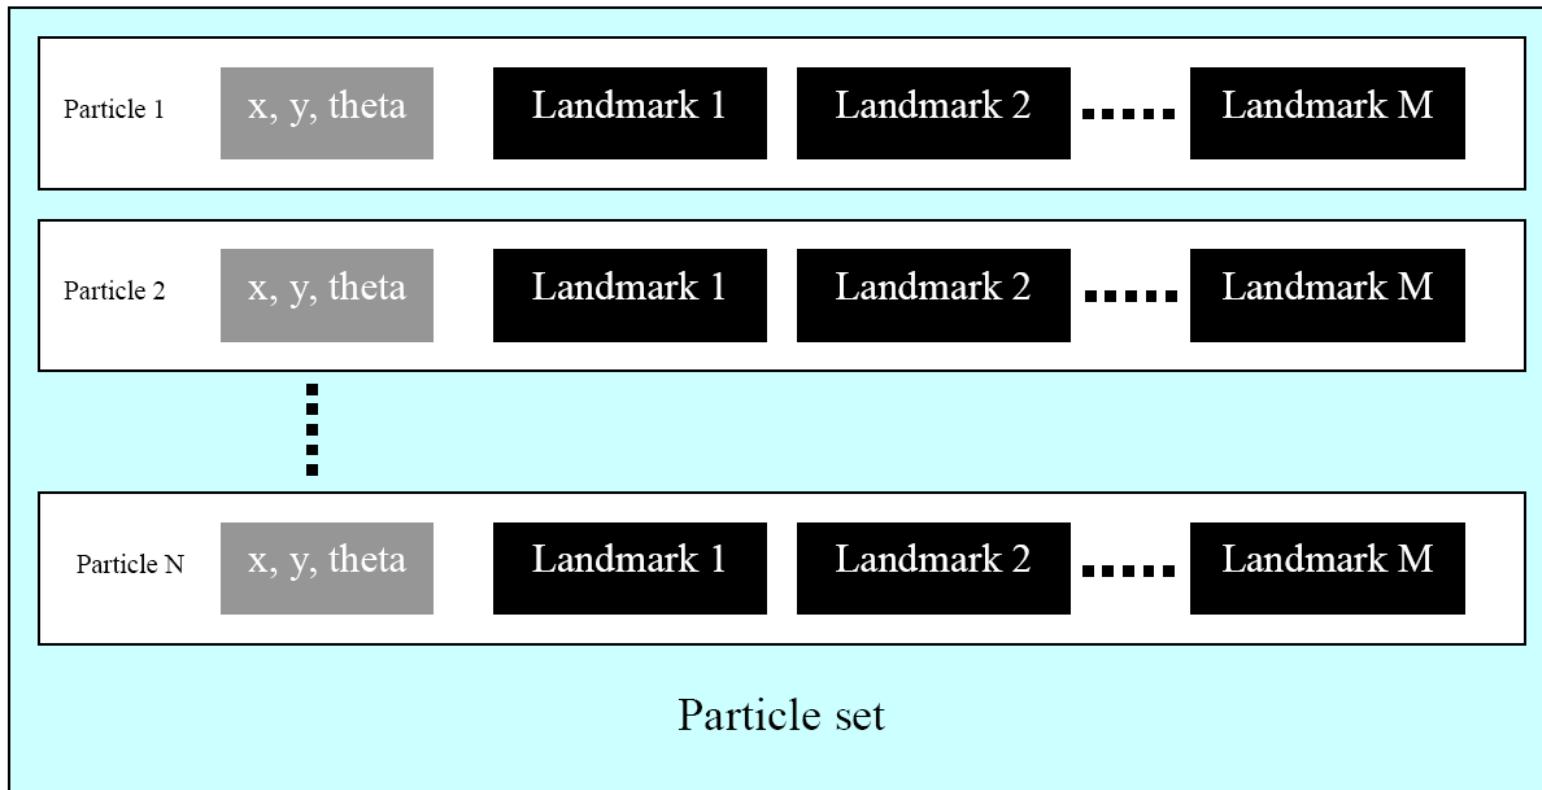

FastSLAM: A LIDAR-Based Example

- Dimensions: 35 cm in height and 86 cm in diagonal length (tip to tip)
- Bare platform weight: 1.3 kg
- Maximum take-off weight: 2.9 kg
- Endurance: 10 – 15 min hovering



- Power source: 12 VDC
- Light source: Semiconductor laser diode ($\lambda = 905 \text{ nm}$)
- Detection Range: 30 m, 270°
- Accuracy: $\pm 30\text{mm}$ (0.1 to 10 m), $\pm 50\text{mm}$ (10 to 30 m)
- Angular Resolution: 0.25°
- Scan Time: 25 msec/scan
- Interface: USB2.0
- Weight: 370 g



FastSLAM: A LIDAR-Based Example


Feature extraction:

Lines:

$$z_l = \mathcal{N}(r, \theta; \mu_l^z, \Sigma_l^z)$$

$$\mu_l^z = \{\mu_r, \mu_\theta\}$$

$$\Sigma_l^z = \begin{bmatrix} \sigma_{rr} & \sigma_{r\theta} \\ \sigma_{\theta r} & \sigma_{\theta\theta} \end{bmatrix}$$

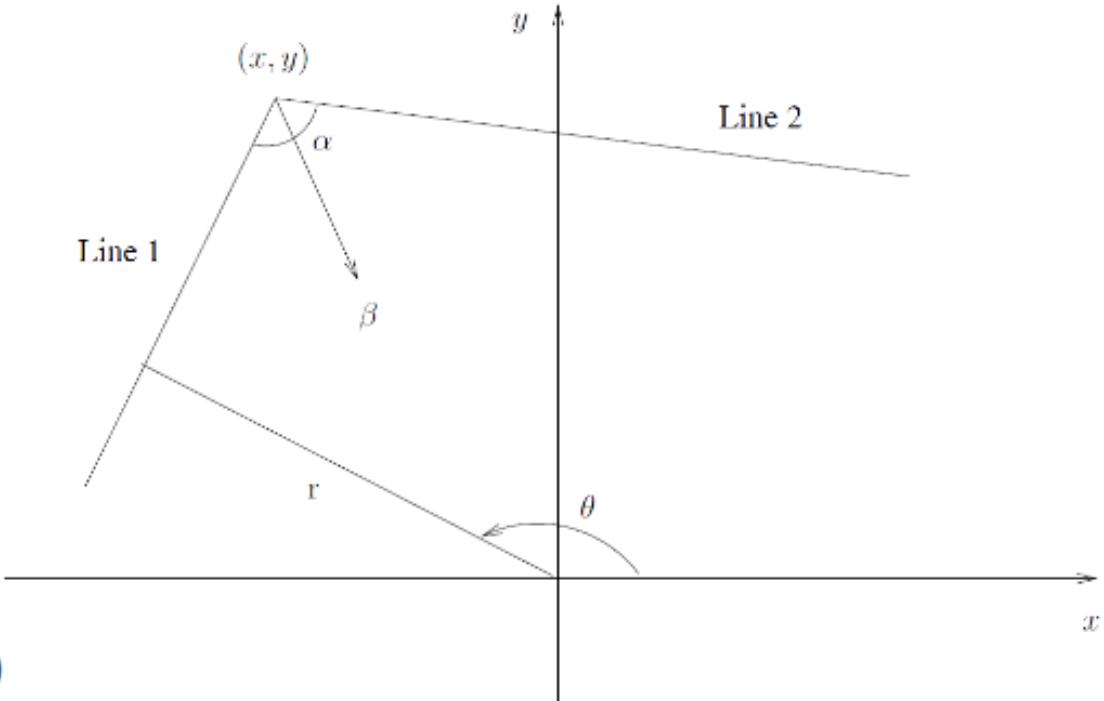

Corners:

$$z_c = \mathcal{N}(x, y, \alpha, \beta; \mu_c^z, \Sigma_c^z)$$


$$\mu_c^z = \{\mu_x, \mu_y, \mu_\alpha, \mu_\beta\}$$

$$\Sigma_c^z = \begin{bmatrix} \sigma_{xx} & \sigma_{xy} & \sigma_{x\alpha} & \sigma_{x\beta} \\ \sigma_{yx} & \sigma_{yy} & \sigma_{y\alpha} & \sigma_{y\beta} \\ \sigma_{\alpha x} & \sigma_{\alpha y} & \sigma_{\alpha\alpha} & \sigma_{\alpha\beta} \\ \sigma_{\beta x} & \sigma_{\beta y} & \sigma_{\beta\alpha} & \sigma_{\beta\beta} \end{bmatrix}$$

Feature extraction:

Clustering - *Split-and-Merge*:

1. Start with all input points
2. Connect the first point and the last point with a line
3. Calculate the perpendicular distances of all other intermediate points with respect to the line segment obtained in the previous step
4. Search for the point that has the largest distance and compare this distance with a defined threshold
5. If the maximum distance is less than the threshold, all points between the first point and the last point belong to the same line; Else, recursively call Step 1 with (first point, max point) and (max point, last point)

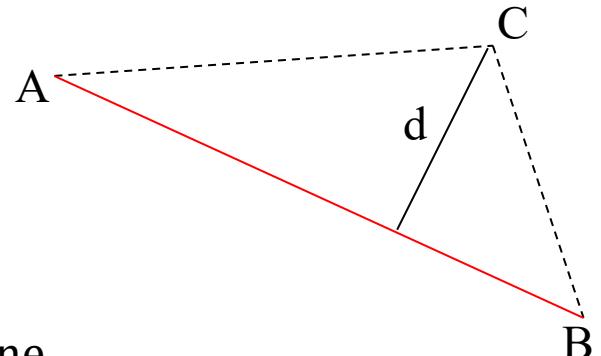

Feature extraction:

➤ Line fitting and covariance estimation

(S. T. Pfister, S. I. Roumeliotis and J. W. Burdick, "Weighted Line Fitting Algorithms for Mobile Robot Map Building and Efficient Data Representation," International Conference on Robotics and Automation, pp. 1304-1311, 2004)



1. Assume an initial heading of the line by connecting the first and the last point
2. Find the radial position and its variance based on the weight obtained by projecting uncertainties of the points onto the perpendicular direction of the line
3. Calculate the iterative increment for heading
4. Repeat Step 1 – 3 until heading converges
5. Calculate the remaining terms in the covariance matrix for line parameters

➤ Corner extraction and covariance estimation

(P. Nunez, R. Vazquez-Martin, J. C. del Toro, A. Bandera and F. Sandoval, "Natural Landmark Extraction for Mobile Robot Navigation Based On an Adaptive Curvature Estimation," Journal of Robotics and Autonomous Systems, Vol. 56, pp. 247-264, 2008)

FastSLAM: A LIDAR-Based Example

Feature extraction:

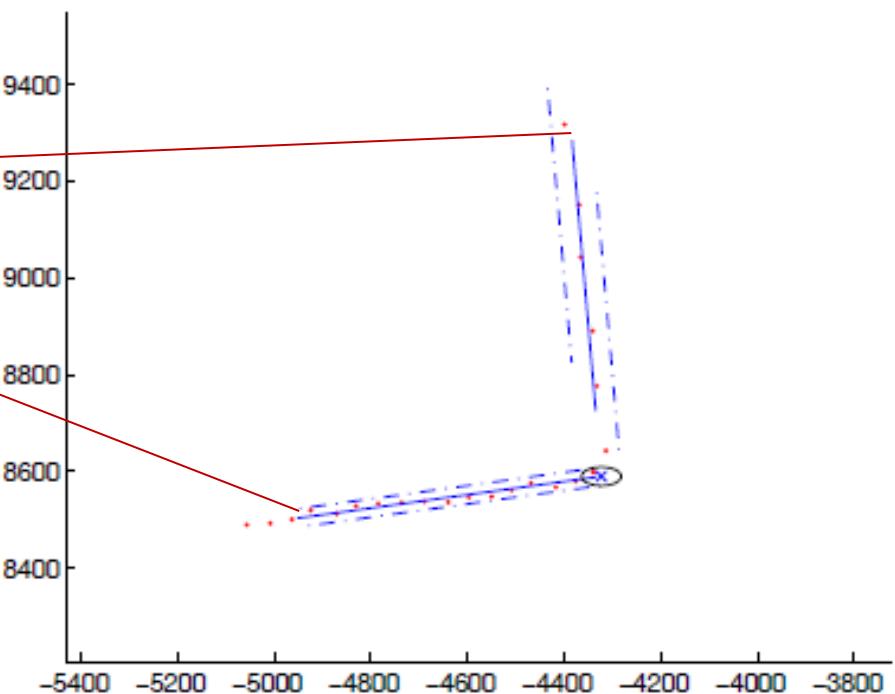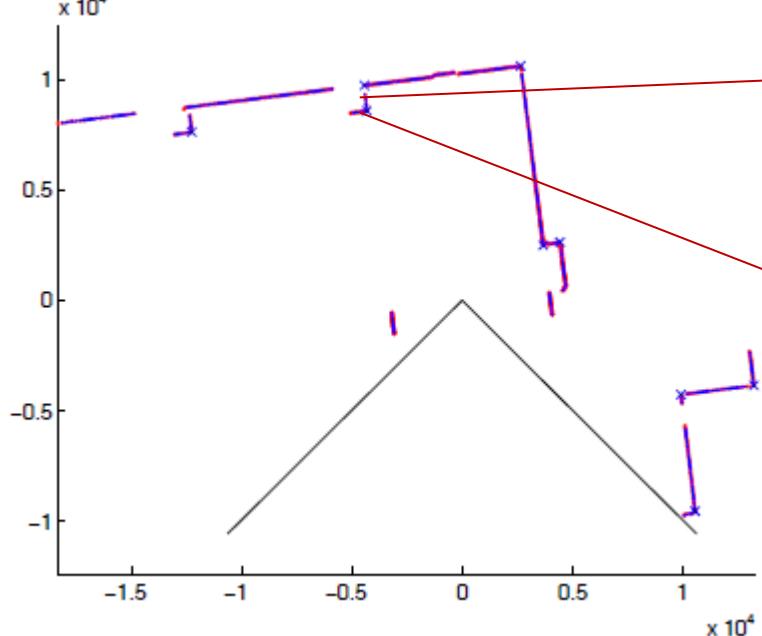

Motion Estimation and Proposal Generation

1. Check corner feature correspondences based on pair-wise Mahalanobis distances
2. Organize corner features in such a way that p_i in the previous frame corresponds to q_i in the current frame
3. Calculate the centroid of the feature points for both frames, denoted by \bar{p} and \bar{q}
4. Form matrix $P = [p_1 - \bar{p}, p_2 - \bar{p}, p_3 - \bar{p}, \dots, p_{\max} - \bar{p}]$
5. Form matrix $Q = [q_1 - \bar{q}, q_2 - \bar{q}, q_3 - \bar{q}, \dots, q_{\max} - \bar{q}]$
6. Let $[U, S, V] = SVD(PQ^T)$ and $d = sign(\det(VU^T))$
7. Then $R = V[1 \ 0; 0 \ d]U^T$ and $T = R\bar{p} - \bar{q}$, that leads to $\bar{c}_t = -\text{atan2}(R(1), R(2))$ and $\Delta\bar{x}_t = T(1), \Delta\bar{y}_t = T(2)$

FastSLAM: A LIDAR-Based Example

Motion Estimation and Proposal Generation

$$\Delta c_t^{[m]} = \Delta \bar{c}_t (1 + \alpha_1 \text{randN}(1)) + \alpha_2 \text{randN}(1)$$


$$\Delta x_t^{[m]} = \Delta \bar{x}_t (1 + \alpha_3 \text{randN}(1)) + \alpha_4 \text{randN}(1)$$

$$\Delta y_t^{[m]} = \Delta \bar{y}_t (1 + \alpha_3 \text{randN}(1)) + \alpha_4 \text{randN}(1)$$

$$P_t^{[m]}.c = P_t^{[m]}.c + \Delta c_t^{[m]}$$

$$P_t^{[m]}.x = P_t^{[m]}.x + \cos(P_t^{[m]}.c) \Delta x_t^{[m]} - \sin(P_t^{[m]}.c) \Delta y_t^{[m]}$$

$$P_t^{[m]}.y = P_t^{[m]}.y + \sin(P_t^{[m]}.c) \Delta x_t^{[m]} + \cos(P_t^{[m]}.c) \Delta y_t^{[m]}$$

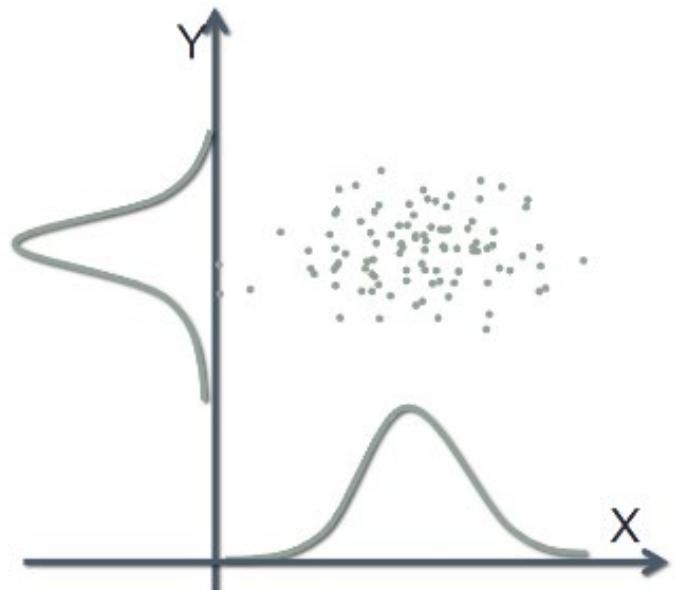

Per-particle Data Association:

- Every particle has its own data association hypothesis
- Extra robustness but worse complexity
- Methods of data association:
 1. Consider each feature independently
 - Individual compatibility nearest neighbor (ICNN)
 2. Consistent association – no duplicated associations
 - Sequential compatibility nearest neighbor (SCNN)
 - Joint compatibility branch and bound (JCBB)
 3. Consider data association in the previous iteration, maximize the whole probability history

Per-particle Measurement Update:

No. of corners M particles

|
 $(N_c + N_l) \times M$ EKFs:
|

No. of lines



$$\begin{aligned}
Z_{n,t} &= \Sigma_{n,t-1}^{[m]} + \Sigma_{n,t}^z \\
K_{n,t}^{[m]} &= \Sigma_{n,t-1}^{[m]} Z_{n,t}^{-1} \\
\mu_{n,t}^{[m]} &= \mu_{n,t-1}^{[m]} + K_{n,t}^{[m]} (z_{n,t} - \hat{z}_{n,t}) \\
\Sigma_{n,t}^{[m]} &= (I - K_{n,t}^{[m]}) \Sigma_{n,t-1}
\end{aligned}$$

Particle Importance Weighting and Resampling:

$$w_t^{[m]} = \frac{1}{\sqrt{2\pi Z_{n,t}}} \exp\left\{-\frac{1}{2}(z_{n,t} - \hat{z}_{n,t})^T [Z_{n,t}]^{-1} (z_{n,t} - \hat{z}_{n,t})\right\}$$

1. Calculate W , the total weight of all M particles
2. Generate a random number W' between 0 and W
3. Deduct W by $w_t^{[1]}, w_t^{[2]}, w_t^{[3]}, \dots, w_t^{[i]}$ one by one until the result hits W'
4. Particle i in the old set will be chosen as one element in the new set
5. Repeat Step 2 to Step 4 M times to generate a whole new set of M particles


FastSLAM: A LIDAR-Based Example

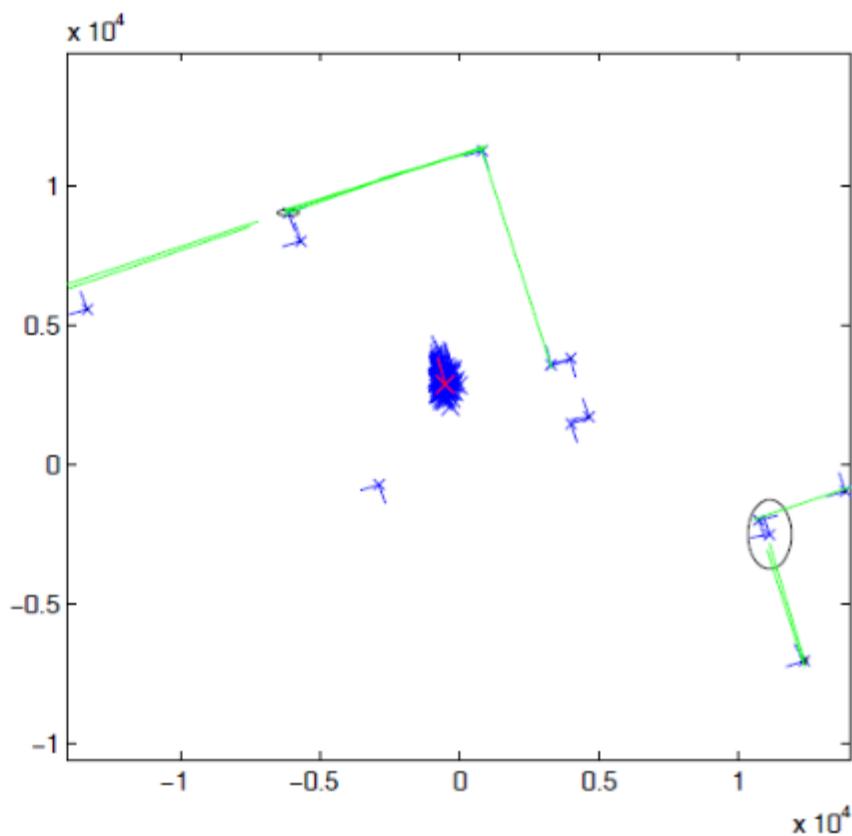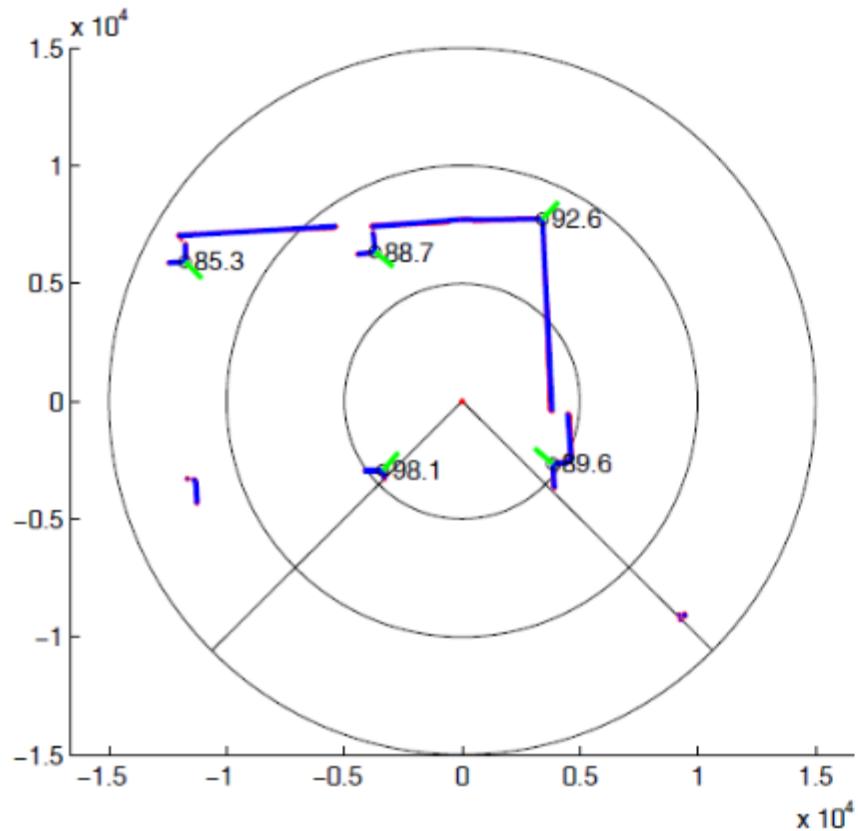


FastSLAM: A LIDAR-Based Example



- **GraphSLAM** was born from the intuition that the SLAM problem can be interpreted as a sparse graph of **nodes and constraints** among the nodes.
- The nodes of the graph are the robot locations and the features in the map.
- The constraints are the relative position between consecutive robot poses, (given by the odometry input \mathbf{u}) and the relative position between the robot locations and the features observed from those locations.

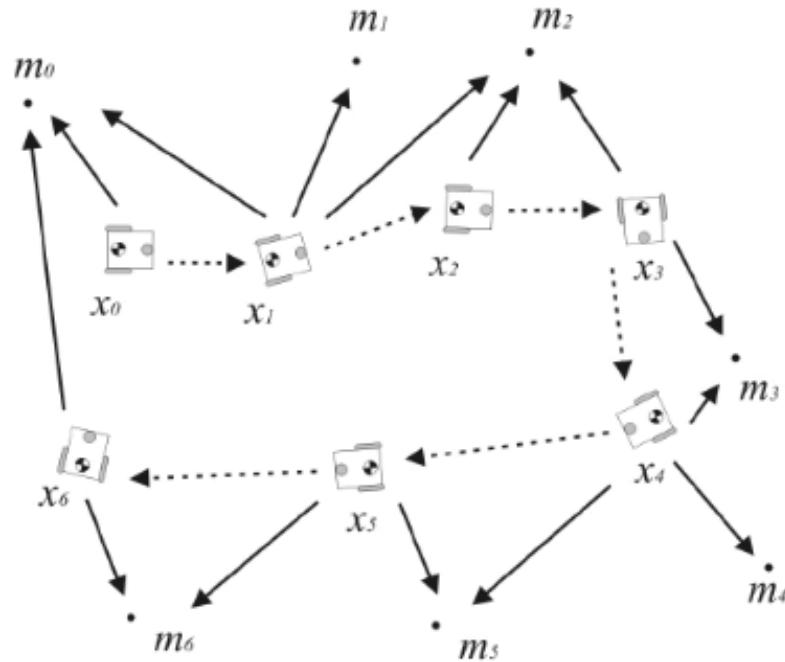

- The critical idea of GraphSLAM is that the constraints are not rigid constraints but soft/flexible constraints.
- It is by relaxing these constraints that we can compute the solution to the full SLAM problem, that is, the best estimate of the robot path and the environment map. By saying this in other words, GraphSLAM represents robot locations and features as the nodes of an elastic net. The SLAM solution can then be found by computing the state of minimal energy of this net.

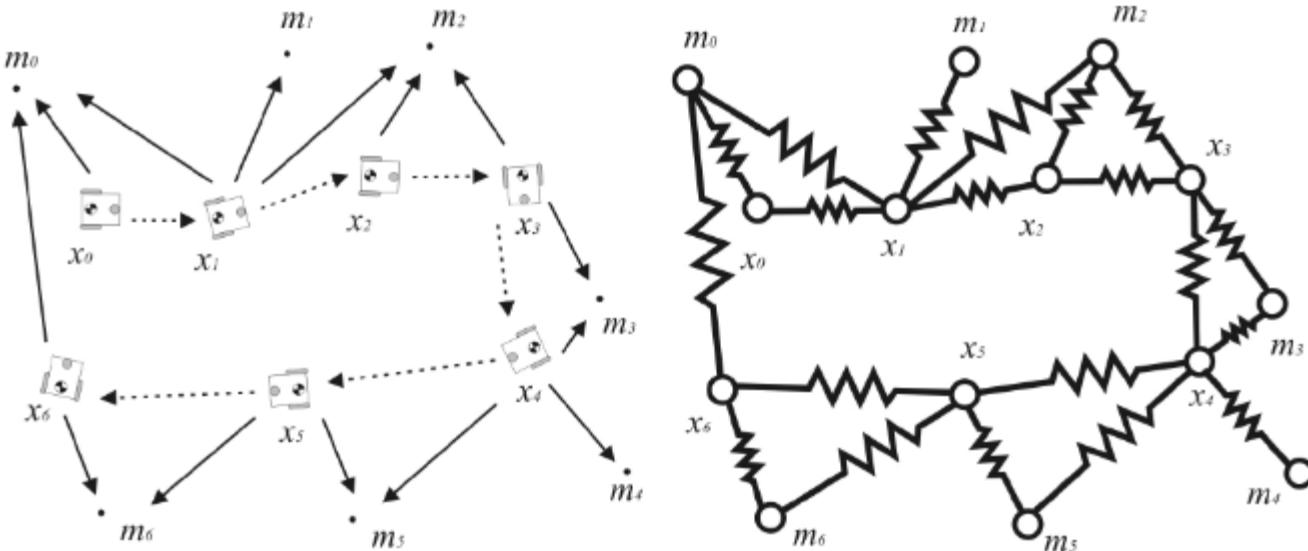



Thank You!

