
Corrected Version for Buildathon

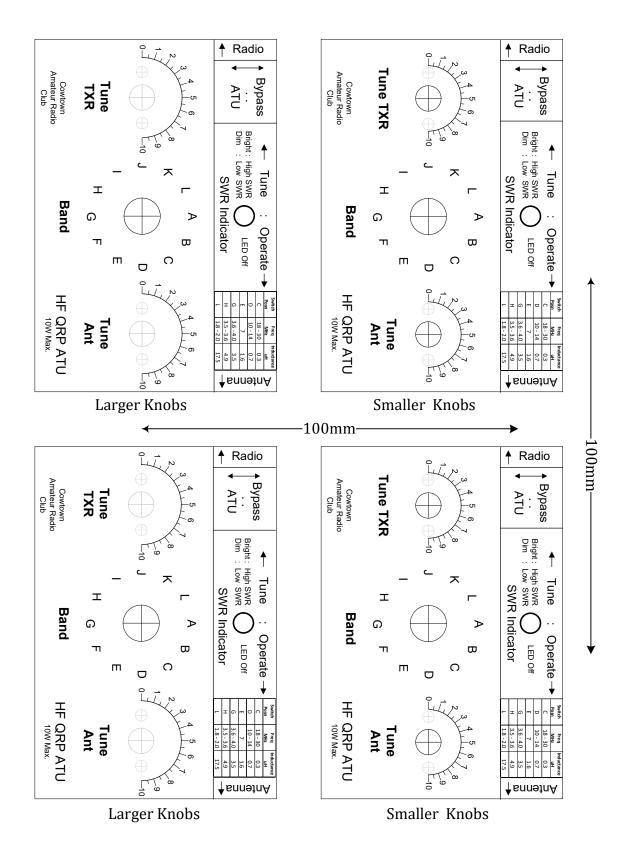

Cut out and laminate – then stick to front panel with double sided tape after carefully removing holes with a sharp modeling knife