
When Printing ensure that the 100mm Lines are scaled to exactly 100mm

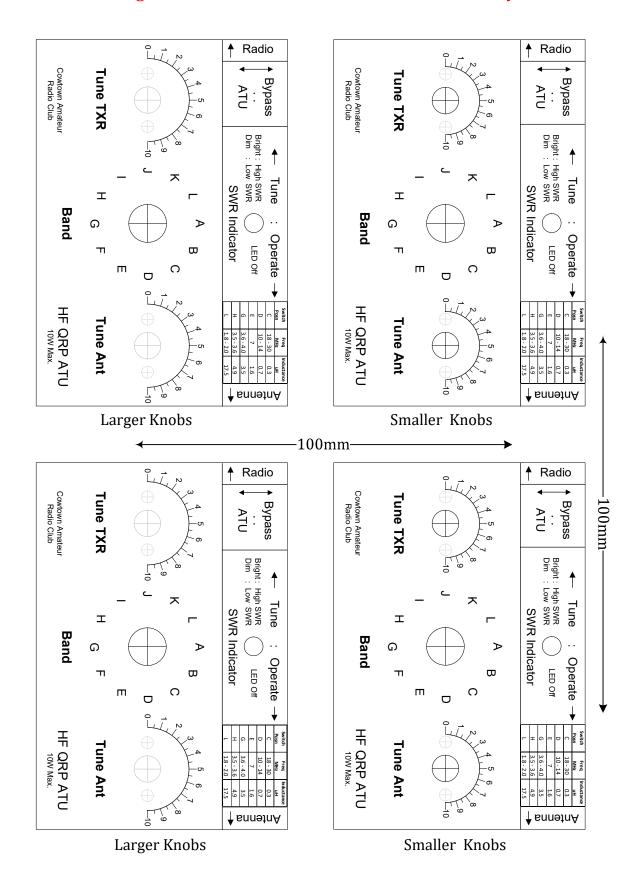

Cut out and laminate – then stick to front panel with double sided tape after carefully removing holes with a sharp modeling knife