

## Damper 3D printed spacer M5x4 plastic-headed grub screw M5x4 flat-headed grub screw


Content

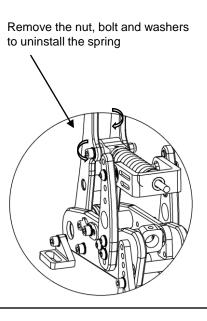


Step 1: Remove the spring

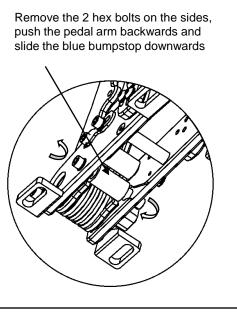



**Step 2: Remove the bumpstop** 

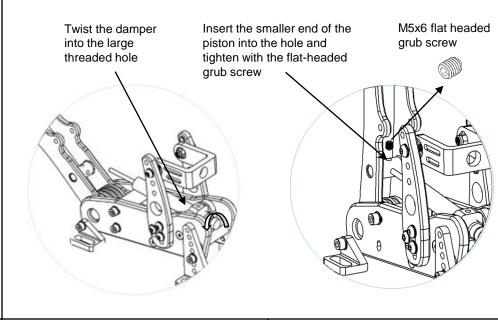


**Step 3: Install the damper** 

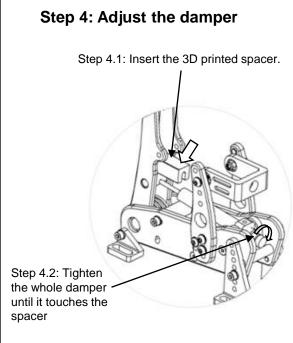

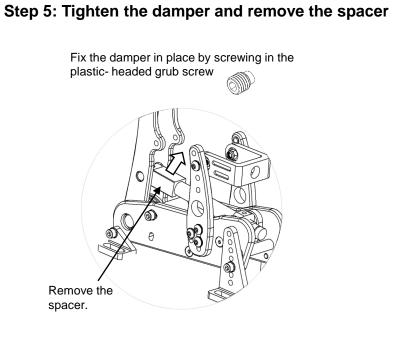

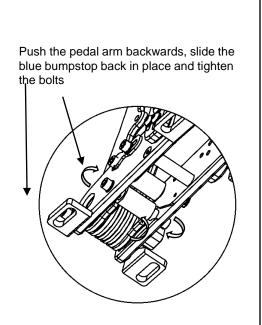

Step 6: Re-install the bumpstop.

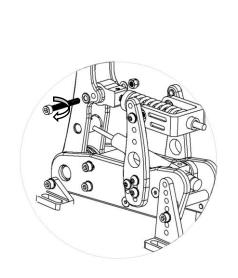

**Step 7: Re-install the springs**