


Content Damper 3D printed spacer M5x4 plasticheaded grub screw M5x6 flatheaded grub screw

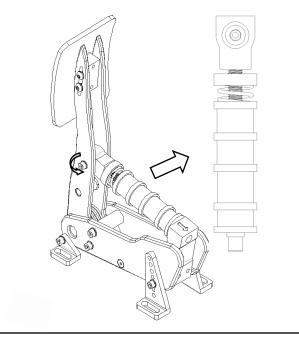


Step 1: Remove the elastomer stack

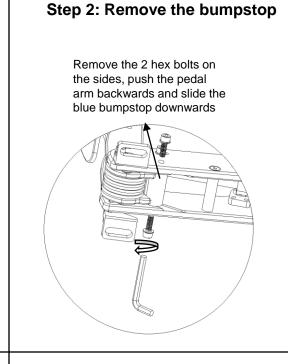


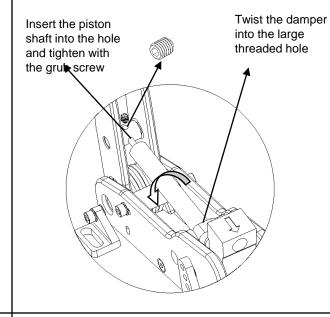


Step 3: Install the damper

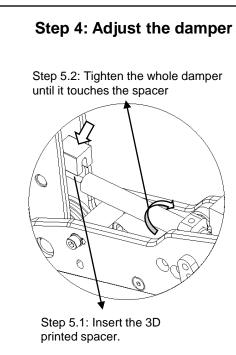

remove the spacer Step 6.1: Fix the damper in place by screwing in the plastic- headed grub screw Step 6.2: Remove the spacer.

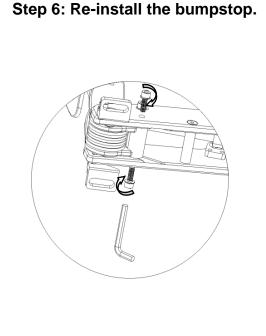

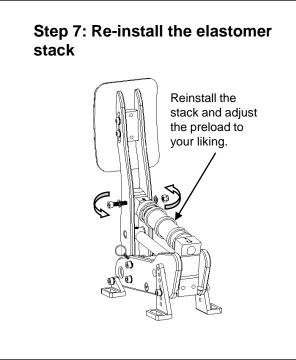

Step 5: Tighten the damper and