

Assembly Instructions

Model:	KLR650 (2022MY -), Ninja H2 SX (2022MY -), VERSYS 650 (2022MY -), Ninja 1100SX (2025MY -), VERSYS 1100 (2025MY -), KLE500 (2026MY -)
Description:	One Key System (Rotor Kit: For Pannier Case)
Part Number:	99994-1566
Flat Rate Time(Hr):	0.4

Before you begin, read through these instructions and check that all parts are present.
Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation.

Kawasaki recommends that all genuine accessories should be fitted by an authorized Kawasaki dealer.

The following symbols indicate the information for proper installation and operation in this instruction.


NOTE : NOTE indicates information that may help or guide you in the operation or service of the vehicle.

● Indicates a procedural step or work to be done.

○ Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a NOTE.

★ Indicates a conditional step or what action to take based on the results of the test or inspection in the procedural step or sub-step it follows.

Parts List				
No.	Component Name	Part No.	Qty	Remark
1	Rotor	21007-0717	2	
2	Tumbler #1	13272-3856	10	
3	Tumbler #2	13272-3857	10	
4	Tumbler #3	13272-3858	10	
5	Tumbler #4	13272-3859	10	
6	Spring	92145-0979	20	

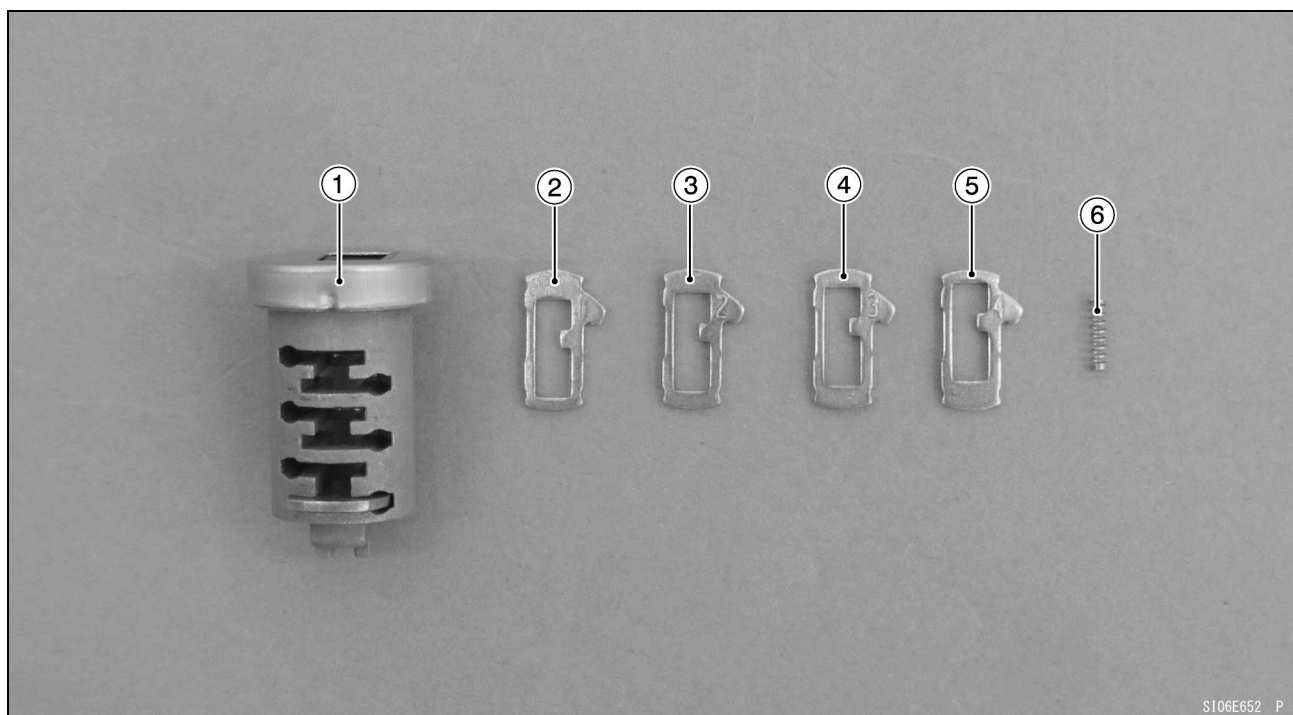


S106E652 P

Installation Instructions

Common Procedure (The key of the photographs are KLR650 model.)

- This kit is to be used with the optional pannier case.
- Using a combination of tumblers in this kit allows the lock rotor to be assembled to fit the existing ignition key.
- The four kinds of tumblers are a different length [A] to each other as shown.
 - Tumbler #1: 7.45 mm (0.293 in.)
 - Tumbler #2: 7.95 mm (0.313 in.)
 - Tumbler #3: 8.45 mm (0.333 in.)
 - Tumbler #4: 8.95 mm (0.352 in.)
- The tumblers are separated into 4 plastic bags of different colors. Keep them in the bags until needed to prevent them being mixed up.
- When assembling the first lock rotor, record the combination of the tumblers for assembly of the second rotor.

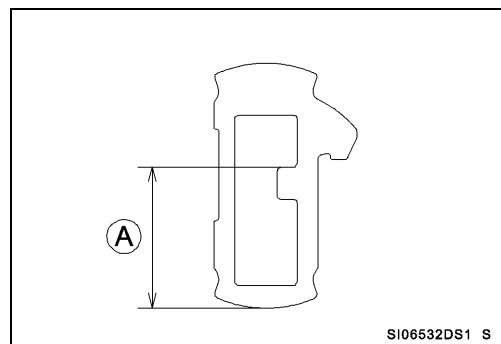


Step 1

- Install 5 springs [6] and 5 tumblers [2] from one bag to the grooves [A] of the rotor [1]. Press each tumbler into its groove until it fully seats.

NOTE

- *The projection of the tumbler should sit over the spring.*

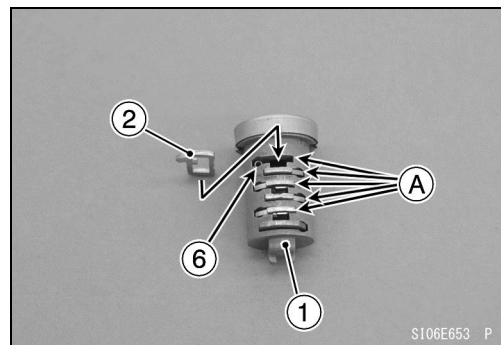


Step 2

- Lightly hold the tumblers [A] in the rotor [1] and insert the ignition key [B].


NOTE

- *If the tumblers are not held in place, the tumblers or springs may become dislodged.*

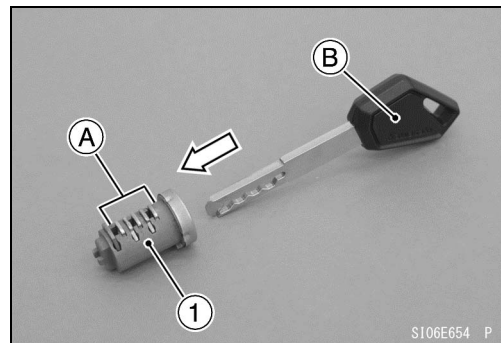

Step 3

- If the tumbler [A] is the correct one for the cut in the key, it will sit level with the rotor [1] once the ignition key [B] is inserted.
Incorrect: [C] Projecting high (upper or lower of rotor)
Incorrect: [D] Projecting low (upper or lower of rotor)
Correct: [E] Level with the rotor
- If any of the tumblers protrudes from the rotor, go to "Step 4."
- If all tumblers sit flush with the rotor, it is correct. Go to "Step 5."

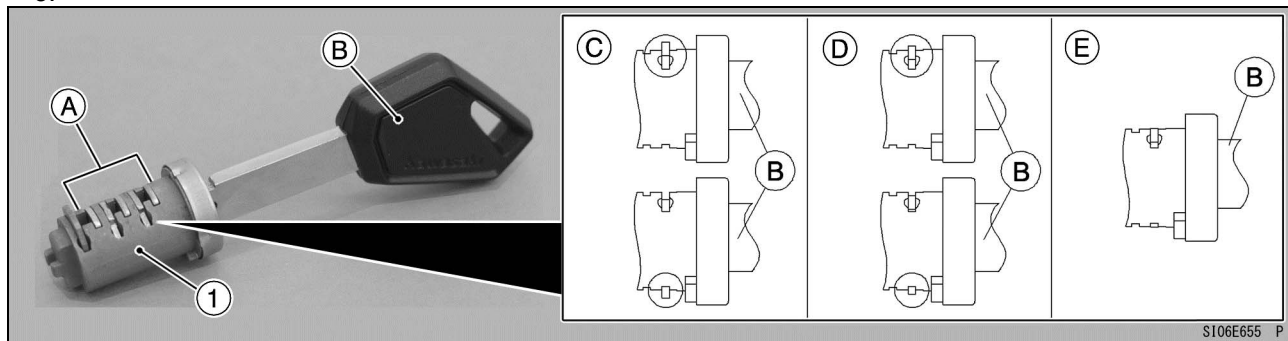

Step 4

- While lightly holding the tumblers in the rotor, remove the ignition key.

NOTE

- If the tumblers are not held in place, the tumblers or springs may become dislodged.

- Replace any protruding tumbler(s) with tumbler(s) from another bag and repeat steps 2, 3, and 4 again until all tumblers are flush with the rotor.


NOTE

- Record the groove and tumbler combination and assemble the second rotor in the same way.

(KLR650 and KLE500 Models)


Step 5

- Make sure that the lid lock [A] of the pannier case is in the position shown.

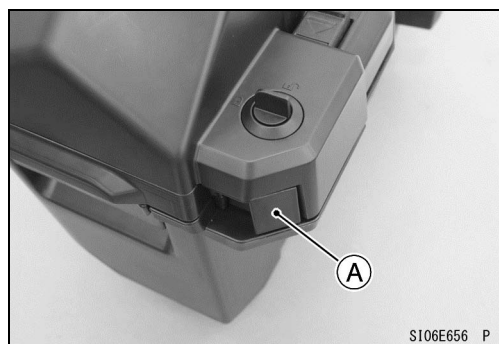

Step 6

- Make sure that the knob [A] on the pannier case is in the lock position [B] shown, and remove it.
- ★ If the knob is not in the lock position shown, turn the knob counterclockwise until it stops.
- Pull the lid lock on the pannier case to confirm the case is locked.

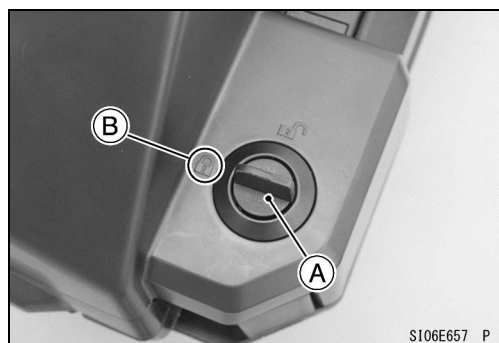


Step 7

- Insert the key [A] again as described in “Step 2” and make sure that all the tumblers [B] are flush with the rotor. The stopper tumbler [C] should be protruding as shown.


NOTE

- Do not attempt to install the rotor into the pannier case if the tumblers are not level. If the tumblers are not flush, the lock may become stuck when fitted to the case.

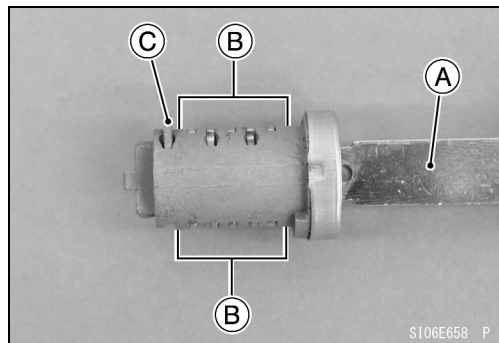

Step 8


- Do not insert the key to the bottom, or the stopper tumbler will freeze.
- Place the key and rotor [1] on the opening of the cylinder [A] with the stopper tumbler [B] facing toward the lock mark [C].
- While pressing down lightly on the key, turn it clockwise about 3/8 turn. The rotor will go into the key cylinder.
- While pressing down lightly on the key, turn the key counterclockwise to fit the rotor projection [D] into the bottom groove [E]. You will hear a click when it is fully fitted.
- Remove the key. The rotor should remain in the cylinder.
- After installing the rotor, make sure that the lock operates correctly.
- Repeat steps 5 ~ 8 for the second pannier case.

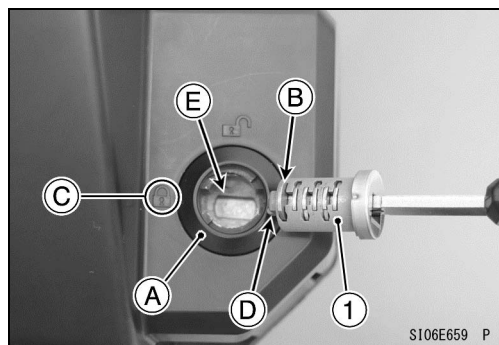

(Ninja H2 SX, VERSYS 650, Ninja 1100SX and VERSYS 1100 Models)


Step 5

- Make sure that the stopper [A] of the pannier case is in the position shown.
- ★ If not push down on the stopper until it is fully seated.

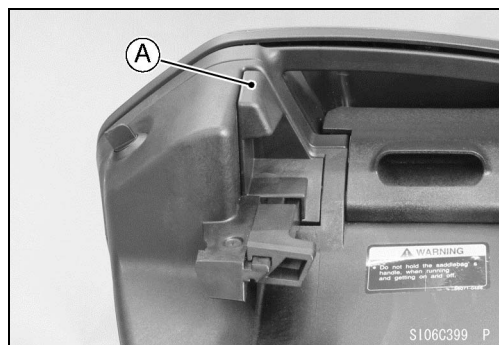

Step 6

- Make sure that the knob [A] on the pannier case is in the position shown, and remove it.
- ★ If the knob is not in the position shown, turn the knob counterclockwise until it stops.
- Pull the lid handle on the pannier case to confirm the case is locked.

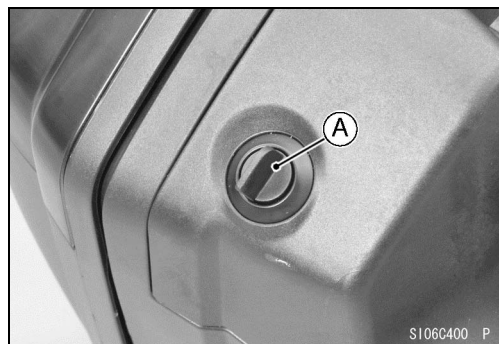


Step 7

- Insert the key [A] again as described in “Step 2” and make sure that all the tumblers [B] are flush with the rotor. The stopper tumbler [C] should be protruding as shown.

NOTE

- Do not attempt to install the rotor into the pannier case if the tumblers are not level. If the tumblers are not flush, the lock may become stuck when fitted to the case.

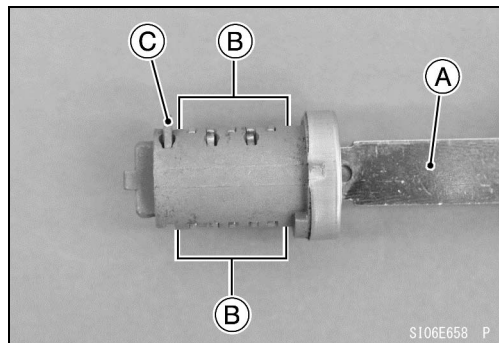

Step 8

- Do not insert the key to the bottom, or the stopper tumbler will freeze.
- Install the rotor [1] to the pannier case [A]. Align the stopper tumbler [B] at the 12 o'clock position (towards the rear of the pannier case). While gently pushing turn the key clockwise through position [C].
- When the key reaches the 4 o'clock position the rotor will slide down into the housing.
- Carefully press the rotor down and turn the key counterclockwise to seat the lock rotor projection [D] to the bottom groove [E]. You will hear a click when it is fully seated.
- Turn the key to the 12 o'clock position and remove it.
- After installing the rotor, make sure that the lock operates correctly and when removing the ignition key the rotor is secure in the pannier case.
- Repeat steps 5 ~ 8 for the second pannier case.

