

Assembly Instructions

Model:	KLE500 (2026MY -)
Description:	USB Socket
Part Number:	99994-2268
Flat Rate Time(Hr):	0.7

Before you begin, read through these instructions and check that all parts are present. Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation.

Kawasaki recommends that all genuine accessories should be fitted by an authorized Kawasaki dealer.

The following symbols indicate the information for proper installation and operation in this instruction.

NOTE : *NOTE indicates information that may help or guide you in the operation or service of the vehicle.*


- Indicates a procedural step or work to be done.
- Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a NOTE.

Refer to the following Service Manual for detailed procedures.
(KLE500) P/No.: 99830-0209 or 99832-0356

NOTE

- *This kit does not operate if the relay kit is not installed, therefore install the relay kit (see Relay Kit (P/No.: 99994-1985) for Assembly Instructions Manual).*

Parts List				
No.	Component Name	Part No.	Qty	Remark
1	Damper	92161-2731	1	
2	USB Socket	59221-0022	1	
3	Bracket	11058-7934	1	
4	Bracket	11058-7935	1	
5	Damper	92161-2091	2	
6	Collar	92152-2770	2	
7	Bolt	92154-4421	2	M6 × 16 mm
8	Bolt	130BA0510	1	M5 × 10 mm
9	Bolt (with a Non-permanent Locking Agent)	92154-7967	2	M6 × 18 mm

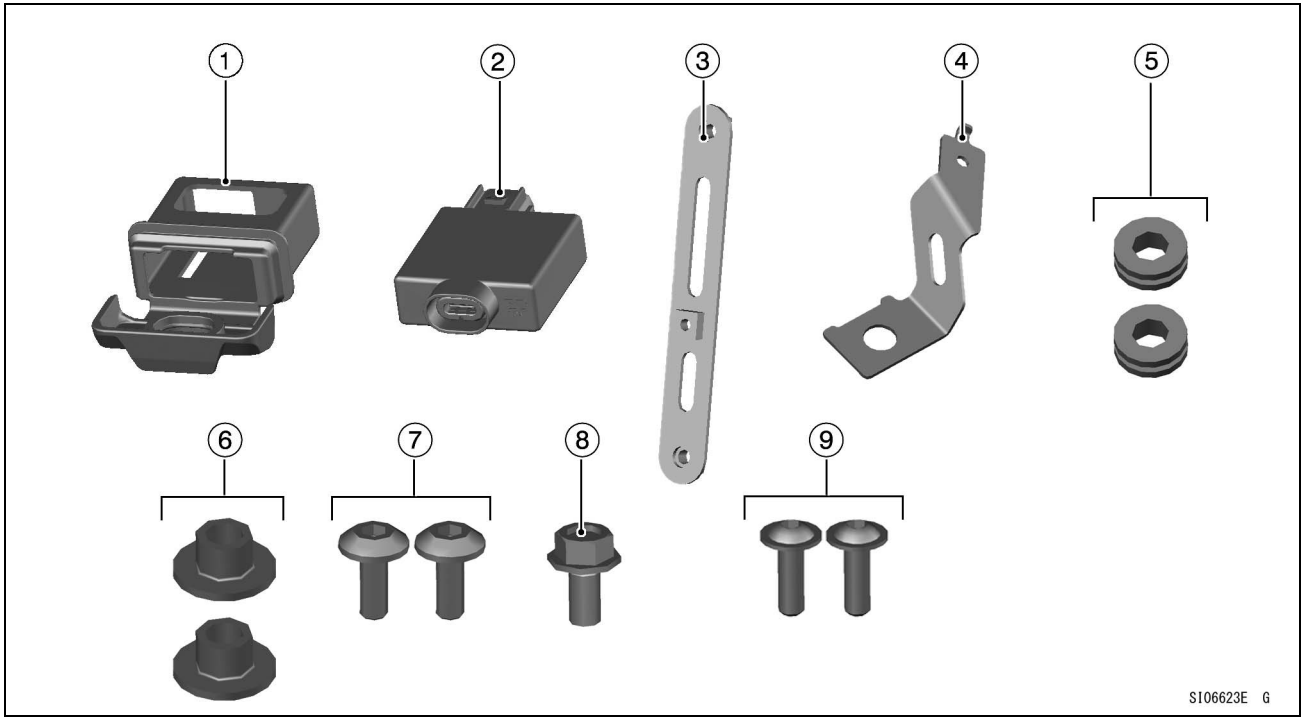

Installation Instructions

- Remove the following parts (Refer to the Service Manual).
Meter Cover
Meter
Screw [A]
Bracket [B]
Cover [C]

NOTE





- The removed parts (screw, bracket and cover) are not necessary for this accessory.

- Install the dampers [5] and collars [6] to the meter cover.
- Turn up the rubber cover.


NOTE

- In this illustration, the rubber cover has been removed for the purpose of explanation.


- Install the bracket [3] as shown.
UP Mark [A]
- Tighten the bolts [7].
- Install the meter (Refer to the Service Manual).

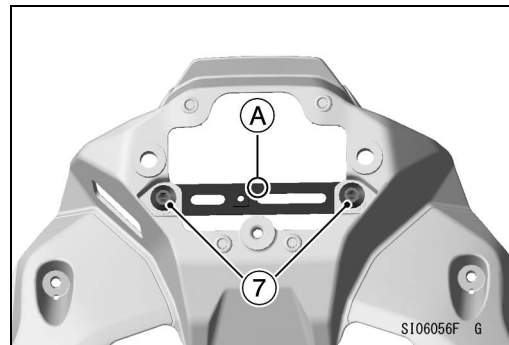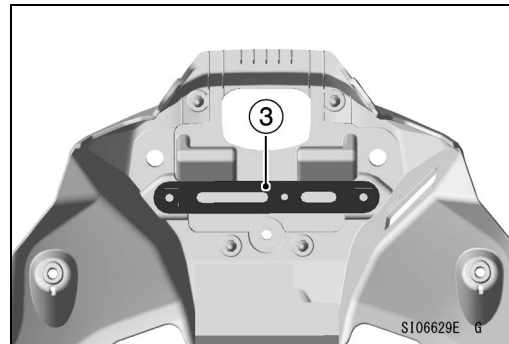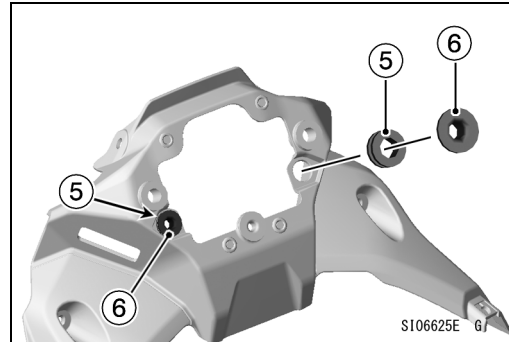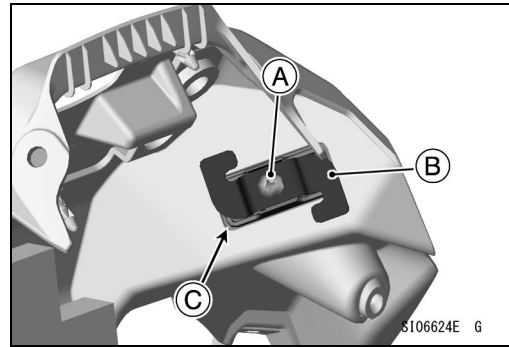


- Open the cap [A] of the damper [1].
- Install the USB socket [2] in the damper.

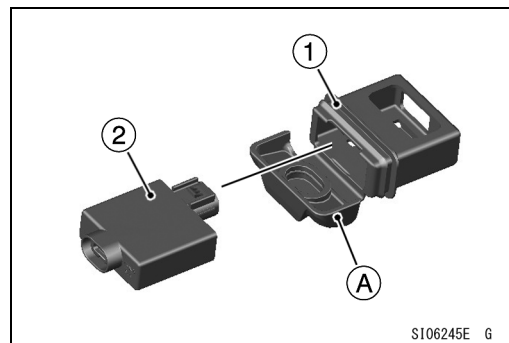


- Install the damper [1] with USB socket to the bracket [4] as shown.

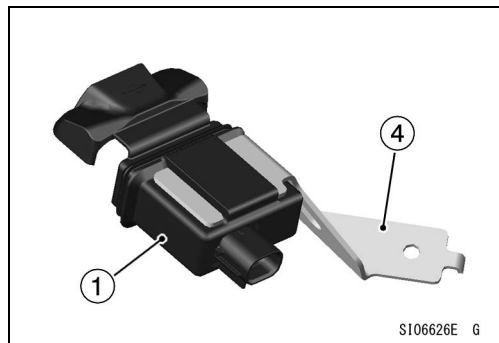


- Install the damper [1] to the meter cover [A] from the inside of it.
 - Fit the meter cover to the groove of the damper.
 - Fit [B] the projection of the bracket [4] to the long hole of the bracket [3].

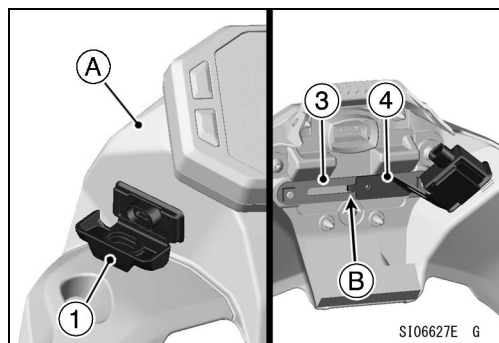


- Tighten the bolt [8].

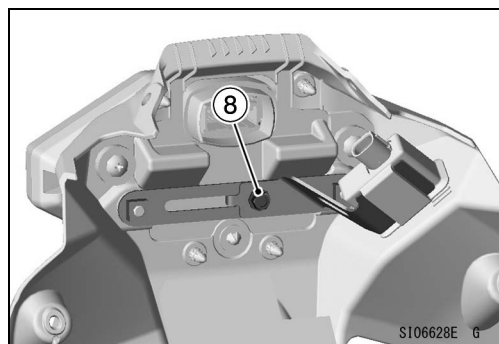


- Disconnect the USB socket lead connector [A].

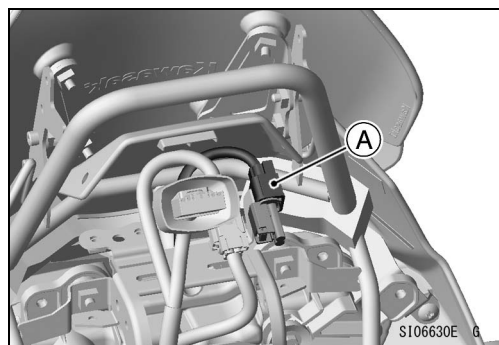

- Run the USB socket lead [A] as shown.
 - Position the USB socket lead to the front side of the meter lead [B].
- Connect the USB socket lead connector [C] to the USB socket [2].
- Install the meter cover (Refer to the Service Manual).

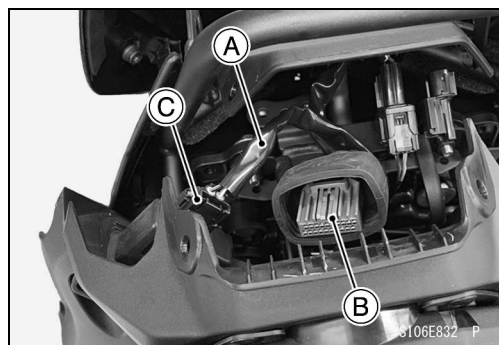

- Install the removed parts (Refer to the Service Manual).
- Replace the bolts [A] with new ones [9] on both sides.

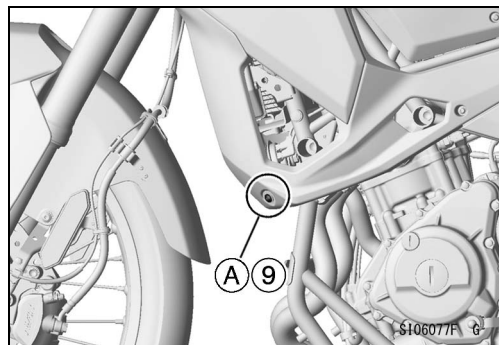

Basic Torque for General Fasteners

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
5	3.4 ~ 4.9	0.35 ~ 0.50	30 ~ 43 in·lb
6	5.9 ~ 7.8	0.60 ~ 0.80	52 ~ 69 in·lb
8	14 ~ 19	1.4 ~ 1.9	10 ~ 13.5
10	25 ~ 34	2.6 ~ 3.5	19 ~ 25
12	44 ~ 61	4.5 ~ 6.2	33 ~ 45
14	73 ~ 98	7.4 ~ 10.0	54 ~ 72
16	115 ~ 155	11.5 ~ 16.0	83 ~ 115
18	165 ~ 225	17.0 ~ 23.0	125 ~ 165
20	225 ~ 325	23.0 ~ 33.0	165 ~ 240

Check tightness of all fasteners in regular interval. Retighten loose fasteners.