

Assembly Instructions

Model:	KLE500 (2026MY -)
Description:	Pannier Case Bracket and Collar
Part Number:	99994-2273 and 99994-2274
Flat Rate Time(Hr):	0.3

Before you begin, read through these instructions and check that all parts are present. Please note that Kawasaki cannot assume any responsibility for damage resulting from incorrect installation.

Kawasaki recommends that all genuine accessories should be fitted by an authorized Kawasaki dealer.

The following symbols indicate the information for proper installation and operation in this instruction.

NOTE : *NOTE indicates information that may help or guide you in the operation or service of the vehicle.*


- Indicates a procedural step or work to be done.
- Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a NOTE.

NOTE

- *When installing the pannier case bracket kit (P/No.: 99994-2273) and the rear carrier kit (P/No.: 99994-2271) at the same time, the collar kit (P/No.: 99994-2274) is not used.*

Parts List				
No.	Component Name	Part No.	Qty	Remark
1	Stay	39137-0774	1	Left
2	Stay	39137-0775	1	Right
3	Plug	92066-1484	2	
4	Holder	13280-1314	2	
5	Bolt	92153-1571	2	M6 × 14 mm
6	Bolt	92153-1624	2	M8 × 30 mm
7	Bolt* ¹	92154-2339	4	M8 × 73 mm
8	Nut	311BA0600	2	M6
9	Nut	92210-0304	2	M8
10	Damper	92161-2401	2	
11	Pin	92043-1110	2	
12	Washer	92200-1465	2	
13	Cotter Pin	550AA2015	2	
14	Spacer	92026-0977	2	
15	Collar	92152-3936	4	99994-2274

*¹: The bolts are the same as those used in the rear carrier kit (P/No.: 99994-2271). When installing the pannier case bracket kit and rear carrier kit at the same time, use the bolts from either kit.

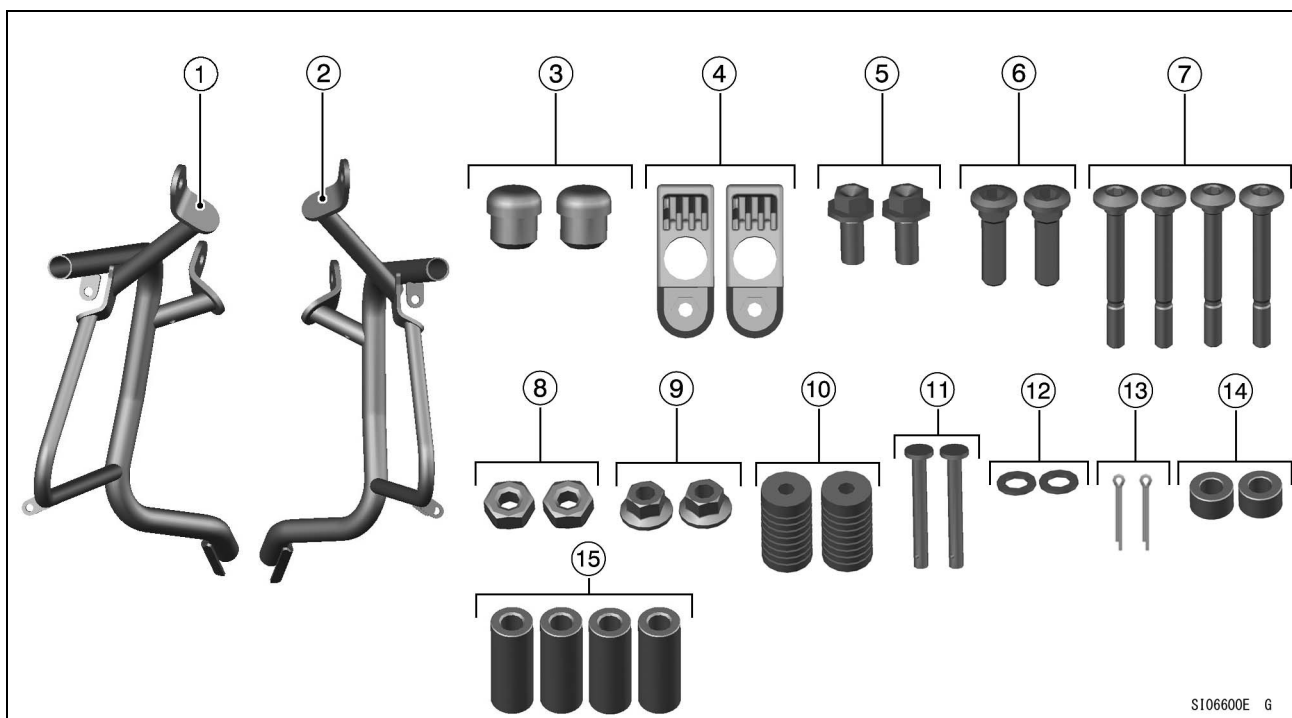


Installation Instructions

- Remove (Both Sides):
Bolts [A]
Collars [B]


NOTE

- The removed bolts are not necessary for this accessory.

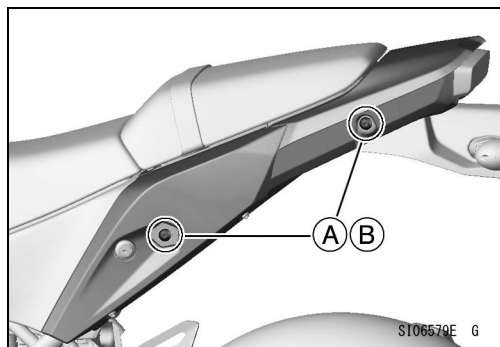


When installing only the pannier case bracket:

- Install the collars [A] so that the stepped side faces inward.
- Install the collars [15], left stay [1] and bolts [7].

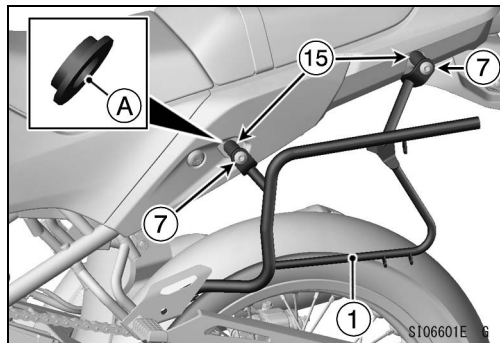


When installing the pannier case bracket and rear carrier (kit):


- Install the collars [A] so that the stepped side faces inward.
- Install the left stay (rear carrier kit) [B], left stay [1] and bolts [7].

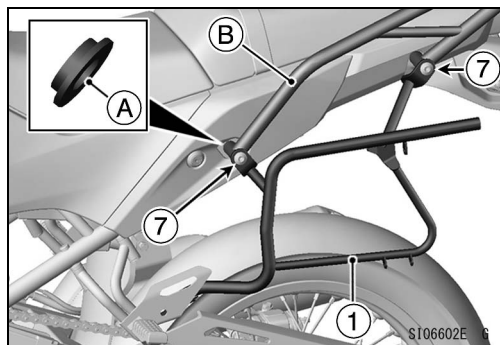


- Install the spacer [14], bolt [6] and nut [9].
- Position the spacer [14] between the left stay [1] and rear footpeg bracket [A].
- Apply a non-permanent locking agent (middle strength: Loctite 243 or equivalent) to the bolts [7].
- Tighten the bolts [6] [7] following the tightening sequence [1 - 3].

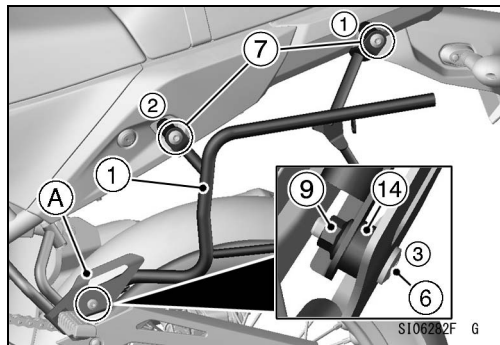


- Install:
Damper [10]
Pin [11]
Washer [12]
Cotter Pin [13]
- Install the damper [10] to the left stay [1] so that the chamfer side [A] faces front side.
- Bend the cotter pin ends along the pin [11].
- Face the cotter pin ends to the inside of the vehicle.

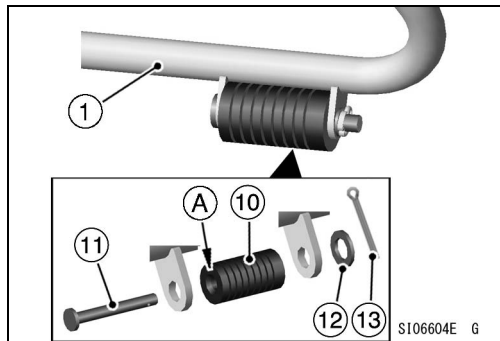

- Install the plug [3] to the left stay [1].

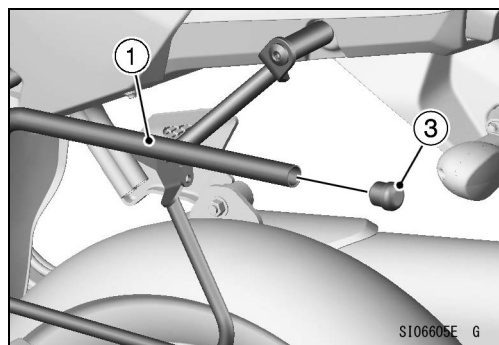

- Install the holder [4] and nut [8].
- Tighten the bolt [5].
- Install the right stay [2] in the same way as the left side.

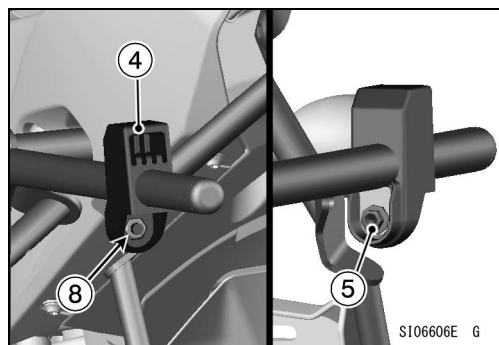

Basic Torque for General Fasteners

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
5	3.4 ~ 4.9	0.35 ~ 0.50	30 ~ 43 in·lb
6	5.9 ~ 7.8	0.60 ~ 0.80	52 ~ 69 in·lb
8	14 ~ 19	1.4 ~ 1.9	10 ~ 13.5
10	25 ~ 34	2.6 ~ 3.5	19 ~ 25
12	44 ~ 61	4.5 ~ 6.2	33 ~ 45
14	73 ~ 98	7.4 ~ 10.0	54 ~ 72
16	115 ~ 155	11.5 ~ 16.0	83 ~ 115
18	165 ~ 225	17.0 ~ 23.0	125 ~ 165
20	225 ~ 325	23.0 ~ 33.0	165 ~ 240

Check tightness of all fasteners in regular interval. Retighten loose fasteners.