

Installation Standards- Formal

Document Type: Specification

Revision: 1.1

Revision Date: 06 December 2023

Approval date: 17/09/2023

Approval committee: Technical Committee

Committee Chair: James Devine

Author: Jared Honey (Initial Release)

Co-Author: Johann Small (Reworked)

Approver Name	Title	Date
---------------	-------	------

James Devine	CTO	17/09/2023

Copyright © 2023

Fibertime™ networks

All rights reserved

Document Index

Table of Contents

I	ABBREVIATIONS, ACRONYMS, AND DEFINITIONS.....	2
II	RELEVANT AND APPLICABLE DOCUMENTS.....	2
1.	Version History	3
2.	Objective	3
3.	Target Audience.....	3
4.	Introduction	3
5.	Installation Standards	3
5.1	Entry	3
5.2	Cable routing	5
5.3	ONT/mini-UPS setup and brackets.....	5
i.	ONT/mini-UPS installation steps :	6
6.	List of Figures	11



I ABBREVIATIONS, ACRONYMS, AND DEFINITIONS

DR	Drop
PON	Passive optical network
AC	Alternating Current
DC	Direct Current
UPS	Uninterrupted power supply
FTN	Fibertime Networks
ONT	Optical Network Terminal

II RELEVANT AND APPLICABLE DOCUMENTS

Document No	Description



1. Version History

Version	Author	Date	Comments
0.1	Jared Honey	21/07/2022	Initial release
0.2	Jared Honey	25/07/2022	Addition of mesh AP information
0.3	Godfrey Krige	04/05/2023	Addition of Mini UPS Power Solution
0.4	Johann Small	13/11/2023	Addition of formal house installation

2. Objective

This document is to be used for reference when installing the consumer equipment connecting to a network.

3. Target Audience

This document is intended for fibertime™ staff and all contractors involved in the deployment of a fibertime™ network.

4. Introduction

The installation standards have been developed by fibertime™ to all contractor's flexibility while installing consumer equipment into the consumer's home. The effort that has gone into creating this document is the result of input and collaboration from fibertime™ partners. This document should be used as a guideline within all fibertime™ networks.

- This document will cover the following aspects of the installation:
 - The entry of the fibre into a home.
 - The routing of cables, both electrical and optical.
 - The assembly of the ONT mounting bracket.
 - The mounting the ONT bracket.
 - The mounting of the Mini UPS Power Solution.

5. Installation Standards

5.1 Entry

The entry into the home should be selected using the following criteria:

- Approximately the midpoint of the house.
- Installation team need to ask the homeowner in what area will they be using the internet the most and advise the homeowner if the location of the Wi-Fi is acceptable.



- Entry should be into a common area within the house such as a living room.
- The entry should take into consideration any tenants that are not living in the house structure. The entry point may be into a non-common area such as a bedroom should this be a more suitable location to provide tenants with Wi-Fi coverage.
- Should the entry point be into a non-common area, the customer must be made aware of the limitations of the Wi-Fi coverage. Factors like the thickness of walls and distance to other areas within the house must be noted to the customer should the entry point be in a non-common area.
- The entry point should be within a 10m cable run of the main power supply within the house.
- The entry point should be as close as possible to the peak of the roof.
- Preferably land on the overhang of the house to avoid water running into the house, if not possible, you can drill a hole through the zinc into a trusser, but the pigtail screw needs to be sealed around the entry point of the hole.
- **Please note:** Drill into the highest point of the curve of the IBR or corrugated zinc roof.
- Use a pigtail screw and screw into the pilot hole.
- The hole needs to be sealed with black marine silicone HV rated and/or Super laykold tape.
- Secure the drop cable by wrapping a dead-end onto the drop cable and hooking it to the pigtail screw.
- Drill a 12mm hole through the wall of the house.
- Insert a 12/10mm duct, the same length as the wall that was drilled through, to secure the drop.
- The drop fiber needs to make a small loop before entering the house to ensure the water drops off and does not run into the house.
- Seal the duct after drop cable has been installed.
- If there were any damages to the wall due to drilling, this needs to be fixed by using Polyfilla.



Figure 1: Example of an entry into a formal home



5.2 Cable routing

Fibertime™ has a high standard for neatness and all cable runs will follow the following criteria:

- Cable runs are to be as unintrusive as possible and thusly cable runs shall be limited to natural contours of the structure such as corners of walls, along skirting or ceilings.
- Cables runs in open space on walls shall only be utilised as a last resort.
- Cable runs within the house should be as short as possible.
- All cable slack from the installation should be neatly hidden behind the fibertime™ Optical Network Terminal (ONT) or the mounting bracket.
- The drop cable will be coiled one time in the slack management on the back of the Optical Network Terminal (ONT) before plugged into the PON port.
- The power supply cable of the Gizzu(UPS) must be secured to the wooden board and neatly routed to the main power supply of the house by using a glue gun or saddles along the skirtings.



Figure 2: A neat cable run on a truss in a formal home

5.3 ONT/mini-UPS setup and brackets

The ONT/mini-UPS setup consists of the following;

1. Varnished Wooden Board (280mm x 120mm) with 4 pre-drilled holes.
2. ONT bracket.
3. X 2 flat head, self-tapping screws for the ONT bracket.
4. X 2 self-tapping screws or fisher plugs for bricks for the Varnished Wooden Board (280mm x 120mm).



5. X 1 black cable tie for mounting the Gizzu.
6. Nokia Optical Network Terminal (ONT).
7. Mini-UPS(Gizzu).
8. 10m 3 prong Power supply cord for the Gizzu.
9. Multi plug.
10. Fibertime™ ONT sticker.
11. Brady Tape to enter Drop Number that matches drop label at distribution point.

i. ONT/mini-UPS installation steps :

1. Varnished Wooden board (280mm x 120mm)

- The wooden board needs to be varnished and the edges need to be trimmed.
- Fix the wooden board against the wall by using a level. When level, mark the 2 holes and drill 2 holes into the wall with a 6mm bit.
- Tighten the wooden board to the wall using x 2 self-tapping screws.
- If the cable is fixed to the outer wall of the building and the screws protrude on the outside they have to be sealed with black marine silicone and/or Laykold tape.



Figure 3: A varnished wooden board for ONT installation

2. ONT bracket

- Drill a 5mm hole in the middle of the ONT bracket for the cable tie to go through.
- Place the ONT bracket in the middle of the wooden board, mark the 2 holes and fix it to the board with x 2 flat head, self-tapping screws. Make sure a level has been used before the screws are tightened.





Figure 4: An ONT bracket installed in a formal home

3. Drop cable slack

- Coil the drop cable slack (no more than 10m) to a loop of no bigger than 300mm diameter. This slack is to prevent breaking the fibre when the ONT is unmounted for maintenance.
- Use 2x black cable ties on the loop to keep it neat.
- Put the drop cable slack over the ONT bracket before installing the mini-UPS.

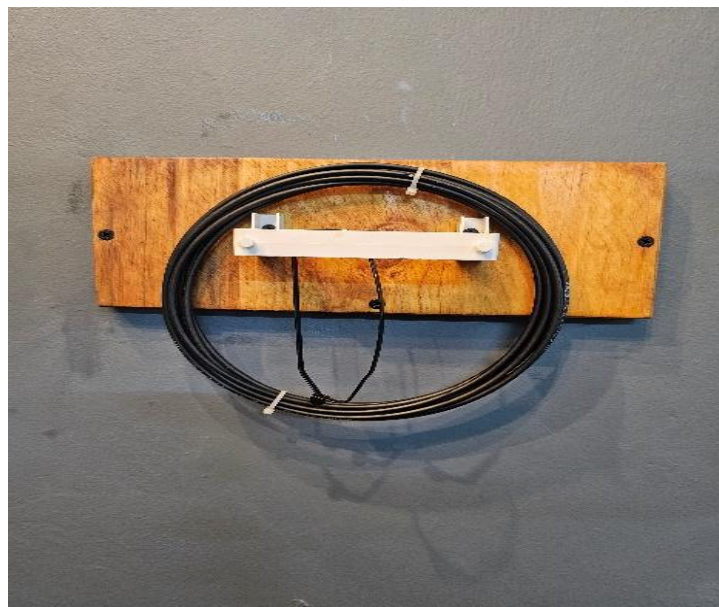


Figure 5: An indication of the placement of the drop cable slack

4. Mini-UPS (Gizzu) installation

- Remove the plastic tape that is on the middle of the Gizzu.
- Mount the mini-UPS power solution on top of the ONT bracket. Secure the



- mini-UPS by tightening it to the ONT bracket with a cable tie.
- Plug the supplied multi plug into the legal power supply of the house.
- Plug the AC power cable of the mini-UPS Power solution into the AC input socket of the house and the other end in the type D plug of the mini-UPS.
- Once this is done, and the extension cable is plugged in at the wall and switched on, the battery lights of the mini-UPS power solution will light up (this is not the case during loadshedding).
- Connect the DC output cable (2 ends) to the output socket of the mini-UPS power solution and the other end to the ONT DC jack port when installing the ONT.
- The output voltage selector on the mini-UPS power solution must be on 12V.
- Secure the power cable of the mini-UPS to the wooden board by using a glue gun or saddles.

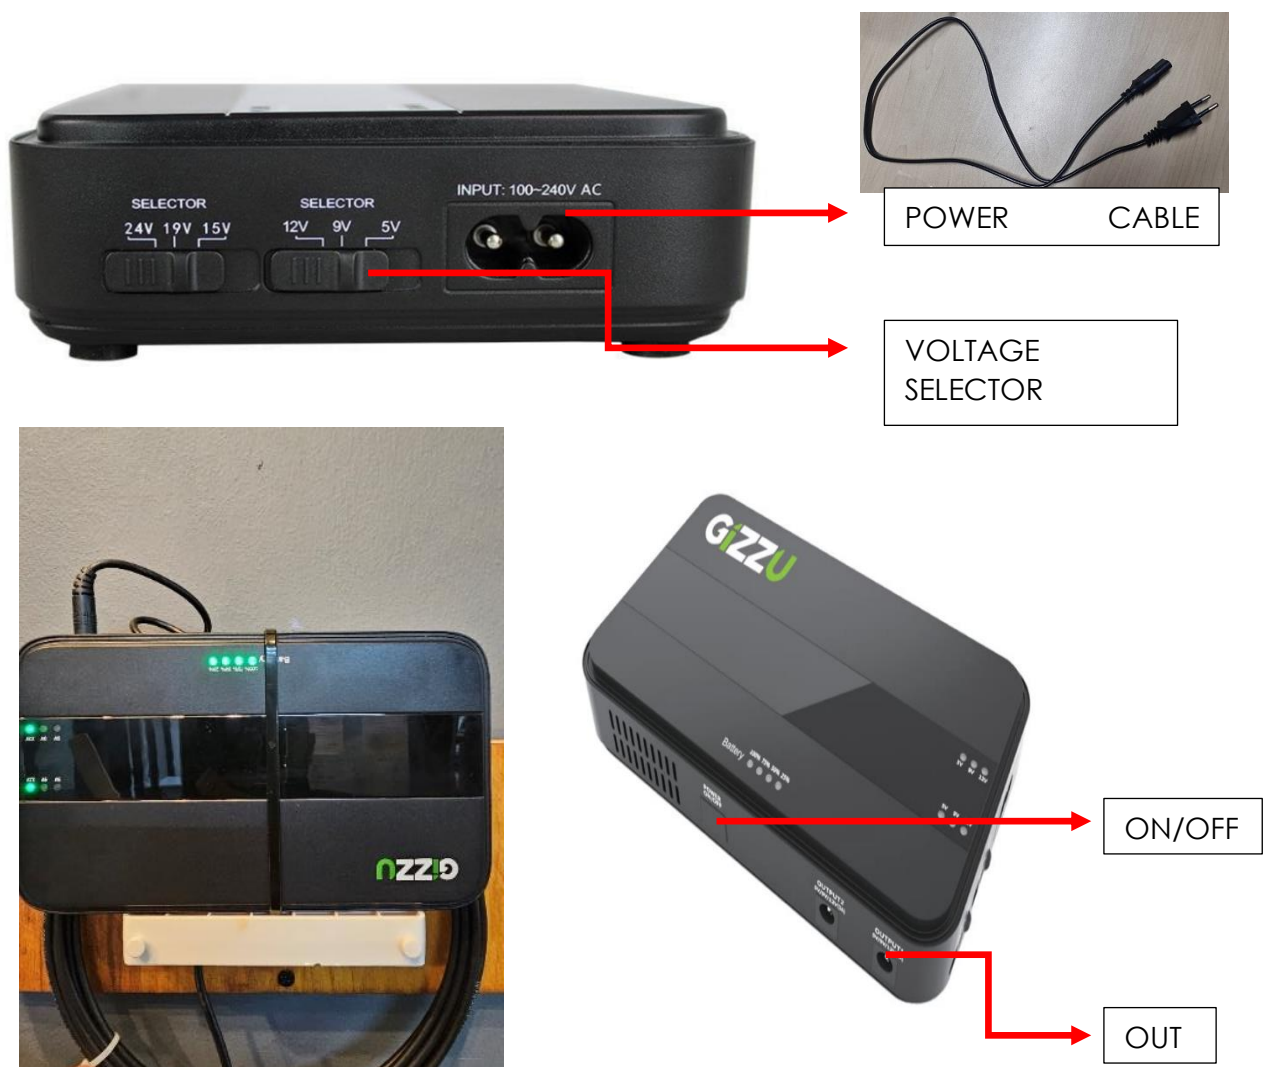


Figure 6: Schematics regarding the Mini-UPS (GIZZU) installation



5. ONT installation

- Fiber shall be run vertically into the fiber entry point and looped at least once around the integrated fiber management before connecting into the PON port.
- Connect the DC output cable of the mini-UPS into the DC jack port of the ONT.
- Install the ONT onto the ONT bracket by sliding the ONT mounting holes into the ONT bracket.
- The antennas of the ONT must be in the upright position.
- Neaten the DC cable by using a small cable tie and store it behind the ONT.

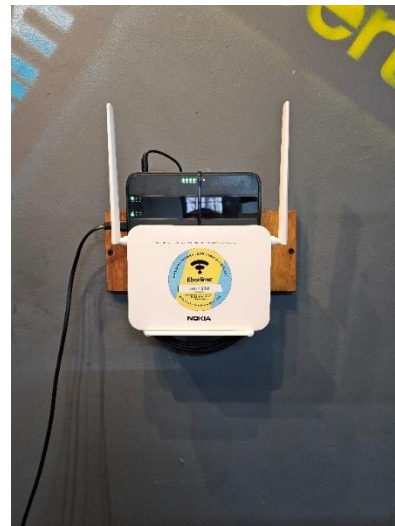
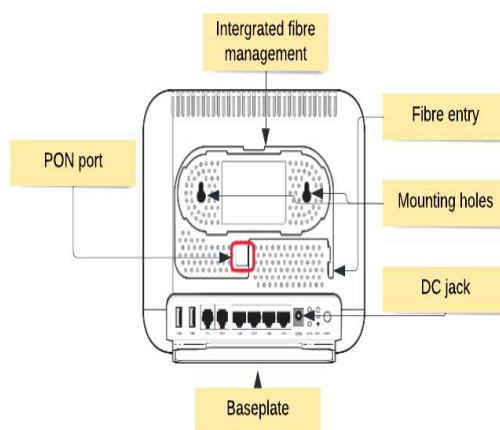


Figure 7: Schematics regarding the ONT installation

6. Fibertime™ sticker

- Apply the sticker onto the middle of the ONT. Make sure it is as straight and neat as possible and none of the lights are covered.
- Print the drop number according to Fibertime™ naming standards.
 - DRXXXX
- Apply the drop number label onto the sticker where the space is provided.
- The drop label must be black on yellow.
- Apply the small Serial number sticker of the ONT below the Nokia name.



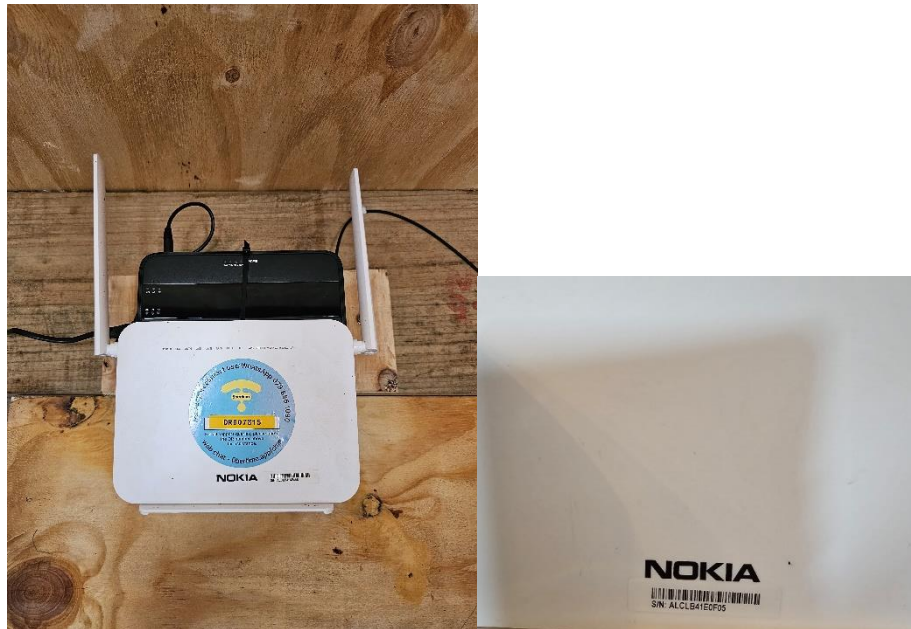


Figure 8: Placement of the fibertime and Nokia stickers

7. Installed ONT/mini-UPS

- The final product needs to look like the attached photos.



Figure 9: Final installation of ONT and mini-UPS



6. *List of Figures*

Figure 1: Example of an entry into a formal home	4
Figure 2: A neat cable run on a truss in a formal home.....	5
Figure 3: A varnished wooden board for ONT installation	6
Figure 4: An ONT bracket installed in a formal home.....	7
Figure 5: An indication of the placement of the drop cable slack	7
Figure 6: Schematics regarding the Mini-UPS (GIZZU) installation.....	8
Figure 7: Schematics regarding the ONT installation.....	9
Figure 8: Placement of the fibertime and Nokia stickers	10
Figure 9: Final installation of ONT and mini-UPS.....	10

