


1. Go to eSolar Air App and click "Inverter" > "Remote" or with the SAJ O&M App

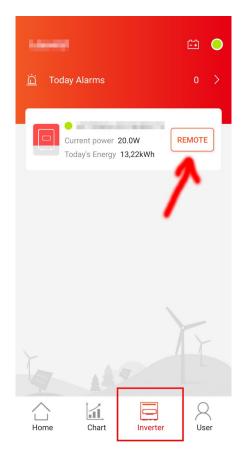

2. Go to "Working modes"

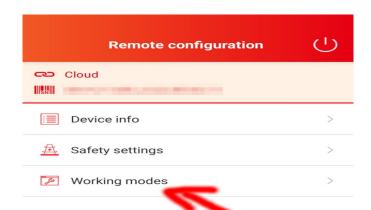

3. Click Arrow

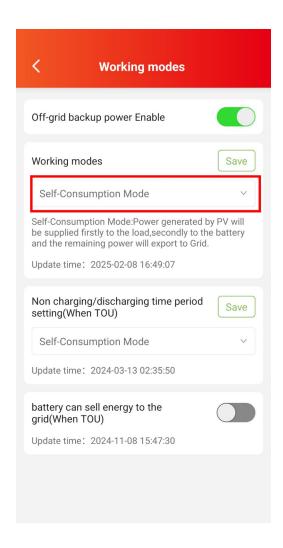

4. Set "Time-of-Use" > Set "Charing power (max 25% of Standard Charging Power), > select all weekdays

Working modes	Save
Time-of-use Mode	~
Time-of-use Mode:Set battery charge/ manually.	discharge hours
Charge set	+
Charging time1	Θ
09:45	2:11
960	W
[0-8000] Work time1	
Monday,Tuesday,Wednesday,T	hursd ∨

5. Important!

Set Time from "00:00 – 23:59"

then click "Save".

Now you can charging the Battery from Grid when you want, with the Home Assistant Switch "SAJ Charging Control"