


FISA 8 / 11

Blocaje intre joiste

~1 ora

Normal

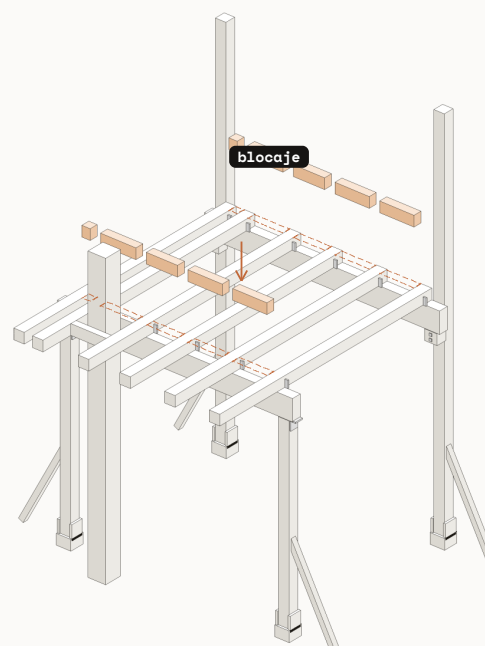

blocaje scurte intre joiste, peste fiecare grinda (fata + spate)

| ST stalp | GR grinda | JO joista | DL dusumea | PO polita |  C1/
C2 coltar

| CF diagonala

PIESE PENTRU ACEASTA ETAPA



BL

~10

Blocaj (offcut)
offcut



H3

~20

Heco 6x80
oblic

SCULE

Fierastrau


Bormasina

- cap surub (fata vazuta)
- ⦿ surub/piulita ascuns (pe spate)
- ➔ directia de insurubare
- oblic** = la unghi (toe-screw)

Folosim **suruburi + buloane**, nu cuie. (Singurul cui e distantierul de 5 mm la dusumea.)

1

Taie bucati scurte de lemn (blocaje, BL) exact cat distanta dintre joiste.

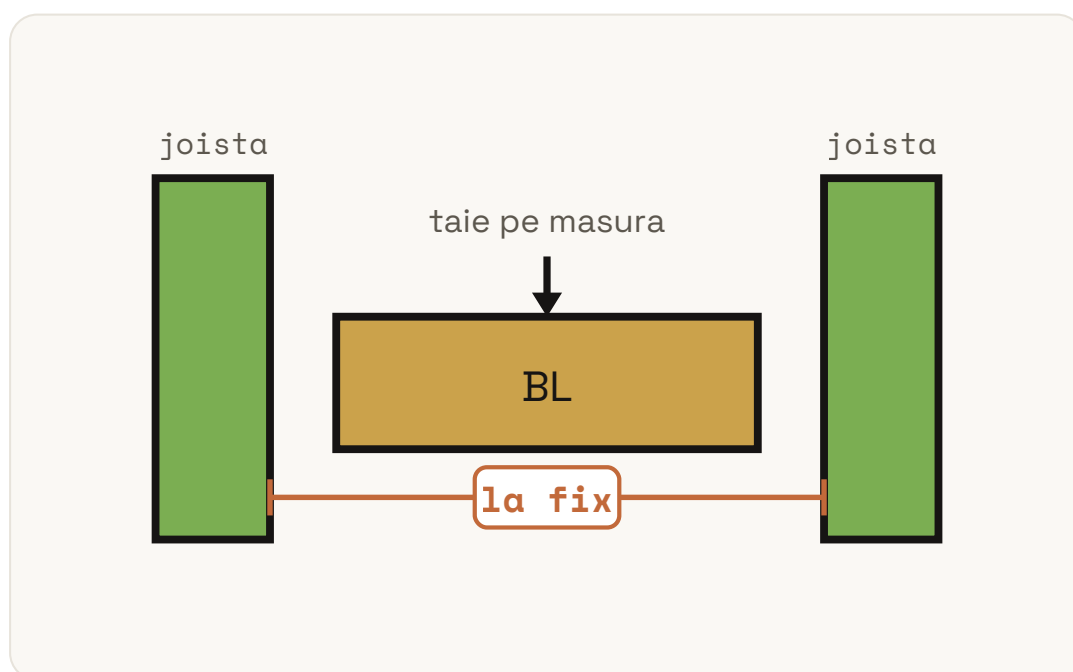

2


Pune cate un blocaj intre joiste, PESTE fiecare grinda (fata si spate).

3

Prinde fiecare blocaj cu suruburi H3 oblic. Opresc joistele sa se rasuceasca — podeaua devine ferma.

ZOOM · CUM SE PRINDE

LATERAL

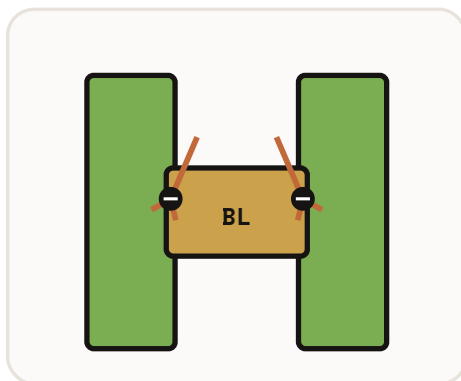

DE SUS



H3 oblic · cate 1-2 / capat

GATA CAND

- ☐ Blocaje peste ambele grinzi
- ☐ Prinse oblic cu H3
- ☐ Podeaua e ferma