


FISA 9 / 11

Contravantuiri si scoatem proptelele

~2 ore

CRITIC

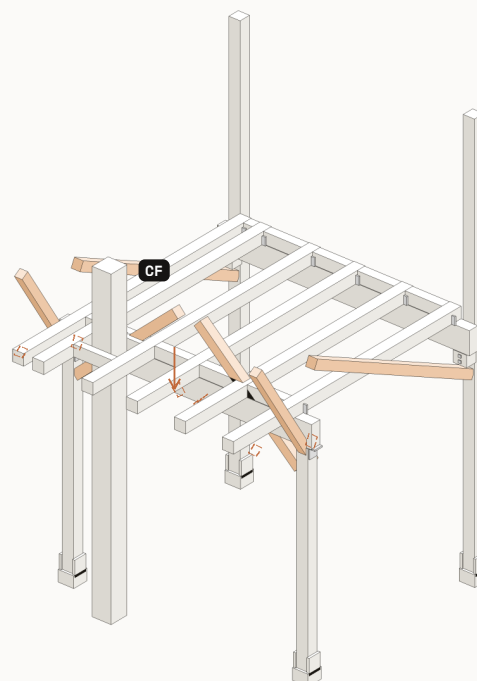

contrafise pe toate planurile + sub nas . apoi SCOATE proptelele de la baza

| ST stalp | GR grinda | JO joista | DL dusumea | PO polita | TL talpic

 **C1/**
C2 coltar | **CF** diagonala

PIESE PENTRU ACEASTA ETAPA



CF

6

Contrafisa (offcut)
diagonale



H1

~18

Heco 8x200
3 / capat

SCULE

Fierastrau

Bormasina



Echer

- cap surub (fata vazuta)
- surub/piulita ascuns (pe spate)
- directia de insurubare
- oblic** = la unghi (toe-screw)

Folosim **suruburi + buloane**, nu cuie. (Singurul cui e distantierul de 5 mm la dusumea.)

1

Masoara si taie capatul fiecarei contrafise (diagonala) pe potrivela.

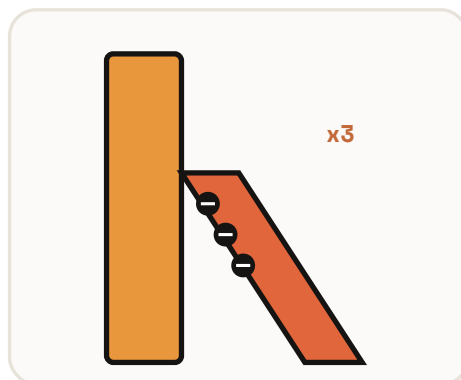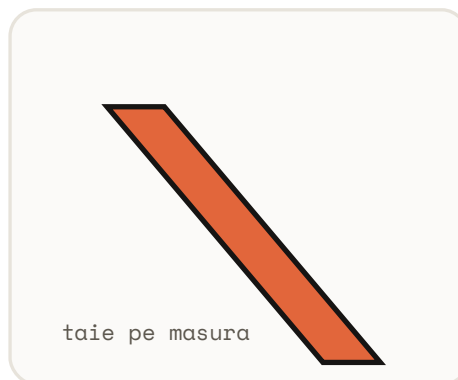ZOOM • CUM SE PRINDE**CAPAT pe stalp****DIRECTIE**

H1 x3 / fiecare capat • fara coltar

2

Monteaza contravantuirile in planul stang, drept, fata si sub nasul consolei. La contrafisa de sub nas prinde-o pe LATERAL sau adauga un coltar — acolo lucreaza la intindere. Platforma devine rigida.


! CRITIC — Contrafisele prinse la AMBELE capete inainte de a scoate proptelele.

3


Prinde fiecare capat cu 3 suruburi H1.

ZOOM · CUM SE PRINDE

CAPAT pe stalp

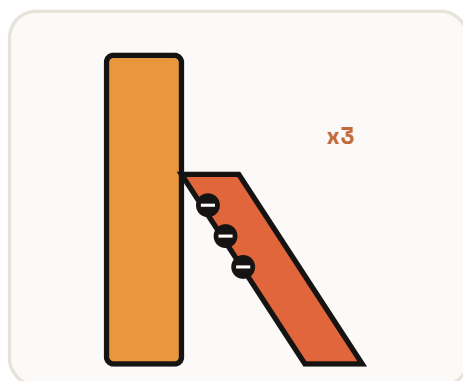

DIRECTIE

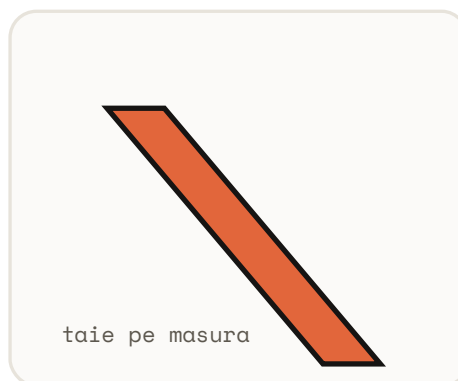

H1 x3 / fiecare capat · fara coltar

4

SCOATE proptelele de la baza. Cele de la varful stalpilor inalti din spate RAMAN pana la peretii din Faza 2.

! CRITIC — Scoti doar proptelele de la baza; cele de la varful stalpilor spate raman pana in Faza 2.

GATA CAND

- ☐ Diagonale pe toate planurile + sub consola
- ☐ 3 suruburi / capat
- ☐ Proptele baza scoase; varf raman