


Nivel +2200 si taiere stalpi fata

~1-2 ore

CRITIC

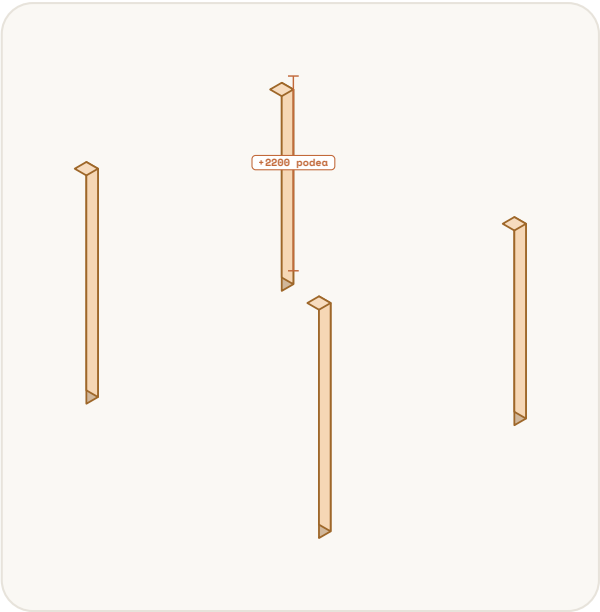

- ST

 stalp
- GR

 grinda
- JO

 joista
- DL

 dusumea
- PO

 polita
- C1/C2

 coltar
- CF

 diagonala

PIESE PENTRU ACEASTA ETAPA

ST

Stalp KVH 100x100

doar cei 2 din fata se taie

SCULE

- Nivela cu furtun / laser
- Creion
- Fierastrau
- Echer

● cap surub (fata vazuta)

⦿ surub/piulita ascuns (pe spate)


➔ directia de insurubare

oblic = la unghi (toe-screw)

Folosim **suruburi + buloane**, nu cuie. (Singurul cui e distantierul de 5 mm la dusumea.)


1

Marcheaza +2200 (fata podelei) pe toti 4 stalpii. Foloseste o scandura dreapta + boloboc, nu masura separat.

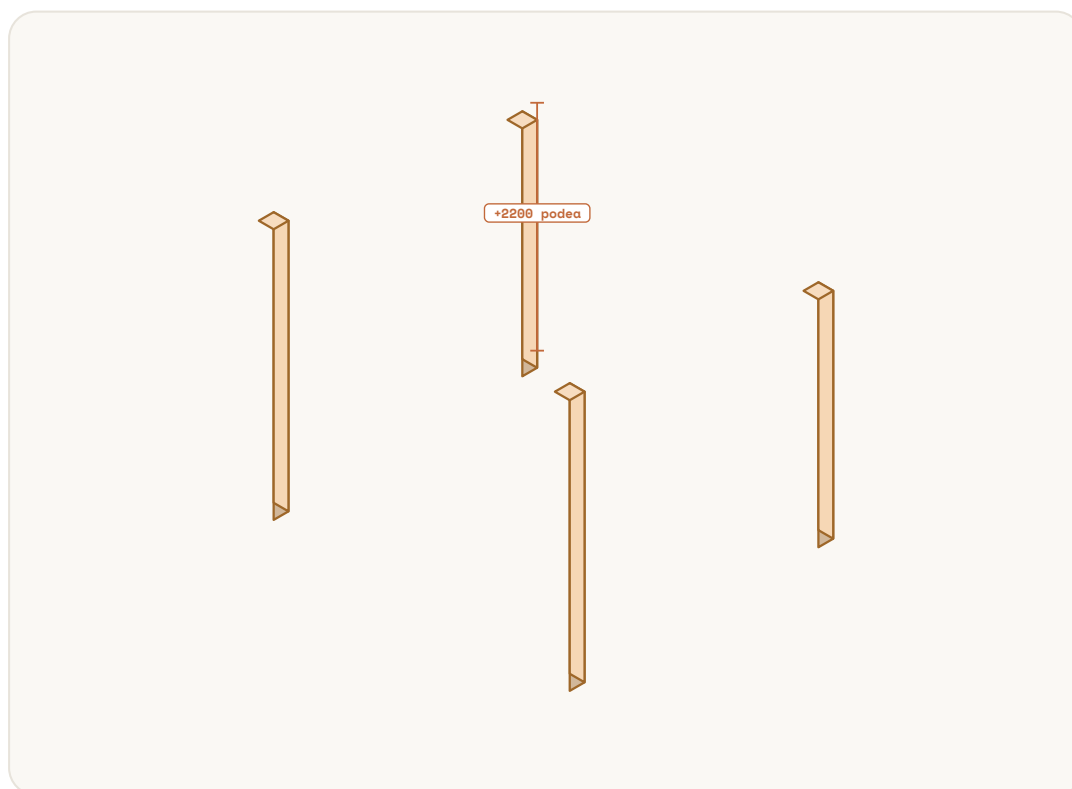

2


Coboara 328 mm si marcheaza +1872 — aici sta talpa GRINZII pe polite. Grinda 200 + joista 100 + dusumea 28 = 328, asa ajungi la +2200, fata podelei.

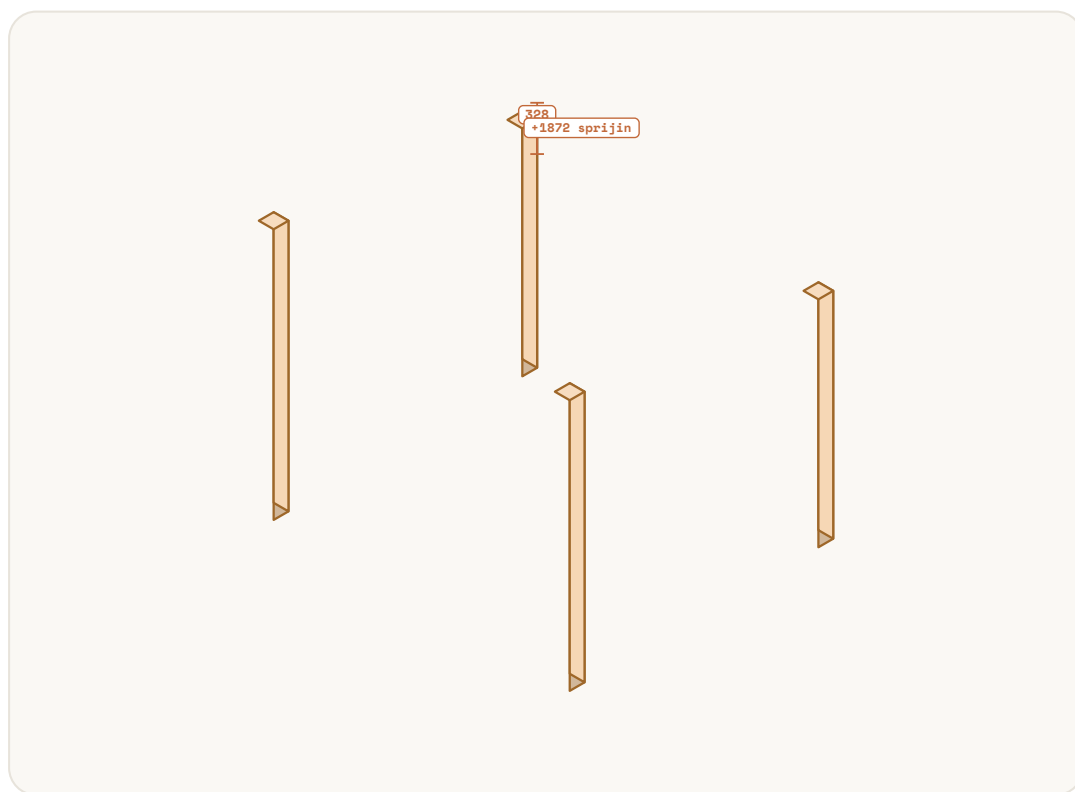

! CRITIC — opreste-te si verifica.

3

Taie DOAR stalpii din fata (S3, S4) la +1872. Partea taiata o pastrezi pentru polite. Stalpii din spate raman INTREGI.

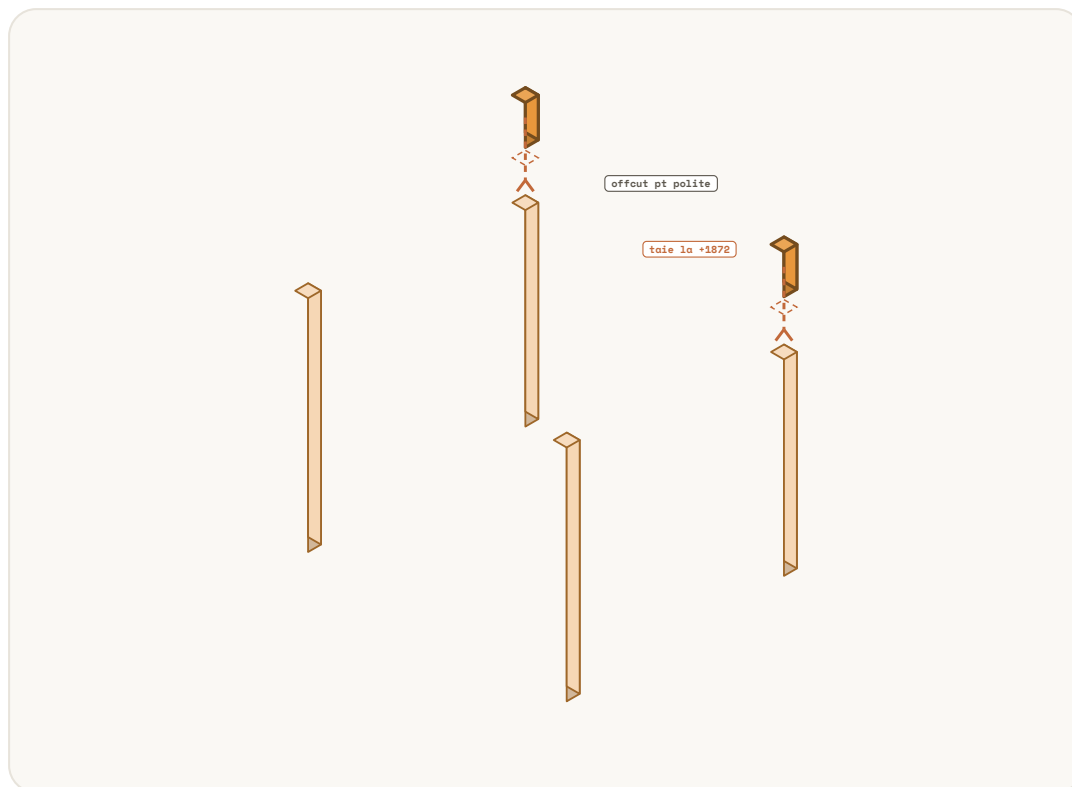


! CRITIC — opreste-te si verifica.

4

Teseste muchia taiata. Abia acum strange definitiv suruburile B2 de la baza.


ZOOM · CUM SE PRINDE

DIN FATA

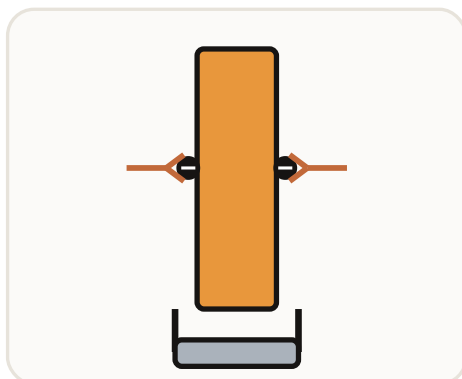

papuc U

DE SUS

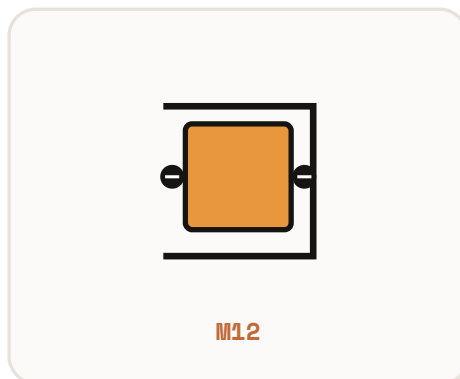

M12

B2 x2 / stalp · strange cu cheia 19

GATA CAND

- ☐ Linia +1872 identica pe toti
- ☐ Doar stalpii fata taiati
- ☐ Stalpii spate INTREGI
- ☐ Suruburi baza stranse