


Polite pe stalpii din spate

~1 ora

CRITIC

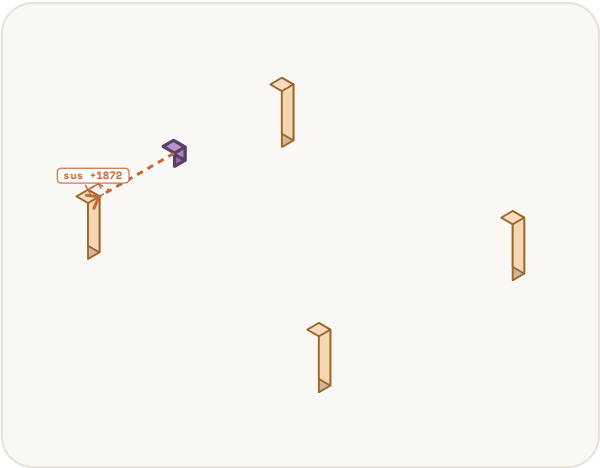

- stalp

grinda

joista

dusumea

polita

coltar metal

diagonala/proptea

PIESE PENTRU ACEASTA ETAPA

P02 Polita (offcut) offcut 100x100	B14 Tija M12 (taie 220) tija ~220	B34 Saiba M12 saibe	B44 Piulita M12 piulite



SCULE

- Bormasina + burghiu 13
- Cheie 19
- Bomfaier

PAS CU PAS


- cap surub (pe fata vazuta)
- surub/piulita pe partea ascunsa
- directia de insurubare
- oblic** = la unghi (toe-screw)
- folosim **suruburi + buloane**, nu cuie

1 Aseaza polita (bloc 100x100 din offcut) pe fata interioara a stalpului din spate, cu fata de sus la +1872.

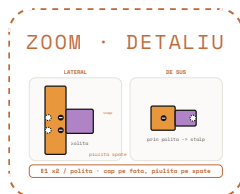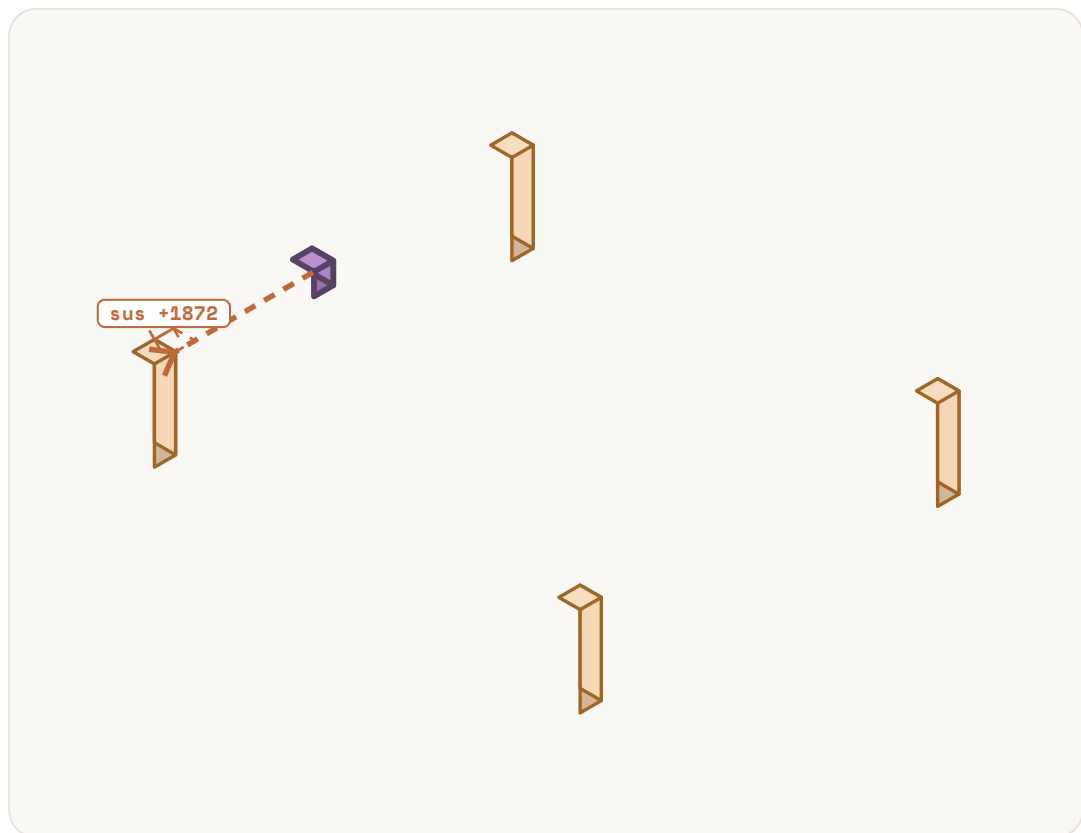



2

Gaureste prin polita in stalp: 2 gauri de 13 mm.

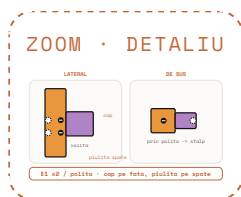

3

Bate 2 buloane M12 (B1) cu saiba (B3) prin polita in stalp; strange cu piulita (B4) pe spate. Repeta la al doilea stalp.

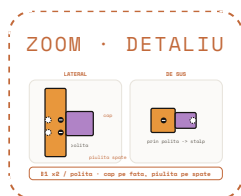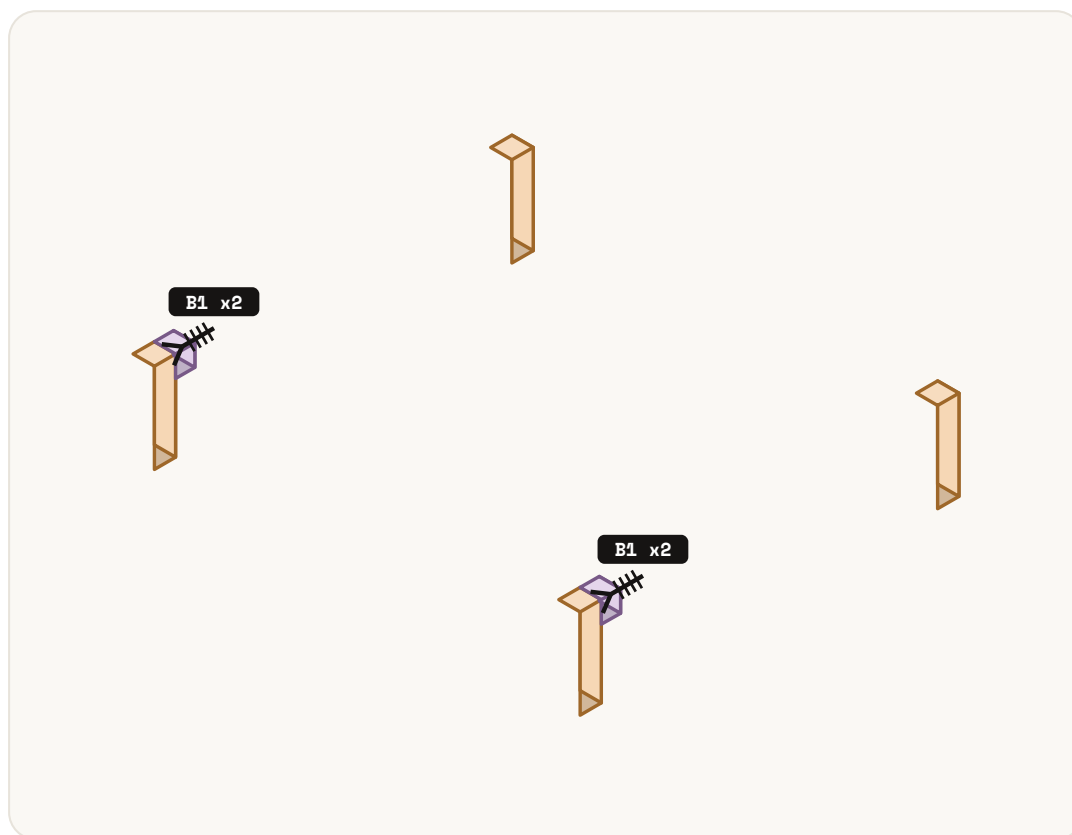

! Pas critic — verifica inainte sa mergi mai departe.

GATA CAND

- ☐ Ambele polite sus la +1872
 - ☐ 2 buloane stranse / polita
 - ☐ Polita nu se misca
-