


FISA 8 / 11

Blocaje intre joiste

~1 ora

Normal

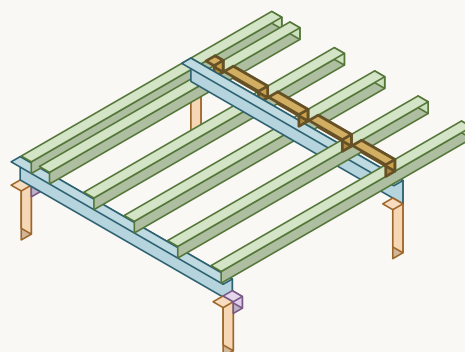

stalp grinda joista dusumea polita coltar metal diagonala/proptea

PIESE PENTRU ACEASTA ETAPA



BL

~10

Blocaj (offcut)
offcut



H3

~20

Heco 6x80
oblic

SCULE

Fierastrau

Bormasina

PAS CU PAS

● cap surub (pe fata vazuta)

○ surub/piulita pe partea ascunsa


→ directia de insurubare

oblic = la unghi (toe-screw)


folosim **suruburi + buloane**

, nu cuie

1 Taie bucati scurte de lemn (blocaje, BL) cat distanta dintre joiste.

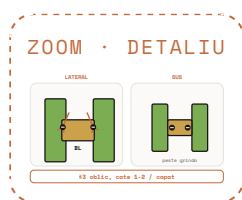


2 Pune cate un blocaj intre joiste, PESTE fiecare grinda (fata si spate).

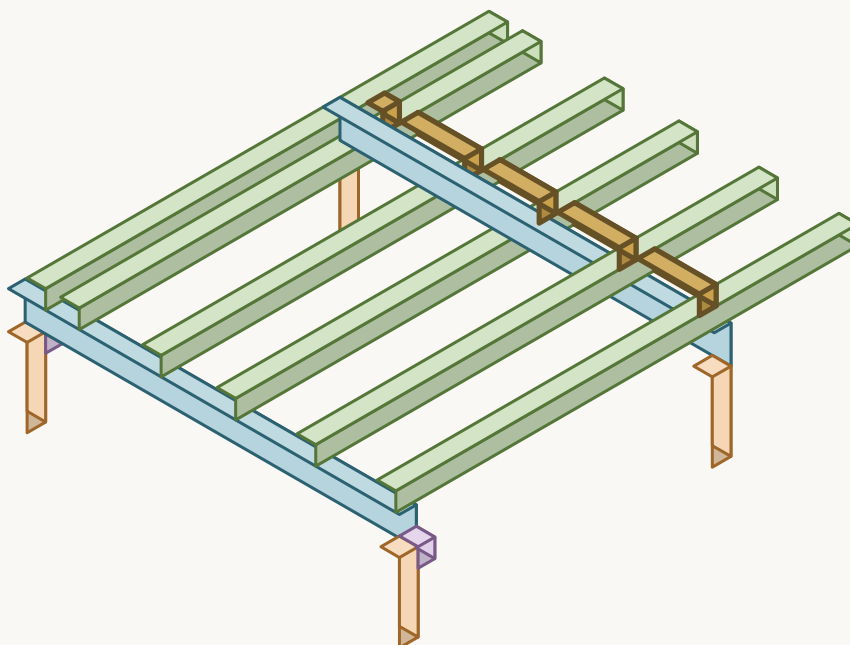



Prinde fiecare blocaj cu suruburi H3 oblic. Opresc joistele sa se raseceasca — podeaua devine ferma.

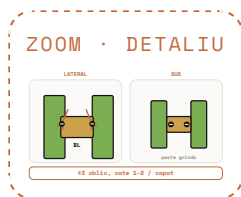

GATA CAND

- ☐ Blocaje peste ambele grinzi
 - ☐ Prinse oblic cu H3
 - ☐ Podeaua e ferma
-