


FISA 10 / 11

Dusumeaua de larice

~3-4 ore

Normal

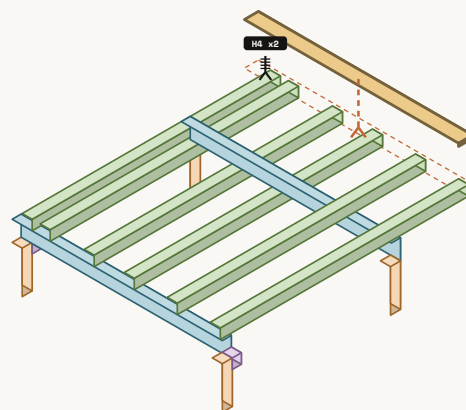

 stalp  grinda  joista  dusumea  polita  coltar metal  diagonala/proptea

PIESE PENTRU ACEASTA ETAPA



DL

17

**Dusumeaua larice
28x145**

larice 28x145



H4

~204

Inox 5x60
2 / joista



F1

2

Ulei tec
ulei

SCULE

Bormasina

Cui distantier 5 mm

Pensula

PAS CU PAS

● cap surub (pe fata vazuta)

○ surub/piulita pe partea ascunsa


→ directia de insurubare

oblic = la unghi (toe-screw)


folosim **suruburi + buloane**

, nu cuie

- 1 Aseaza prima scandura la marginea din fata, perpendicular pe joiste. 2 suruburi inox (H4) pe fiecare joista.

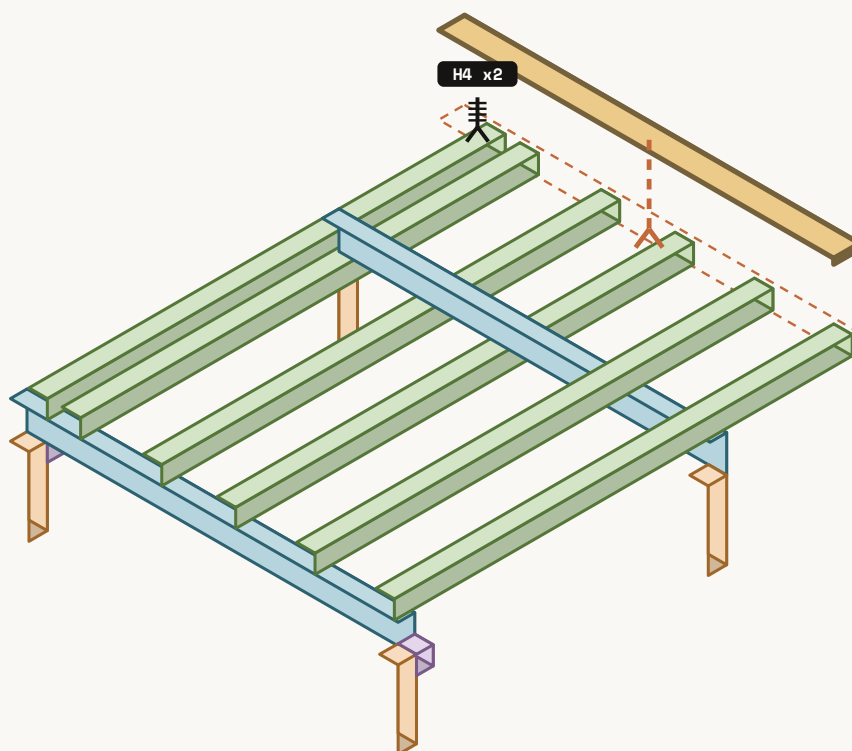


ZOOM · DETALIU



2


Lasa 5 mm între scanduri (pune un cui ca distantier). Apa se scurge, lemnul respira.

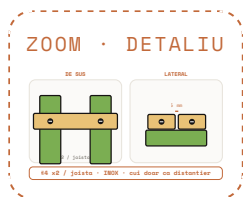

! Pas critic — verifica înainte sa mergi mai departe.

3

Continua pana acoperi tot. La copac, taie scandurile in jurul gaurii, cu joc.

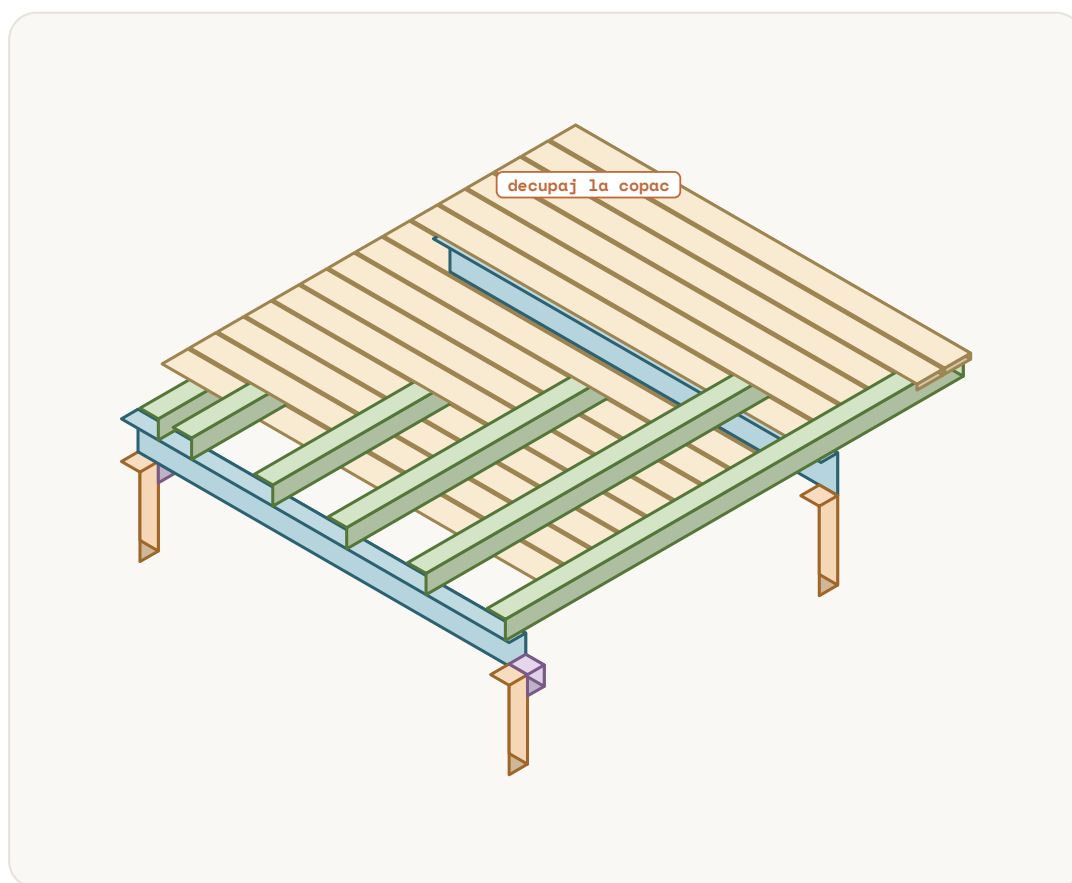

4

Dupa montaj, da cu ulei (F1) pe toata dusumeaua de larice.

GATA CAND

- ☐ Toate scandurile cu 2 H4 / joista
 - ☐ Gol egal de 5 mm
 - ☐ Decupaj la copac
 - ☐ Uns cu ulei
-