


FISA 1 / 11

Stalpii in papuci

~2-3 ore

Mediu

2 persoane

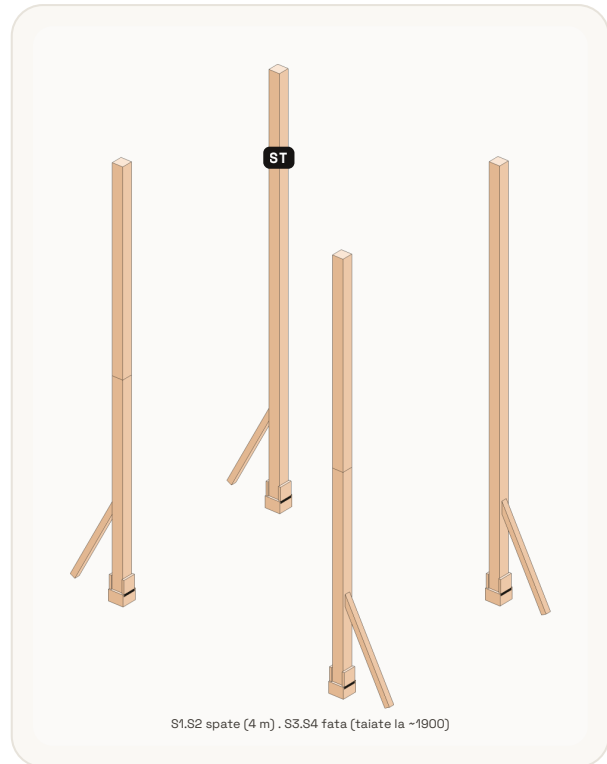

| **ST** stalp | **GR** grinda | **JO** joista | **DL** dusumea | **PO** polita | **TL** talpic

C1/
C2 coltar | **CF** diagonala

PIESE PENTRU ACEASTA ETAPA

ST 4	PAP 4	B2 8	PT ~6
Stalp KVH 100x100 la lungime mare, NU taia	Papuc reazem U deja in beton	Bulon M12x120 2 / stalp	Proptea temporara proptele

SCULE

Cheie 19 (M12)

Boloboc

Bormasina

2 persoane

PAS CU PAS



cap surub (fata vazuta)



surub/piulita ascuns (pe spate)



directia de insurubare

oblic

= la unghi (toe-screw)

Folosim **suruburi + buloane**, nu cuie. (Singurul cui e distantierul de 5 mm la dusumea.)

1

Aseaza toti 4 stalpii in papucii lor din beton, coborati drept in U. TOTI raman lungi acum — fata o tai la Fisa 2.

2

Adu fiecare stalp perfect vertical (la plumb), verificat pe doua fete cu bolobocul.

3

Sprijina fiecare stalp cu 2 proptele la baza. La cei 2 stalpi inalti din spate, pune si cate o proptea spre varf.


! CRITIC — Verifica fiecare stalp la plumb pe 2 fete inainte de a strange proptelele.

4

Prinde suruburile B2 in papuc DOAR slab (2 / stalp) – sa poti inca corecta. Le strangi la Fisa 2.


ZOOM · CUM SE PRINDE

DIN FATA

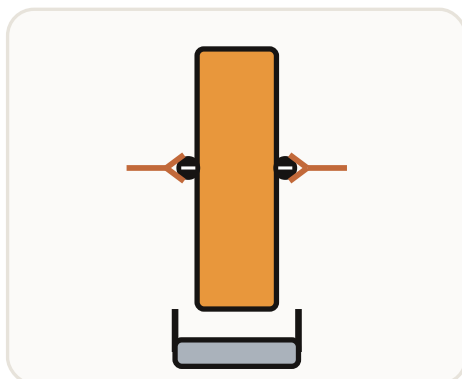

papuc U

DE SUS

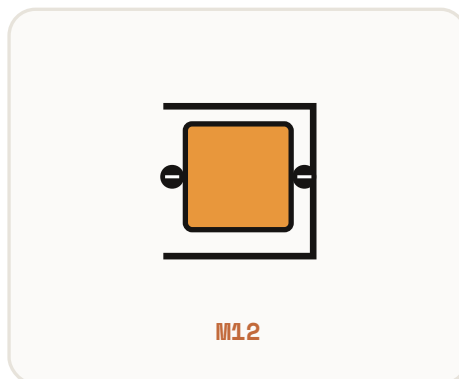

M12

B2 x2 / stalp · strange cu cheia 19

GATA CAND

- ☐ Toti 4 stalpii verticali pe 2 fete
- ☐ Proptele la fiecare stalp
- ☐ Suruburi inca slabe