


FISA 8 / 11

Blocaje intre joiste

~1 ora

Normal

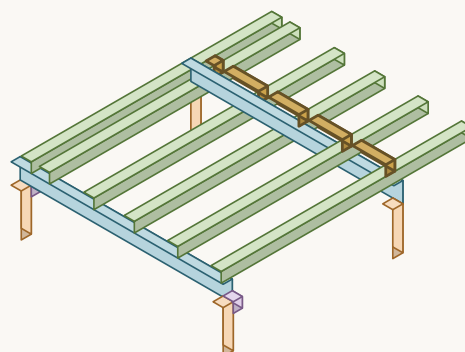

stalp grinda joista dusumea polita coltar metal diagonala/proptea

PIESE PENTRU ACEASTA ETAPA



BL

~10

Blocaj (offcut)
offcut



H3

~20

Heco 6x80
oblic

SCULE

Fierastrau

Bormasina

● cap surub (fata vazuta)

⦿ surub/piulita ascuns (pe spate)

➔ directia de insurubare


oblic = la unghi (toe-screw)

Folosim **suruburi + buloane**, nu cuie. (Singurul cui e distantierul de 5 mm la dusumea.)

1 Taie bucati scurte de lemn (blocaje, BL) cat distanta dintre joiste.

ZOOM • CUM SE PRINDE

LATERAL

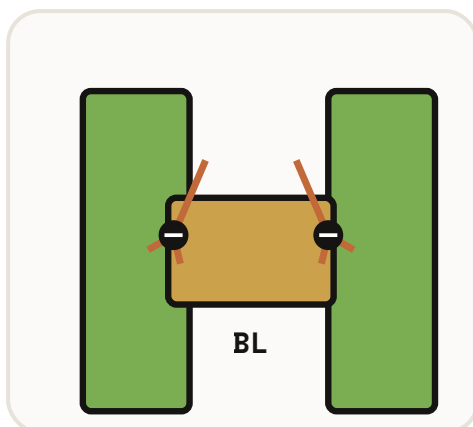


SUS



H3 oblic, cate 1-2 / capat

2

Pune cate un blocaj intre joiste, PESTE fiecare grinda (fata si spate).

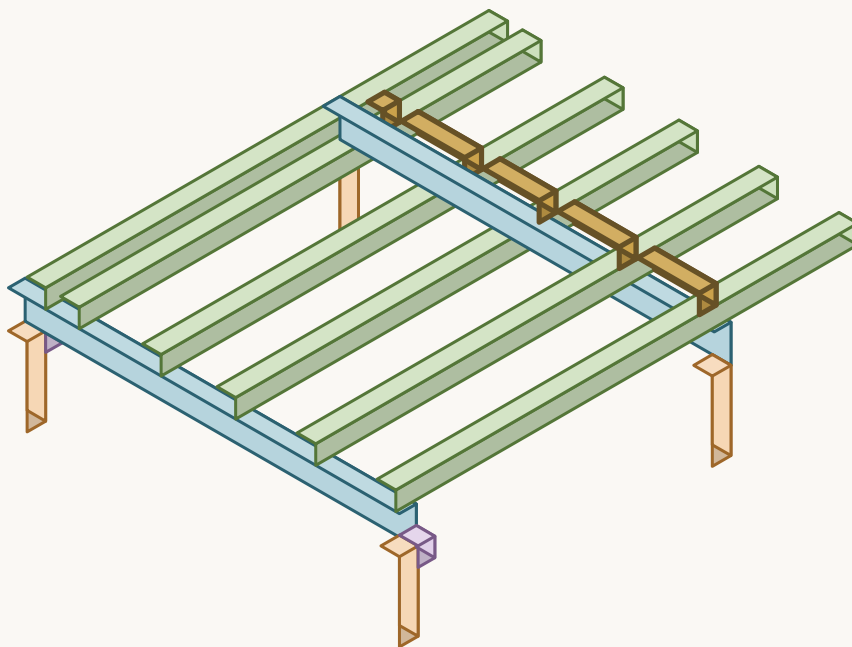


3


Prinde fiecare blocaj cu suruburi H3 oblic. Opresc joistele sa se rasuceasca — podeaua devine ferma.

ZOOM • CUM SE PRINDE

LATERAL

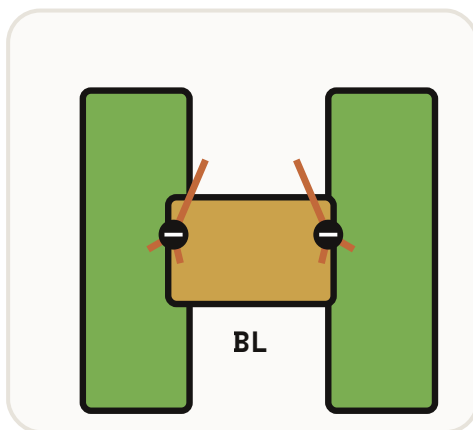

SUS

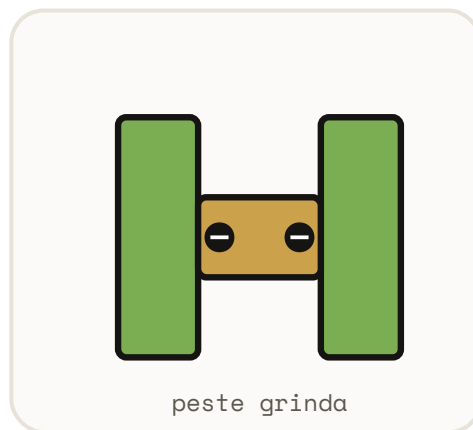

H3 oblic, cate 1-2 / capat

GATA CAND

- ☐ Blocaje peste ambele grinzi
- ☐ Prinse oblic cu H3
- ☐ Podeaua e ferma