Virtual Memory Overview

Virtual address (VA): What your program uses

Virtual Page Number Page Offset	Virtual Page Number	Page Offset
---------------------------------	---------------------	-------------

Physical address (PA): What actually determines where in memory to go

Physical Page Number	Page Offset
----------------------	-------------


With 4 KiB pages and byte addresses, 2^(page offset bits) = 4096, so page offset bits = 12.

The Big Picture: Logical Flow

Translate VA to PA using the TLB and Page Table. Then use PA to access memory as the program intended.

Pages

A chunk of memory or disk with a set size. Addresses in the same virtual page get mapped to addresses in the same physical page. The page table determines the mapping.

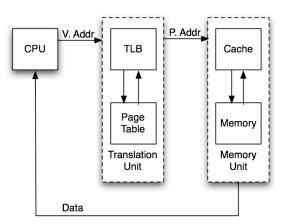

The Page Table

Index = Virtual Page Number (VPN) (not stored)	Page Valid	Page Dirty	Permission Bits (read, write,)	Physical Page Number (PPN)
0				
1				
2				
(Max virtual page number)				

Each stored row of the page table is called a **page table entry** (the grayed section is the first page table entry). The page table is stored *in memory*; the OS sets a register telling the hardware the address of the first entry of the page table. The processor updates the "page dirty" in the page table: "page dirty" bits are used by the OS to know whether updating a page on disk is necessary. Each process gets its own page table.


- **Protection Fault**--The page table entry for a virtual page has permission bits that prohibit the requested operation
- Page Fault--The page table entry for a virtual page has its valid bit set to false. The entry is not in memory.

The Translation Lookaside Buffer (TLB)

A cache for the page table. Each block is a single page table entry. If an entry is not in the TLB, it's a TLB miss. Assuming *fully associative*:

•	Tag = Virtual Page Number	Page Table Entry		
Valid	lid		Permission Bits	Physical Page Number

The Big Picture Revisited

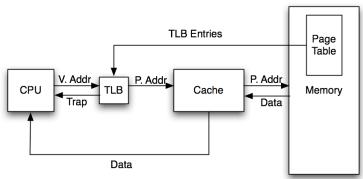

Exercises

1) What are three specific benefits of using virtual memory?

Disk can be used as memory

Each process has full address space memory

Processes can only use their virtual memory, so no in-memory data can be stolen

2) What should happen to the TLB when a new value is loaded into the page table address register?

Set all TLB ' Valid ' bits to 0 and update asap

3) Fill in the following formulas below.

#Offset Bits = log₂(Page Size in bytes _____)

#Virtual Address Bits = #(__VPN bits _____) + #(Page Offset bits)

#Physical Address Bits = #(Physical Page Number Bits) + #(Page offset bits)

#Bits per row of Page Table = #(_____PPN bits______) + #(Extra bits [valid, dirty bits, etc.])

4) Using the formulas from part 3, fill this table out!

<u>, </u>					
Virtual	Physical	Page Size	VPN Bits	PPN Bits	Bits per row of PT
Address Bits	Address Bits				(4 extra bits)
32	32	16KB	18	18	24
32	26	8KB	19	13	17
36	32	32KB	21	17	21
40	36	32KB	25	21	25
64	40	64KB	48	24	28

5) A processor has 16-bit addresses, 256 byte pages, and an 8-entry fully associative TLB with LRU replacement (the LRU field is 3 bits and encodes the order in which pages were accessed, 0 being the most recent). At some time instant, the TLB for the current process is the initial state given in the table below. Assume that all current page table entries are in the initial TLB. Assume also that all pages can be read from and written to. Fill in the final state of the TLB according to the access pattern below.

Free physical pages: 0x17, 0x18, 0x19

Access pattern:

X	Read	0x11f0
×	Write	0x1301
ソ	Write	0x20ae
X	Write	0x2332
X	Read	0x20ff
_	Write	0x3415

Initial TLB

VPN	PPN	Valid	Dirty	LRU
0x01	0x11	1	1	05
0 x00	0x00	10	0 1	7]
0x10	0x13	1	1	1 6
0x20	0x12	1	0	5
0x 22 2	0x00	10	0 1	7 2
0x11	0x14	1	0	4 4
0xac	0x15	1	1	2
0xff	0x16	1	0 1	3 🔿
- 44		•	•	

Final TLB

VPN	PPN	Valid	Dirty	LRU