





Jumpers for pGND/sGND binding should be bridged if necessary and appropriate, which should be the case only if no other common point is used for signal grounding.


Connect to breadboard power rails. Ideally should be a breakable extension.







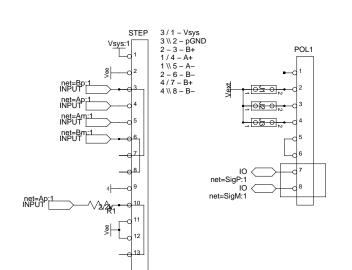


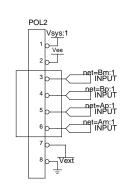

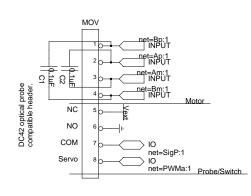


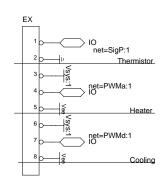


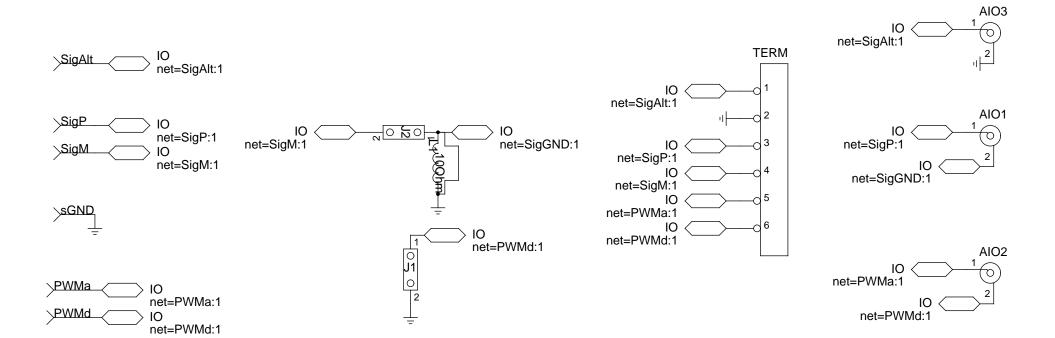


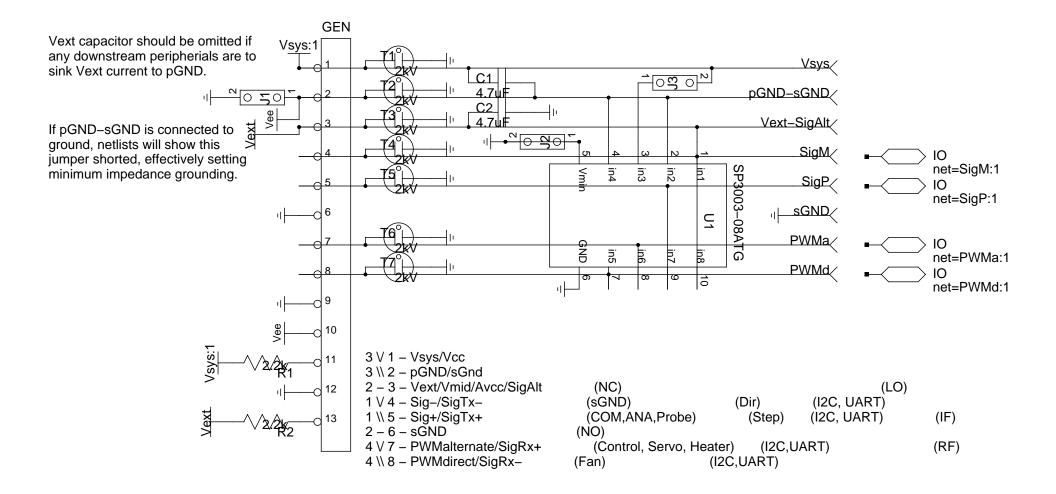

## Connect to breadboard power rails.

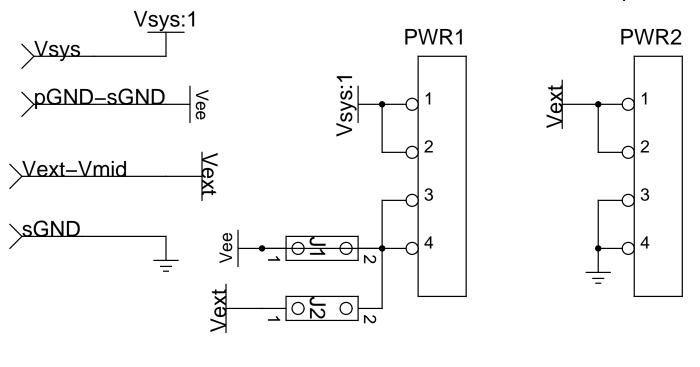

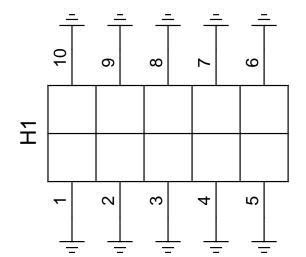

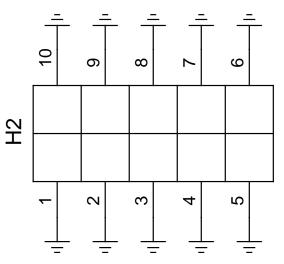

Mechanical supports.