

DECONTAMINATOR PURGE BUCKET

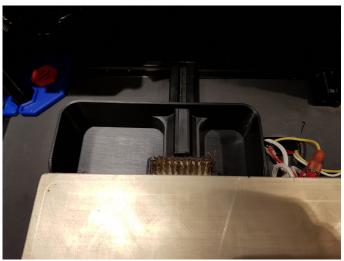




Brush should be cut to ~40mm in length. If it doesn't fit, sand/file it down. Don't try to force it in; it will crack the walls.

Print with voron recommended settings, no supports are required.

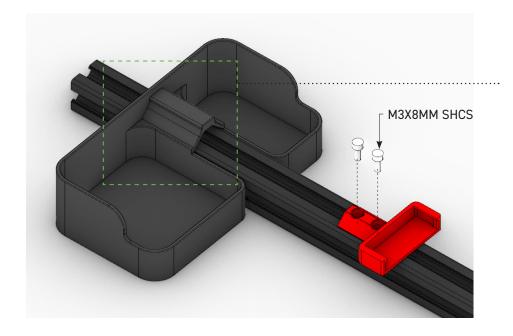

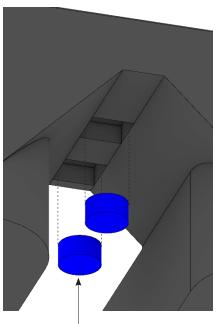

6X3MM magnets.

Completely optional, gives a nice 'snap' when you slide the trashcan in.

Use superglue to retain if necessary.