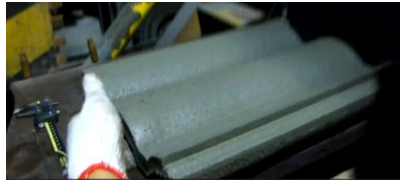




WIENERBERGER HUNGARY		WORK PROCEDURE TILE MEASUREMENT CONTROL		DATE: 05/12/ 2025 PAGE: 1 of 2
WET TILE MEASUREMENT CONTROL...				
N	STEPS	DRAWING	KEY POINTS	
1	1. At 60-minute intervals, one tile shall be taken from the production line. The initial samples must correspond to the start of production or a model change.		Inspect the back side of the mould for any deformation, concrete residue, or wear that may affect the dimensional quality of the tile.	
2	2. Each sample shall be placed on the scale to record its weight.		The net weight of the tile shall be determined after weighing the assembly and, depending on the type of scale available, it may be read directly or require a mathematical operation (subtraction of the mould's weight).	
3	3. Position the tile and mould on a flat surface to facilitate handling.		The following are required: *A table or flat work surface at an adequate height to perform thickness measurements comfortably and accurately. *A scale properly positioned in close proximity to the extruder to streamline the weighing process.	
4	4. Mark two points on the exterior of the tile, 70 mm from the mould end, using a pointed scriber to define the cutting line.		The markings on the tile can be increased to more than two in order to ensure a more precise and straight cutting line during the manual incision with the blade.	
5	5. Insert the blade into the tile to separate the surfaces, allowing for thickness measurement in the next step.		Perform the manual incision with the blade as perpendicular as possible to the tile surface. 	
6	6. Use the blade to displace the upper concrete from the mould outwards, enabling the placement of the depth gauge to measure the thickness of the designated section.		Digital Depth Gauge 	

WIENERBERGER HUNGARY		WORK PROCEDURE TILE MEASUREMENT CONTROL		DATE: 05/12/ 2025 PAGE: 2 of 2																																																																																																																
WET TILE MEASUREMENT CONTROL...																																																																																																																				
N	STEPS	DRAWING	KEY POINTS																																																																																																																	
7	7. Prepare the wet tile for thickness measurement as illustrated in the reference image.		Tools used: *Calibrated square bar, 10 mm x 10 mm x 200 mm. *Calibrated cylindrical bar, 10 mm diameter x 200 mm length. *Spatula.																																																																																																																	
8	8. For measuring Q1, a cylindrical bar shall be used to avoid deforming the concrete or altering the measurement. Once measured, subtract the 10 mm diameter of the bar.		Ensure perfect alignment of the Digital Depth Gauge with the cylindrical bar (10 mm diameter x 200 mm length), maintaining its perpendicularity to the mould.																																																																																																																	
9	9. For measuring points Q2, Q3, Q4, Q5, and Q6, a calibrated bar shall be used to prevent deformation. After measurement, subtract the 10 mm of the bar.		Ensure the Digital Depth Gauge is perfectly aligned with the calibrated bars (10x10x200 mm) and maintains perpendicularity to the mould.																																																																																																																	
10	10. Once thickness measurements are completed, weigh the empty mould.		By weighing the assembly (tile + mould) and then the empty mould, the net weight of the tile can be obtained. The exact method (direct tare or subtraction) depends on the type of scale, as detailed in point 3.																																																																																																																	
11	11. Record the results in the extruder control sheet.	<table><tr><td></td><td>Q.1</td><td>Q.2</td><td>Q.3</td><td>Q.4</td><td>Q.5</td><td>Q.6</td><td></td></tr><tr><td>NOMINAL</td><td>8</td><td>11</td><td>11,9</td><td>11,1</td><td>11,9</td><td>9,6</td><td></td></tr><tr><td>RANGE</td><td>9</td><td>12</td><td>12,9</td><td>12,1</td><td>12,9</td><td>10,6</td><td></td></tr><tr><td>DATE:</td><td colspan="2">05/12/2025</td><td colspan="2">OPERATOR:</td><td colspan="2"></td><td>THEORETICAL</td></tr><tr><td></td><td colspan="2"></td><td colspan="2"></td><td colspan="2"></td><td>WEIGHT</td></tr><tr><td>TIME</td><td>Q.1</td><td>Q.2</td><td>Q.3</td><td>Q.4</td><td>Q.5</td><td>Q.6</td><td>4,570 gr</td></tr><tr><td>7:00</td><td></td><td></td><td></td><td></td><td></td><td></td><td>4,520 gr</td></tr><tr><td>8:00</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>9:00</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>10:00</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>11:00</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>12:00</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>13:00</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>14:00</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>		Q.1	Q.2	Q.3	Q.4	Q.5	Q.6		NOMINAL	8	11	11,9	11,1	11,9	9,6		RANGE	9	12	12,9	12,1	12,9	10,6		DATE:	05/12/2025		OPERATOR:				THEORETICAL								WEIGHT	TIME	Q.1	Q.2	Q.3	Q.4	Q.5	Q.6	4,570 gr	7:00							4,520 gr	8:00								9:00								10:00								11:00								12:00								13:00								14:00								The initial thickness and weight values are theoretical. The optimal values and their working tolerances will be determined based on the raw materials used and the specific curing process at each factory.	
	Q.1	Q.2	Q.3	Q.4	Q.5	Q.6																																																																																																														
NOMINAL	8	11	11,9	11,1	11,9	9,6																																																																																																														
RANGE	9	12	12,9	12,1	12,9	10,6																																																																																																														
DATE:	05/12/2025		OPERATOR:				THEORETICAL																																																																																																													
							WEIGHT																																																																																																													
TIME	Q.1	Q.2	Q.3	Q.4	Q.5	Q.6	4,570 gr																																																																																																													
7:00							4,520 gr																																																																																																													
8:00																																																																																																																				
9:00																																																																																																																				
10:00																																																																																																																				
11:00																																																																																																																				
12:00																																																																																																																				
13:00																																																																																																																				
14:00																																																																																																																				
12	12. Adjust weights and thicknesses to meet the specifications set by the central laboratory. If variations are observed, adjust the extruder head and repeat steps 1 to 12 of this procedure.		These values and measurements serve as the reference standards for WET TILE control, which will be supplemented by subsequent controls performed once the CURED TILE.																																																																																																																	