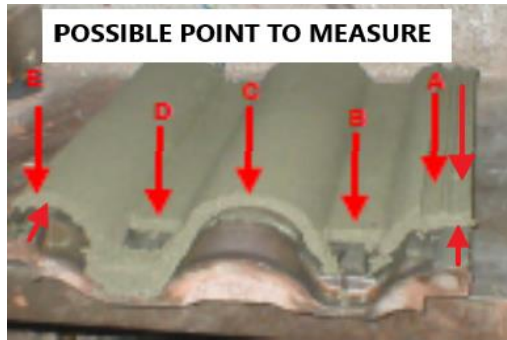
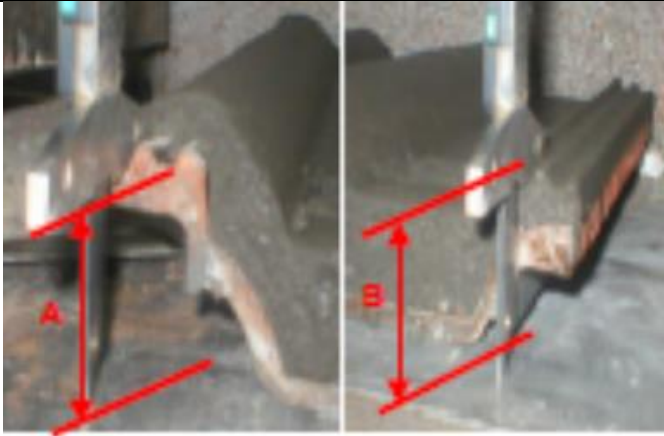
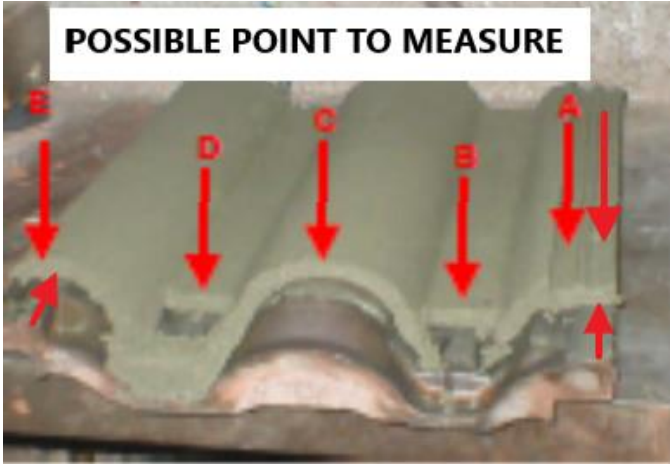
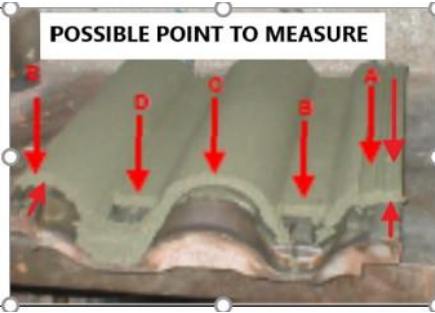


FACTORY		POSSIBLE WORK PROCEDURE		DATE: 280722
				PAGE: 1 of 3
WET TILE MEASUREMENT CONTROL				
N	STEPS	DRAWING		KEY POINTS
1	Every 60 minutes we shall take 2 tiles from the line.			Check the back and lateral side of the mould pallet.
2	Every time we take a sample, it shall be placed on the scale to be weighed.			 Once the weight is steady, press the button in the picture to tare the scale.
3	Prepare the wet tile to measure its thickness according to the image.			Tools used: -Probe – Digital “caliper” -6 x 20 x 200 mm calibrated bar. -10 mm cylindrical bar 200 mm -Spatula
4	In order to measure points B, C, D and E we shall use a calibrated bar in order not to deform or vary its measurement. Once measured, we shall deduct the 6mm of the bar.			Take into account the perfect alignment of the caliper with the calibrated bar and its perpendicularity to the mould.

5	In order to measure "0,A" we shall use a cylindrical bar so as not to deform the concrete or vary its measurement. Once measured, we shall deduct the 10 mm of the cylindrical bar.		Take into account the perfect alignment of the caliper with the cylindrical bar and its perpendicularity to the mould.
6	Check that the "assemblies" meet the installation standards. Measure point "A" and check it is bigger than "B".		This point is critical. If we don't get $A > B$, then change the adjusting small slipper.
7	Weigh the mould without mixture once the thickness is measured. The weight on the display corresponds to the tile weight.		Once we weigh the tile, we shall remove the mould and tare the scale to zero. 
8	Note the results in the extruder control sheet		


9	It is necessary to adjust the weights and thicknesses to that established by the central laboratory. If there are variations in the measurements, adjust the extruder head and repeat steps 1- 9 of this procedure.		
---	---	--	--


Commenting further points (3,4,5)

3	Prepare the wet tile to measure its thickness according to the image.		Tools used: -Probe – Digital “caliper” -6 x 20 x 200 mm calibrated bar. -10 mm cylindrical bar 200 mm -Spatula
---	--	--	--

I would propose the following 5 / 7 initial points (A,A1,B,C,D,E,E1) for taking thickness measurements on the tile, always without slurry, then depending on the results, if the measurements of the tile are very constant/repetitive with the same values, you can reduce their time control rate: from hours to days or finally eliminate them, if you consider that they do not contribute anything.

The line of measurements should be 100 mm from the front of the tile.

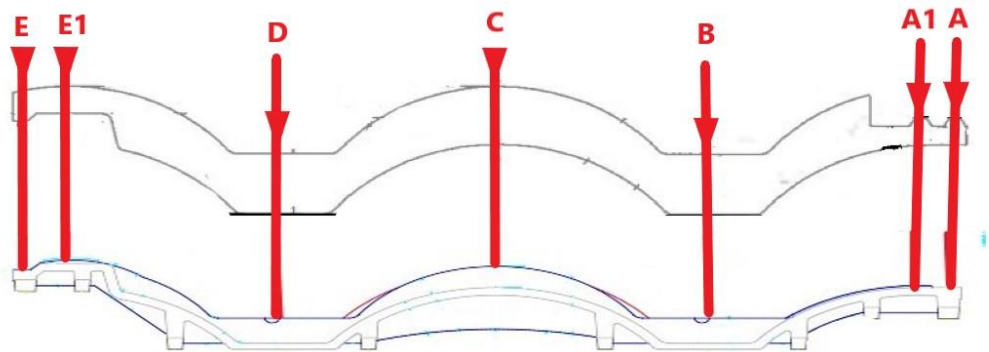

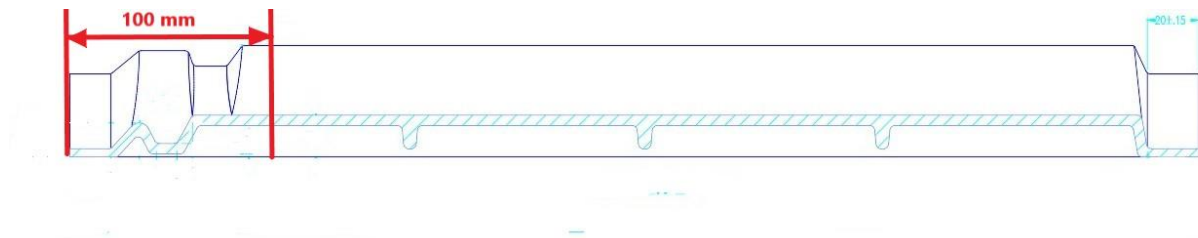

4	In order to measure points B, C, D and E we shall use a calibrated bar in order not to deform or vary its measurement. Once measured, we shall deduct the 6mm of the bar.	 Take into account the perfect alignment of the caliper with the calibrated bar and its perpendicularity to the mould.
---	--	---

For measuring the tops of interlocks **A** (with 6 mm x 20 mm x 200 mm plate) and **A1** (with 10 mm cylindrical bar).



5	In order to measure "0, A" we shall use a cylindrical bar so as not to deform the concrete or vary its measurement. Once measured, we shall deduct the 10 mm of the cylindrical bar.	 Take into account the perfect alignment of the caliper with the cylindrical bar and its perpendicularity to the mould.
---	---	--